




FLIPPER DOOR ASSEMBLY


Before assembly, make sure that you have everything you need—check your parts against the parts list at the bottom of the page.

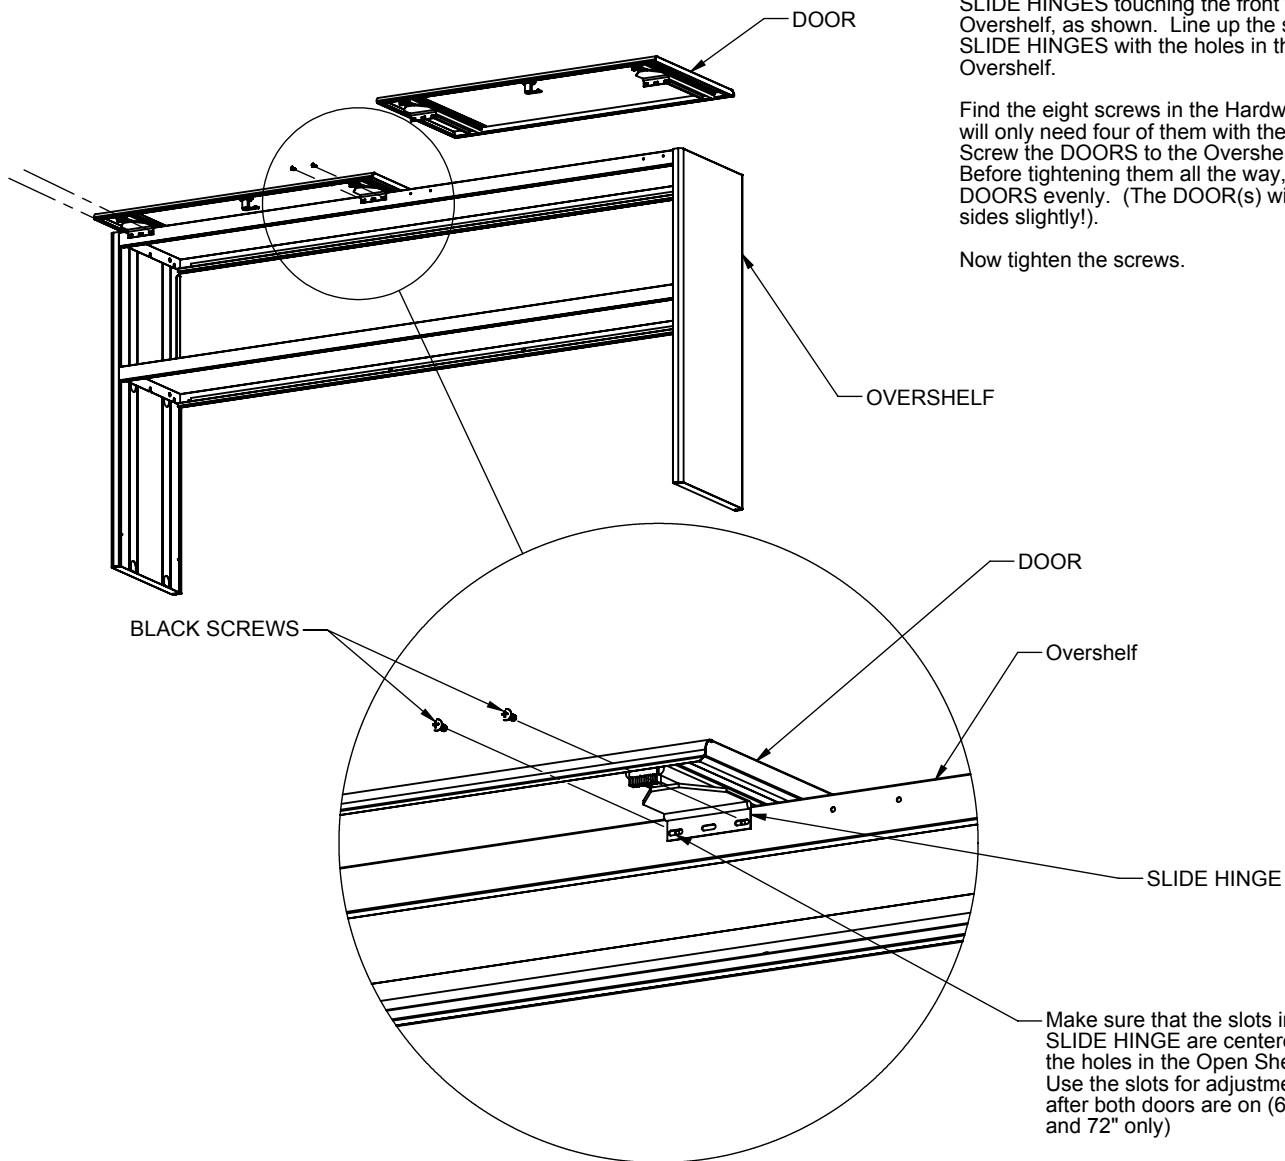

Place the DOOR(s) on to the top of the Overshelf, with the locks facing forward, and the SLIDE HINGES touching the front face of the Overshelf, as shown. Line up the slots in the SLIDE HINGES with the holes in the front of the Overshelf.

Find the eight screws in the Hardware Bag (you will only need four of them with the 48" door). Screw the DOORS to the Overshelf, as shown. Before tightening them all the way, position the DOORS evenly. (The DOOR(s) will overlap the sides slightly!).

Now tighten the screws.

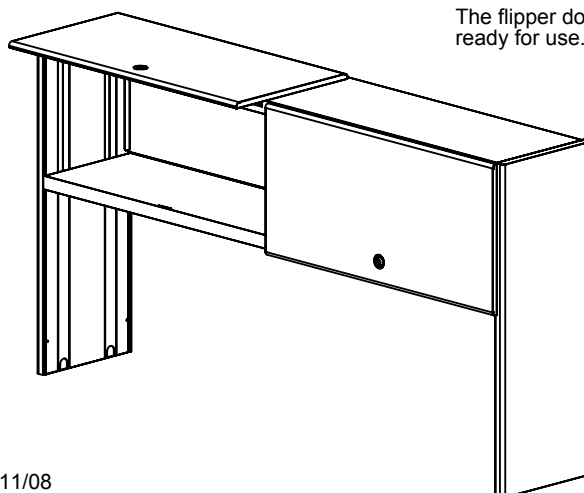

The flipper doors are now ready for use.

PARTS LIST

DESCRIPTION	PART #
DOOR	48" (qty = 1) MG772885
	60" (qty = 2) MG772886
	72" (qty = 2) MG772887

HARDWARE BAG:

(8) BLACK SCREW (#10-24 X 1/2) F09542