

Getting Started

1. To install, unpack your speakers and place them close to your PC. Note: There are wall hanging slots on the back of each satellite speaker if you prefer to hang them near your computer work space. Connect the subwoofer to the control satellite speaker (see Fig. 1).
2. Plug the A/C Adapter into an available wall outlet or power strip and the other end into the A/C power on the back of the control satellite speaker
3. Connect the 3.5mm speaker connector from the control satellite speaker into an available speaker jack on your PC. Make sure that the speakers are tuned on. When in use, the green LED indicator light on top of the control speaker will illuminate. Use the volume control dial to adjust the sound level.

Troubleshooting

- Check to make sure the speakers are turned on and the volume is turned up.
- Check to make sure your PC sound card is functioning properly. Refer to the documentation that came with your PC or contact the manufacturer.

