

350/400 Watt ATX12V 2.01 Dell Replacement Computer Power Supply

ATXPW350DELL

ATXPW400DELL



*actual product may vary from photos

DE: Bedienungsanleitung - de.startech.com

FR: Guide de l'utilisateur - fr.startech.com

ES: Guía del usuario - es.startech.com

IT: Guida per l'uso - it.startech.com

NL: Gebruiksaanwijzing - nl.startech.com

PT: Guia do usuário - pt.startech.com

For the most up-to-date information, please visit: www.startech.com

FCC Compliance Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Use of Trademarks, Registered Trademarks, and other Protected Names and Symbols

This manual may make reference to trademarks, registered trademarks, and other protected names and/or symbols of third-party companies not related in any way to StarTech.com. Where they occur these references are for illustrative purposes only and do not represent an endorsement of a product or service by StarTech.com, or an endorsement of the product(s) to which this manual applies by the third-party company in question. Regardless of any direct acknowledgement elsewhere in the body of this document, StarTech.com hereby acknowledges that all trademarks, registered trademarks, service marks, and other protected names and/or symbols contained in this manual and related documents are the property of their respective holders.

Table of Contents

Introduction	1
Features	1
Packaging Contents	1
Compatibility	2
Installation	3
Specifications	5
Technical Support	7
Warranty Information	7

Introduction

Thank you for your purchase of a StarTech.com ATX 12V Dell replacement Power Supply. Designed for extra-long life in personal and industrial computers, this Power Supply is a suitable replacement for compatible Dell computers (Please see compatibility chart on Page 2), and features an 8cm fan to provide quiet operation and superior performance.

Features

- 100,000 hour MTBF
- ATX 2.01 compliant
- Dual 12V power rails to deliver stable power to demanding devices
- 20/24 pin split ATX style motherboard connector for compatibility with existing standards
- 8cm fan provides quiet, efficient airflow for increased reliability
- Premium EMI/RFI power filtration provides low noise and ripple for stable power delivery to all system components
- SATA hard drive connectors
- PCI Express connector (ATXPW400DELL)
- Compatible with many Dell™ Dimension®, Optiplex® and other Dell™ systems. Please see specific Dell PC compatibility for each power supply, listed on **page 2**.

Packaging Contents

- 1 x Power supply
- 1 x Standard power cable
- 1 x Instruction manual

Compatibility

CAUTION: ATXPW350DELL and ATXPW400DELL should not be used with any PCs other than those included in the following list of compatible systems.

ATXPW350DELL

Series	Compatible Models
Dell™ Dimension®	3000 / 3100 / 4600 / 4700 / 9100 / E310 / E510
Dell™ Optiplex®	GX280
Dell™ Power Edge®	SC420
Dell™ Precision Workstation®	370

ATXPW400DELL

Series	Compatible Models
Dell™ Dimension®	1100, 2200, 2300, 2350, 2400, 4300, 4400, 4500, 4550, 8200, 8250, 8300, B100
Dell™ Optiplex®	170L, GX60, GX150, GX240, GX260, GX270
Dell™ Power Edge®	400SC, 600SC
Dell™ Precision Workstation®	Model 340
Dell™ Smart Step®	100D, 150D

Installation

CAUTION: Computers contain sensitive electronic components that are easily damaged by static electricity and excessive shock. When handling the power supply and other components, ensure you are properly grounded using an anti-static mat or similar device. If anti-static equipment is not available, ground yourself by touching the exterior of the computer case or another large metal surface before handling any peripherals.

1. Installation of a power supply requires some mechanical skill and requires that you open your computer case to disconnect and reconnect wires. If you are unfamiliar with this kind of work, consider bringing your computer and new StarTech.com power supply to your local computer store for help.
2. Check the red switch on the rear of the power supply, next to the power cord plug. Be sure it is set to the correct voltage for your country. In North America, it should read "115". In Europe and Australia it should read "230". To change the switch, use a screwdriver in the notch of the switch and slide it to the opposite side. If you are unsure of the voltage used in your country, contact your electricity provider before proceeding.
3. If you are replacing an old power supply in your computer, ensure the computer is shut down and disconnect the power cord from the back of the old supply.
4. Open your computer case. In most designs, the case is opened by removing two or three screws at the rear of the case and then sliding the covering panel backward until it comes free. If your case is a tower style, ensure that you remove the panel that will expose the top of the computer's motherboard. This is generally the left-side panel. There are many different case designs, however, so if you are unsure of how to open your particular case, consult the user manual for your case or contact your local computer store for help.
5. With the computer case open, review the connectors being used from your old power supply. If you are building a new computer, review the connectors that you will need to use. Check the type of connector on your motherboard and use either the 24 or 20 pin ATX power connector on the power supply as appropriate.
6. Disconnect the old power supply connections from inside your computer. Hard disk drive, CD drive and floppy disk drive connectors disconnect by pulling on the connector. The motherboard connector(s) have a clip that must be pressed while pulling on the connector to release them. A rocking motion while pulling will aid in getting the connectors loose. Never pull on the wires of a connector to unplug it.
7. Check that all the wires from your old power supply are free. Remove the four screws on the rear of your old power supply to free it from the computer case. Support the power supply with one hand if it could fall while removing the last screw. (Such as in a tower style case.) Remove the power supply by sliding it back and then out through the side of your case.
8. Install your new power supply by positioning it through the side or top of your case (depending on your case style) and then back onto the power supply mounts. Check Instruction Manual that the orientation with the screw holes in your case is

correct; all four holes must be aligned. Support the power supply with one hand while threading a mounting screw through the back of the case and into the power supply. The screw should thread smoothly and should not require effort. Do not force it or you could damage the mounting holes. If the screw won't thread smoothly, remove it and check to ensure the mounting holes are correctly lined up. Repeat for the remaining three screws. Do not fully tighten any of the screws until they all have been threaded into their mounting holes. (Note: Consider Startech part **SCREWTHUMB** screws for easier installation.)

9. Tie unused wires away from fans and other moving parts.
10. Replace the case cover and secure it. You may wish to not replace the screws until after you have checked that all connections are working.
11. Start your computer. You should hear its fans and devices immediately begin to run. If you do not, toggle the rear switch on the power supply to off, disconnect the power cord, open the case and check that all connectors are well seated and secure.
12. When you have confirmed all connections are working, replace the screws in your case.
13. Power supplies contain electrical and electronic components and should be disposed of properly. If you are replacing a power supply, please follow your city's rules for proper disposal of electrical equipment.

Specifications

Dimensions/Weight	L x W x H: 140 x 150 x 86mm ATXPW350DELL: 1.9 kg (4.2lbs) ATXPW400DELL: 2.15kg (4.74lbs)	
AC Input Voltage	ATXPW350DELL: 115V (8A) or 230V (4A), 50-60Hz (Manual Switching) ATXPW400DELL: 115V (10A) or 230V (5.5A), 50-60Hz (Manual Switching)	
Output Power (max.)	ATXPW350DELL: 350W ATXPW400DELL: 400W	
Fan	8cm, sleeve	
Regulatory Approvals	ATXPW350DELL: FCC, TUV, UL, CUL ATXPW400DELL: FCC, TUV, UL, CUL	
Connectors	ATXPW350DELL:	ATXPW400DELL:
	3 X LP4 Female	4 x LP4
	1 X SP4 Female	2 x SP4 Floppy Drive
	2 X SATA Power Female	4 x SATA
	1 x 6-pin Auxiliary Connector	1 x PCI Express 6pin
	1 X P4 ATX Male 12V Plug	1 x P4 (ATX12V) 4pin
	1 x ATX 20/24pin	1 x ATX 20/24pin

AC Input	Voltage	Current	Frequency
ATXPW350DELL	115V~	8A	50-60Hz
	230V~	4A	
ATXPW400DELL	115V~	10A	50-60Hz
	230V~	5.5A	

ATXPW350DELL

DC	+3.3V	+5V	+12V1	+12V2	-12V	+5SB	PS-ON	POK	COM
Output	22A	21A	10A	15A	0.8A	2.5A	Remote	P.G	Return
Max. 350	130W		300W		9.6W	12.5W	-	-	-
	327.9W								

ATXPW400DELL

DC	+3.3V	+5V	+12V1	+12V2	-12V	+5SB	PS-ON	POK	COM
Output	30A	28A	14A	15A	1A	2.5A	Remote	P.G	Return
Max. 400	140W		348W		12W	12.5W	-	-	-
	375.5W								

Technical Support

StarTech.com's lifetime technical support is an integral part of our commitment to provide industry-leading solutions. If you ever need help with your product, visit www.startech.com/support and access our comprehensive selection of online tools, documentation, and downloads.

For the latest drivers/software, please visit www.startech.com/downloads

Warranty Information

This product is backed by a two year warranty.

In addition, StarTech.com warrants its products against defects in materials and workmanship for the periods noted, following the initial date of purchase. During this period, the products may be returned for repair, or replacement with equivalent products at our discretion. The warranty covers parts and labor costs only. StarTech.com does not warrant its products from defects or damages arising from misuse, abuse, alteration, or normal wear and tear.

Limitation of Liability

In no event shall the liability of StarTech.com Ltd. and StarTech.com USA LLP (or their officers, directors, employees or agents) for any damages (whether direct or indirect, special, punitive, incidental, consequential, or otherwise), loss of profits, loss of business, or any pecuniary loss, arising out of or related to the use of the product exceed the actual price paid for the product. Some states do not allow the exclusion or limitation of incidental or consequential damages. If such laws apply, the limitations or exclusions contained in this statement may not apply to you.

Hard-to-find made easy. At StarTech.com, that isn't a slogan. It's a promise.

StarTech.com is your one-stop source for every connectivity part you need. From the latest technology to legacy products — and all the parts that bridge the old and new — we can help you find the parts that connect your solutions.

We make it easy to locate the parts, and we quickly deliver them wherever they need to go. Just talk to one of our tech advisors or visit our website. You'll be connected to the products you need in no time.

Visit www.startech.com for complete information on all StarTech.com products and to access exclusive resources and time-saving tools.

StarTech.com is an ISO 9001 Registered manufacturer of connectivity and technology parts. StarTech.com was founded in 1985 and has operations in the United States, Canada, the United Kingdom and Taiwan servicing a worldwide market.