



## QUICK START GUIDE

### Thank you for choosing Sansa Connect!

This **Quick Start Guide** introduces many of the features of your Sansa Connect. For full details, refer to the **User Guide**, which can be found on the **Installation CD**.

©2007 SanDisk Corporation.  
All rights reserved.  
80-36-02734

**Get started** ►

 
## IMPORTANT SAFETY INFORMATION

1. **Read the safety instructions carefully before using your Sansa Connect.**
2. Read the entire User Guide located on the CD to ensure proper usage.
3. Do not use Headphone/Earphones while driving, cycling, or operating any motorized vehicle. This may create a traffic hazard and may be illegal in some areas. It can also be dangerous to play your Headphones/Earphones at high volume while walking or engaged in other activities. You should exercise extreme caution and discontinue use in potentially hazardous situations.
4. **Avoid using Headphones/Earphones at high volume.** Hearing experts advise against continuous loud and extended music play. Keep the volume at a moderate level, so that you are better able to hear outside sound, and to be considerate of the people around you.
5. Keep your player away from sinks, drinks, bathtubs, showers, rain, and other sources of moisture. Moisture can cause electric shocks with any electronic device.
6. Follow these tips to keep your player working well for a long time:
  - Clean your player with a soft lint-free cloth used on glass lenses.
  - Do not allow young children to use your player unsupervised.
  - Never force any connector into the ports of your player or your computer. Make sure your connectors are the identical shape and size before you connect.
7. Do not disassemble, crush, short-circuit, or incinerate your battery as it may cause fire, injury, burns, or other hazards.

### Disposal Instructions

Do not dispose of this device with unsorted waste. Improper disposal may be harmful to the environment and human health. Please refer to your local waste authority for information on return and collection systems in your area.

## SANSA CONNECT CONTROLS

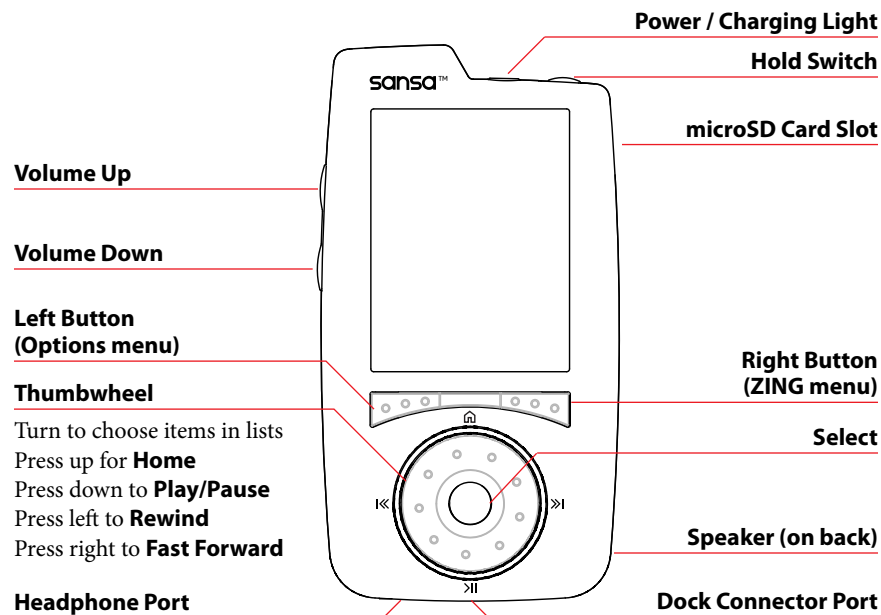

### TIPS

- To quickly jump to **Now Playing**, press **Home** and then press **Select**.
- To return to a music list from **Now Playing**, turn the **Thumbwheel**.
- To turn the **Speaker on**, disconnect the headphones.

## GETTING STARTED

Thank you for choosing the SanDisk Sansa Connect!

### 1 Install software

Insert the **Installation CD** into your computer and follow the onscreen directions to install the software. Your Sansa Connect is optimized to use **Yahoo! Music Jukebox** to manage music and transfer songs.

### 2 Get a Yahoo! ID and start your Yahoo! Music Unlimited To Go Free Trial

To use many of the features of your Sansa Connect, you'll need a **Yahoo! ID**. If you're not already a Yahoo! Music Unlimited To Go subscriber, follow the instructions on the **Yahoo! Music Unlimited To Go Free Trial card** included in the box.

### 3 Power on your Sansa Connect

To turn on your Sansa Connect, press **Power**.


If your Sansa Connect doesn't turn on, check that the **Hold Switch** is in the unlock position. If this doesn't help, you may need to charge the battery (follow the directions in step 8.)

After the startup is complete, a brief series of screens will welcome you and point out some of the key features of your Sansa Connect.


#### 4 Connect to WiFi and listen to Internet Radio

If you have a WiFi network, you can get started listening to music right away by pressing **Home**, selecting **Internet Radio**, and then selecting a channel from within **Genres** or **Themes**.


When connecting to WiFi, you will select from a list of nearby WiFi networks. If the selected network requires a password (indicated by a lock icon on the network list), or if asked for your Yahoo! ID, follow the onscreen instructions to enter it.

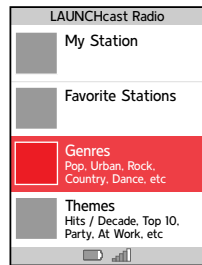

Internet Radio

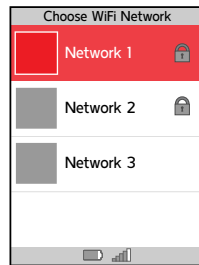

Choosing a Network

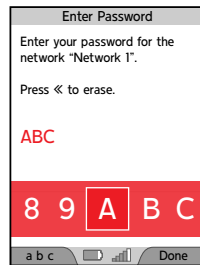

Entering a Password

Your Sansa Connect remembers your favorite networks and passwords, making your next connection even easier.

#### 5 Skipping and downloading songs


Once the WiFi connection is complete, the **Now Playing** screen will appear. Now Playing shows the name of the station, the title and artist for the current song, the album art, and more.

If you don't like the current song, you can press **Fast Forward** to skip to the next song on this station.

When you find a song you like, press the **Right** button to open the **ZING** menu. From there, you can get the current song, get the album, or get a Mix of similar songs which will keep updating automatically over WiFi.



Now Playing

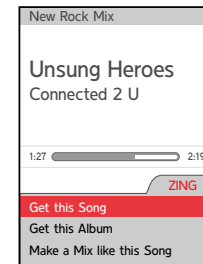

ZING menu

Once songs have finished downloading, you can find them by going to the **Home Menu** and selecting **Music Library**.


## 6 View photos

To view photos, press **Home** and then select **Photos**. You can view photos from the **Flickr** photo service when connected to WiFi, or insert a microSD card and view photos stored there.


## 7 Transfer music using Yahoo! Music Jukebox

Connect the large connector of the USB cable into the dock connector port on the bottom of your Sansa Connect, and plug the smaller connector into a USB port on your computer.

On your computer, open **Yahoo! Music Jukebox**. To transfer songs, drag and drop them to the **Sansa Connect** icon in the left column.

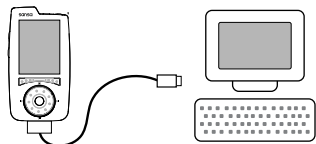

Charging and transferring music over USB

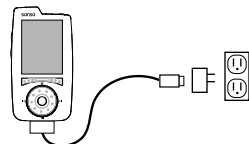

Charging using AC power

## 8 Charge the battery

To charge the battery, you can connect your Sansa Connect to your computer (as in step 7), or connect the USB cable to the AC-USB charger and plug the AC-USB charger into a power source.

## THE HOME MENU



**To display the Home Menu**, press the **Home** button. Turn the thumbwheel to highlight a feature, and press **Select** to go to that feature.



**Now Playing** shows details about the currently playing song. It only appears in the menu when you're listening to music.



**Internet Radio** lists all of the **LAUNCHcast Radio** stations you can listen to using the WiFi connection. You can also save and play Favorite Stations.



**Music Library** lets you browse all music stored on your Sansa Connect by artist, album, title, and genre. **Playlists** and **Mixes** can also be found here.



**Get More Music** is an easy way to download most popular and recommended songs directly to your device. You can also get any **Yahoo!** Playlists you have created on your computer.



**Friends** shows what music your **Yahoo! Messenger** friends and other nearby Sansa Connect owners are listening to. You can exchange recommendations with your online friends.



**Photos** lets you view photos and slideshows from an optional microSD card, and view your photos and the daily most interesting photos from **Flickr**.



**Settings** is the place to customize the behavior of your Sansa Connect, including audio, display, and playback.