



15" /17" /19" TFT LCD MONITOR

USER'S GUIDE

V513/V713/V913
(SP516/SP716/SP916)



©2006 by Proview®. All rights reserved.

Copyright protection claimed includes all forms and matters of copyrightable material and information now allowed by statutory judicial law or hereinafter granted, including without limitation, material generated from the software programs which are displayed on the screen such as icons, screen displays, looks, etc.

All Proview® product names mentioned in this publication are trademarks of Proview. Other company trademarks are also acknowledged.

Changes are periodically made to this document. Changes, technical inaccuracies, and typographic errors will be corrected in subsequent editions.

Table of Contents

CE Marking Declaration Of Conformity	4
Federal Communications Commission (FCC) Statement	5
Important Safety Instructions	6
Chapter 1 Introduction	
Features.....	9
Package Contents	10
Front View and Controls	11
Chapter 2 Installation	
Connecting Your LCD Monitor to a Computer	12
Installing Your LCD Monitor	13
Chapter 3 OSD Menu	
Using the OSD Menu	15
The OSD Options	16
Chapter 4 Technical Information	
Preset Mode Timing Chart	19
D-SUB Connector PIN Assignment	20
Plug and Play.....	21
Visual Inspection.....	21
Troubleshooting	22
Specifications.....	23

Recycling Place

EUROPE

When disposing of Proview Monitors in Europe, please contact one of the following three locations to make arrangements for recycling.

- Proview International (UK) Limited
30 The Avenue, Watford, Hertfordshire
WD17 4AE United Kingdom
Timothy Lo
Tel: +44-1923-248-111
Fax: +44-923-248-222
Email: tim.lo@proview.co.uk

- PGL Europe B.V. (Proview Group Limited Rotterdam)
Satijnbloem 37,
3068 JP
Rotterdam
Hollande
David Hsieh
Tel: +31-10-238-1090
Fax: +31-10-238-1091
Email: david@proview-group.nl

- Xoal bvba
Raketstraat 100-B1130
Brussels
Mr. Leo Starckx
Tel: +32-2-702-6011
Fax: +32-2-725-2513
Email: rma@proview-repair.com
leo.starckx@proview-repair.com

ASIA

When disposing of Proview Monitors in Asia, please contact the following location to make arrangements for recycling.

- Proview Technology (ShenZhen) Co., Ltd.
North Block 21, 23# Shatoukok Free Trade Zone, ShenZhen, China.
Mr. Dennis Chang
Tel: +86-755-2526-1512
Fax: +86-755-2526-1565
Email: recycling@proview.com.cn

AMERICA

When disposing of Proview Monitors in America, please call the following location to make arrangements for recycling.

- Proview Technology, Inc. (U.S.A.)
7373 Hunt Avenue, Garden Grove, CA 92841 U.S.A.
Patrick Yen
Tel: +714-799-3865
Fax: +714-379-6290
Email: pyen@proview.net

“THIS DISPLAY UNIT IS AN ELECTRIC DEVICE WHICH MAY CONTAIN HAZARDOUS MATERIALS AND COMPONENTS, AND WHICH MUST BE DISPOSED OF AT END OF LIFE ACCORDING TO THE PROPER PROCEDURE”

CE Marking Declaration Of Conformity

This LCD monitor complies with the requirements of the EC Directive 89/336/EEC "EMC Directive" and 73/23/EEC "Low Voltage Directive" as amended by Directive 93/68/EEC.

The electro-magnetic susceptibility has been chosen at a level that gives correct operation in residential areas, business and light industrial premises and small-scale enterprises, inside as well as outside of the buildings.

All places of operation are characterized by their connection to the public low voltage power supply system.

Federal Communications Commission (FCC) Statement

This equipment has been tested and found to comply with the limits of a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient/Relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit which is different from what the receiver is connected to.
4. Consult the dealer or an experienced radio/TV technician for help.

**CAUTION:**

Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user authority to operate the equipment.

Important Safety Instructions

To prevent any injuries, the following safety precautions should be observed in the installation, use, servicing and maintenance of this equipment.

Before operating this equipment, please read this manual completely, and keep it nearby for future reference.

Warnings



- Do not place the equipment on any uneven or unstable carts, stands, tables, shelves etc. The equipment may fall, causing serious injury to children or adults and serious damage to the equipment itself.
- Use only a cart or stand recommended by the manufacturer. This equipment and recommended cart or stand should be handled with care. Quick stops, excessive force, and uneven surfaces may cause the equipment and cart/stand to overturn.
- Do not disable the 3-wire grounding type plug. The grounding pin on the 3-prong plug is an important feature. Removing the grounding pin will increase the risk of damaging the equipment. If you can not fit the plug into the electrical outlet, contact an electrician to install a grounding outlet.
- Always operate this equipment from the type of power source indicated on the rear of the serial/model plate.
- Never overload wall outlets and extensions.
- Use and handle the power cord with care.
- Do not place any heavy objects on the AC power cord.
- Do not pull the AC power cord. Do not handle the AC power cord with a wet hand.
- Do not touch the power cord and antenna cable during lightning.
- Remove the plug from the wall outlet if the equipment will not be used for a long period of time.
- Do not place, use or handle this equipment near water.
- Never expose the equipment to liquid, rain, or moisture. Seek qualified service if any of the above is spilled into the equipment.

- Do not attempt to service the equipment yourself.
- Opening and removing the covers may expose you to dangerous voltage or other hazards and may void your warranty. Refer service to qualified personnel.
- Always remove the power cord from the outlet before cleaning the equipment.
- Never use liquid or aerosol cleaners on the equipment. Clean only with a soft dry cloth.
- Do not expose the equipment to extreme temperature or to direct sunlight, as the equipment may heat up and suffer damage.
- Do not install the equipment near any heat sources such as radiators, heat registers, stoves, or any other apparatus that might produce heat.
- Do not block any ventilating openings. Leave an open space around the equipment.
- Never place the equipment :on a bed, sofa, rug, or any other similar surfaces; too close to drapes/curtains/walls, in a bookcase, built-in cabinet, or any other similar places that may cause poor ventilation.
- If any of the following conditions occur, unplug the power cord from the outlet and request service from qualified personnel.
 - a. The power cord or plug is damaged.
 - b. Liquid is spilled into the product .
 - c. An object falls onto or into the product.
 - d. The product has been dropped or damaged.
 - e. The product's display is abnormal.



DISPOSAL OF WASTE ELECTRONIC EQUIPMENT BY PRIVATE HOUSEHOLDS WITHIN THE EUROPEAN UNION

This sign indicates that this product may not be disposed of with your regular household waste. The recycling and separate collection of such products is your responsibility. Please drop off the above-mentioned waste at a designated place for recycling waste electrical and electronic equipment. If you do not know where to drop off your waste equipment for recycling, please contact your local city office or household waste collection service.

INTRODUCTION

Features



- **FAST VIDEO RESPONSE**

Fast action media such as gaming, DVD and video conferencing will playback smoothly thanks to the fast video response time of the LCD panel.



- **HIGH CONTRAST RATIO**

Colors will appear vibrant and lifelike producing superior image quality.



- **ANTI-REFLECTIVE COATING**

Special panel coating to efficiently reduce distracting glare on images viewed.

- **PLUG-AND-PLAY CAPABILITY**

Easy trouble-free configuration and set-up.

 


- **BUILT-IN POWER TO SAVE SPACE**


All components of the power adapter are designed into the chassis. There will not be adapter occupying the desktop space.

Package Contents

Make sure all of the following contents are included in the box.
If any items are missing, please return this product to the original place of purchase.

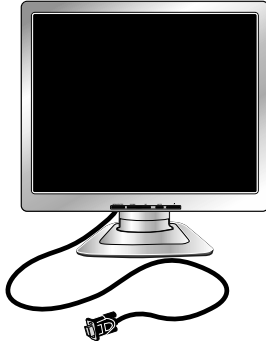

LCD Monitor :
V513/V713/V913

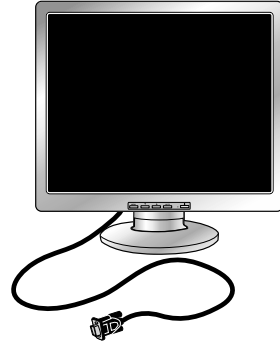 

LCD Monitor :
SP516/SP716/SP916



Power Cord*



Quick
Guide



Warranty
Card



CD-ROM
(Driver/Manual)

* Power cord specification : H05 VV-F 3G 0.75mm²

 


CAUTION:


Be sure to save original box and all packing material for future transport of monitor.

Front View and Controls

V513/V713/V913

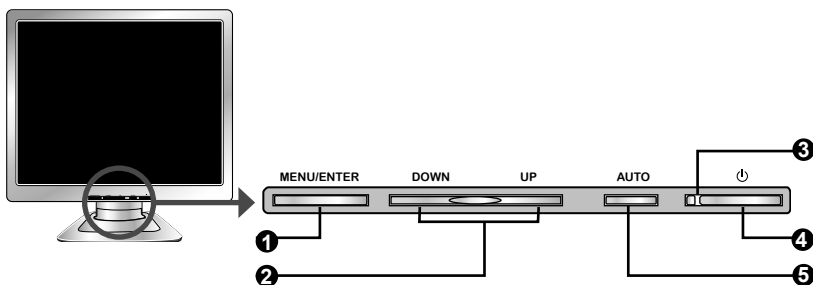

SP516/SP716/SP916

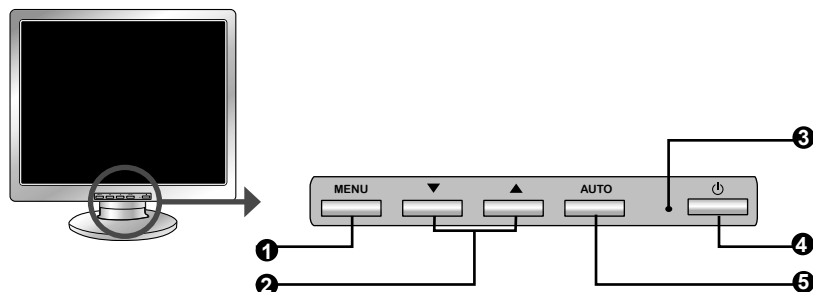 


ITEM	DESCRIPTION
1 MENU ENTER	Press once to display the OSD (On Screen Display). And press to activate the items you highlight .
2 ▲▼ DOWN/UP	In OSD mode, press the ▲▼/DOWN/UP buttons to move the selection highlight to the next menu item counterclockwise or clockwise, respectively.
3 LED	The LED light indicates when the LCD monitor is activated (green light indicates power on and amber light indicates power saving).
4	Turns the LCD monitor on and off.
5 AUTO	Press to automatically adjust the display settings to optimize performance based on the D-SUB signal.

 
INSTALLATION

Refer to the owner's manual of the computer for connections.

In the process of connecting external equipment, do not connect any AC power cords to wall outlets until all other connections are completed.


Connecting Your LCD Monitor to a Computer

- 1 Turn off the computer and unplug the power cord.
- 2 Connect the signal cable to the VGA port on the back of the computer.
- 3 Connect the power cord to wall outlet and LCD monitor.
- 4 Press the  button, located on the bottom side of the main unit to turn the monitor on, then turn the computer on. If the monitor displays an image, the monitor is successfully installed. If no image is displayed, check all connections.

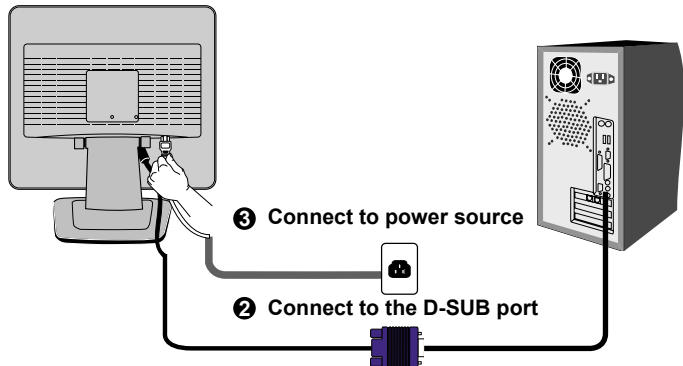**NOTE:**

Unplug the monitor before installation to avoid electric shock or damage.

**NOTE:**

The  button is used for switching the LCD monitor on and off, it does not disconnect the device from the main voltage. To completely disconnect the main voltage, please remove the power plug from the socket.

 
**NOTE:**

The LED indicator is green when the monitor operates normally and will turn to amber when in power saving mode. When the monitor is off, the LED turns dark.


Installing Your LCD Monitor

Follow the instructions below to set up and install the monitor.

- 1 The package contains:
Display unit
Stand

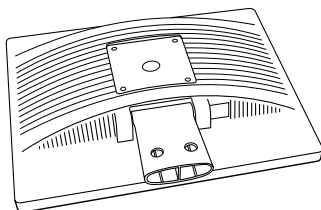
**DISPLAY UNIT****STAND**

 - 2 Cover an even stable surface with a soft cloth. Place the unit face-down on the cloth. Fit the stand onto the bottom of the display unit as shown, then push until the two latches snap into their sockets.

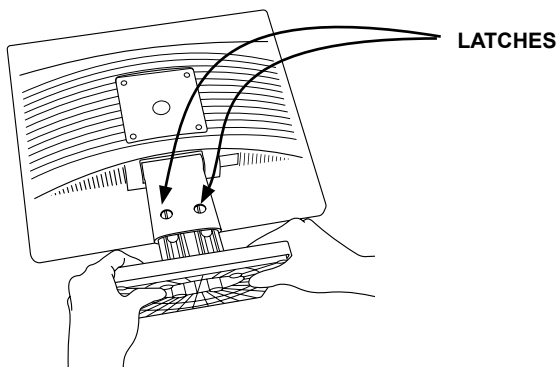

In order to ensure a healthy and relaxed body position when using the monitor at visual display workstations, you are able to adjust the monitor's angle of the stand.

 - 1 The angle of the LCD monitor may be adjusted approximately 30 degrees.

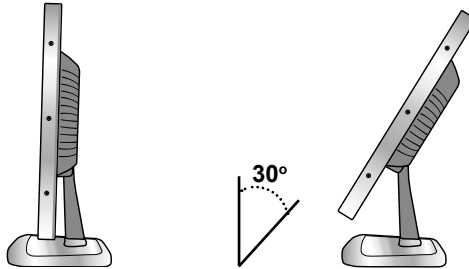


OSD Menu

Using the OSD Menu

To create the best picture, your LCD monitor has been preset at the factory with the Preset Mode Timing shown on page 19. The OSD (On Screen Display) Menu allows the user to adjust various settings and options by following the steps below.

 
- 1 Press the **MENU** button to display the OSD. The OSD main menu provides an overview of the selection of controls available.

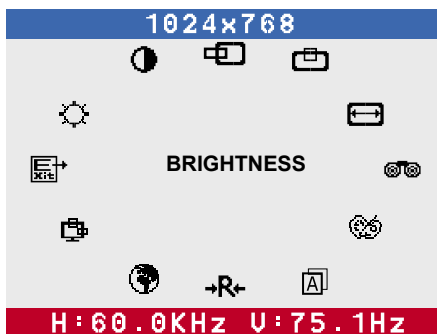

- 2 Press the **▲▼** or **DOWN/UP** button to highlight the desired icon. Then, press the **MENU** button to activate the highlighted icon
- 3 Press the **▲▼** or **DOWN/UP** button to change the value of the selected item.
- 4 Select the **EXIT** icon to exit the OSD.
- 5 Repeat steps 1 through 4 to make further adjustments. All changes are stored immediately.

The OSD Options

 The OSD menu includes the following options:

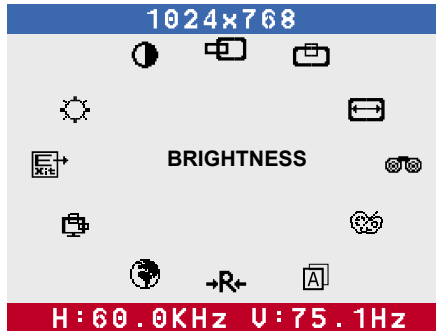

BRIGHTNESS

Controls the overall brightness.

CONTRAST

Controls the difference between the brightest and darkest regions of the picture.

H. POSITION

Adjusts the position of the picture left and right in the window.

V. POSITION

Adjusts the position of the picture up and down in the window.

H.SIZE

Adjusts the width of the picture.

PHASE

Adjusts signal phase, which can improve focus clarity and image stability.

 **COLOR**

Allows selection of the general color tint:
Select User Mode, WARM, or COOL.


 **Select User Mode**

Allows the user to adjust red, green and blue color component levels independently.

COOL

Inclines colors toward the blue end of the spectrum. Fixes the red, green and blue component levels at factory settings; they cannot be independently adjusted.

WARM

Inclines colors toward the red end of the spectrum. Fixes the red, green and blue component levels at factory settings; they cannot be independently adjusted.

 **EXIT**

Exits the OSD menu.

 **AUTO ADJUST**

Selects to automatically adjust the display settings to optimize performance based on the D-SUB signal.

 **RESET**

Restores all options to the factory settings.

 **LANGUAGE**

Controls which language is used on all the on-screen menus.

 **OSD**

Changes the position of the OSD.

 **H. POSITION**

Moves the OSD left and right in the window.

 **V. POSITION**

Moves the OSD up and down in the window.

 **EXIT**

Exits the OSD menu.

 **EXIT**

Exits the OSD.

Technical Information


Preset Mode Timing Chart

The screen image has been optimized during manufacture for the display modes listed below.

Video signal: (IBM PC/AT)

Dot X Line	Horizontal Frequency(kHz)	Vertical Frequency(Hz)
720 x 400	31.47	70.00
640 x 480	31.47	60.00
	37.86	72.80
	37.50	75.00
800 x 600	35.16	56.25
	37.88	60.30
	48.08	72.20
	46.87	75.00
1024 x 768	48.36	60.00
	56.48	70.10
	60.02	75.00
1280 x 1024	63.98	60
	79.98	75

 D-SUB Connector PIN Assignment



PIN	DESCRIPTION
1	Red
2	Green
3	Blue
4	Ground
5	Self Test
6	Red Ground
7	Green Ground
8	Blue Ground
9	5 VDC
10	Ground
11	Ground
12	SDA (FOR DDC)
13	H. Sync
14	V. Sync
15	SCL (FOR DDC)

Plug and Play

This monitor conforms to the VESA DDC (Display Data Channel) standard, which means that when it is used with a DDC compatible video card, the monitor is easier to set up. With VESA DDC 1/2B, when the monitor is turned on, it will automatically notify a windows 9X/2000/XP host computer of its scanning frequencies, capabilities and characteristics. Windows 9X/2000/XP will automatically recognize the presence of the monitor and select the appropriate display resolution.

Visual Inspection

Permanently unlit or lit pixels

The standard of production techniques today cannot guarantee an absolutely fault free LCD display. A few isolated permanently lit or unlit pixels may be present. The maximum permitted number of pixel faults is stipulated in the stringent international standard ISO 13406-2 (Class II).

Example:

A 17" flat-screen monitor with a resolution of 1280 x 1024 has 1280 x 1024 = 1310720 pixels. Each pixel consists of three subpixels (red, green and blue), so there are about 4 million dots in total.

According to ISO 13406-2 (Class II), a maximum of 6 pixels and 7 subpixels may be defective, i. e. a total of 25 faulted dots.


Troubleshooting

Before consulting service personnel, check the following chart for a possible cause and solution to the trouble you are experiencing.

1 Monitor will not turn on

- Make sure the power cord is plugged in.

2 No picture

- Make sure the power cord is plugged in.
- Check the signal cable connecting the LCD monitor and the computer (refer to page 12).
- Press the  button on the front panel of the monitor.

3 Poor picture or abnormal picture

- Press the **MENU** button to adjust the Brightness Contrast option in the OSD.
- Adjust the Color Select option in the OSD.
- Press the **AUTO** button on the front panel of the monitor, to automatically adjust the display mode.

4 Out of range message appears

- If using Windows 9X/2000/XP, wait a few seconds; once Windows detects the problem, a dialog will appear allowing you to manually set up the video mode according to the preset mode timing chart (refer to page 19).

Specifications

MODEL		V513	V713	V913
LCD Panel	Panel Size	15" TFT LCD	17" TFT LCD	19" TFT LCD
	Brightness	250	260	280
	Contrast Ratio	500:1	500:1	500:1
	Dot Pitch	0.297mm x 0.297mm	0.264mm x 0.264mm	0.294mm x 0.294mm
Max. Resolution		1024x768	1280x1024	1280x1024
Input Connector		D-SUB	D-SUB	D-SUB
Power Source		AC100-240V, 50-60Hz	AC100-240V, 50-60Hz	AC100-240V, 50-60Hz
Power Consumption		36W	48W	48W
Dimension(WxHxD)		345x333x166 mm	378x379x180 mm	421x414x194 mm

MODEL		SP516	SP716	SP916
LCD Panel	Panel Size	15" TFT LCD	17" TFT LCD	19" TFT LCD
	Brightness	250	260	280
	Contrast Ratio	500:1	500:1	500:1
	Dot Pitch	0.297mm x 0.297mm	0.264mm x 0.264mm	0.294mm x 0.294mm
Max. Resolution		1024x768	1280x1024	1280x1024
Input Connector		D-SUB	D-SUB	D-SUB
Power Source		AC100-240V, 50-60Hz	AC100-240V, 50-60Hz	AC100-240V, 50-60Hz
Power Consumption		36W	48W	48W
Dimension(WxHxD)		349x335x172 mm	378x382x192 mm	427x416x210 mm

Changes are periodically made to this specifications.
 Current specifications may also be obtained via the internet,
www.proview.com