

entre las cuales las siguientes:

deben tomar precauciones básicas de seguridad,

mente en la presencia de niños, siempre se

LEA TODAS LAS INSTRUCCIONES ANTES DE USARLO

MANTENGA EL APARATO ALEJADO DEL AGUA

PELIGRO — Cualquier electrodoméstico permanece eléctricamente activo, incluso cuando el interruptor está apagado. Para reducir el riesgo de muerte o herida por descarga:

1. Siempre desconecte el aparato inmediatamente después de usarlo.
2. No lo use mientras esta tomando un baño o una ducha.
3. No coloque el aparato donde pueda caer o ser empujado a una bañera o un lavabo.
4. No coloque el aparato ni lo deje caer al agua u otro líquido.
5. Si el aparato cae al agua, desconéctelo inmediatamente. No toque el agua.

ADVERTENCIA — Para reducir el riesgo de quemaduras, electrocución, incendio o lesiones personales:

1. Nunca deje el aparato desatendido mientras está conectado.
2. Este aparato no debería ser usado por, sobre o cerca de niños o personas con alguna discapacidad.

Dryer shuts off automatically when placed in wall mount
 1600 watts
 Night light
 2 heat/speed settings
 6' line cord

To create extra volume, turn head upside down while drying. Position the airflow toward the roots for maximum lift. When hair is dry, toss head back and brush hair into place.

Work with hair in sections when creating a super straight look. Using a large round brush (approximately 2" diameter), hold hair taut in each section and bend ends slightly under as you dry.

Tousled, natural- looking waves are easily created by grasping hair at the roots and scrunching between fingertips while drying.

15. No utilice este aparato con un convertidor de voltaje.
16. Inspeccione el soporte mural regularmente para asegurarse que está bien asegurado.

his appliance is equipped with an Appliance Leakage Circuit Interrupter (ALCI), a safety feature that renders it inoperable under some abnormal conditions, such as immersion in water. To make sure the ALCI is functioning properly, perform the following test. The purpose of this test is to allow you to make sure the water sensing system (ALCI) is working.

2. The appliance will stop working. There will be an audible click and reset button will pop out.

1. Shampoo and condition hair with products of your choice. Rinse thoroughly. Towel blot hair to remove excess moisture. Section hair. Using the dryer along with your styling brush, direct hot air through a section of hair at a time. Move dryer steadily across each section so that the hot air passes through hair. Direct airflow at hair, not scalp.
2. Keep dryer's air intake vents unobstructed and free from hair while drying.
3. To avoid overdryng, do not concentrate heat on any one section for any length of time. Keep dryer moving as you style.
4. For quick touch-ups between shampoos, dampen hair with a mist of water before styling with the dryer.

This appliance is intended for household use only. Use on Alternating Current (60 hertz) only. Standard Dryers are designed to operate at 110 to 125 volts A.C.

UNDOBLADO

Para crear ondas despeinadas que parecen naturales, coja el cabello a la raíz y estruje el cabello entre sus dedos mientras lo seca.

5. Keep the cord away from heated surfaces. **Do not pull, twist, or wrap line cord around dryer, even during storage.**
6. Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.
7. Never use while sleeping.
8. Never drop or insert any object into any opening or hose.
9. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
10. **Do not use an extension cord to operate dryer.**
11. Do not direct hot air toward eyes or other heat-sensitive areas.
12. **Attachments may be hot during use. Allow them to cool before handling.**
13. Do not place appliance on any surface while it is operating.
14. While using the appliance, keep your hair out of it. Keep your hair away from the air inlets.
15. Do not use with voltage converter.
16. Periodically inspect the wall unit for secure mounting.

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

DANGER – Any hair dryer is electrically live even when the switch is off. To reduce the risk of death or injury by electric shock:

1. Do not install where unit can fall into a tub or sink. Always return dryer into wall unit after use.
2. Always unplug dryer immediately after using.
3. Do not use while bathing or in a shower.
4. Do not place or store appliance where it can fall or be pulled into a tub or sink.
5. Do not place in, or drop into, water or other liquid.
6. If an appliance falls into water, "unplug it" immediately. **Do not reach into the water.**

1. This appliance should never be left unattended when plugged in.
2. This appliance should not be used by, on, or near children or individuals with certain disabilities.
3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.



