


PRESTO®

Electric Skillet

- Roasts, fries, grills, stews, bakes, makes casseroles and more.
- Deluxe nonstick surface for stick-free cooking and easy cleaning.
- Dishwasher safe.

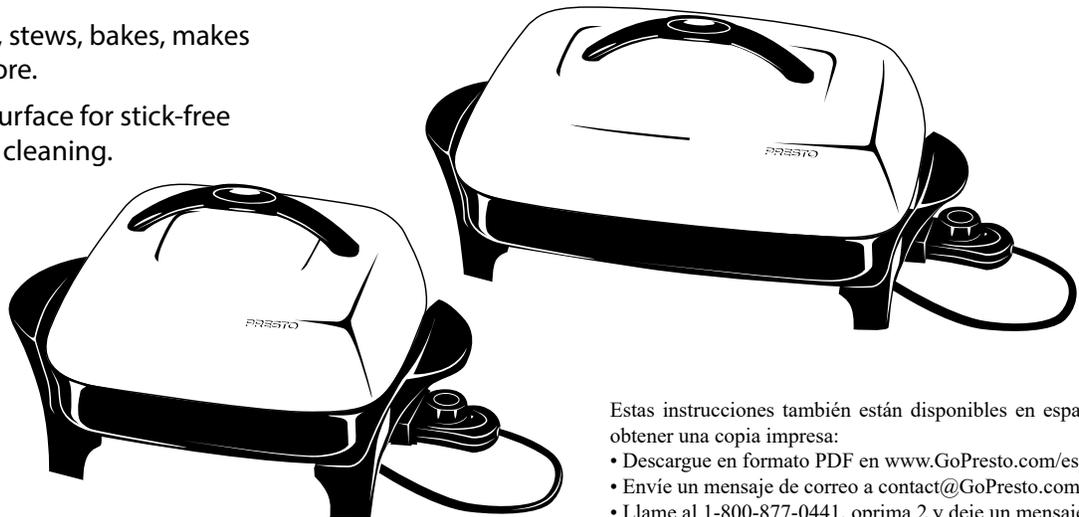

Estas instrucciones también están disponibles en español. Para obtener una copia impresa:

- Descargue en formato PDF en www.GoPresto.com/espanol.
- Envíe un mensaje de correo a contact@GoPresto.com.
- Llame al 1-800-877-0441, oprima 2 y deje un mensaje.

Visit us on the web at www.GoPresto.com

INSTRUCTIONS

©2016 National Presto Industries, Inc.

This is a  Listed appliance. The following important safeguards are recommended by most portable appliance manufacturers.

IMPORTANT SAFEGUARDS

To reduce the risk of personal injury or property damage when using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. Be sure that handles are assembled and fastened properly before using this appliance. See instructions on page 2.
3. Do not touch hot surfaces. Use handles or knobs.
4. It is recommended that this appliance not be moved when it contains hot oil or other hot liquid. If it must be moved when it contains hot oil or other hot liquid, use extreme caution.
5. To protect against electrical shock, do not immerse heat control, cord, or plug in water or other liquid.
6. Close supervision is necessary when any appliance is used by or near children.
7. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
8. Always attach heat control to appliance first, then plug cord into wall outlet. To disconnect, turn control to OFF, then remove plug from wall outlet.
9. Do not let cord hang over edge of table or counter or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner or in a heated oven.
11. Do not operate any appliance with a damaged cord or plug or in the event the appliance malfunctions or has been damaged in any manner. Do not operate if the legs become cracked or damaged. Return the appliance to the Presto Factory Service Department for examination, repair, or electrical or mechanical adjustment.
12. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries. Use only genuine Presto™ replacement parts.
13. This appliance is not intended for deep frying foods.

14. Do not use outdoors.
15. Do not use appliance for other than intended use.

SAVE THESE INSTRUCTIONS

THIS PRODUCT IS FOR HOUSEHOLD USE ONLY.

WARNING! FOR CALIFORNIA RESIDENTS

State of California Proposition 65 requires that we include the following warning statement:

This product contains a chemical known to the State of California to cause cancer and birth defects or other reproductive harm.

Important Cord Information

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

A short power supply cord (or cord set) is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord. An extension cord may be used if care is properly exercised in its use.


If an extension cord is used, the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance. The extension cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

Connect the power supply cord to a 120VAC electrical outlet only.

How to Assemble

1. Place skillet upside down on table or counter.
2. Remove the four screws from mounting projections on the skillet body.
3. Position the handles on the skillet, lining up holes in the handles with mounting projections on the skillet.
4. Replace screws and fasten securely. When properly assembled, the skillet should sit level.
NOTICE: Continuing to tighten, once secure, can result in stripping of screws or cracking of handles or legs.

CAUTION! This product is not intended to melt wax, gels, plastics, glue, or other materials for making candles or for other hobbyist activities, or in any commercial or business application.

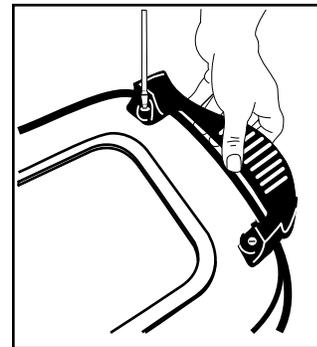

How to Use

Before using for the first time, wash the skillet and cover in warm, sudsy water; rinse and dry completely. **Do not immerse Control Master® heat control or let the heat control come in contact with any liquid.**

1. Place skillet on a dry, level, heat-resistant surface.
2. Insert the Control Master® heat control probe into the skillet so the two electrical pins on the skillet are fully inserted into the heat control. Connect cord to a 120VAC electrical wall outlet only.
3. Turn Control Master® heat control to desired temperature. See page 3 for cooking temperatures. Remove cover and preheat skillet. Pilot light goes off when selected temperature is reached, in approximately 5 to 10 minutes.

Note: Occasionally you may hear a pop or clicking sound while the skillet is preheating; this is due to the expansion of the metal as it heats. It is normal. You may also notice this sound as the unit cools down.

4. Prepare food for cooking. Because the skillet features a nonstick finish, food may be prepared with little or no oil.
NOTICE: Avoid using no-stick cooking sprays as they may cause the cooking surface to become tacky.
5. Place food in skillet and cook according to temperature-timetable (page 3). Heat should be adjusted according to personal preference and particular food being cooked. During cooking, pilot light will go on and off indicating desired temperature is being maintained.
6. Turn heat control to OFF when cooking is completed. Unplug heat control from wall outlet, then from appliance. Allow skillet to cool before cleaning.

Care and Cleaning

After each use, remove heat control and wash the skillet in warm, soapy water. Make sure to also clean the underside, as necessary. Rinse and dry thoroughly.

The nonstick surface may be cleaned with a non-metal cleaning pad, such as Scotch-Brite® Multi-Purpose Scrub Sponge or Scotch-Brite® Dobie® Cleaning Pad. Firm pressure can be applied. **Do not use steel wool or abrasive kitchen cleaners.**

Do not immerse the Control Master® heat control in water or let it come in contact with any liquid.

NOTICE: If you choose to wash the skillet in a dishwasher, the bottom of the skillet will likely discolor due to the caustic nature of the dishwasher detergent. In addition, a gray residue may form on the skillet bottom which may transfer onto towels and/or skin.

Soaking the skillet to loosen food residue is not necessary. If, however, soaking the skillet is desired, do not soak for more than two hours. Soaking for more than two hours may damage the nonstick finish.

For best results use nylon, plastic, wooden, or rubber utensils. Do not use metal utensils as they may scratch the nonstick surface. Do not cut foods on the cooking surface.

In time, the nonstick finish may darken over the heating element. To remove this discoloration, use a solution of 2 tablespoons of automatic dishwasher detergent powder and 2 cups of water; this can be doubled for 16-inch skillets. Bring the water to a boil in the skillet and then reduce the heat to simmer level (between the WARM setting and 200°) by turning the heat control down until the pilot light goes out. Slowly stir in the dishwasher detergent. Simmer uncovered for 20 minutes. Drain the solution and wash the skillet in warm, soapy water. Rinse and dry thoroughly.

After treating the skillet, it is recommended that the cooking surface be wiped lightly with vegetable oil before using.

The outside finish of the skillet is easy to keep attractive and looking new. Simply wipe away spills and drips as they occur. If food should happen to burn on, it can be removed with warm, sudsy water and a cleaning pad. Rinse and wipe dry.

Periodically check the screws on the handle and the legs for looseness. Retighten, if necessary.

NOTICE: Continuing to tighten, once secure, can result in stripping of screws or cracking of handles or legs.

Important: To ensure continued accuracy of the Control Master® heat control, avoid rough handling in use and storage.

Temperature–Timetable

Food/Method of Cooking	Temperature	Cooking Time	Food/Method of Cooking	Temperature	Cooking Time
Frying/Baking			Frying/Baking		
Bacon	300°–325°	8–10 minutes	Pancakes	350°–400°	2–3 minutes
Canadian Bacon	275°–300°	3–4 minutes	Pork Chops, ½" thick	325°–375°	15–20 minutes
Chicken	325°–350°	25–40 minutes	Pork Chops, ¾" thick	325°–375°	20–25 minutes
Eggs, Fried	250°–275°	3–5 minutes	Potatoes, Cottage Fried	300°–350°	10–12 minutes
Eggs, Scrambled	250°–275°	3–5 minutes	Sandwiches, Grilled	300°–325°	5–10 minutes
Fish	325°–375°	5–10 minutes	Sausage, Link	300°–325°	20–30 minutes
French Toast	300°–325°	4–6 minutes	Sausage, Precooked	325°–350°	10–12 minutes
Ham, ½" thick	325°–350°	10–12 minutes	Steak, Beef, 1" thick, Rare	350°–400°	6–7 minutes
Ham, ¾" thick	325°–350°	14–16 minutes	Steak, Beef, 1" thick, Medium	350°–400°	10–12 minutes
Hamburgers, ½" thick	325°–375°	8–12 minutes	Steak, Beef, 1½" thick, Rare	350°–400°	8–10 minutes
Minute Steak	375°–400°	4–5 minutes	Steak, Beef, 1½" thick, Medium	350°–400°	18–20 minutes

Simmering

In an electric skillet, foods will heat to simmering at some point between the WARM setting and 200°. Heat the skillet at 350° until the food boils. Then place cover on pan and reduce the heat to simmer level by turning the heat control down until the pilot light goes out. Additional liquid may be added during cooking to obtain desired consistency.

Braising or Pot Roasting

This cooking method involves browning food, usually meat or vegetables in oil, butter, margarine, etc., and then simmering in a small amount of liquid over low heat. To brown meat and/or vegetables, use a temperature between 325° and 350°. After browning, simmer as instructed above.

Holding Temperature (after cooking period)

WARM

* Scotch-Brite and Dobie are registered trademarks of 3M Company. Presto is not affiliated with 3M Company.

Consumer Service Information

If you have any questions regarding the operation of, or need parts for, your PRESTO® appliance, contact us by any of these methods:

- Call 1-800-877-0441 weekdays 8:00 AM to 4:00 PM (CST)
- Email us through our website at www.GoPresto.com/contact
- Write: National Presto Industries, Inc.
Consumer Service Department
3925 North Hastings Way
Eau Claire, WI 54703-3703

Inquiries will be answered promptly by telephone, email, or letter. When emailing or writing, please include a phone number and a time when you can be reached during weekdays if possible. When contacting the Presto Consumer Service Department, please indicate the model and series numbers for the skillet. These numbers are can be found on the bottom of the plug guard. Please record this information:

Model _____ Series _____ Date Purchased _____

The Presto Factory Service Department is equipped to service PRESTO® appliances and supply genuine PRESTO™ replacement parts. Genuine PRESTO™ replacement parts are manufactured to the same exacting quality standards as PRESTO® appliances and engineered specifically to function properly with its appliances. Presto can only guarantee the quality and performance of genuine PRESTO™ replacement parts. “Look-alikes” might not be of the same quality or function in the same manner. To ensure that you are buying genuine PRESTO™ replacement parts, look for the PRESTO trademark.

Canton Sales and Storage Company
Presto Factory Service Department
555 Matthews Drive, Canton, MS 39046-3251

PRESTO® Limited Warranty

(Applies only in the United States)

This quality PRESTO® appliance is designed and built to provide many years of satisfactory performance under normal household use. Presto pledges to the original owner that should there be any defects in material or workmanship during the first year after purchase, we will repair or replace it at our option. Our pledge does not apply to damage caused by shipping. ***Outside the United States, this limited warranty does not apply.***

To obtain service under the warranty, call our Consumer Service Department at 1-800-877-0441. If unable to resolve the problem, you will be instructed to send your PRESTO® appliance to the Presto Factory Service Department for a quality inspection; shipping costs will be your responsibility. When returning an appliance, please include your name, address, phone number, and the date you purchased the appliance, as well as a description of the problem you are encountering with the appliance.

We want you to obtain maximum enjoyment from using this PRESTO® appliance and ask that you read and follow the instructions enclosed. Failure to follow instructions, damage caused by improper replacement parts, abuse, misuse, disassembly, alterations, or neglect will void this pledge. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. This is Presto's personal pledge to you and is being made in place of all other express warranties.

NATIONAL PRESTO INDUSTRIES, INC.
EAU CLAIRE, WI 54703-3703