

TOASTESS

Electric Jug Kettle



Instruction Booklet

Model: TJK-100

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical hazards, do not immerse cord, plugs, or the appliance in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to Toastess for examination, repair or adjustment. See Warranty.
7. The use of accessories or attachments not recommended by Toastess may result in fire, electric shock or personal injury.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'OFF', then remove plug from wall outlet.
12. Do not use appliance for other than intended use.
13. Do not leave unit unattended while in use.
14. Extreme caution must be used when moving an appliance containing hot liquids.
15. Do not use Kettle without the Lid in place.
16. Scalding may occur if Lid is opened while the Kettle is hot.

SAVE THESE INSTRUCTIONS
HOUSEHOLD USE ONLY

GROUNDING PLUG

To reduce the risk of electric shock this appliance has a grounded plug. (2 blades and 1 pin) If the plug does not fit fully into the electrical outlet contact a qualified electrician. Do not modify the plug in any way or use an adaptor.

BEFORE FIRST USE

1. Read all instructions carefully and keep them for future reference.
2. Remove all packaging.
3. Install the Filter. (See Care and Cleaning section)
4. Water boiled for the first time should be discarded.

INSTRUCTIONS FOR USE

1. Install the Filter, if not already in place (see the Care & Cleaning section). Never use this kettle without the filter. Removal of the Filter may prevent the Kettle from shutting off.
2. Open the Lid by sliding the latch towards the handle and lifting upward. Fill the Kettle through the Lid opening, with a minimum of .5 litres of water. DO NOT attempt to fill the Kettle while it is plugged into the wall outlet. DO NOT use for other than boiling water. Other liquids will contaminate the interior of the Kettle. DO NOT fill past the MAX level indicated in the water level window. Overfilling may cause water to spill out when boiling.
3. Close Lid. Note: The Lid should not be opened when the Kettle is hot.
4. Place Kettle on a level, dry, heat resistant surface.
5. Plug cord into a 120V AC wall outlet. Note: NEVER PLUG KETTLE INTO AN ELECTRICAL OUTLET WHEN KETTLE IS EMPTY.
6. Depress the On/Off Switch ('I/O') and the red indicator light will light up to indicate that the Kettle is in the boil cycle. Once the water has boiled, the On/Off Switch will move to the 'Off' ('O') position and the light will go out. IMPORTANT: The kettle shuts off automatically only after the boiling cycle is complete. If the kettle is unplugged before the boiling cycle is complete then it will begin to heat as soon as it is plugged in

- again. To shut the kettle off before the boiling cycle is complete, press the On/Off Switch to the 'Off' ('O') position.
7. If you want to use the Kettle again, allow the thermal safety switch to cool down for 15 to 20 seconds then depress the On/Off Switch to the On ('I') position. If the On/Off Switch does not remain in the On position, the water is hot enough to use without reheating.
 8. Unplug cord from wall outlet before pouring water from the Kettle. Only grip the Kettle by the Handle as all other surfaces will be hot.
 9. Return the Kettle to a heat resistant surface after use.
 10. **IMPORTANT:** If the Kettle is accidentally switched on when empty, the thermostat will automatically cycle on and off to prevent the Kettle from overheating. If this situation occurs, press the 'O' side of the On/Off switch and unplug the Kettle immediately. Let the Kettle cool before refilling.
 11. **DISCONNECT** the Power Cord from the wall outlet when not in use.

CARE AND CLEANING

Exterior

Use a soft, damp cloth to clean the exterior. DO NOT use abrasive cleaners. Dry exterior thoroughly before use. DO NOT IMMERSE KETTLE OR POWER BASE IN WATER OR OTHER LIQUID.

Installing the Filter

Install the Filter before filling the Kettle with water. NOTE: NEVER REMOVE OR INSTALL THE FILTER WHEN THE KETTLE IS HOT.

The filter must be inserted in the Kettle so that the tab is at the top and the notch is facing down. Fit the notch onto the hook at the bottom of the spout. Gently push on the tab until it snaps into position in front of the spout. To remove the Filter, push the tab down and toward the center of the Kettle, then lift out.

Descaling

Under normal use, a deposit of scale may form on the inside of the Kettle. This scale build-up can be delayed by pouring out old water and refilling before each use.

If descaling is required, follow the directions below:

1. Unplug Power Cord from wall outlet and allow Kettle to cool completely.
2. Open the Lid and remove the filter as described above. Wash the Filter under running water.
3. Scale which has accumulated inside the Kettle can be removed by boiling equal parts of white vinegar and water (2 cups of each is recommended). Once the water has boiled, allow mixture to stand overnight. Empty out mixture and fill Kettle to the MAX level with fresh water. Bring water to a boil and discard. For heavy scale build-up, repeat this process.

A short supply cord is provided to reduce the hazards of becoming entangled in or tripping over a long cord. Extension cords may be used if care is exercised in their use. If an extension cord is used, the marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance. If the appliance is of the grounded type, the extension cord should be of a grounded 3-wire cord. The extension cord should be arranged so that it will not drape over the counter top or table top, where it can be pulled on by children or tripped over.

LIMITED WARRANTY

Toastess International warrants that this appliance shall be free from defects in material and workmanship for a period of two years from the date of purchase. During this 'in-warranty' period, defective products will be repaired or replaced at the discretion of the retailer and/or Toastess International. A defective product should be returned to the original place of purchase within the retailer's stipulated return/exchange period*. If you are unable to have a defective product replaced under warranty by the retailer, Toastess International will repair or replace the defective product without charge. You may contact us for assistance by mail, e-mail, fax or telephone as listed below.

This warranty covers normal domestic usage and does not cover damage which occurs in shipment or failure which results from alteration, accident, misuse, abuse, glass breakage, neglect, commercial use or improper maintenance.

To ensure prompt 'in-warranty' service be sure you have an original proof of purchase. You may be asked to return the product to us along with a description of the defect and your address, zip/postal code.

For repairs not covered by the warranty, please contact us for assistance.

TOASTESS

TOASTESS INTERNATIONAL

Customer Service Department
81A Brunswick
Dollard-des-Ormeaux
Québec, Canada H9B 2J5
E-mail: info@toastess.com
Fax: 514-685-8300
Tel: 514-685-2820

* Return/exchange policies at each retailer vary and may differ from the Toastess International 2 year limited warranty period.