 
 


Machine type: 10026
10039

Lenovo IdeaCentre B5 Series User Guide



Version 1.0 2009.10

 


 
31040007



lenovo

ideacentre





Important Safety Information

Before using this manual, it is important that you read and understand all of the related safety information for this product. Refer to the *Safety and Warranty Guide* that you received with this product for the latest safety information. Reading and understanding this safety information reduces the risk of personal injury or damage to your product.



Danger: Be aware of extremely hazardous or lethal situations.

 
 
 
 


 
Attention: Be aware of possible damage to programs, devices, or data.



Note: Pay attention to this important information.

© Copyright Lenovo 2009.






Contents

Important Safety Information

Chapter 1 Using the Computer Hardware	1
1.1 Front view	2
1.2 Left and right view of the computer	3
1.3 Rear view of the computer	4
1.4 Computer stand	5
1.5 Connecting your computer	6
1.6 Important information about using the computer	9
1.7 Keyboard.....	11
1.8 Using the Infra-red (IR) Remote Control	12
1.9 Using the Bluetooth remote control	15
 Chapter 2 Using the Rescue System	 27
2.1 OneKey Recovery	28
2.2 Driver and Application Installation	28
2.3 System Setup	29
2.4 System Backup	30
2.5 System Recovery	30
2.6 Create Recovery Disc	30
 Chapter 3 Using the Computer Software	 31
3.1 Power2Go - Burning Discs	32
3.2 WinDVD.....	33
3.3 McAfee Security Center	34
3.4 Media Show	35
3.5 Lenovo CamSuite	36

 


Chapter 4 System Maintenance and Recovery..... 37

4.1 Restoring the System	38
4.2 Backup and Restore.....	38
4.3 Cleaning Up the Disk	38
4.4 Checking For, and Correcting Disk Errors	39
4.5 Defragmenting the Disk(s).....	39
4.6 Performing Daily Maintenance Tasks.....	39

Chapter 5 Troubleshooting and Confirming Setup..... 41

5.1 Troubleshooting Display Problems	42
5.2 Troubleshooting Audio Problems	43
5.3 Troubleshooting Software Problems.....	43
5.4 Troubleshooting Problems with Optical Drives and Hard Disks.....	44
5.5 Special considerations for troubleshooting Windows	45
5.6 Wireless keyboard and mouse instructions	46

 

1

Chapter

Using the Computer Hardware

This chapter contains the following topics:

- Computer hardware introduction
- Information on computer connections

! **Note:** The descriptions in this chapter might vary from your computer, depending on computer models and configurations.

 
1

2


3


4

5



  1.1 Front view

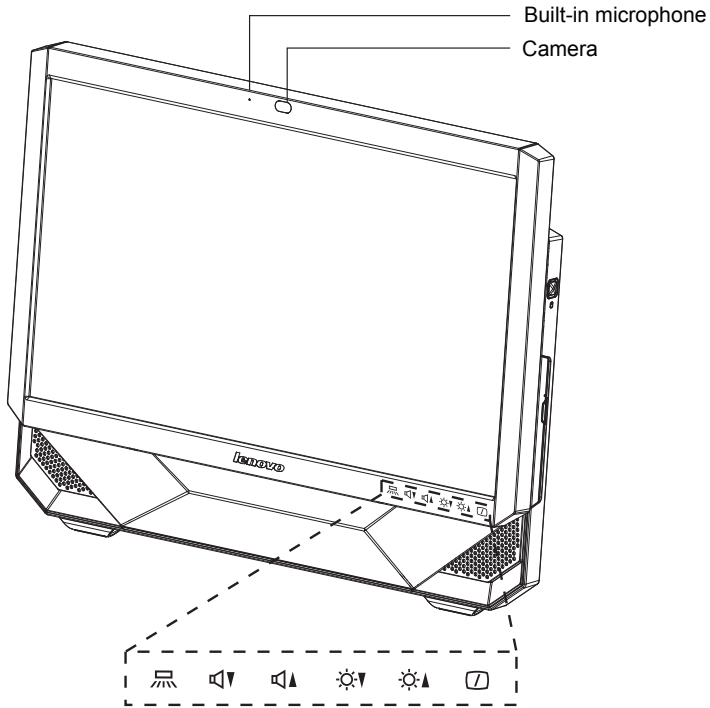




1.2 Left and right view of the computer




 Attention: Be sure not to block any air vents on the computer. Blocked air vents may cause thermal problems.

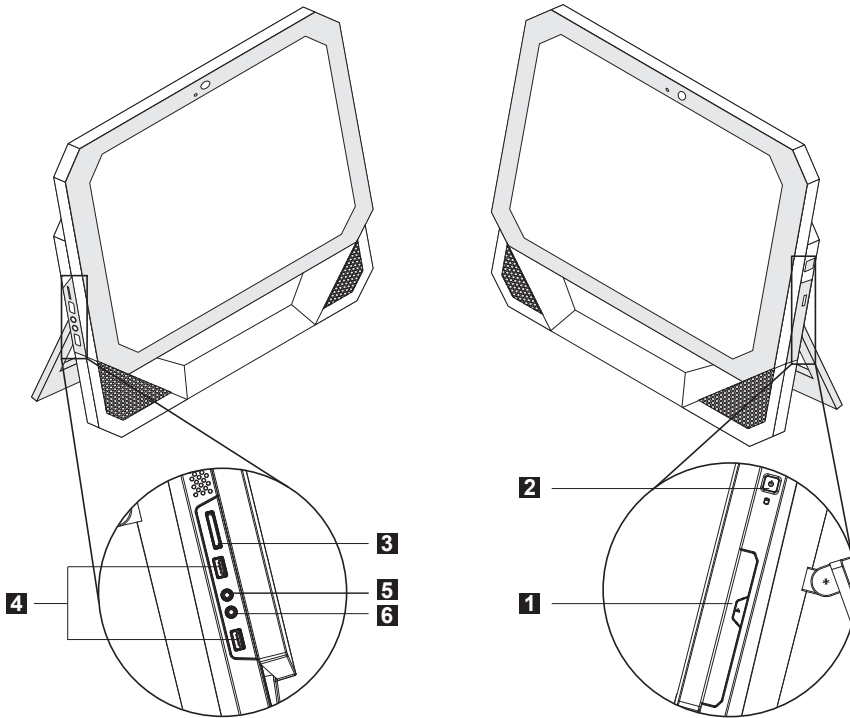


- 1** Optical drive
- 2** Power button
- 3** Card reader

 - 4** USB ports (2)
- 5** Headphone connector
- 6** Microphone connector



 1.3 Rear view of the computer

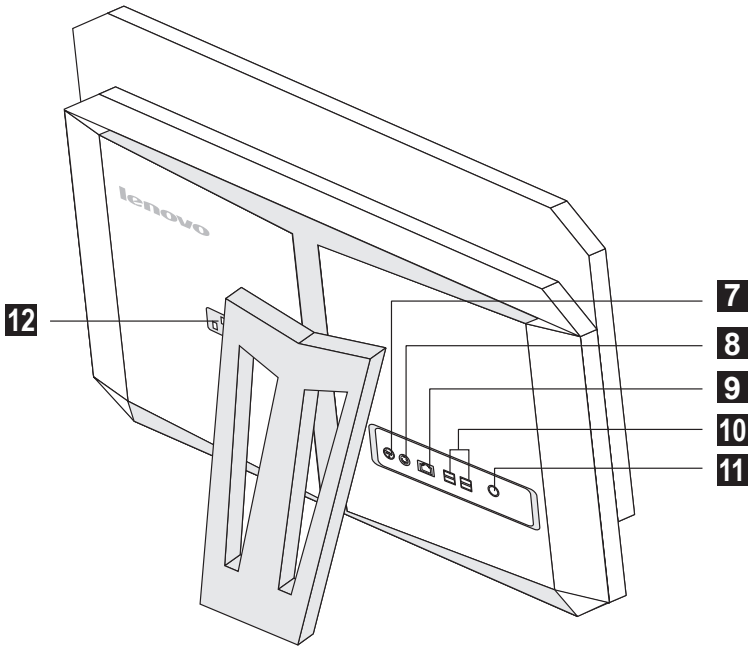

7 AV-IN connector
(Selected models only)

 
8 PS/2 Keyboard connector

9 Ethernet connector


10 USB ports (2)

11 TV-Tuner connector
(Selected models only)

12 Power connector



 1.4 Computer stand

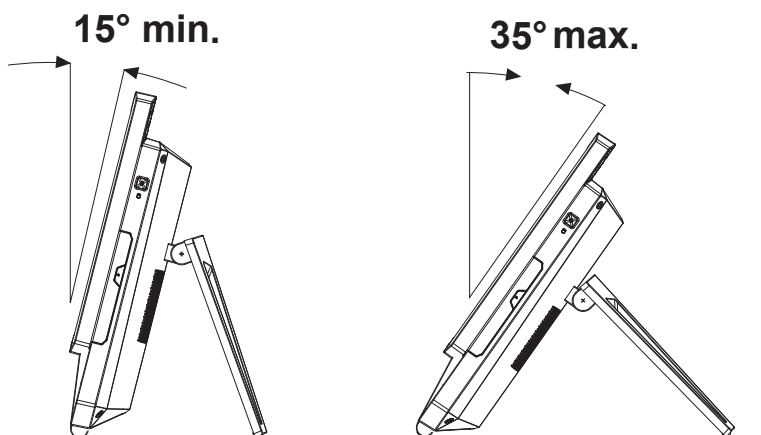

Use the stand to position the display to your preference. It can be rotated between 15° and 35° from the vertical.

 
The stand provides stability to the computer; it is not a removable part.

 


Attention:

1. The computer stand must remain installed at all times to ensure maximum system stability.
2. Make sure the angle of the computer is at least 15 degrees from the vertical; otherwise the computer will be unstable and could fall over.

To open the computer stand, do the following:

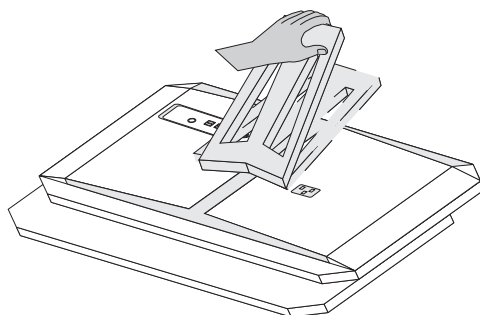




1.5 Connecting your computer

 
Use the following information to connect your computer:

- Look for the small connector icons on the back of your computer. Match the connectors to the icons.


 **Note:** Your computer might not have all of the connectors that are described in this section.


1.5.1 Check the voltage rating before you connect the equipment to an electrical outlet to ensure that the required voltage and frequency match the available power source.

1.5.2 Connect the keyboard cable to the appropriate keyboard connector (PS2 connector or USB connector).

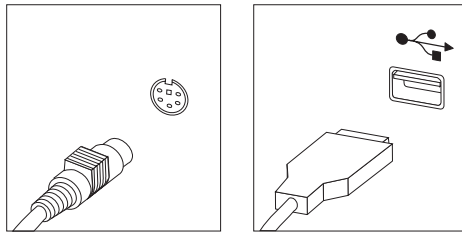


  1.5.3 Connect the mouse cable to the appropriate mouse connector (USB connector).

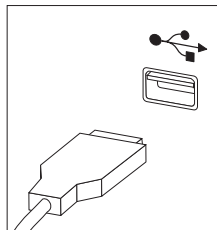




 1.5.4 If you have audio devices, attach them using the following instructions:

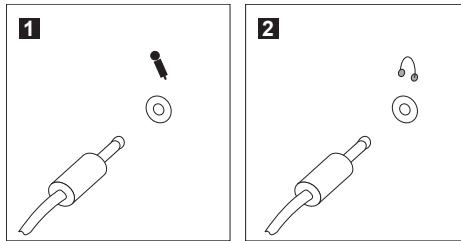


- 1 Microphone** Use this connector to attach a microphone (purchased separately) to your computer when you want to record sound or if you use speech-recognition software.
- 2 Headphone** Use this connector to attach headphones (purchased separately) to your computer when you want to listen to music or other sounds without disturbing anyone.

 1.5.5 If you have powered speakers with an adapter:

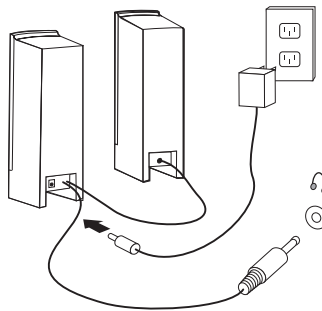


(This picture is only a sketch print, it does not show the actual figure of the speaker)

 - a. Connect the cable that runs between the speakers if necessary. On some speakers, this cable is permanently attached.
- b. Connect the adapter cable to the speaker if necessary. On some speakers, this cable is permanently attached.
- c. Connect the speakers to the Headphone port on the computer.
- d. Connect the adapter to the power source.



 1.5.6 If you have powered speakers without an adapter:

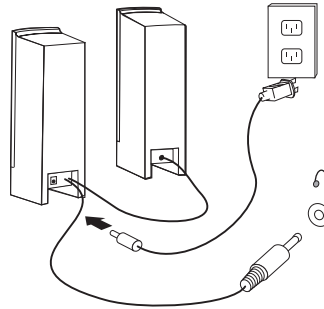


(This picture is only a sketch print, it does not show the actual figure of the speaker)


- a. Connect the cable that runs between the speakers if necessary. On some speakers, this cable is permanently attached.
- b. Connect the cable to the speaker if necessary. On some speakers, this cable is permanently attached.
- c. Connect the speakers to the Headphone port on the computer.
- d. Connect the plug to the power source.

! **Note:** Some models are not equipped with external speakers.

 
1.5.7 Connect any additional devices that you have. Your computer might not have all connectors shown.

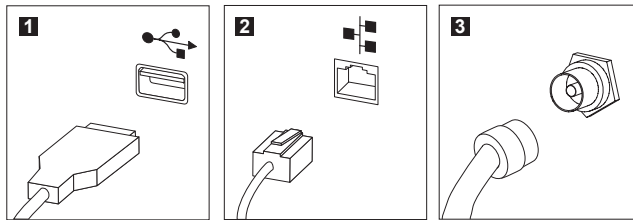

 - 1** **USB connector** Use this connector to attach a device that requires a USB connection.
- 2** **Network adapter connector** Use this connector to attach the computer to an ethernet-type local area network
- 3** **TV-Tuner connector** Only supported on systems with optional TV tuner card.



 1.5.8 Connect the power cords properly to grounded electrical outlets.

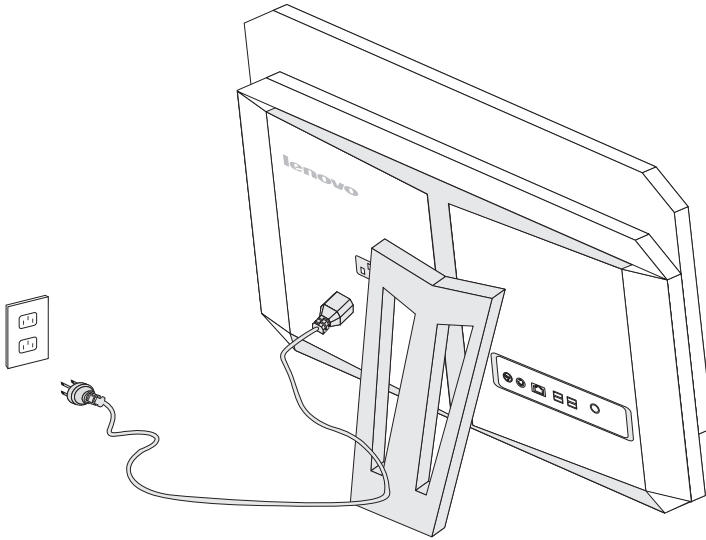



1.5.9 Your computer is equipped with a Memory Card Reader Connector, it is able to read/write data from:

SD/MMC, xD, MS, MS pro, SD Pro


1.6 Important information about using the computer

  Press the power button on the side of the computer to turn it on.


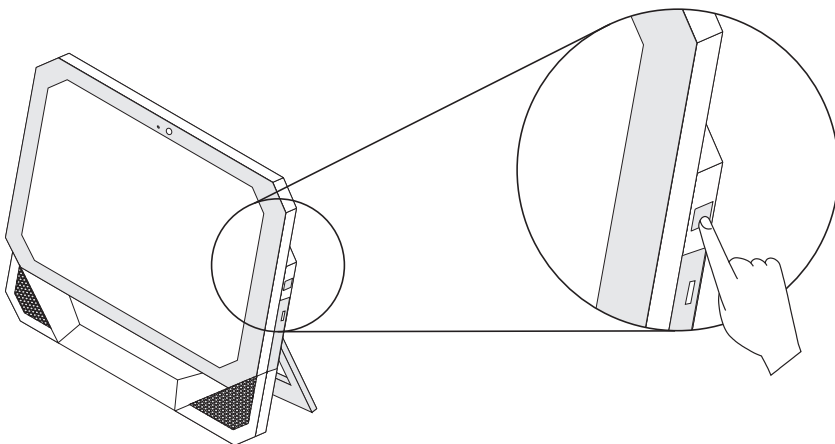





 ! **Note:** The buttons at the bottom of the screen are touch buttons. When you touch these, the indicator lights turn on.

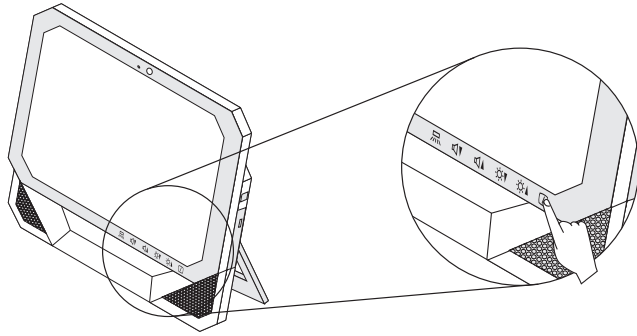


   Hold the computer tightly when you carry it.

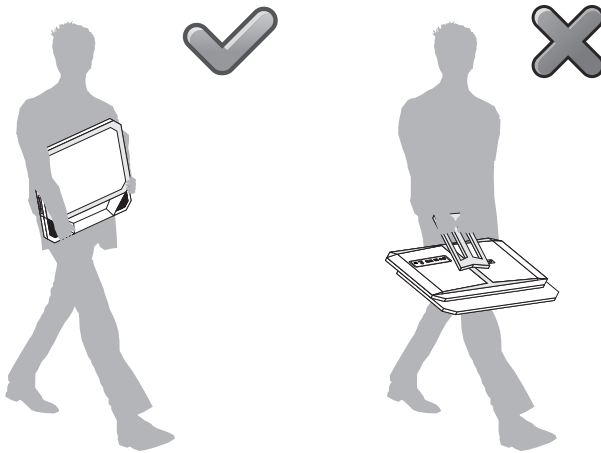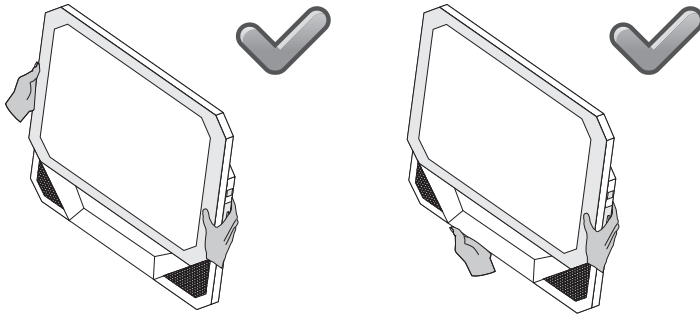




 1.7 Keyboard

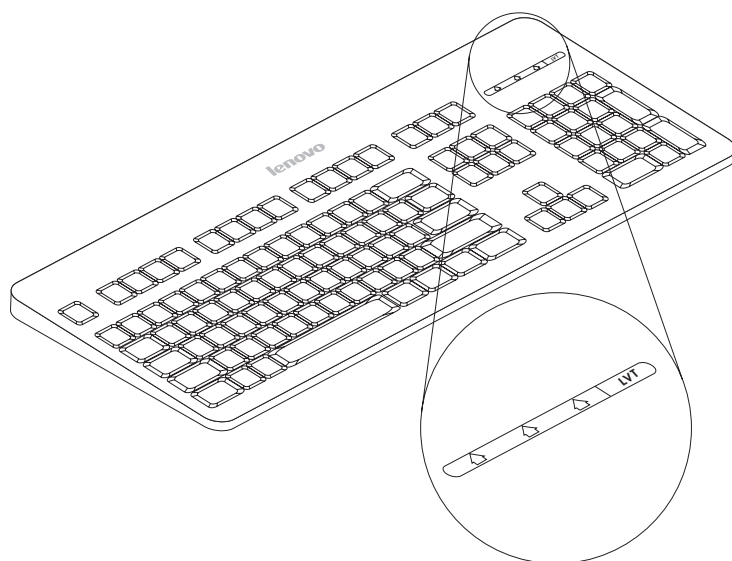


- LVT** — After entering Windows, press this key to launch the LVT (Lenovo Vantage Technology) program, Lenovo's pre-loaded Home PC software. In addition to its own functions, the LVT program will allow you to start other Windows compatible software, specially configured to run on this model of computer.
- F2** — Your computer has the Lenovo Rescue System installed. To learn more about this program, turn on the computer, and when the **Lenovo** logo appears, press the F2 key and the Lenovo Rescue System will open.

 







 










1.8 Using the Infra-red (IR) Remote Control (Only some models are equipped with IR remote control.)

 
The IR remote control (only shipped with some types of computers) works with the remote control receiver on the chassis. Adjust the angle of the remote control properly.

 












Buttons on the remote control:


Button	Description
	Up
	Down
	Left
	Right
OK	Confirm
	Back
	Details
	Guide (This function is not available in Microsoft Windows operating systems.)
	Shows live TV on the currently selected channel.
	Displays the Recorded TV page in Windows Media Center.
	Play
	Pause
	Stop
	Record
	Fast Forward
	Rewind
 SKIP	Skip
 REPLAY	Replay



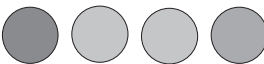

 
	Starts Windows Media Center.
	Turns volume up/down
	Previous/next channel
	Mute
	DVD menu
	Power supply (standby)
0~9	Number (or Letter) buttons
#	# key
*	* key
CLEAR	Clear
ENTER	Enter
	Teletext ON/OFF (Selected models only)
	Red, Green, Yellow, Blue (Selected models only)

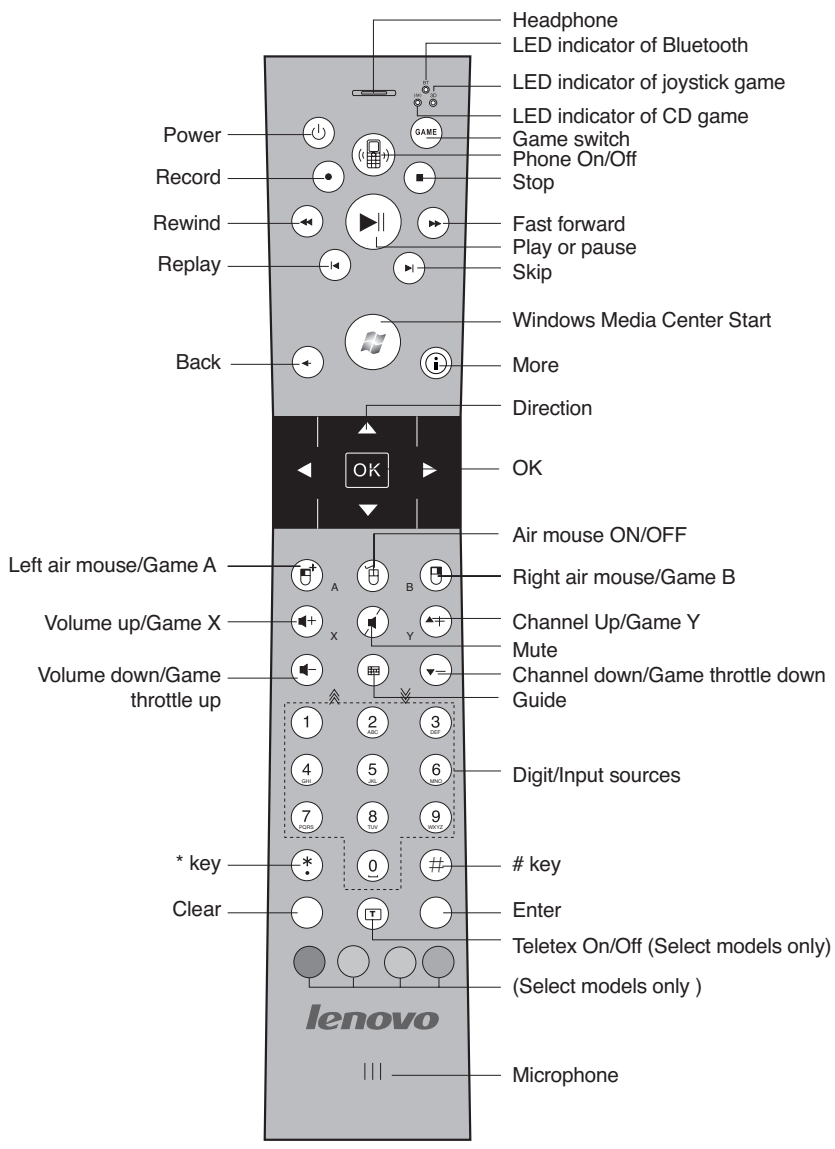 

1.9 Using the Bluetooth remote control (Only some models are equipped with Bluetooth remote control.)



 -  — Turn on/off/switch to games
-  — Turn on/off the air mouse



— Turn on/off the telephone



 
— Turn on the Windows Media Center



Notes: When the Games mode and Windows Media Center are both turned on at the same time, the direction and OK buttons only work for games and do not work for Windows Media Center. For joystick games, the Volume Up/Down buttons as well as the Channel Up/Down buttons function as Game X/Y and Game throttle up/down buttons. You cannot use them to adjust volume or to switch channels.



1.9.1 Bluetooth configuration

1. Install the batteries as indicated below.

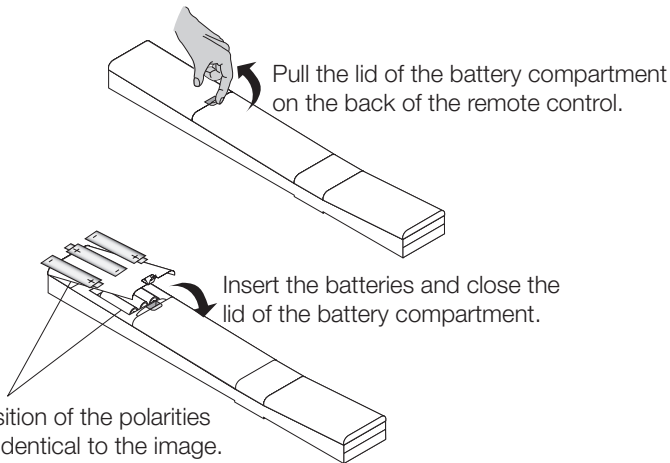


Note: Use good batteries and place them correctly in order to avoid malfunction or possible damage of the remote control.

  2. The remote control is now ready to be configured by executing the following steps below.
3. To open the Devices and Printers dialog box, go to Windows and click **Start** → **Control Panel** → **Hardware and Sound**.
4. Press **Add a device** and pop-up a dialog box. The procedure to establish connection as described in the steps below needs to be finished within 180 seconds. Failing to do so will require you to repeat the steps until the connection has been completed successfully.




 Press **Play** and **digit 1** at the same time for about 10 seconds.

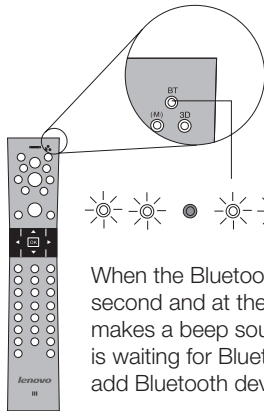

When the Bluetooth indicator light blinks twice every second and at the same time the remote control makes a beep sound, it means that the remote control is waiting for Bluetooth connection and the steps to add Bluetooth devices to the OS can be started.

 
5. Select the **Lenovo_RC** icon from the **Add a device** dialog box and click **Next**. Select **Enter the device's pairing code** and enter the password 0000. Once the Bluetooth connection has been completed successfully, the Bluetooth indicator light will turn on and the remote control can now work properly.

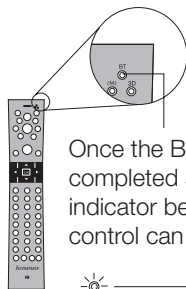

Once the Bluetooth connection has been completed successfully, the Bluetooth LED indicator becomes solid and the remote control can be used.




 
Do not press **Play** and **digit 1** again after having completed successfully the Bluetooth connection. Doing so will restart the pairing process.





Bluetooth audio configuration.

1. In the Add Wireless Device dialog box, right click on **Lenovo_RC** device and select **Properties** in the menu.
2. Check the **Headset** box under the **Services** tab in the Properties dialog box. Click **OK**.
3. Right-click on Lenovo_RC device and select **Control** in the menu.
4. Under the **Device Operations** tab, if the computer is not connected to your Bluetooth headset (Lenovo_RC), click on **Connect** to establish the Bluetooth connection.

    1.9.2 To start the games

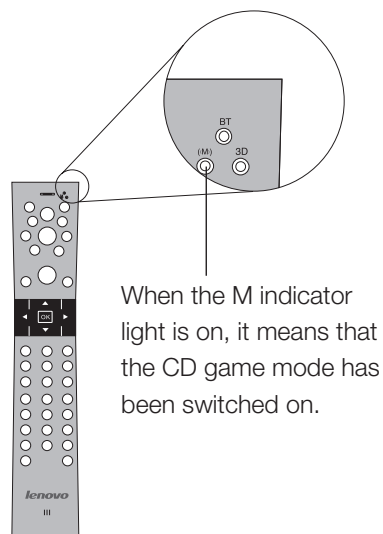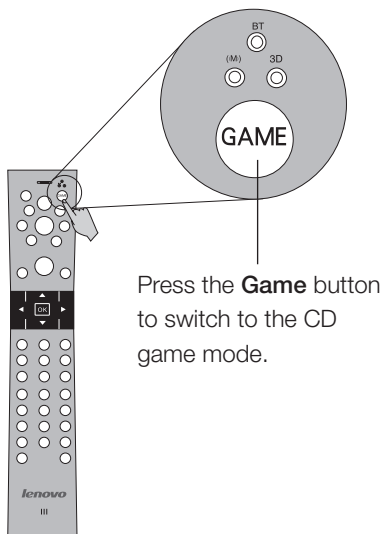

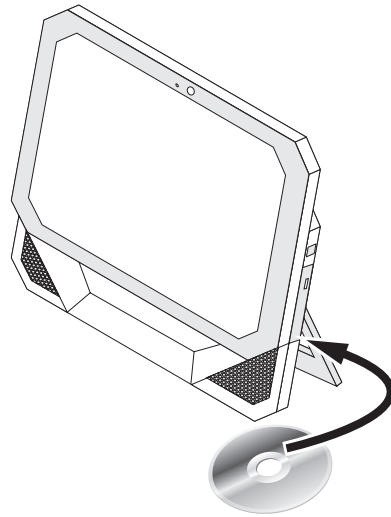


Insert the Game CD in the optical drive and follow the prompts to start the games. Use the remote control to install and play the games.

For more information about the games, check out **Access Help** on the Game CD.



1.9.3 Air mouse

 In addition to the functions of a normal remote control, the air mouse can also be used as a regular mouse.

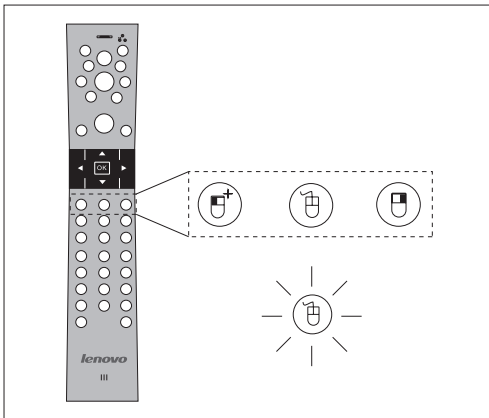



The air mouse buttons are:
Left air mouse button, Air mouse On/Off button, Right air mouse button.

  When the air mouse On/Off button is on, it is ready for use.

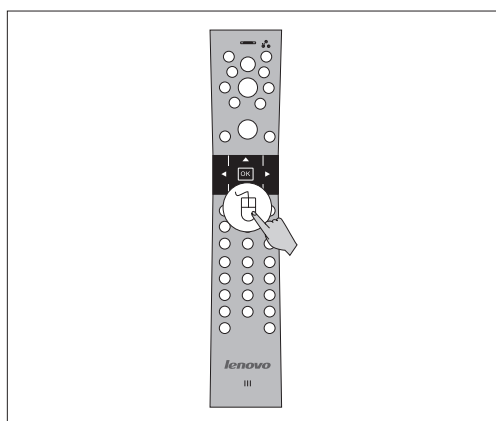


Press the air mouse On/Off button to switch between the air mouse and the remote control.

  Hold the air mouse horizontally.

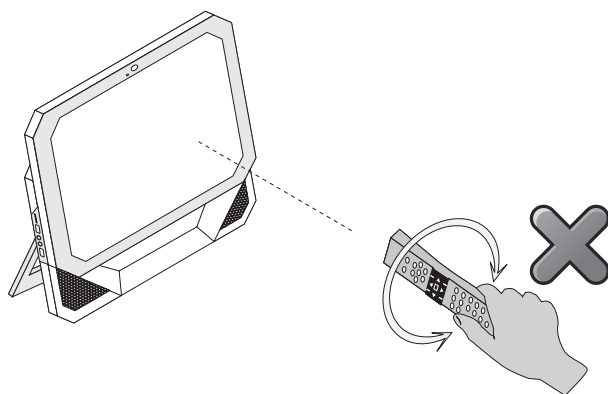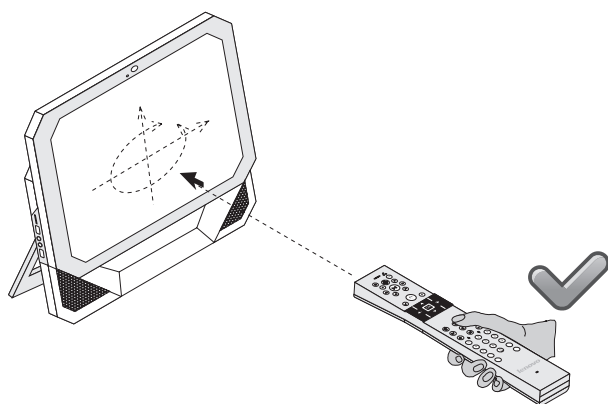

 
Do not use the air mouse in a slanted or vertical position. Doing so might result in





the pointer moving into another direction other than the intended one.


1.9.4 Important information on how to use the remote control

   
Remove all batteries when you do not use them for a long time to avoid possible leakage. Use reliable good quality alkaline batteries. You can use the remote control in the following directions according to your games:

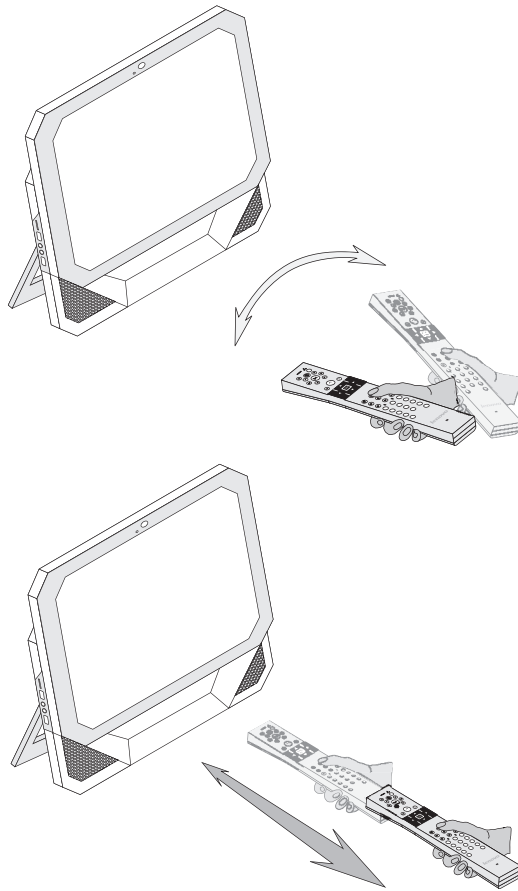

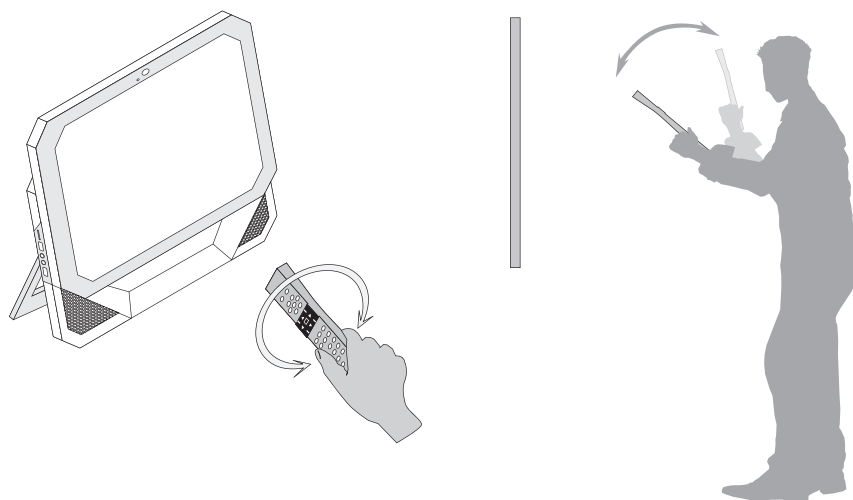


  The optimum distance between the remote control and computer is 1-3 meters (3-10 feet).

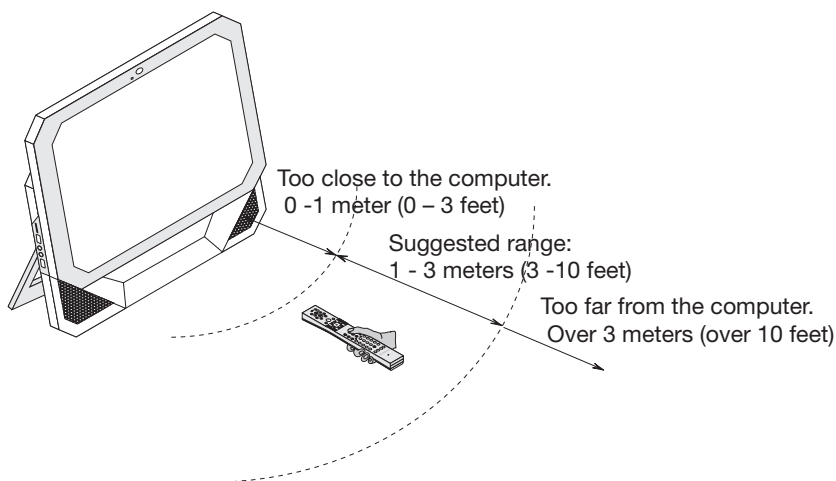




 The best angle to use the remote control is within 30°.

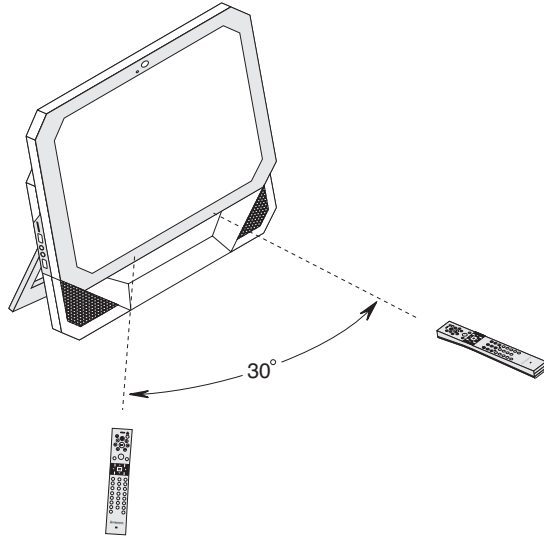

 Make sure there are no physical obstacles between the remote control and the computer that could block the Bluetooth connection.

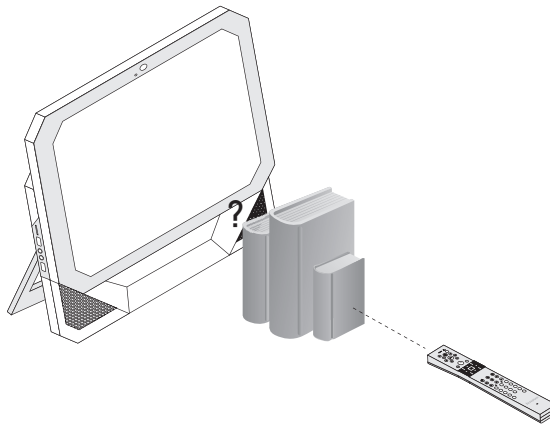


Note:

Bluetooth LED solid:

Indicates a normal Bluetooth connection to the computer. Otherwise, this indicates disconnection or that the remote control is in sleep mode.

M LED solid:

 Indicates that the CD game is active and can be manipulated by the remote control.



3D LED solid:

Indicates that the joystick game is active and can be manipulated by the remote control.

Game switch button:

Used to switch among the 3 different game modes - CD game, joystick game, or to turn off the game. Press the button once to switch to another mode.

The remote control is the standard MCE remote control for the model configured with Windows MCE.

The **Telephone** and **Air mouse** buttons need to be pressed for more than 1 second to turn these functions on. Additional software needs to be installed in order to use the telephone.

 **Note:** When using the remote control, make sure the front side faces up.

When in air mouse and game mode, if the remote control does not move or no button is pressed during 10-20 seconds, the remote control switches to sleep mode. During sleep mode, the Bluetooth connection remains on and the Bluetooth LED will be solid. Move the remote control or press any button to switch back to its previous mode.

 
When in telephone mode, the remote control will never switch to standby or sleep mode.

In any mode other than telephone mode, if there is no operation within 10 minutes after switching to standby mode, the remote control enters sleep mode. As a result, the Bluetooth connection between the computer and the remote control will disconnect and the Bluetooth LED light will turn off.

Press any button to wake up the remote control. However, wait for a moment to restore the Bluetooth connection. No pairing is needed when it is woken up from standby mode or sleep mode.

When the computer goes into standby mode (S3), sleep mode (S4) or is turned off (S5), the remote control will go into sleep mode, disconnecting the Bluetooth connection. After waking up or restarting the system, you may press any button on the remote control to renew the Bluetooth connection.

Use the remote control normally to save battery power. When the remote control



power indicator blinks every three seconds, this means that the battery power is low and the remote control will turn off automatically after 10 minutes.

When the remote control power indicator blinks 3 times per second during 3 seconds and if in telephone mode there are 3 beeps during 3 seconds, this indicates that the remote control cannot be used. You need to replace the batteries to use it again. After replacement of batteries, the indicator light will stop blinking.

In Windows MCE mode:

MCE remote control works normally. Press the related button to turn on the air mouse, game or wireless telephone function.

In Air Mouse mode:

 
MCE remote control and air mouse work normally. Press the related button to turn on the game or wireless telephone function.

In Telephone mode:


MCE remote control and wireless telephone function work normally. Press the related button to turn on the game or air mouse function.

In Game mode:

The Game function works normally. Press the related button to turn on the air mouse, MCE remote control or wireless telephone function.




CAUTION

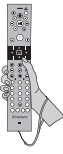


When using the remote control, make sure the remote control's wrist strap is adjusted tightly around your wrist to avoid hitting people or objects around you.

CAUTION

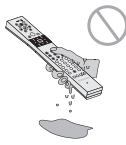


Do not use the remote control when your hand or the remote is wet. You might receive an electrical shock and damage the remote control.

CAUTION

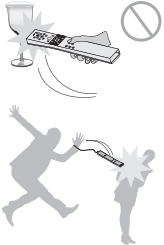


Be aware of the people and the objects around you when you use the remote control.

CAUTION

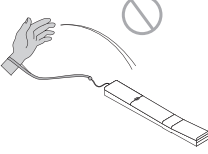


Do not throw the remote control at will to avoid hitting someone or damaging something.

CAUTION

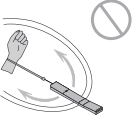


Do not swirl the remote control by the wrist strap to avoid hitting someone or damaging something.

CAUTION

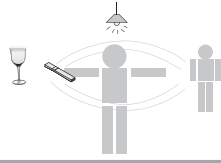

 Keep a safe distance from all the objects and people within your reach. Pay attention to the lighting devices over your head to avoid damaging the remote control.



2

Chapter

Using the Rescue System

This chapter contains the following topics:

- OneKey Recovery
- Driver and Application Installation
- System Setup
- System Backup
- System Recovery
- Create Recovery Disc



Attention: Using this program will result in a loss of data.

- You can recover the C drive of the computer to the factory default settings or to the last system backup status using **OneKey Recovery**. With this operation, all of the existing data on drive C will be lost, whereas the content and format of the other partitions of the hard disk drive will remain unchanged.
- If you want to install an operating system and back it up with **OneKey Recovery**, you must format the C partition in **NTFS** format and install the operating system on the C partition. Otherwise, the **OneKey Recovery** system cannot run.

 
1

2

3

4

5



Note about the service partition:

The files and relevant data used by the rescue system are saved in the service partition. Deleting this partition will make the rescue system unusable. For more detailed information, see the following instructions:

By selecting **Control Panel** → **Administrative Tools** → **Computer Management** → **Disk Management**, you can see the service partition, which must not be deleted.

! **Note:** The recovery files and relevant data used by the rescue system are saved in the service partition. If the service partition is deleted or damaged by someone other than authorized Lenovo servicers, Lenovo will not be liable for any losses arising there from in any way.

2.1 OneKey Recovery

OneKey Recovery is an easy-to use application. You can use it to restore your computer to the system default or a previously backed up state.

Detailed Operation Procedure

 
1. Turn on the computer. When the *Lenovo* logo appears, press the **F2** key on the keyboard to start the **Rescue System**, then you can select **OneKey Recovery**.

! **Note:** System Recovery will overwrite all of the data on drive C. To prevent loss of data, be sure to back up relevant data before performing system recovery.

2. Follow the onscreen instructions to select the backup task you want to restore from and disk you want to install operation system, and press **Next** to start restoration.
3. Please wait during the process of system recovery. Do not interrupt the operation during the recovery process.
4. After the system is recovered successfully, the software prompts to restart the computer. Restart the computer and enter the system.

2.2 Driver and Application Installation

The Driver and Application Installation function in the rescue system provides a way for the user to conveniently re-install all of the Lenovo applications and drivers that were shipped with your Lenovo hardware.



Method 1: Automatic Installation

Turn on the computer. When the Lenovo logo appears, press the **F2** key on the keyboard to start the **Rescue System**, then select **Drivers and Application Installation**.

Follow the screen prompts to install the Lenovo Drivers and Application Installation. Click **Install** to start installing the Lenovo Drivers and Application Installation.

The system will restart. After the system has restarted, the installation process will continue until completion.

Method 2: Manual Installation

In the Windows system, Click **Start** → **All Programs** → **Lenovo** → **Lenovo Drivers and Application Installation**.

After starting the procedure, install all the drivers and software manually according to the prompts.

! Notes:

1. It is recommended not to install the software which is already on the computer.
2. Before accessing the operating system, make sure that the Drivers and Application installation has been installed automatically. After that, the manual installation function can be used.

2.3 System Setup

System Setup configures the network configuration for the Lenovo Rescue System to ensure your Rescue System can connect to internet. In addition, System Setup sets and manages all passwords for the Lenovo Rescue system.

 
2.3.1 Launch

Turn on the computer. When the *Lenovo* logo appears, press the **F2** key to launch **Rescue System**. Then select **System Setup**.

2.3.2 Network Settings

Depending on the network access mode of the computer, select “ADSL” or “LAN Connection” in the network connection modes.

1. If you select “ADSL,” input the username and password of the ADSL connection.



2. If you select “LAN connection,” configure the IP address and proxy server of the LAN.

2.3.3 Password Management

Password Management allows you to set the password for Lenovo Rescue System and manage it.

The default password is blank.

Set a password when you access the **Password Management** for the first time. If you don't want to set a password, access the system directly and operate accordingly.

2.4 System Backup

Back up your system partition to an image file. In case of a system failure, you can restore your system from this image file.

In the Windows system, click **Start** → **All Programs** → **Lenovo** → **Lenovo Rescue System**.

After starting the procedure, click **System Backup** to back up your system partition according to the prompts.

2.5 System Recovery

Reboot your computer into the system recovery environment. You can choose to restore to a system backup point or the initial state.

 
2.6 Create Recovery Disc

Create a bootable recovery disc from current system. These recovery discs are used to boot your computer and will guide you through the entire restoration process.

In the Windows system, click **Start** → **All Programs** → **Lenovo** → **Lenovo Rescue System**.

After starting the procedure, click **Create Recovery Disc** to create a bootable recovery disc from current system.

Follow the screen prompts to create recovery discs.



3

Chapter

Using the Computer Software

This chapter contains the following topics:

- Computer software instructions

! **Note:** The interface and function of each of these features are subject to the actual software that was shipped with the computer model that you purchased.

 
1

2

3

4

5




3.1 Power2Go - Burning Discs (This software only can be used on model with a rewritable optical drive and Blu-ray Burning Disc software is only equipped on the model with Blu-ray Disc rewritable optical drive.)

Power2Go is the software for disc burning. It provides various burning tools that enable you to easily store your files into CDs, DVDs or Blu-ray Discs.

Power2Go can make common data discs, music discs, video/photo discs and mixed discs and bootable discs. It also supports disc duplication.

You can create a bootable CD, DVD, Blu-ray Disc, which you can use to boot your computer from your disc drive if your operating system ever fails.

 **Note:** This software does not support the burning of VCD audio.

3.1.1 Launch

 
1. Choose **All Programs** → **Lenovo** → **Power2Go** → **Power2GoExpress** from the **Start** menu to launch the burner program.
2. The shortcut to launch the burner software is the block icon on the desktop. To use the burner program, just drag and drop the files to be recorded onto their appropriate data, music, or video icon.

3.1.2 Starting the burner software

1. Choose **All Programs** → **Lenovo** → **Power2Go** → **Power2Go** from the **Start** menu to launch the burner program.
2. Choose a task for the burner from the task list. Then start the burner to record files.
3. You can choose the medium to burn from the disc type, and then click the **OK** icon to access the burner interface.
4. Select the file to be burned from the select source box, and then click the add files icon to add your files into the disc compilation column. Click the burn icon to start burning process.

3.1.3 Disc Utility

The burner also provides utility tools for preparing and processing various CDs and DVDs, such as the recording of mirror files, erasing of discs, and conversion of audio.



3.1.4 Help

For more information about the use of Power2Go, click the **Help** icon.

3.2 WinDVD (Some models are equipped with WinDVD software and the WinDVD Blu-ray software is only equipped on the model with the Blu-ray optical drive.)

With WinDVD, you can play DVDs and VCDs.












To launch the player:

 
Choose **All Programs** → **InterVideo WinDVD** from the **Start** menu to launch the player.

Click the “?” icon to obtain more information about **WinDVD**.

WinDVD Blu-ray Disc (BD) is the software for playing discs. It can play DVD standard format discs and Blu-ray format discs with the optical drive.

The WinDVD player includes the following basic buttons:

-  — Play
-  — Move backwards within the current track
-  — Pause
-  — Move forward within the current track
-  — Track list
-  — Stop
-  — Go to the previous track
-  — Eject
-  — Go to the next track
-  — Mute
-  — Volume



3.3 McAfee Security Center

McAfee VirusScan Center offers proactive PC security to prevent malicious attacks. It also provides security against multi-pronged attacks by combining anti-virus, anti-spyware and firewall technologies.

 **Note:** Connect to the Internet before activation.

3.3.1 Using McAfee Security Center

Choose **All Programs** → **McAfee** → **McAfee Security Center** from the **Start** menu to launch the antivirus software.


Or, Double click the **McAfee Security Center** on the desktop to launch the antivirus software.

3.3.2 Scanning for Viruses

Click **Scan** on the Security Center home page. Select a task on the Scan Options pane, Click **Start** to launch the scan program. Upon completion, the software will pop up a system scanning report, which lists all virus files detected, and you can then quarantine or delete them as required.

 
3.3.3 Check for updates

Click **Update** on the Security Center home page to check for updates.

 **Note:** Connect to the Internet before upgrading.

3.3.4 Help and Support

For more information on the operation of Security Center, see product help Information in the **Help** option. In the help document, you can learn more about McAfee Security Center operation and settings.



3.4 Media Show

MediaShow is a new and innovative way to view and be creative with your media. MediaShow lets you be as imaginative as you want by performing the following functions:

- View your photos and videos
- Edit and add effects to your photos and videos
- Create screen savers and slideshows with your photos
- Create stylish and professional looking movies with your videos
- Upload your photos directly to Flickr
- E-mail photos and videos directly from MediaShow to your friends
- Create discs with your photos and video

3.4.1 Photos

 
You can manage your photos in MediaShow through the different creative functions. It has various editing functions and the ability to e-mail your photos, or upload them to Flickr.

3.4.2 Videos

You can manage your videos in MediaShow through the different creative functions. It has various editing functions and allows you to e-mail your videos.


3.4.3 Create DVD Discs

You can create professional looking DVD discs with themes and menus using your videos and photos through this function. You also can configure your DVD disc settings.



3.5 Lenovo CamSuite

CamSuite is an animated messaging tool featuring customizable emotive facial animation that gives you much more fun than the conventional video chatting on instant-messaging applications.

 **Note:** If you have an instant-messaging application installed on your OS, the video device must be set manually.

Refer to the following steps to quickly start using **CamSuite** in your instant-messaging video conference. For more details on how to use each feature of **CamSuite**, refer to the Online Help.

3.5.1 Capture mode

 
In the **Capture** mode, you may click **Snapshot** or **Record** button to capture and share an image or a video of yourself from your webcam.

3.5.2 Avatar Live

CamSuite enables you to select a customized image and use it as your avatar during instant-messaging video calls.

3.5.3 Magic Mirror

You can add different expressions to enhance your face by means of **Face Morph** technology.




4

Chapter

System Maintenance and Recovery


This chapter contains the following topics:

 - Daily Maintenance and Tools Instructions



4.1 Restoring the System

The system can develop problems due to erroneous operation or the installation of additional software. If software problems develop in the originally installed software, you can restore the system by using system backup and restoration features.

 **Note:** The existing system settings will change after restoration. Check the settings of the restored system to ensure they match settings that may be critical to your needs.

Use the following procedure to restore the software to a known functional level:

1. Click **Start** → **All Programs** → **Accessories** → **System Tools** → **System Restore**.
2. Choose either the recommended restore point, or select a different recovery time from the pop-up box. Choose the latest date when the system was running properly.
Click **Next** to continue.
3. The system will start restoration. When all processes run to completion, the system displays a message informing you that the restore operation has completed successfully.

4.2 Backup and Restore

 
For security purposes, you can back up the system status before you install additional software, or otherwise modify system settings. To back up the system status, do the following:

1. Click **Start** → **All Programs** → **Maintenance** → **Backup and Restore**.
2. Select the location for your backup. Click **Next** and follow the instructions to continue.

4.3 Cleaning Up the Disk

Do the following periodically to clean up the disks and possibly enhance your computer's performance:


1. Click **Start** → **All Programs** → **Accessories** → **System Tools** → **Disk Cleanup**.
2. Choose the disk you want to clean up.
3. Click the **OK** button to start the cleanup process.



4.4 Checking For, and Correcting Disk Errors

To properly maintain your system, you should periodically check for and fix hard disk errors by doing the following:

1. Right-click the icon for the hard disk drive (HDD) that you want to reorganize, then select **Properties** from the pop-up menu.
2. Select the **Tools** tab, and then click **Check Now**.
3. Check your inspection items for the disk and click **Start**.

 **Note:** You cannot start error checking until the computer is restarted and initialized.

4.5 Defragmenting the Disk(s)

Disk fragments are tiny unused storage areas scattered on the disk. The system cannot directly reutilize these “blank” spaces and system performance can decrease as system operations usually cause the number of unused storage gaps to increase. To defragment your disk storage, do the following:

1. Right-click the icon for the hard disk drive (HDD) that you want to reorganize, then select **Properties** from the pop-up menu.
2. Go to the **Tools** tab from disk **Properties** and select **Defragment Now**.
3. Select the time and scheme to be used by the defragmenting program, then start the defragmenting program. Depending on the amount of defragmentation on the hard disk drive, this procedure can take a long time (sometimes more than one hour).

 
4.6 Performing Daily Maintenance Tasks

Cleaning the computer components

Because many of the computer components consist of sophisticated integrated circuit boards, it is very important to periodically clean around the computer to prevent dust buildup. The cleaning supplies you need in order to clean the components include: a vacuum cleaner, a soft cotton cloth, clear water (pure water preferred) and cotton swabs.



Attention: Before you clean your computer, disconnect the computer from the electrical outlet. Clean your computer with a soft cloth dampened with water. Do not use liquid or aerosol cleaners, which may contain flammable substances.



- !** **Note:** To avoid damaging the computer or display, do not spray cleaning solution directly onto the display. Only use products specifically designed for cleaning displays, and follow the instructions that are included with the product.

 
The following are general methods for cleaning the components:

- You can use a soft cloth to remove dust on the surface of the computer, the monitor, the printer, the speakers and the mouse.
- You can use a vacuum cleaner to clean in otherwise inaccessible corners.
- To clean the keyboard thoroughly, shut down the computer and scrub it gently with a wet cloth.
- Do *not* use the keyboard until it is dry.

Do not do any of the following:

- Allow water to enter the computer
- Use a heavily dampened cloth
- Spray water directly onto the surface of the monitor or inside of computer.

Daily attention should be given to LCD monitors. Use a dry cloth daily to brush dust from the monitor and keyboard. Keep all surfaces clean and free of grease stains.



5

Chapter

Troubleshooting and Confirming Setup

This chapter contains the following topics:

- Troubleshooting and Problem Resolution

! **Note:** The description of the TV-Tuner card in this manual is only used for the machines which have the TV-Tuner card. It does not apply to those machines that do not have a TV-Tuner card.

 
1

2

3

4


5



Solving Problems

Follow these tips when you troubleshoot your computer:

- If you added or removed a part before the problem started, review the installation procedures and ensure that the part is correctly installed.
- If a peripheral device does not work, ensure that the device is properly connected.
- If an error message appears on the screen, write down the exact message. This message may help support personnel diagnose and fix the problem(s).
- If an error message occurs in a program, see the program's documentation.

 **Note:** The procedures in this document were written for the Windows default view, so they may not apply if you set your Lenovo® computer to the Windows Classic view.

5.1 Troubleshooting Display Problems

Problem: Blank screen or no image is displayed on the monitor

Troubleshooting and problem resolution:

Check that the LCD screen has been turned on; if not, press the LCD On/Off button to turn on the LCD.

If still cannot solve the problem, contact to Lenovo Customer Service.

Problem: You need to change display property settings.

 
Setting display background and icon properties:

1. Right-click the desktop anywhere except over an icon, then select Personalize from the pop-up menu.
2. From here, select the appropriate options to:
 - Change the desktop background
 - Select a screen saver
 - Select colors and appearance options for icons and characters
 - Set resolution and colors by using **Display Settings** options.

Problem: Ripple on screen

Troubleshooting and problem resolution:

1. Check for devices located less than one meter from the computer such as



refrigerators, electric fans, electric dryers, UPSs, regulators, fluorescent lamps or other computers that may be generating magnetic interference.

2. Move any interfering devices away from the computer.
3. If the problem persists, consult with Lenovo Service.

5.2 Troubleshooting Audio Problems

Problem: No sound from integrated speakers

Troubleshooting and problem resolution:

- Adjust the windows volume control — Double-click the speaker icon in the lower-right corner of your screen. Ensure that the volume is turned up and that the sound is not muted. Adjust the volume, bass, or treble controls to eliminate distortion.
- Reinstall the audio driver
- Disconnect headphones from the headphone connector — Sound from the speakers is automatically disabled when headphones are connected to the computer's side-panel headphone connector.

Problem: No sound from headphones

Troubleshooting and problem resolution:

 
- Check the headphone cable connection — Ensure that the headphone cable is securely inserted into the headphone connector.
- Adjust the windows volume control — Click or double-click the speaker icon in the lower-right corner of your screen. Ensure that the volume is turned up and that the sound is not muted.

5.3 Troubleshooting Software Problems

Problem: You are unable exit a running program normally.

Troubleshooting and problem resolution:

1. Open the Task Manager window by pressing Ctrl, Alt and Delete at the same time.
2. Select the Application tab, select the problem program, and then click the End Task button.



Problem: You need to install or uninstall a program.

Problem resolution:

During installation never abort the install process by powering the system off or through other drastic means. This can cause system program disorder or even failure during system initialization.

During the uninstall process, never directly delete the files or folders. This is harmful to the system, and might cause a system-wide malfunction.

Use the following procedure to properly uninstall programs:

 
1. Back up all documents and system settings related to the program before removing it.
2. If the program has its own uninstaller, run it directly to uninstall the program.
3. If the program does not have its own uninstaller, then select Control Panel from **Start** menu.
4. From the **Control Panel**, choose **Programs and Functions**.
5. Find the applicable program from the **Programs and Functions** dialog box and then select **Uninstall/Modify**.
6. Perform the instructions displayed to uninstall the software.

5.4 Troubleshooting Problems with Optical Drives and Hard Disks

Problem: The Optical drive is unable to read a CD/DVD.

Troubleshooting and problem resolution:

1. Check to determine if there is an optical drive icon in the resource manager of the operating system. If not, restart your computer. If there is still no icon, contact Lenovo Service. Otherwise, continue with the next step of this procedure.
2. Confirm that the CD/DVD has been properly placed in the drive. If not, reload the CD or DVD. Otherwise, continue with the next step of this procedure.
3. Check the specifications that came with your computer to confirm that this optical drive is supposed to be able to read this type of CD or DVD.
4. If the CD/DVD cannot be read, replace it with a known good CD/DVD such as one that was shipped with the computer.
5. If the known good CD cannot be read, visually check the operating side of the CD/DVD for defects.



Problem: The capacity of the hard disk, as indicated by the system, is less than the nominal capacity.

Troubleshooting and problem resolution: For computers equipped with the OneKey Recovery feature, the system recovery feature needs to occupy some hard disk space. This may account for the apparent hard disk capacity deficit.

Further Technical Explanation: The nominal capacity of the hard disk is expressed in the decimal system, 1000 bytes. But the actual hard disk capacity is expressed in the binary system as 1024 bytes (For example, the nominal capacity 1G is 1000M, while the actual capacity 1G is 1024M).

The capacity of the hard disk shown in Windows can be calculated according to the calculations in the following example:

The nominal capacity of the hard disk is 40G, while its actual capacity should be: $40 \times 1000 \times 1000 \times 1000 / (1024 \times 1024 \times 1024) = 37\text{G}$.

 
If the Service partition of 3G - $3 \times 1000 \times 1000 \times 1000 / (1024 \times 1024 \times 1024) = 2.79\text{G}$ is subtracted, the capacity of the hard disk shown in the system can be obtained.

The capacity of the hard disk as calculated using this method may be slightly different from the actual capacity due to the rounding of totals.

5.5 Special considerations for troubleshooting Windows

Record the following information that may later be useful in troubleshooting system problems:

1. The serial number of the software. The serial number was shipped with the computer and was provided separately by the manufacturer. The Help Center is unable to retrieve this number.
2. The drivers for this computer model only support the Windows 7 system.
3. When you use the Windows Media Center to watch TV, be particularly attentive to the following:
 - In the following two situations, you must re-save a channel list:
 - a. When you change your TV signal from digital to analog, your saved channel list for digital TV is deleted. When you want to watch digital TV again, you must create and save a new channel list.
 - b. When you change your TV signal from analog to digital, your saved channel list for analog TV is deleted. When you want to watch analog TV



again, you must create and save a new channel list.

- Before you can watch teletext programming, you must set the TV tuner input signal to analog.

5.6 Wireless keyboard and mouse instructions (Only some models are equipped with wireless keyboard and mouse)

Before using the wireless keyboard and mouse, carefully read the configuration instructions in the Quick Reference poster. If you fail to connect the wireless keyboard and mouse according to the steps shown in the Quick Reference poster, you may also connect using the instructions below.

Method 1:

1. After installing the batteries, turn on the power switches of the wireless keyboard and mouse.
2. Press the wireless connect buttons on the back of the keyboard and mouse. When the keyboard and mouse wireless indicator lights blink white, turn the computer on immediately.

! **Note:** If the wireless indicator lights stop blinking, press the connect buttons on the keyboard and mouse again.

3. After entering the system, press the wireless reset button (or Indicator lights ON/OFF button) for over 10 seconds to search for wireless devices.


! **Note:** The process of searching for wireless devices could take several minutes.

4. When the wireless mouse device is found, the driver will be installed automatically.
5. When the wireless keyboard device is found, enter the PIN code and press the **Enter** key to finish the pairing process.
6. Once the wireless connection has been successfully established, the wireless keyboard and mouse will work properly.

Method 2:


! **Notes:**

 - Before using the method below, enter the system and prepare a set of wired keyboard and mouse.



- If you want to install a new set of wireless keyboard and mouse, follow the steps below.

1. Using the wired keyboard and mouse to enter the system.
2. Turn on the power switches of the wireless keyboard and mouse.
3. Press the wireless connect buttons on the back of the keyboard and mouse. When the keyboard and mouse wireless indicator lights blink white, turn the computer on immediately.

 **Note:** If the wireless indicator lights stop blinking, press the connect buttons on the keyboard and mouse again.

4. To open the Devices and Printers dialog box, go to Windows and click **Start** → **Control Panel** → **Hardware and Sound**. Press **Add a device** to pop-up a dialog box.
5. Select the **Lenovo Bluetooth Mouse** and click **Next** to establish the bluetooth connection.
6. Select the **Lenovo Bluetooth keyboard** and click **Next**. (Press **Add a device** icon if the dialog box is closed and press the connect button again.)
7. Enter the pairing code and press the **Enter** key to complete the bluetooth connection.

