

SmartCut™
accessories


Swingline®

Straight Blade

Use with EasyBlade™ Plus Rotary Trimmers

To Replace the EasyBlade™ Plus Cartridge:

1. Squeeze sides of the cartridge that is currently on your trimmer and remove.
2. Remove replacement cartridge from packaging.
3. Squeeze sides of cartridge and insert into place.
4. Remember to watch the blade wear indicator on the cartridge to alert you when it is time to replace the cartridge.

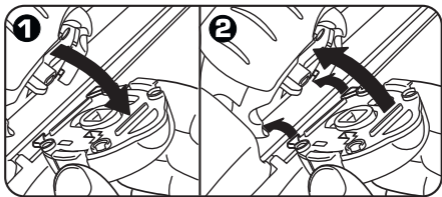

Patent Pending

swingline.com

TRM8913RB650K
8913RBe•12078•1007



ACCO Brands
300 Tower Parkway
Lincolnshire, IL 60069-3640
1 800 820 6220
©2007 ACCO Brands

Made to Swingline
Standards in China.

#8913RB