

Specifications

Images sensors:	MT9V011
Power supply:	DC12V
Lens Angle(Deg.):	170°
TV System:	PAL/NTSC
Video Output:	1.0vp-p,75ohm
S/N Ratio:	≥48dB
IP rating:	IP67
Operating Temperature(Deg.C):	-30°C~ +70°C (RH95%MAX.)
White Balance:	Auto
Minimum illumination:	0.5Lux
AGC:	Auto
Resolution(TV Lines):	420
Electronic shutter	1/60(NTSC) 1/50(PAL) 1/10,000second
Effective pixels:	640*480
The above parameters can be modified without separate notification	

PYLE[®]
view

**Universal Mount Optional Front
View & Rear View Backup Color CMD
Camera Built-In Distance Scale Line**


Model : PLCM38FRV

User Manual

Visit us online @
www.PyleAudio.com

Please read these instructions carefully before installation and use. Installation should be performed by professional staff.

1. Wire connection

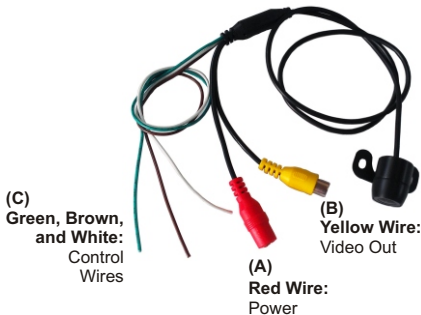


Connect the 12V power to the red wire (A) using the included 1.2m cable. Use the included 5m cable to connect the yellow wire (B) to your video monitor.

For further control, use the control wires (C). Connect power wire, and then connect brown and green wires to reverse the image. Connect brown and white wires first and then connect power wire to show distance lines onscreen.

2. Installation

The camera can be installed in the following ways:

- A. Bracket-mount (see diagram 1)
- B. Flush-mount (see diagram 2)
- C. License plate screw-hole mount (see diagram 3)

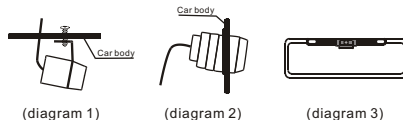

2.1: Bracket-mount: Install in the rear bumper or on the license plate. Affix with screws.

2.2: Flush-mount: Install by drilling a hole on the rear bumper.

2.3: License plate camera: Mount in the screw hole on the license plate, then affix with a nut.

Attention: The camera switch is controlled by the reverse gear shift.