




SGP32 / SGP35

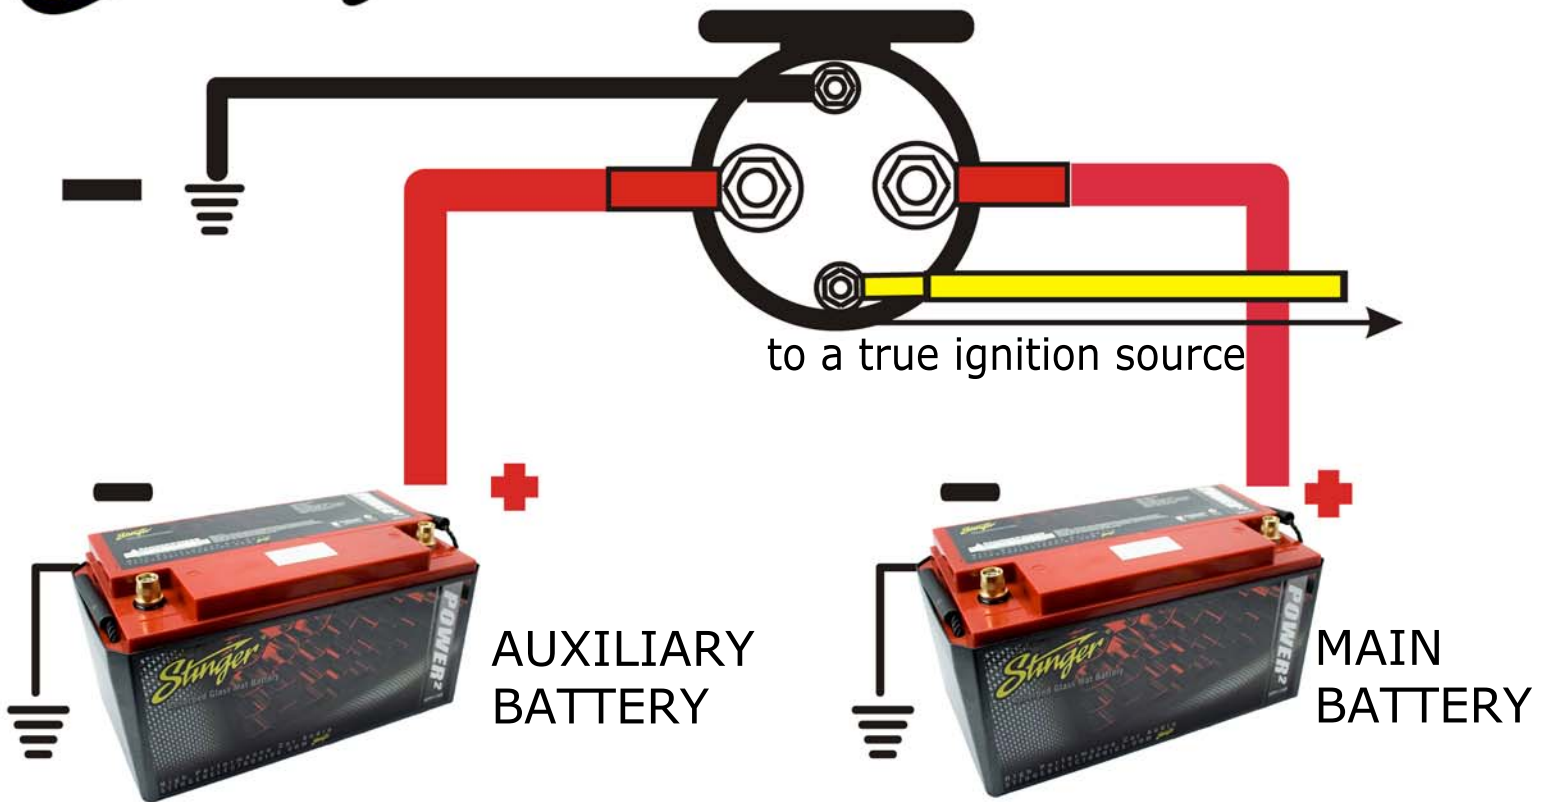

Two Large Terminals:

- #1 - Connect one large terminal to the vehicles' main battery via a fuse holder.
- #2 - Connect the other large terminal to the sound systems' auxiliary battery / batteries, again via a fuse holder.

(For safety, there should be no more than 18" of wire between batteries without the use of a fuse holder)

*Note: The large terminals can be wired in either direction

Two Small Terminals:

- #1 - Connect one small terminal to a true ignition power source (ignition harness, fuse-box)
- #2 - Connect second small terminal to chassis ground

*Note: The small terminals can be wired in either direction

For more technical information including diagrams, training videos and other useful information please visit:

www.stingerelectronics.com

Stinger Electronics™, A Division of AAMP of America™
13190 Suite 401 56th Court Clearwater Florida USA 33760