


Installation Instructions &telehook

Projector | Suspended Ceiling Tile 24"

Component Checklist

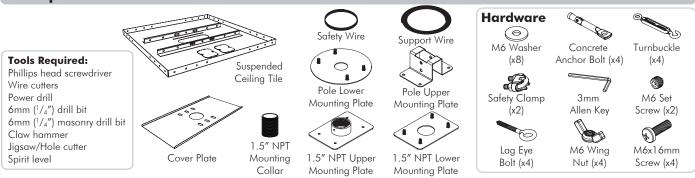

IMPORTANT INFORMATION:

- IMPORTANT Install Telehook Projector Suspended Ceiling Tile 24" as per Installation Instructions.
- Compatible with 1.5" NPT Pole Mounts, Atdec Pole Mount (TH-WH-PJ-CM), Atdec Flush Mount (TH-WH-PJ-FM), Atdec ProAv Projector Ceiling Mount (TH-PF) and Atdec pole accessories (TH-PPA-18-25, TH-PPA-24-48 & TH-PPE-24).
- Maximum weight capacity 22.7kg (50lbs).
- The manufacturer accepts no responsibility for incorrect installation.

Step 1. Check Components

Check you have received all parts against the Component Checklist and Hardware above.

Step 2. Remove Existing Ceiling Tile





Remove existing ceiling tile from ceiling grid where the product is going to be installed.

TIP: Also temporarily remove an adjacent ceiling tile to allow easy access to the product during installation.

Step 3. Fix Anchors to True Ceiling

Uncoil Support Wire and cut into 4 equal lengths. Select the anchoring method appropriate to your ceiling (see below). NOTE: Each anchor point should be directly above each corner of the Suspended Ceiling Tile.

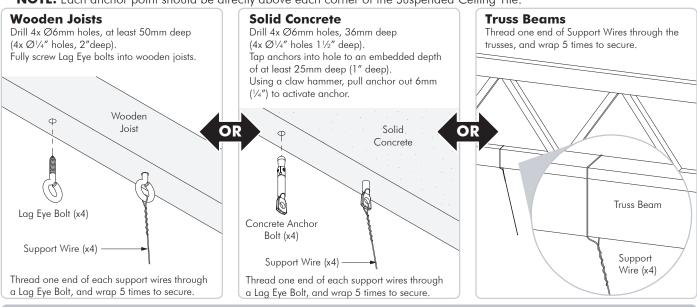

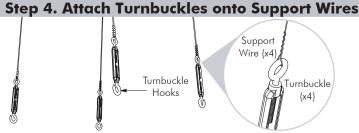



Loop each dangling Support Wire through a Turnbuckle, and wrap

Make sure that the position of the x4 Turnbuckles are approximately at the same height.

TIP: The turnbuckle hooks should be level with the top of ceiling grid.

Step 5. Assemble Projector Mount Interface onto Suspended Ceiling Plate

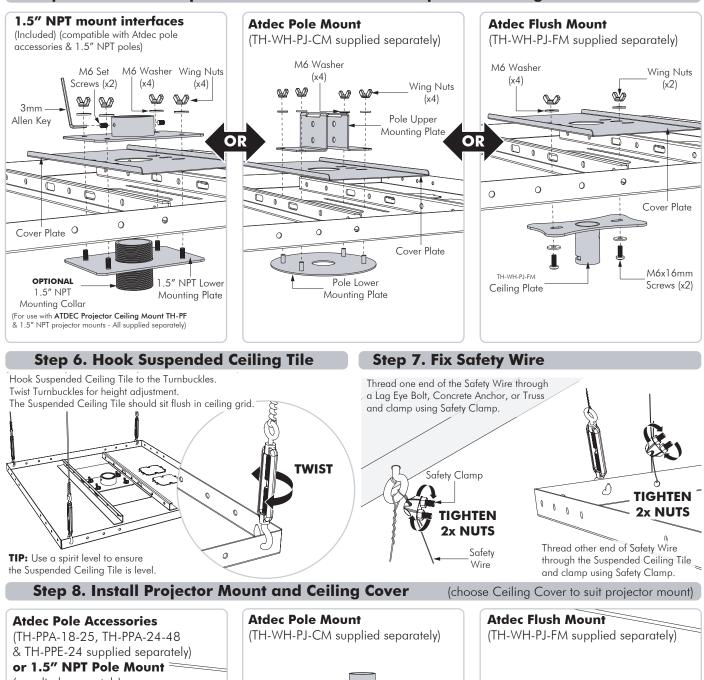

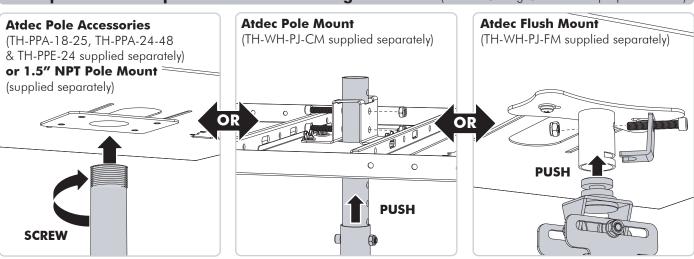

Installation Complete - Ready to install Projector

