

EN

User manual

Washer Dryer

# USER MANUAL

ZKG 7143

**ZANUSSI**

## Contents

---

Safety information _____	2	Daily Use _____	14
Safety instructions _____	3	Use - Drying _____	16
Product description _____	5	Use - Washing & Drying _____	17
Control panel _____	6	Care and cleaning _____	18
Washing Programmes _____	8	What to do if... _____	21
Drying Programme _____	10	Technical data _____	24
Helpful hints and tips _____	11	Consumption values _____	25
Drying Hints _____	12	Installation _____	25
First use _____	13	Environmental concerns _____	29
Personalisation _____	13		

Subject to change without notice.

## Safety information

---

Before the installation and use of the appliance, carefully read the supplied instructions. The manufacturer is not responsible if an incorrect installation and use causes injuries and damages. Always keep the instructions with the appliance for future reference.

### Children and vulnerable people safety

**⚠ Warning!** Risk of suffocation, injury or permanent disability.

- Do not let persons, children included, with reduced physical sensory, reduced mental functions or lack of experience and knowledge use the appliance. They must have supervision or instruction for the operation of the appliance by a person who is responsible for their safety.
- Do not let children play with the appliance.
- Keep all packaging away from children.
- Keep all detergents away from children.
- Keep children and pets away from the appliance door when it is open.
- If the appliance has a child safety device, we recommend you activate it.

### General Safety

- Before maintenance, deactivate the appliance and disconnect the mains plug from the mains socket.

- Do not change the specification of this appliance.
- Obey the maximum load volume of 6 kg (refer to the “Programme chart” chapter).



## Safety instructions

### Installation

- Remove all the packaging and the transit bolts.
- Keep the transit bolts. When you move the appliance again you must block the drum.
- Do not install or use a damaged appliance.
- Do not install or use the appliance where the temperature is less than 0 °C or where it is exposed to the weather.
- Obey the installation instruction supplied with the appliance.
- Make sure that the floor where you install the appliance is flat, stable, heat resistant and clean.
- Do not install the appliance where the appliance door can not be fully opened.
- Always be careful when you move the appliance because it is heavy. Always wear safety gloves.
- Make sure that there is air circulation between the appliance and the floor.
- Adjust the feet to have the necessary space between the appliance and the carpet.

### Electrical connection



**Warning!** Risk of fire and electrical shock.

- The appliance must be earthed.
- Make sure that the electrical information on the rating plate agrees with the power supply. If not, contact an electrician.
- Always use a correctly installed shockproof socket.
- Do not use multi-plug adapters and extension cables.
- Make sure not to cause damage to the mains plug and to the mains cable. Contact the Service or an electrician to change a damaged mains cable.

- Connect the mains plug to the mains socket only at the end of the installation. Make sure that there is access to the mains plug after the installation.
- Do not pull the mains cable to disconnect the appliance. Always pull the mains plug.
- Do not touch the mains cable or the mains plug with wet hands.
- This appliance complies with the E.E.C. Directives.

### Water connection

- Make sure not to cause damage to the water hoses.
- The appliance is to be connected to the water mains using the new supplied hose-sets. Old hose sets must not be reused.
- Before you connect the appliance to new pipes or pipes not used for a long time, let the water flow until it is clean.
- The first time you use the appliance, make sure that there is no leakage.

### Use



**Warning!** Risk of injury, electrical shock, fire, burns or damage to the appliance.

- Use this appliance in a household only.
- Do not change the specification of this appliance.
- Do not put flammable products or items that are wet with flammable products in, near or on the appliance.
- Do not touch the glass of the door while a programme operates. The glass can be hot.
- Make sure that you remove all metal objects from the laundry.
- The final part of the drying cycle occurs without heat (cool down cycle) to ensure that the items will not be damaged.

If you stop the appliance before the end of the drying cycle, immediately remove and spread out all items, so that the heat can dissipate.

- If you use detergent, fabric softener or similar products, obey the instructions on the packaging.
- Wipe away lint that has accumulated around the appliance.
- Do not dry the damaged items which contain padding or fillings .
- Do not dry items such as foam rubber (latex foam), shower caps, waterproof textiles and rubber backed articles.
- Before drying items that have been in contact with substances such as cooking oil, acetone, alcohol , petrol, kerosene, spot removers, turpentine, waxes and wax removers, wash them in hot water with an extra amount of detergent.
- Do not dry items if industrial chemicals have been used for cleaning.
- Make sure that no gas lighters or matches have been left in the pockets of the clothing.
- Only dry fabrics which are applicable to dry in the tumble dryer. Follow the instructions on the fabric label.
- Do not dry not washed items in the appliance.
- If you have washed your laundry with a stain remover start an extra rinse cycle before you start the appliance.
- Plastic items are not heat resistant.
  - If you use a detergent ball, remove it before you set the drying programme.

- Do not use a detergent ball when you set a non-stop programme.



**Warning!** Risk of injury or damage to the appliance.

- Do not sit or stand on the open door.
- Obey the maximum load volume.
- Do not dry dripping wet clothes in the appliance.

### Care and Cleaning



**Warning!** Risk of injury or damage to the appliance.

- Do not use water spray and steam to clean the appliance.
- Clean the appliance with a moist soft cloth. Only use neutral detergents. Do not use abrasive products, abrasive cleaning pads, solvents or metal objects.

### Disposal



**Warning!** Risk of injury or suffocation.


- Disconnect the appliance from the mains supply.
- Cut off the mains cable and discard it.
- Remove the door catch to prevent children and pets to get closed in the appliance.

### Service

- Contact the Service to repair the appliance. We recommend only the use of original spare parts.

## Product description

- 1 Detergent dispenser drawer
- 2 Control panel
- 3 Door opening handle
- 4 Rating plate
- 5 Drain pump
- 6 Adjustable feet

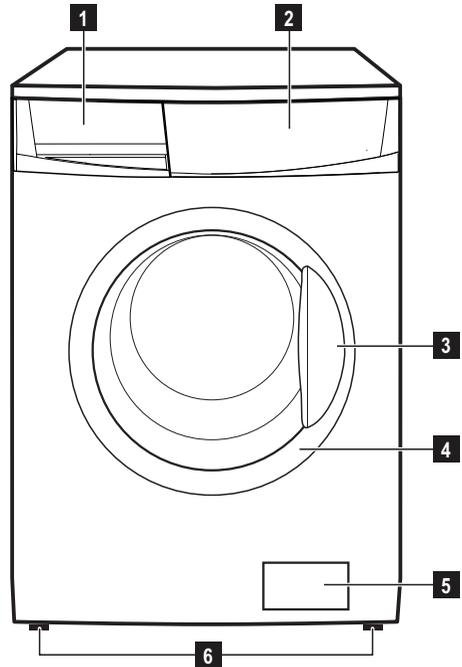


### Detergent dispenser drawer

 Compartment for detergent used for pre-wash and soak phase or for stain remover used during the stain action phase (if available). The prewash and soak detergent is added at the beginning of the wash programme. The stain remover is added during the stain action phase.

 Compartment for powder or liquid detergent used for main wash. If using liquid detergent pour it **just before** starting the programme.


 Compartment for liquid additives (fabric softener, starch).

Follow the product manufacturer's recommendations on quantities to use and do not exceed the «**MAX**» mark in the detergent dispenser drawer. Any fabric softener or starching additives must be poured into the compartment before starting the wash programme.

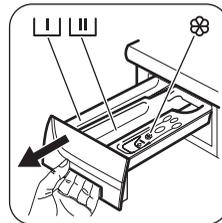

## Control panel

**i** On the following page there is a picture of the control panel. It shows the programme selector dial as well as the buttons, pilot lights and the display. These are presented by relevant numbers on the following pages.

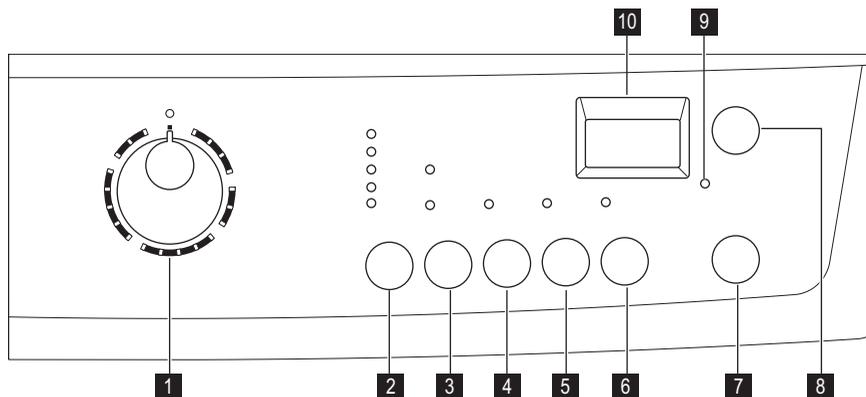

**1 Programme selector dial**

**2 Spin button**

**3 Automatic drying button**

**4 Drying time button**

**5 Super quick button**

**6 Extra rinse button**

**7 Start/Pause button**

**8 Delay start button**

**9 Door pilot light**

**10 Display**

 = Rinse hold

 = Child Safety Lock

### 1-8 Programme selector dial, spin speed button, drying level and time, and available options

#### Programme Selector Dial

It allows you to switch the appliance on/off and/or to select a programme.

#### Spin

By pressing this button you can change the spin speed of the selected programme or to select Rinse Hold option.

#### Rinse hold

By selecting this function the water of the last rinse is not emptied out to prevent the fabrics from creasing. Before opening the door it will be necessary to empty out the water. To empty

out the water, please read the paragraph «At the end of the programme».

#### Automatic Dry

By pressing this button you can choose the required degree of drying for cottons and synthetics:

- Cupboard dry (Cottons and Synthetics)
- Iron dry (Cottons)

The pilot light corresponding to the selected dryness degree will illuminate.

#### Drying Time

If you wish to carry out a timed drying programme, press this button until the drying time you want appears on the display according to the fabrics (cottons or synthetics) you have to dry. For Cottons you can select a drying time

from 10 minutes to 250 minutes (4.10). For Synthetics you can select a drying time from 10 minutes to 130 minutes (2.10). Every time you press this button the drying time increases by 5 mins.

**Available options:**

**Super Quick**

Short cycle for lightly soiled items or for laundry which needs only freshening up. We recommend you to reduce the fabrics loading.


**Extra Rinse**

This appliance is designed to save energy. If it necessary to rinse the laundry using an extra quantity of water (extra rinse), select this option. Some additional rinses will be performed. This option is recommended for people who are allergic to detergents, and in areas where the water is very soft.

**Start Pause**

This button allows you to start or to interrupt the selected programme.

**10 Display**

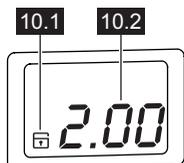

The display shows the following information:

10.1	<p><b>Child safety lock</b> This device permits you to leave the appliance unattended during it's functioning.</p>
10.2	<ul style="list-style-type: none"> <li>▪ <b>Duration of the selected programme</b> After selecting a programme, the duration is displayed in hours and minutes (for example <i>2.05</i>). The duration is calculated automatically on the basis of the maximum recommended load for each type of fabric. After the programme has started, the time remaining is updated every minute.</li> <li>▪ <b>Selected drying time</b> After selecting a drying programme the drying time is shown in minutes or hours and minutes. After the programme has started, the time remaining is updated every minute.</li> </ul>

**Delay Start**

The programme can be delayed from 30 min - 60 min - 90 min, 2 hours and then by 1 hour up to a maximum of 20 hours by means of this button.

**Door light**

The pilot light **9** illuminates when the programme starts and indicates if the door can be opened:

- light on: the door cannot be opened. The machine is working or has stopped with water left in the tub.
- light off: the door can be opened. The programme is finished or the water has been emptied out.
- light blinking: the door is opening in a few minutes.

	<ul style="list-style-type: none"> <li>▪ <b>Delayed start</b> The Selected delay set by pressing the relevant button appears on the display for a few seconds, then the duration of the selected programme is displayed again. The delay time value decreases by one unit every hour and then, when 1 hour remains, every minute.</li> </ul>
	<ul style="list-style-type: none"> <li>▪ <b>Alarm codes</b> In the event of operating problems, some alarm codes can be displayed, for example <b>E20</b> (see paragraph «What to do if...»).</li> </ul>
	<ul style="list-style-type: none"> <li>▪ <b>Incorrect option selection</b> If an option which is not compatible with the set wash programme is selected, the message <b>Err</b> is displayed at the bottom of the display for a few seconds and the integrated red light of button <b>7</b> start flashing.</li> </ul>
	<ul style="list-style-type: none"> <li>▪ <b>End of programme</b> When the programme has finished the flashing zero (0) is displayed, the pilot light <b>9</b> and the pilot light of button <b>7</b> go out and the door can be opened.</li> </ul>

## Washing Programmes

Programme - Maximum and Minimum Temperature - Cycle Description - Maximum Spin Speed - Maximum Fabrics Load - Type of Laundry	Options	Detergent Compartment
<b>Cottons</b> 90° - 60° Main wash - Rinses Maximum spin speed at 1400 rpm Max. load 6 kg - Reduced load 3 kg <sup>1)</sup> <b>White cotton</b> (heavily and normally soiled items).	SPIN RINSE HOLD SUPER QUICK EXTRA RINSE	
<b>Cottons Eco</b> 60° - 40° Main wash - Rinses Maximum spin speed at 1400 rpm Max. load 6 kg <b>White or fast colour cotton</b> (normally soiled items). This programme can be selected for normally soiled cotton items. The temperature will decrease and the washing time will be extended. This allows to obtain a good washing efficiency by saving energy.	SPIN RINSE HOLD EXTRA RINSE	
<b>Cottons</b> 40 - 30°- cold Main wash - Rinses Maximum spin speed at 1400 rpm Max. load 6 kg - Reduced load 3 kg <sup>1)</sup> <b>White or colour cotton</b> (normally or slightly soiled items) .	SPIN RINSE HOLD SUPER QUICK EXTRA RINSE	

Programme - Maximum and Minimum Temperature - Cycle Description - Maximum Spin Speed - Maximum Fabrics Load - Type of Laundry	Options	Detergent Com- partment
<p><b>Cottons + Prewash</b> 60° - 40° Prewash - Main wash - Rinses Maximum spin speed at 1400 rpm Max. load 6 kg - Reduced load 3 kg<sup>1)</sup> <b>White or colour cotton</b> (heavily or normally soiled items)</p>	<p>SPIN RINSE HOLD SUPER QUICK EXTRA RINSE</p>	<p><sup>2)</sup>  </p>
<p><b>Synthetics</b> 60° - 40° - 30° - Cold Main wash - Rinses Maximum spin speed at 900 rpm Max. load 3 kg - Reduced load 2 kg<sup>1)</sup> <b>Synthetic or mixed fabrics:</b> underwear, coloured garments, non-shrink shirts, blouses.</p>	<p>SPIN RINSE HOLD SUPER QUICK EXTRA RINSE</p>	<p> </p>
<p><b>Easy iron</b> 40° Main wash - Rinses Maximum spin speed at 900 rpm Max. load 1 kg <b>Synthetic or mixed fabrics:</b> selecting this programme the laundry is gently washed and spun to avoid any creasing. In this way ironing is easier. Furthermore the machine will perform additional rinses.</p>	<p>SPIN RINSE HOLD EXTRA RINSE</p>	
<p><b>Delicates</b> 40° - 30° - Cold Main wash - Rinses Maximum spin speed at 700 rpm Max. load kg 3 - Reduced load kg 2<sup>1)</sup> <b>Delicate fabrics:</b> acrylics, viscose, polyester.</p>	<p>RINSE HOLD SUPER QUICK EXTRA RINSE</p>	<p> </p>
<p><b>Wool Handwash</b> 30° - Cold Main wash - Rinses Maximum spin speed at 900 rpm Max. load 2 kg Washing programme for machine washable wool as well as for hand washable woollens and delicate fabrics. <b>Note!</b> A single or bulky item may cause imbalance. If the appliance doesn't perform the final spin phase, add more items, redistribute the load manually and then select the spinning programme.</p>	<p>SPIN RINSE HOLD</p>	<p> </p>
Drying programmes		
Cottons - Programme for cotton items		
Synthetics - Programme for synthetic items		

Programme - Maximum and Minimum Temperature - Cycle Description - Maximum Spin Speed - Maximum Fabrics Load - Type of Laundry	Options	Detergent Compartment
<p><b>Rinse</b> Maximum spin speed at 1400 rpm Max. load 6 kg With this programme it is possible to rinse and spin cotton garments which have been washed by hand. The machine performs 3 rinses, followed by a final long spin.</p> <p><b>Important!</b> The spin speed will automatically assume the setting for cotton items. if required, reduce the speed.</p>	SPIN RINSE HOLD EXTRA RINSE	
<p><b>Drain</b> Draining of water Max. load 6 kg For emptying out the water of the last rinse in programmes which stop with water in the tub.</p>		
<p><b>Spin</b> Drain and long spin Maximum spin speed at 1400 rpm Max. load 6 kg Separate spin for hand washed garments and after programmes which stop with water in the tub. You can reduce the spin speed to the required level to adapt it to the fabrics to be spun.</p>	SPIN	
<p><b>O/Off</b> For cancelling the programme which is running or to switch the machine off .</p>		

- 1) If you select the Super Quick option by pressing button **5**, we recommend that you reduce the maximum load as indicated. Full loading is possible however with somewhat reduced cleaning results.
- 2) If using liquid detergents, a programme without PREWASH must be selected.

## Drying Programme

### Automatic programmes

Degree of Drying	Type of Fabric	Max Load
<b>Cupboard dry</b> Suitable for items to put away without ironing	<b>Cotton and linen</b> (bathrobes, bath towels, etc)	3 kg
<b>Cupboard dry</b> Suitable for items to put away without ironing	<b>Synthetics and mixed fabrics</b> (jumpers, blouses, underwear, household linen)	2 kg
<b>Iron dry</b> Suitable for ironing	<b>Cotton and linen</b> (sheets, tablecloths, shirts, etc.)	3 kg

## Timed programmes

Degree of Drying	Type of Fabric	Drying Load	Spin Speed	Suggested drying time in Minutes
<b>Suitable for items to put away without ironing<sup>1)</sup></b>	<b>Cotton and linen</b> (bathrobes, bath towels, etc)	4 kg 3 kg 1.5 kg	<b>1400</b>	130 - 150 75 - 85 35 - 45
<b>Suitable for items to put away without ironing</b>	<b>Synthetics and mixed fabrics</b>	2 kg 1 kg	<b>900</b>	70 - 80 35 - 45
<b>Suitable for ironing</b>	<b>Cotton and linen</b> (sheets, tablecloths, shirts, etc.)	4 kg 3 kg 1.5 kg	<b>1400</b>	100 - 120 65 - 75 30- 40

1) In compliance with EC directive EN 50229 the cotton reference programme for the data entered in the Energy Label must be tested dividing the maximum washing load by two equal parts and drying with DRYING TIME each of them.

## Helpful hints and tips

### Sorting out the laundry

Follow the wash code symbols on each garment label and the manufacturer's washing instructions. Sort the laundry as follows: whites, coloureds, synthetics, delicates, woollens.

### Before loading the laundry

Never wash whites and coloureds together. Whites may lose their «whiteness» in the wash. New coloured items may run in the first wash; they should therefore be washed separately the first time.

Button up pillowcases, close zip fasteners, hooks and poppers. Tie any belts or long tapes. Remove persistent stains before washing. Rub particularly soiled areas with a special detergent or detergent paste.

Treat curtains with special care. Remove hooks or tie them up in a bag or net.

### Removing stains

Stubborn stains may not be removed by just water and detergent. It is therefore advisable to treat them prior to washing.

**Blood:** treat fresh stains with cold water. For dried stains, soak overnight in water with a special detergent then rub in the soap and water.

**Oil based paint:** moisten with benzine stain remover, lay the garment on a soft cloth and dab the stain; treat several times.

**Dried grease stains:** moisten with turpentine, lay the garment on a soft surface and dab the stain with the fingertips and a cotton cloth.

**Rust:** oxalic acid dissolved in hot water or a rust removing product used cold. Be careful with rust stains which are not recent since the cellulose structure will already have been damaged and the fabric tends to hole.

**Mould stains:** treat with bleach, rinse well (whites and fast coloureds only).

**Grass:** soap lightly and treat with bleach (whites and fast coloureds only).

**Ball point pen and glue:** moisten with acetone<sup>1)</sup>, lay the garment on a soft cloth and dab the stain.

**Lipstick:** moisten with acetone as above, then treat stains with methylated spirits. Treat any residual marks with bleach.

**Red wine:** soak in water and detergent, rinse and treat with acetic or citric acid, then rinse. Treat any residual marks with bleach.

**Ink:** depending on the type of ink, moisten the fabric first with acetone<sup>1)</sup>, then with acetic acid; treat any residual marks on white fabrics with bleach and then rinse thoroughly.

1) do not use acetone on artificial silk

**Tar stains:** first treat with stain remover, methylated spirits or benzine, then rub with detergent paste.

### Detergents and additives

Good washing results also depend on the choice of detergent and use of the correct quantities to avoid waste and protect the environment.

Although biodegradable, detergents contain substances which, in large quantities, can upset the delicate balance of nature.

The choice of detergent will depend on the type of fabric (delicates, woollens, cottons, etc.), the colour, washing temperature and degree of soiling.

All commonly available washing machine detergents may be used in this appliance:

- powder detergents for all types of fabric
- powder detergents for delicate fabrics (60°C max) and woollens
- liquid detergents, preferably for low temperature wash programmes (60°C max) for all types of fabric, or special for woollens only.

The detergent and any additives must be placed in the appropriate compartments of the dispenser drawer before starting the wash programme.

If using liquid detergents, a programme **with-out** prewash must be selected.

## Drying Hints

### Preparing the drying cycle

As a dryer, the appliance works on the condensation principle.

**Therefore, the water tap must be open and the drain hose must drain water into a sink or into the drain pipe, even during the drying cycle.**

#### Attention!

Before starting the drying programme, reduce the loads of washed laundry, in order to obtain good performances.

### Laundry not suitable for drying

- Particularly delicate items such as synthetic curtains, woollen and silk, garments with metal inserts, nylon stockings, bulky gar-

Your appliance incorporates a recirculation system which allows an optimal use of the concentrated detergent.

Follow the product manufacturer's recommendations on quantities to use and do **not exceed the «MAX» mark in the detergent dispenser drawer.**

### Quantity of detergent to be used

The type and quantity of detergent will depend on the type of fabric, load size, degree of soiling and hardness of the water used.

Follow the product manufacturers' instructions on quantities to use.

Use less detergent if:

- you are washing a small load
- the laundry is lightly soiled
- large amounts of foam form during washing.

### Degrees of water hardness

Water hardness is classified in so-called "degrees" of hardness. Information on hardness of the water in your area can be obtained from the relevant water supply company, or from your local authority. If the water hardness degree is medium or high we suggest you to add a water softener following always the manufacturer's instructions. When the degree of hardness is soft, readjust the quantity of the detergent.

ments such as anoraks, bed covers, quilts, sleeping bags and duvets must not be machine dried.

- Avoid drying dark clothes with light coloured fluffy items such as towels as these can attract the fluff.
- Remove the laundry when the appliance has finished drying.
- To avoid a static charge when drying is completed, use either a fabric softener when you are washing the laundry or a fabric conditioner specifically for tumble dryers.
- Garments padded with foam-rubber or materials similar to foam-rubber must not be machine dried; they represent a fire hazard.

- Also, fabrics containing residue of setting lotions or hair sprays, nail solvents or similar solutions must not be machine dried in order to avoid the formation of harmful vapours.

The detergent and any additives must be placed in the appropriate compartments of the dispenser drawer before starting the wash programme.

If using liquid detergents, a programme **without** prewash must be selected.

Your appliance incorporates a re-circulation system which allows an optimal use of the concentrated detergent.

Follow the product manufacturer's recommendations on quantities to use and do **not exceed the «MAX» mark in the detergent dispenser drawer.**

### Garment labels

For drying, follow the indications given on the manufacturer's labels:

-  = May be tumble dried
-  = Drying at high temperature
-  = Drying at reduced temperature

## First use

-  ▪ Ensure that the electrical and water connections comply with the installation instructions.
- Remove the polystyrene block and any material from the drum.
- Before the first wash, run a cotton cycle at the highest temperature without any

## Personalisation

### Acoustic signals

The machine is provided with an acoustic device, which sounds in the following cases:

- at the end of the cycle
- if there is a fault.

By pressing the **4** and **5** buttons simultaneously for about **6 seconds**, the acoustic signal is deactivated (except if there is a fault). By pressing these 2 buttons again, the acoustic signal is re-activated.

-  = Do not tumble dry.

### Drying cycle duration

The drying time may vary depending on:

- speed of the final spin
- dryness degree required (iron dry, store dry)
- type of laundry
- weight of the load size .

The average drying time for a timed drying are indicated in the «Drying programmes» chapter.

The experience will help you to dry your laundry in a more suitable way, according to the different fabrics. Take note of the duration drying time of the already performed cycles.

### Additional drying

If the laundry is still damp at the end of the drying programme, select a short drying cycle again.

 **Warning! Do not over dry the laundry in order to avoid creasing of fabrics or garment's shrinking.**

laundry in the machine, to remove any manufacturing residue from the drum and tub. Pour 1/2 a measure of detergent into the main wash compartment and start the machine.

### Child safety lock

This device permits you to leave the appliance unattended so you do not need to worry that children might be injured by or cause damage to the appliance. This function remains enabled also when the washing machine is not working. There are two different ways to set this option:


1. Before pressing button **7**: it will be impossible to start the machine.

- After pressing button **7**: it will be impossible to change any other programme or option.


To enable or disable this option press simultaneously for about 6 seconds buttons **2** and **3**

## Daily Use

### Load the laundry


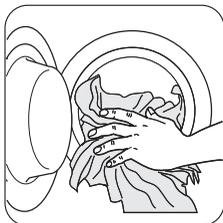


Open the door by carefully pulling the door handle outwards. Place the laundry in the drum, one item at a time, shaking them out as much as possible. Close the door.

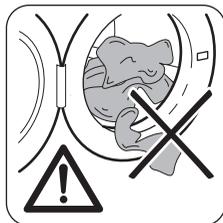

Make sure that no laundry stays between the seal and the door. There is a risk of water leakage or damage to the laundry.

### Measure out the detergent and the fabric softener

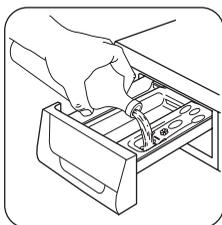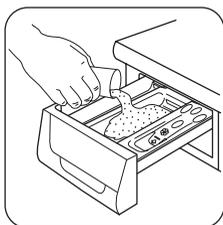

until on the display, the icon  appears or disappears.

Pull out the dispenser drawer until it stops. Measure out the amount of detergent required, pour it into the main wash compartment  or in the appropriate compartment if the selected programme/option it requires (see more details in "Detergent dispenser drawer").

If required, pour fabric softener into the compartment marked  (the amount used must not exceed the «MAX» mark in the drawer). Close the drawer gently.

### Select the required programme by means of the programme selector dial (1)

Turn the programme selector dial to the required programme.

The green pilot light of button **7** starts to flash. The selector dial can be turned either clockwise or anticlockwise.

Turn the selector dial to position  to reset the programme/to switch the machine OFF.

**At the end of the programme the selector dial must be turned to position , to switch the machine off.**

**Important!** If you turn the programme selector dial to another programme when the machine is working, the red pilot light of button **7** will blink 3 times and the message **Err** is displayed to indicate a wrong selection. The machine will not perform the new selected programme.

### Select the spin speed by pressing button **2**

When selecting a programme, the appliance proposes automatically the maximum spin speed provided for that programme. (See "Washing programmes" for the maximum allowed spin speed).

Press this button repeatedly to change the spin speed, if you want your laundry to be spun at a

different speed. The relevant pilot light illuminates.

### Select the available options by pressing the buttons 5 and 6

Depending on the programme, different options can be combined. These must be selected after choosing the desired programme and before starting the programme. When these buttons are pressed, the corresponding pilot lights illuminate. When they are pressed again, the pilot lights go out. If an incorrect option is selected, the integrated **red** pilot light of the button **7** flashes 3 times and the message **Err** is displayed.

For the compatibility among the washing programmes and the options see chapter «**Washing programmes**».

### Select an additional rinse

This appliance is designed for saving water. However, for people with a very delicate skin (allergic to detergents) it may be necessary to rinse the laundry using an extra quantity of water (Extra Rinse). To **activate** this option press simultaneously the buttons **4** and **6** for some seconds. The pilot light **9** illuminates. This function stays permanently on. To **remove** it press the buttons **4** and **6** again until the pilot light **9** goes off.

### Start the programme by pressing button 7

To start the selected programme, press this button; the corresponding green pilot light stops blinking.

The pilot light **9** illuminates to indicate that the appliance starts operating and the door is locked.

If you have chosen a delayed start, the machine will begin the countdown.

**Important!** If an incorrect option is selected, the message **Err** is displayed for a few seconds and the **red** pilot light of this button blinks 3 times.

### Select the Delay Start by pressing button 8

Before you start the programme, if you wish to delay the start, press this button to select the desired delay.

The selected delay time value will appear on the display for a few seconds, then the duration of the programme will appear again.

You must select this option after you have set the programme and before you start the programme.

You can cancel or modify the delay time at any moment, before you press button **7**.

Selecting the delay start :

1. Select the programme and the required options.
2. Select the delay start by pressing button **8**.
3. Press button **7**:
  - the machine starts its hourly countdown.
  - the programme will start after the selected delay has expired.

labelling  
Cancelling the Delay Start after having started the programme:

1. Set the washing machine to PAUSE by pressing button **7**.
2. Press button **8** once. On the display will appear .
3. Press button **7** again to start the programme.

### Important!

- The selected delay can be changed only after selecting the washing programme again.
- The door will be locked throughout the delay time. If you need to open the door, you must first set the washing machine to PAUSE by pressing button **7** and wait a few minutes before opening the door. After you have closed the door, press the same button again.

**Important!** The Delay Start **cannot** be selected with the draining programme.

### Altering an option or a running programme

It is possible to change some options before the programme carries them out.

Before you make any change, you must pause the washing machine by pressing button **7**.

Changing a running programme is possible only by resetting it. Turn the programme selector dial to  and then to the new programme posi-

tion. Start the new programme by pressing button **7** again.

The washing water in the tub will be not emptied out.

### Interrupting a programme

Press the button **7** to interrupt a programme which is running, the corresponding pilot light starts blinking. Press the button again to **re-start** the programme.

### Cancelling a programme

Turn the selector dial to  to cancel a programme which is running. Now you can select a new programme.

### Opening the door after the programme has started

First set the machine to pause by pressing the button **7**.

If the pilot light **9** blinks and after a few minutes goes off, the door can be opened.

If the pilot light **9** remains lit, this means that the machine is already heating or that the water level is too high. In any case, do not try to force the door open!

If you cannot open the door but you need to open it, you have to switch the machine off by turning the selector dial to . After a few minutes the door can be opened.

**(Pay attention to the water level and temperature!).**

After closing the door, it is necessary to select the programme and options again and to press button **7**.

**Stand by** : once the programme has finished after a few minutes the energy saving system will be enabled. The brightness of the display is

## Use - Drying

### Drying only

#### **Caution!**

The recommended load size is 3 kg for cottons and linen and 2 kg for synthetic items.

 By pressing **Drying Time** button it is also possible to dry up to 4 kg of cotton items (see the «Drying Programme » table).

### At the end of the programme

The machine stops automatically. The blinking  appears on the display, the pilot light of button **7** and the pilot light **9** go off.

If a programme or an option that ends with water left in the tub has been selected, the pilot light **9** remains on and the door is locked to indicate that the water must be emptied out before opening the door.

Before you empty out the water, the drum continues to run at regular intervals until the water draining.

Follow the below instructions to empty out the water:

1. Turn the programme selector dial to .
2. Select the draining or spinning programme.
3. Reduce the spin speed if needed, by pressing the relevant button.
4. Press button **7**.

At the end of the programme, the door is released and can be opened. Turn the programme selector dial to  to switch the machine off.

Remove the laundry from the drum and carefully check that the drum is empty. If you do not intend to carry out another wash, close the water tap. Leave the door open to prevent the formation of mildew and unpleasant smells.

reduced. By pressing any button the appliance will come out of the energy saving status.

#### **Caution!**

**The water tap must be open and the drain hose must be positioned in the sink or connected to the drain pipe.**

1. Load the laundry.
2. Select a spin cycle at the maximum spin speed allowed for the type of laundry in order to obtain the best drying performances.

3. Select the drying programme for Cottons or Synthetic in the Drying sector of the programme selector dial.
4. If you wish to select an **automatic drying** (for cottons and synthetic items only), press the button **3** until the pilot light corresponding to the required dryness degree illuminates.
5. If you wish to select a **timed drying**, press the button **4** until the time you want appears on the display (see the «Drying Programme» table). Every time you press this button the drying time increases by 5 minutes.

 The programme time will automatically increase by some minutes.

6. Press button **7** to start the programme. The time remaining is updated every minute.
7. At the end of the programme, the buzzer sounds. The blinking  appears on the display. The door pilot light **9** is on. During the last minutes of the drying cycle the appliance performs an anti-crease phase. Through this time the door is locked. The display shows the blinking .

At the end of the anti-crease phase the door pilot light **9** is off.

 If you wish to open the door before or during the anti-crease phase or to interrupt it, press any button or turn the programme selector dial to any programme position (except .

8. Turn the selector dial to the  position to switch the machine off.

9. Remove the laundry from the drum.

 The different type of cottons (towelling, sheets, shirts, and so on) or any laundry items rolling up during the spinning phase may result in partial dryness. In the exceptional case that at the end of the cycle the laundry remains slightly wet, we suggest that you unfold the rolled up items, redistribute them evenly in the drum and select an additional drying cycle of 20-30 minutes.

 If you set only 10 minutes of drying phase with the drying time button (4), the appliance performs only a cooling phase.

## Use - Washing & Drying

### NON-STOP programme - Washing and Automatic Drying

The maximum load size is 3 kg for cotton and 2 kg for synthetic.

 **Caution! Do not use a dosing device/ ball when carrying out a washing and drying programme.**

1. Load the laundry.
2. Add detergent and fabric softener.
3. Switch the machine on by turning the selector dial to the set washing programme/ fabric.
4. Select the required options by pressing the relevant buttons.

 **If possible, do not select a spin speed lower than that proposed by**

### the appliance to avoid too long a drying time therefore saving energy.

In any case the reduction of the spin speed is only possible after selecting drying. For cottons and synthetic the lowest value you can select is 900 r.p.m.

5. Set the dryness degree by pressing button **3**. The display shows the whole duration of the washing and the set drying cycle.
6. Start the programme by pressing button **7**. The time remaining is updated every minute on the display.
7. At the end of the programme turn the selector dial to the  position to switch the machine off. Remove the laundry.

## NON-STOP programme - Washing and Timed Drying

The recommended load size is 3 kg for cotton and 2 kg for synthetic.

 It is also possible to dry up to 4 kg of cotton items (see the «Drying Programme » table).

 **Caution! Do not use a dosing device/ball when carrying out a washing and drying programme.**

1. Load the laundry and add detergent and fabric softener.
2. Switch the machine on by turning the selector dial to the set washing programme/fabric.
3. Select the required options by pressing the relevant buttons.

 **If possible, do not select a spin speed lower than that proposed by the appliance to avoid too long a drying time therefore saving energy.**

In any case the reduction of the spin speed is only possible after selecting drying. The lowest values you can select are 900 r.p.m. for cottons and synthetics and 700 r.p.m. for delicate fabrics.

4. Set the drying time by pressing button **4**. The display shows the whole duration of the washing and the set drying cycle.

 If you set a washing programme and only 10 minutes of drying cycle, the total dura-

tion displayed includes also the unrolling and the cooling phase.

5. Start the programme by pressing button **7**. The time remaining is updated every minute on the display.
6. At the end of the programme turn the selector dial to the  position to switch the machine off and remove the laundry.

### Fluff in the garments

During the WASHING AND/OR DRYING PHASE, certain types of fabric, as sponge-cloth, sweatshirt, could release fluff.

The released fluff could stick to the fabrics during the next cycle.

This drawback increases with technical fabrics. To prevent the lint in your clothes, it is recommended:

- To do not wash dark fabrics after you washed and dried light coloured fabrics (new sponge, sweatshirt especially) and vice versa.
- To air-dry this type of fabrics when they are washed the first time.
- To clean the filter.
- Perform one or more rinse cycles to wash the drum between the washing and drying of fabrics with different colours.
- After the drying phase, thoroughly clean the empty drum, the gasket and the door with a wet rag.

## Care and cleaning

 **Warning!** You must DISCONNECT the appliance from the electricity supply, before you can carry out any cleaning or maintenance work.

### Descaling

The water we use normally contains lime. It is a good idea to periodically use a water softening powder in the machine. Do this separately from any laundry washing, and according to the softening powder manufacturer's instructions. This


will help to prevent the formation of lime deposits.

### External cleaning


Clean the exterior cabinet of the appliance with soap and water only, and then dry thoroughly.

### Cleaning the dispenser drawer

The washing powder and additive dispenser drawer should be cleaned regularly.

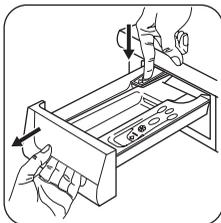


Remove the drawer by pressing the catch downwards and by pulling it out. Flush it out under a tap, to remove any traces of accumulated powder.

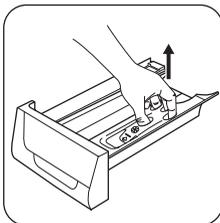

To aid cleaning, the top part of the additive compartment should be removed.

### Cleaning the drawer recess

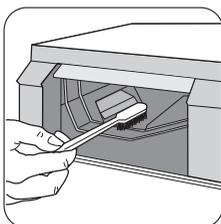

Having removed the drawer, use a small brush to clean the recess, ensuring that all washing powder residue is removed from the upper and lower part of the recess.

Replace the drawer and run the rinse programme without any clothes in the drum.

### Cleaning the pump

The pump should be inspected regularly and particularly if:


- the appliance does not empty and/or spin;
- the appliance makes an unusual noise during draining due to objects such as safety pins, coins etc. blocking the pump;
- a problem with water draining is detected (see chapter "What to do if..." for more details).

#### **Warning!**


1. Disconnect the mains plug from the mains socket.
2. Do not remove the filter while the appliance operates. Do not clean the drain pump if the water in the appliance is hot. The water

must be cold before you clean the drain pump.


Proceed as follows:

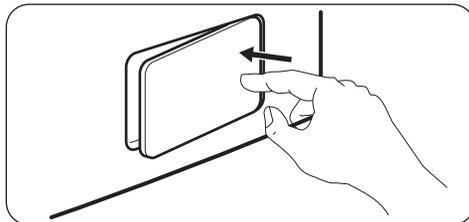


Open the pump door. Put a container below the recess of the drain pump to collect the water that flows out.

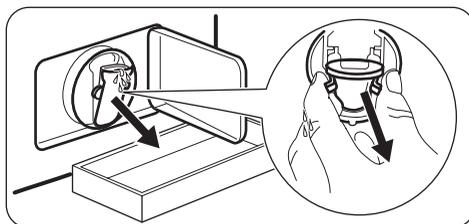


Press the two levers and pull forward the drainage duct to let the water flow out.

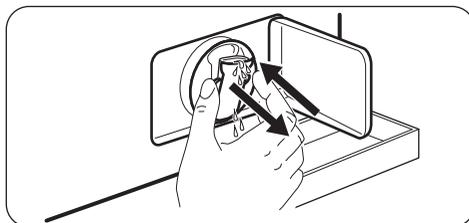


When the container is full of water, put the drainage duct back again and empty the container. Do steps 3 and 4 again and again until no more water flows out from the drain pump.

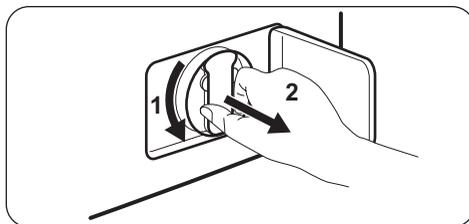


Pull back the drainage duct.  
Unscrew the filter and remove it.

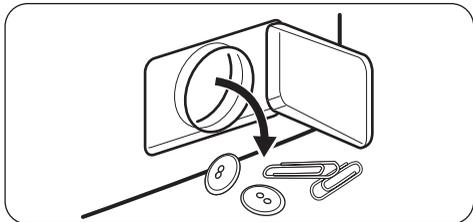


Remove fluff and objects from the pump.

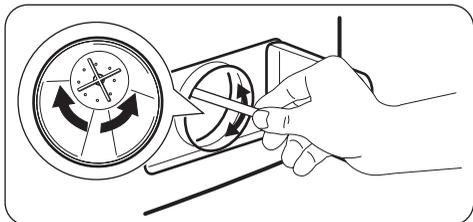

Make sure that the impeller of the pump can turn. If this does not occur, contact the service centre.

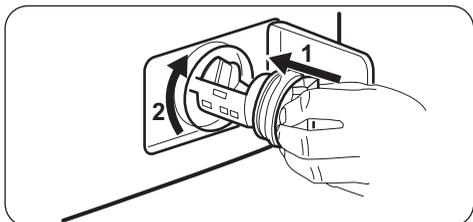

Clean the filter under the water tap and put it back in the pump into the special guides.  
Make sure that you tighten correctly the filter to prevent leakages.

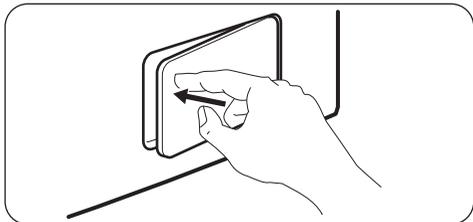


Close the pump door.

**⚠ Caution!** When the appliance is in use and depending on the programme selected there can be hot water in the pump. Never remove the pump cover during a wash cycle, always wait until the appliance has finished the cycle, and is empty. When refitting the pump cover, ensure it is securely re-tightened so as to stop leaks and young children being able to remove it.

### Cleaning the water inlet filters


**Important!** If the appliance doesn't fill, takes long to fill with water, the starting button blinks yellow or the display (if available) shows the relevant alarm (see chapter "What to do if..." for more details), check if the water inlet filters are blocked.

To clean the water inlet filters:

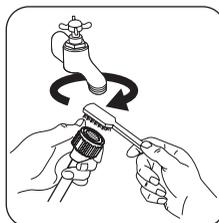


- Turn off the water tap.
- Unscrew the hose from the tap.
- Clean the filter in the hose with a stiff brush.

- Screw the hose back onto the tap. Make sure the connection is tight.

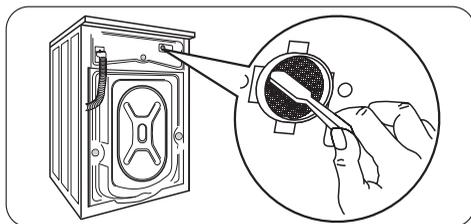

- Unscrew the hose from the machine. Keep a rag nearby because some water may flow.
- Clean the filter in the valve with a stiff brush or with the piece of cloth.

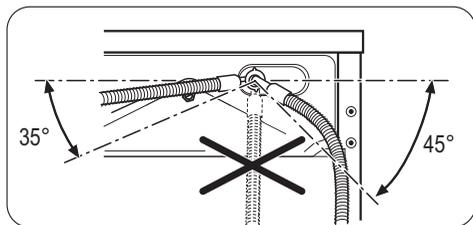

- Screw the hose back to the machine and make sure the connection is tight.
- Turn on the water tap.

### Frost precautions

If the machine is installed in a place where the temperature could drop below 0°C, remove the remaining water from the inlet hose and the drain pump.

1. disconnect the mains plug from the mains socket.
2. close the water tap
3. unscrew the water inlet hose from the tap;
4. put the two ends of the inlet hose in a container and let the water flow out of the hose.
5. empty the drain pump as described in the 'Emergency emptying out' section.
6. when the drain pump is empty, install the water inlet hose again.

 **Warning!**

### What to do if...

Certain problems are due to lack of simple maintenance or oversights, which can be solved easily without calling out an engineer. Before contacting your local Service Centre, please carry out the checks listed below. During machine operation it is possible that the **red** pilot light of button **7** blinks, one of the following alarm codes appears on the display and some acoustic signals sound every 20 seconds to indicate that the machine is not working:

Make sure that the temperature is more than 0 °C before you use the appliance again. The manufacturer is not responsible for damages caused by low temperatures.

### Emergency emptying out

If the appliance cannot drain the water, proceed as follows to empty out the machine:

1. pull out the plug from the power socket;
2. close the water tap;
3. if necessary, wait until the water has cooled down;
4. open the pump door;
5. place a container on the floor below the recess of the drain pump;
6. press the two levers and pull forward the drainage duct to let the water flow out;
7. when the container is full of water, put the drainage duct back again and empty the container; repeat this operation until water stops flowing out;
8. if necessary clean the pump (refer to the section 'Cleaning the pump' );
9. close the drain pump door.

When you drain the water with the emergency drain procedure, you must activate again the drain system:

1. Put 2 litres of water in the main wash compartment of the detergent dispenser.
2. Start the programme to drain the water.

- **E10** : problem with the water supply.
- **E20** : problem with the water draining.
- **E40** : door open.


Once the problem has been eliminated, press the button **7** to restart the programme. If after all checks, the problem persists, contact your local Service Centre.

Problem	Possible cause/Solution
<b>The washing machine does not start:</b>	<p>The door has not been closed. <i>E40</i></p> <ul style="list-style-type: none"> <li>▪ Close the door firmly.</li> </ul> <p>The plug is not properly inserted in the power socket.</p> <ul style="list-style-type: none"> <li>▪ Insert the plug into the power socket.</li> </ul> <p>There is no power at the socket.</p> <ul style="list-style-type: none"> <li>▪ Please check your domestic electrical installation.</li> </ul> <p>The main fuse has blown.</p> <ul style="list-style-type: none"> <li>▪ Replace the fuse.</li> </ul> <p>The selector dial is not correctly positioned and/or the button <b>7</b> has not been pressed.</p> <ul style="list-style-type: none"> <li>▪ Please turn the selector dial and press the button <b>7</b> again.</li> </ul> <p>The delay start has been selected.</p> <ul style="list-style-type: none"> <li>▪ If the laundry are to be washed immediately, cancel the delay start.</li> </ul> <p>The Child Safety Lock has been activated.</p> <ul style="list-style-type: none"> <li>▪ Deactivate the Child Safety Lock.</li> </ul>
<b>The machine does not fill:</b>	<p>The water tap is closed. <i>E10</i></p> <ul style="list-style-type: none"> <li>▪ Open the water tap.</li> </ul> <p>The inlet hose is squashed or kinked. <i>E10</i></p> <ul style="list-style-type: none"> <li>▪ Check the inlet hose connection.</li> </ul> <p>The filter in the inlet hose or in the inlet valve filter are blocked. <i>E10</i></p> <ul style="list-style-type: none"> <li>▪ Clean the water inlet filters (see 'Cleaning the water inlet filters' for more details).</li> </ul> <p>The door is not properly closed. <i>E40</i></p> <ul style="list-style-type: none"> <li>▪ Close the door firmly.</li> </ul>
<b>The machine fills then empties immediately:</b>	<p>The end of the drain hose is too low.</p> <ul style="list-style-type: none"> <li>▪ Refer to relevant paragraph in «Water drainage» section.</li> </ul>
<b>The machine does not empty and/or does not spin:</b>	<p>The drain hose is squashed or kinked. <i>E20</i></p> <ul style="list-style-type: none"> <li>▪ Check the drain hose connection.</li> </ul> <p>The drain filter is clogged. <i>E20</i></p> <ul style="list-style-type: none"> <li>▪ Clean the drain filter.</li> </ul> <p>An option or a programme that ends with the water still in the tub or that eliminates all the spinning phases has been selected.</p> <ul style="list-style-type: none"> <li>▪ Select the draining or spinning programme.</li> </ul> <p>The laundry is not evenly distributed in the drum.</p> <ul style="list-style-type: none"> <li>▪ Redistribute the laundry.</li> </ul>

Problem	Possible cause/Solution
<b>There is water on the floor:</b>	<p>Too much detergent or unsuitable detergent (creates too much foam) has been used.</p> <ul style="list-style-type: none"> <li>▪ Reduce the detergent quantity or use another one.</li> </ul> <p>Check whether there are any leaks from one of the inlet hose fittings. It is not always easy to see this as the water runs down the hose; check to see if it is damp.</p> <ul style="list-style-type: none"> <li>▪ Check the water inlet hose connection.</li> </ul> <p>The drain or inlet hose is damaged.</p> <ul style="list-style-type: none"> <li>▪ Replace it with a new one.</li> </ul> <p>The filter has not been properly screwed in after cleaning action.</p> <ul style="list-style-type: none"> <li>▪ Screw the filter fully in.</li> </ul>
<b>Unsatisfactory washing results:</b>	<p>Too little detergent or unsuitable detergent has been used.</p> <ul style="list-style-type: none"> <li>▪ Increase the detergent quantity or use another one.</li> </ul> <p>Stubborn stains have not been treated prior to washing.</p> <ul style="list-style-type: none"> <li>▪ Use commercial products to treat the stubborn stains.</li> </ul> <p>The correct temperature was not selected.</p> <ul style="list-style-type: none"> <li>▪ Check if you have selected the correct temperature.</li> </ul> <p>Excessive laundry load.</p> <ul style="list-style-type: none"> <li>▪ Reduce the laundry load.</li> </ul>
<b>The door will not open:</b>	<p>The programme is still running.</p> <ul style="list-style-type: none"> <li>▪ Wait the end of washing cycle.</li> </ul> <p>The door lock has not been released.</p> <ul style="list-style-type: none"> <li>▪ Wait until the door is released.</li> </ul> <p>There is water in the drum.</p> <ul style="list-style-type: none"> <li>▪ Select drain or spin programme to empty out the water.</li> </ul>
<b>The machine vibrates is noisy:</b>	<p>The transit bolts and packing have not been removed.</p> <ul style="list-style-type: none"> <li>▪ Check the correct installation of the appliance.</li> </ul> <p>The support feet have not been adjusted</p> <ul style="list-style-type: none"> <li>▪ Check the correct levelling of the appliance.</li> </ul> <p>The laundry is not evenly distributed in the drum.</p> <ul style="list-style-type: none"> <li>▪ Redistribute the laundry.</li> </ul> <p>Maybe there is very little laundry in the drum.</p> <ul style="list-style-type: none"> <li>▪ Load more laundry.</li> </ul>
<b>Spinning starts late or the machine does not spin:</b>	<p>The electronic unbalance detection device has cut in because the laundry is not evenly distributed in the drum. The laundry is redistributed by reverse rotation of the drum. This may happen several times before the unbalance disappears and normal spinning can resume. If, after 10 minutes, the laundry is still not evenly distributed in the drum, the machine will not spin. In this case, redistribute the load manually and select the spin programme.</p> <ul style="list-style-type: none"> <li>▪ Redistribute the laundry.</li> </ul> <p>The load is too small.</p> <ul style="list-style-type: none"> <li>▪ Add more items, redistribute the load manually and then select the spinning programme.</li> </ul>

Problem	Possible cause/Solution
<b>The machine makes an unusual noise:</b>	The machine is fitted with a type of motor which makes an unusual noise compared with other traditional motors. This new motor ensures a softer start and more even distribution of the laundry in the drum when spinning, as well as increased stability of the machine.
<b>No water is visible in the drum:</b>	Machines based on modern technology operate very economically using very little water without affecting performance.
<b>The machine does not dry or does not dry properly:</b>	<p>The drying time or the dryness degree has not been selected.</p> <ul style="list-style-type: none"> <li>Select the drying time or the dryness degree.</li> </ul> <p>The water tap is not turned on. <i>E10</i></p> <ul style="list-style-type: none"> <li>Open the water tap.</li> </ul> <p>The drain filter is clogged. <i>E20</i></p> <ul style="list-style-type: none"> <li>Clean the drain filter.</li> </ul> <p>The machine is overloaded.</p> <ul style="list-style-type: none"> <li>Reduce the laundry load in the drum.</li> </ul> <p>The selected drying programme, time or dryness degree was not suitable for the laundry.</p> <ul style="list-style-type: none"> <li>Select the suitable drying programme, time or dryness degree for the laundry.</li> </ul>
<b>The laundry is full of different colored fluff:</b>	<p>The fabrics washed in the previous cycle released fluff of a different color (refer to "Fluff in the garments" in chapter "Use - Washing &amp; Drying").</p> <ul style="list-style-type: none"> <li>The drying phase helps to eliminate some fluff.</li> <li>Clean the clothes with a fluff remover.</li> </ul> <p>In case of an excessive amount of fluff in the drum repeat the following procedure twice:</p> <ul style="list-style-type: none"> <li>Thoroughly clean the empty drum, the gasket and the door with a wet rag.</li> <li>Perform a rinse cycle.</li> <li>Put a wool or piled fabric rag inside the drum.</li> <li>Perform a drying cycle of 10 minutes.</li> <li>Remove the old wool cloth.</li> </ul> <p>Now you can wash other garments.</p>

If you are unable to identify or solve the problem, contact our service centre. Before telephoning, make a note of the model, serial number and purchase date of your machine: the Service Centre will require this information.

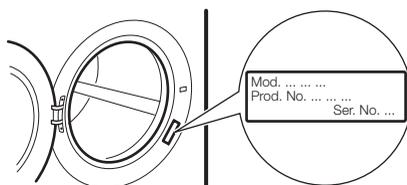

## Technical data

Dimensions	Width	60 cm
	Height	85 cm
	Depth	63 cm

Electrical connection Voltage - Overall power - Fuse	Information on the electrical connection is given on the rating plate, on the inner edge of the appliance door.	
Water Supply Pressure	Minimum	0,05 MPa
	Maximum	0,8 MPa
Level of protection against ingress of solid particles and moisture	IPX4	
Maximum Load	Cotton	6 kg
Maximum Dry Load	Cotton	3 Kg
	Cotton Big Capacity	4 Kg
	Synthetic	2 Kg
Spin Speed	Maximum	1400 rpm

## Consumption values

Programme	Energy consumption (KWh)	Water consumption (litres)	Programme duration (Minutes)
Cottons 60°	1.3	58	<b>For the duration of the programmes, please refer to the display on the control panel.</b>
Cotton Energy Saving Programme 60° <sup>1)</sup>	1.02	46	
Cottons 40°	0.70	58	
Synthetics 40°	0.50	45	
Delicates 40°	0.55	60	
Wool/ Handwash 30°	0.25	53	

1) «Cotton Energy Saving programme » at 60°C with a load of 6 kg is the reference programme for the data entered in the energy label, in compliance with EEC 92/75 standards.

**i** The consumption data shown on this chart is to be considered purely indicative, as it may vary depending on the quantity and type of laundry, on the inlet water temperature and on the ambient temperature.

## Installation


### Unpacking

All transit bolts and packing must be removed before using the appliance.


You are advised to keep all transit devices so that they can be refitted if the machine ever has to be transported again.




After removing all the packaging, carefully lay machine on it's back to remove the polystyrene base from the bottom.

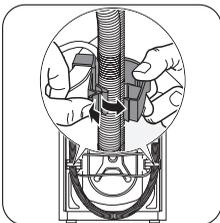

Remove the power supply cable and the hose from the hose holders on the rear of the appliance.

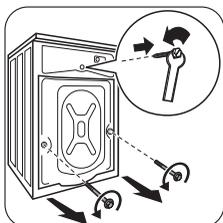


Unscrew the three bolts.

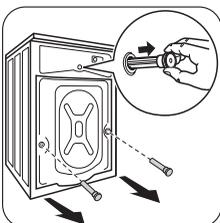

Slide out the relevant plastic spacers.



Open the porthole, remove the polystyrene block fitted on the door seal and pull out all items from the drum.

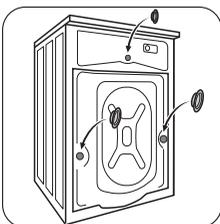


Fill the smaller upper hole and the two large ones with the corresponding plastic plug caps supplied in the bag containing the instruction booklet.

## Positioning

Install the machine on a flat hard floor. Make sure that air circulation around the machine is not impeded by carpets, rugs etc. Check that the machine does not touch the wall or other kitchen units. Level the washing machine by

raising or lowering the feet. The feet may be tight to adjust as they incorporate a self locking nut, but the machine **MUST** be level and stable. Any necessary adjustment can be made with a spanner.

Accurate levelling prevents vibration, noise and displacement of the machine during operation. Never place cardboard, wood or similar materials under the machine to compensate for any unevenness in the floor.

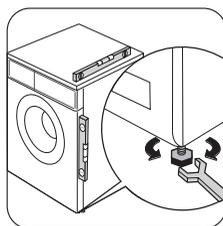

If necessary, check the setting with a spirit level.

## Installation on suspended flooring

Suspended wooden floors are particularly susceptible to vibration.

To help prevent vibration we recommend you place a waterproof wood panel, at least 15 mm thick under the appliance, secured to at least 2 floor beams with screws, the wood panel must extend beyond the front feet.

If possible install the appliance in one of the corners of the room, where the floor is more stable.

## Rubber feet kit (4055126249)

Available from your authorized dealer.

The rubber feet are particularly recommended on floating, slippery and wooden floors. Mount the rubber feet to prevent vibration, noises and displacement of the appliance during operation.

Read carefully the instructions supplied with the kit.

## Water inlet



**Warning! This appliance must be connected to a cold water supply**


**⚠ Caution!** Before connecting up the appliance to new pipework or to pipework that has not been used for some time, run off a reasonable amount of water to flush out any debris that may have collected

**⚠ Caution!** Do not use the hose from your previous appliance to connect to water supply.

The inlet hose is delivered with the machine.



- Connect the appropriate end of the hose to a tap with a 3/4" thread. Always use the hose supplied with the appliance.

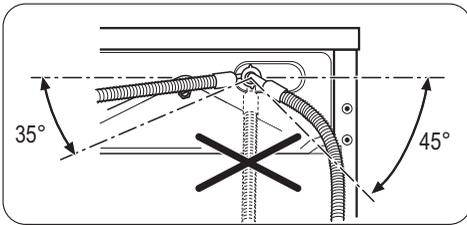

- Connect the other end of the inlet hose to the back of the appliance. The inlet hose can be turned as showed in the picture. **Do not place the inlet hose downwards.** Angle the hose to the left or right depending on the position of your water tap. Set the hose correctly by loosening the ring nut. After positioning the inlet hose, be sure to tighten the ring nut again to prevent leaks.

**⚠ Caution!** The inlet hose must not be lengthened. If it is too short and you do not wish to move the tap, you will have to purchase a new, longer hose specially designed for this type of use.

**⚠ Warning!** Installation should comply with local water authority and building regulations' requirements.

## The appliance must be connected to a cold water supply.

A minimum water pressure of 0.05 MPa (0.5 bar) is required for safe operation of the appliance.

If you cannot make the cold water connection direct from the rising mains, you may be able to operate the appliance from your cold water storage system.


There should be a minimum vertical distance of 5.02 m (16.5 ft) between the appliance's inlet and the bottom of the water storage tank.

## Water drainage

This appliance is designed to be permanently plumbed into your home's drainage system using one of the following methods.


### 1. Into a drainage standpipe.

Firstly form a hook in the end of the drain hose using the "U" piece supplied.

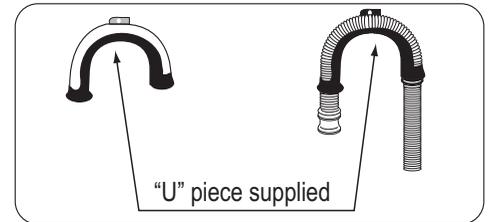


Place the drain hose into your standpipe, which should have an internal diameter of approximately 38 mm thus ensuring there is an air break between the drain hose and standpipe.


When discharging into a standpipe ensure that the top of the standpipe is no more than 90 cm (35.4") and no less than 60 cm (23.6") above floor level.

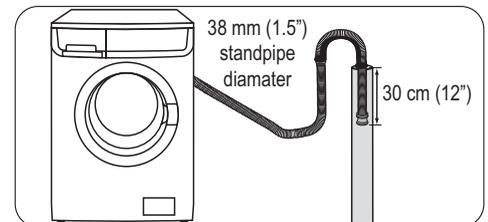


The drain hose may be extended to a maximum of 4 metres. An additional drain hose and joining piece is available from your local Service Force Centre. The joining piece must have an internal diameter of 18 mm.

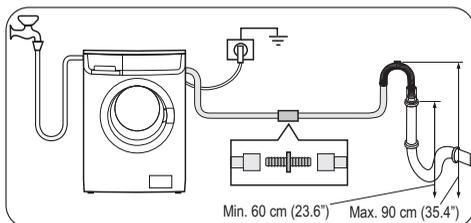


If your drain hose looks like this (see beside) you do not require the “U” piece”. Just push the hose firmly in to the standpipe.

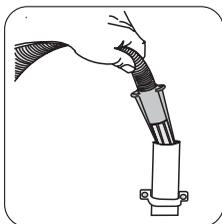

## 2. Onto a sink outlet spigot.

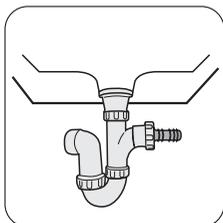

If the outlet spigot has not been used before, remove any blanking plug that may be in place.

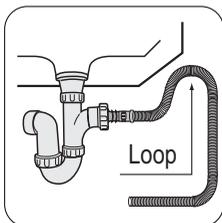

Push the drain hose onto the spigot and secure with a clip, ensure a loop is formed in the drain hose (see above) to prevent waste from the sink entering the appliance.


If you intend to drain the hose from the machine into a sink, make sure that the sink is empty and the plug hole is not blocked. Use the plastic “U - Piece” supplied.

## In the interest of the environment

The appliance should be connected to the FOUL drainage system, the water will then be taken to a sewage works for treatment before being discharged safely into a river.

It is essential that these appliances are not connected to the surface water drainage system as this water is discharged directly into a river or stream and may cause pollution.

If you require any further advice please contact your local water authority.

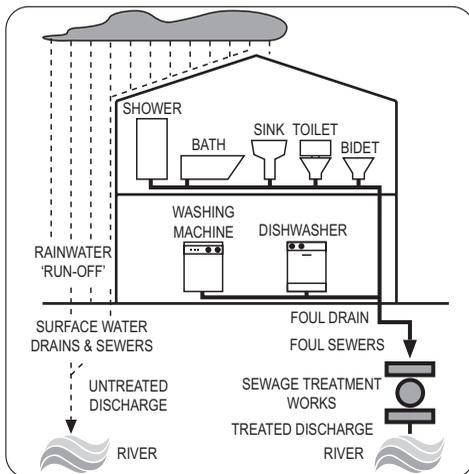

## Electrical connection

Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.

**Warning! THIS APPLIANCE MUST BE EARTHED.**

**The manufacturer declines any liability should this safety measure not be observed.**

Before switching on, make sure the electricity supply voltage is the same as that indicated on the appliance’s rating plate.

**Warning! Information on the electrical connection is given on the rating plate on the inner edge of the appliance door.**

The appliance is supplied with a 13 amp plug fitted.

In the event of having to change the fuse in the plug supplied, a 13 amp ASTA approved (BS1363/A) fuse must be used.

 **Warning! A cut off plug inserted into a 13 amp socket is a serious safety (shock) hazard.**  
**Ensure that the cut off plug is disposed of safely. Should the appliance power**

## Environmental concerns

The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council, your household waste disposal service or the shop where you purchased the product.

### Packaging materials



The materials marked with the symbol  are recyclable.  
>PE<=polyethylene

**supply cable need to be replaced, this MUST be carried out by our Service Force Centre. The appliance should not be connected to the electrical supply by means of an extension cable.**

### Note!

When the appliance is installed the power supply cable must be accessible.

>PS<=polystyrene

>PP<=polypropylene

This means that they can be recycled by disposing of them properly in appropriate collection containers.

### Ecological hints

To save water, energy and to help protect the environment, we recommend that you follow these tips:

- Normally soiled laundry may be washed without prewashing in order to save detergent, water and time (the environment is protected too!).
- The machine works more economically if it is fully loaded.
- With adequate pre-treatment, stains and limited soiling can be removed; the laundry can then be washed at a lower temperature.
- Measure out detergent according to the water hardness, the degree of soiling and the quantity of laundry being washed.







[www.zanussi.com/shop](http://www.zanussi.com/shop)



132920780-A-312012