


# NETGEAR®

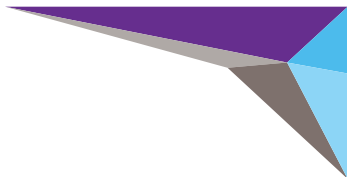

## ReadyNAS OS 6 Rack-Mount Storage Systems Installation Guide



# Contents

Package Contents . . . . .	3
Basic Setup . . . . .	4
Reformat Disks . . . . .	7
Additional Information . . . . .	10

# Package Contents

 
## ReadyNAS system



**Resource CD**



**Power cord  
(varies by model)**



**Ethernet cable**

**IMPORTANT:** Read all safety warnings in the hardware manual for your system before connecting the system to the power supply.

# Basic Setup

After you follow these instructions, your ReadyNAS is ready to use in a production environment. Setup takes approximately 15 minutes.

## ➤ To set up your storage system:

1. Install all available disks that you want to use in your ReadyNAS system.

**Note:** If you are using previously formatted disks that contain data, you must reformat these disks before continuing. See *Reformat Disks* on page 7.

For a list of supported disks, see the Hardware Compatibility List at <http://www.netgear.com/readynas-hcl>.

For information about installing disks, see the hardware manual for your system.


2. Place your system in a location that provides adequate ventilation.

High-capacity disks can produce considerable heat. It is important to ensure that the fan exhausts are unobstructed.

For a complete list of placement considerations, see the hardware manual for your system.

3. Connect the power cord to the back of the system and plug the other end into a wall outlet or power strip.
4. Make sure that the power switch on the back panel is in the On position.
5. Use an Ethernet cable to connect an Ethernet port on the storage system to your network.
6. If necessary, press the **Power** button to turn on the system.
7. Wait for the Power LED to turn solid blue.

8. Visit <http://readycloud.netgear.com> on a computer that uses the same local area network (LAN) and Internet connection as your ReadyNAS system.

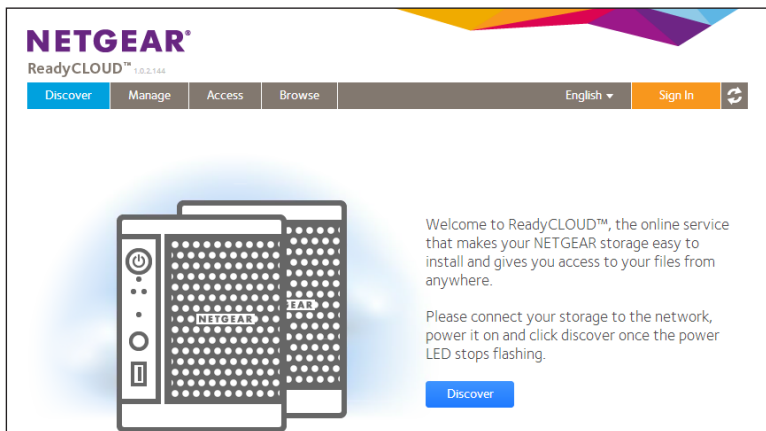


**Note:** If your computer does not have Internet access, install and run the RAIDar utility instead. RAIDar is on the resource CD that came with your system.

9. Click the **Discover** button.

ReadyCLOUD automatically detects your ReadyNAS system on the network.

Your new ReadyNAS system is marked with a **NEW** label.

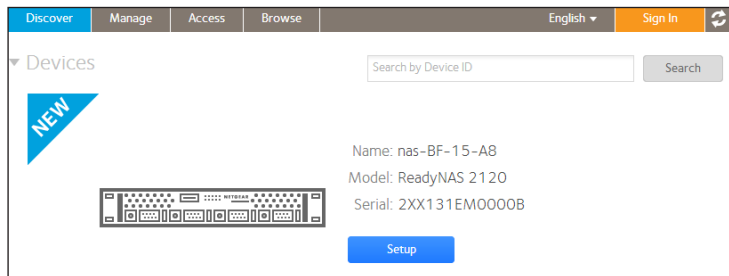

10. Click the **Setup** button.

**11.** Select the mode that you want to use to set up your system.

- **Option 1. Select ReadyCLOUD mode.**
  - a** Sign in to ReadyCLOUD or create a user account.
  - b** Follow the prompts to configure your ReadyNAS system.
- **Option 2. Select Offline mode.**

An SSL certificate security warning displays. This warning ensures an encrypted authentication and secure access to the ReadyNAS local admin page for your storage system.

- a** Accept the certificate.  
A login prompt displays.
- b** Enter **admin** for the user name, enter **password** for the password, and click the **OK** button.

**Note:** You can change these credentials when you configure your system. NETGEAR recommends that you change your password as soon as possible.

The ReadyNAS local admin page displays in your browser and launches a setup wizard.

- c** Follow the prompts of the setup wizard to configure your ReadyNAS system.

The setup process is complete. You can begin using your ReadyNAS storage system.

# Reformat Disks

If you are using previously formatted disks that contain data, you must reformat the disks before you can use them with your ReadyNAS system.

**Warning:** *This process erases all data and reformats all disks into a single X-RAID2 volume. If you want to preserve the data on the disks, you must back up the data to an external drive before using the disks in your ReadyNAS storage system.*

You can reformat your disks using the factory default option or using the RAIDar utility.

➤ **To reformat previously formatted disks using the factory default option:**

1. If your system is powered on, gracefully power off the system. See *Additional Information* on page 10.
2. Install the previously formatted disks.  
For a list of supported disks, see the Hardware Compatibility List at <http://www.netgear.com/readynas-hcl>.  
For information about installing disks, see the hardware manual for your system.
3. Using a straightened paper clip, press and hold the **Reset** button.
4. Press the **Power** button.  
The system powers on.
5. Continue pressing the **Reset** button until the system enters boot mode.
  - If you have a 4-bay storage system, the Error, LAN1, LAN 2 and Power LEDs all blink when the system is in boot mode.
  - If you have a 12-bay storage system, the Power, UI, and Health LEDs all blink when the system is in boot mode.

6. Select the factory default option from the boot menu.
  - If you have a 4-bay storage system, do the following:
    - a Press and release the **Reset** button to scroll through the boot menu options.
    - b When only the LAN 1 and Power LEDs are lit, press and hold the **Reset** button for three seconds.
  - If you have a 12-bay storage system, do the following:
    - a Press and release the **Reset** button to scroll through the boot menu options.
    - b When only the UI LED is lit, press and hold the **Reset** button for three seconds.

The system initiates a short disk test that takes 2 to 5 minutes.

Then a 10-minute time-out period begins. After 10 minutes, the factory default process starts.

7. (Optional) Press the **Reset** button to skip the 10-minute time-out period and begin the factory default process immediately.

The system returns to its factory default settings and reformats all installed disks for use with ReadyNAS OS 6. When the factory default process is complete, the reformatted disks are ready to use with your system.




➤ **To reformat previously formatted disks using RAIDar:**

1. On a computer that is connected to the same LAN as your ReadyNAS system, download and install the latest version of RAIDar.

You can find the latest version of RAIDar at

<http://www.netgear.com/raidar>.

2. Launch RAIDar and select your system from the list of detected devices.
3. Click the **Format** button.

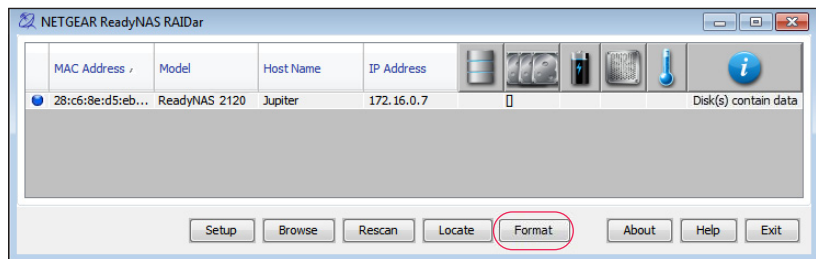

The system reformats all installed disks for use with ReadyNAS OS 6. When the reformatting process is complete, the reformatted disks are ready to use with your system.

## Additional Information

To help keep your storage system healthy and prevent the risk of data loss, follow these rules of usage:

- Never replace more than one disk at a time while the system is powered on.
- If you need to power off your system, power it off gracefully, when possible.

➤ **To gracefully power off your storage system:**

1. Press the **Power** button on the front panel of the system.  
The Power LED blinks, prompting you to confirm the shutdown.
2. Press the **Power** button again.  
The system shuts down gracefully.

For more information about setting up, configuring, and using your system, see the software and hardware manuals for your system.

Links to these manuals are included on the resource CD that came with your system and are also available at

<http://support.netgear.com/product/ReadyNAS-OS6> or through a link in the product's user interface.



## Support

Thank you for purchasing this NETGEAR product.

After installing your device, locate the serial number on the label of your product and use it to register your product at <https://my.netgear.com>. You must register your product before you can use NETGEAR telephone support. NETGEAR recommends registering your product through the NETGEAR website.

For product updates, additional documentation, and support, visit <http://support.netgear.com>.

NETGEAR recommends that you use only the official NETGEAR support resources.

You can get the user manual online at <http://downloadcenter.netgear.com> or through a link in the product's user interface.

## Trademarks

NETGEAR, the NETGEAR logo, and Connect with Innovation are trademarks and/or registered trademarks of NETGEAR, Inc. and/or its subsidiaries in the United States and/or other countries. Information is subject to change without notice. © NETGEAR, Inc. All rights reserved.

## Compliance

For the current EU Declaration of Conformity, visit [http://support.netgear.com/app/answers/detail/a\\_id/11621/](http://support.netgear.com/app/answers/detail/a_id/11621/).

**NETGEAR, Inc.**

350 East Plumeria Drive  
San Jose, CA 95134 USA



201-17056-03

June 2013