



Kestrel Stage Series

Electric Floor Rising Projection Screen with Travel Case

User's Guide



Product description

The Kestrel Stage Series is a portable electric floor rising front projection screen that is ideal for event applications used in Churches, hotels, schools, or other like venues. It includes two travel cases (one for the screen and one split-two-sided storage cart). Complete the set up by attaching the complimentary drape kit to give your presentation the finishing touch.

Product parts and hardware

Upon receiving your screen, please make sure all parts listed below are included. If anything is missing from the package, please contact Elite Screens Inc. right away.



1. Kestrel Stage Motorized screen
w/ travel case (main) X 1



2. Storage Cart X 1



3. Power cord X 1



4. Double sided bolt X 4



5. Butterfly Nut X 4




6. Ring-bolt X 1




7. Curtain fabric X 1

Product Assembly and Operation

1. Unlatch: Lift the butterfly locks and rotate them 90 degrees. Then, split the case open by pulling both sides apart.

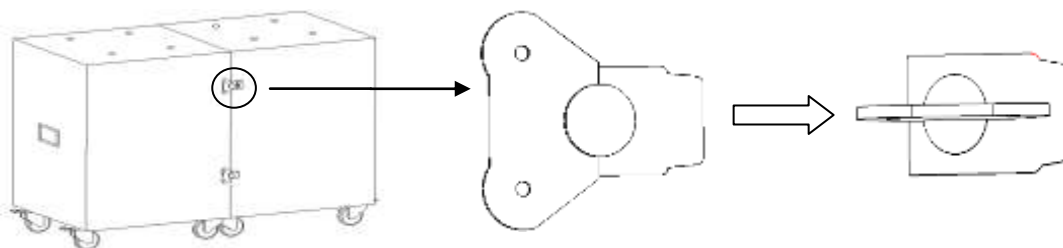


Note: Distance the two parts of the storage-box (item 2) to the corresponding length of the Kestrel's case. Then proceed to step 2.

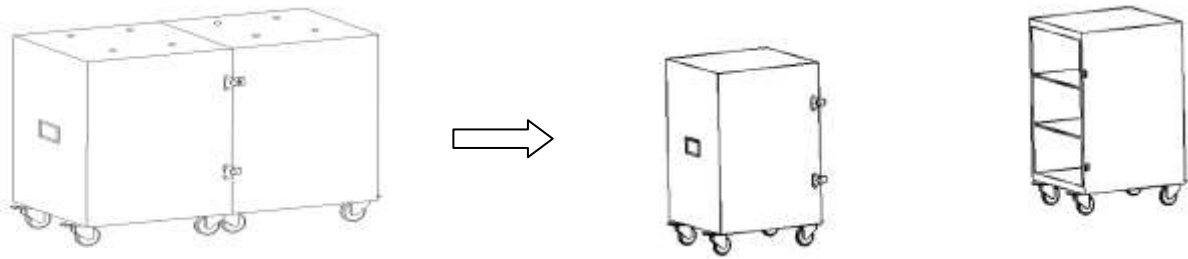


2a. Insert the shorter side of the double sided bolts (Item 4) into the bottom of the motorized screen's carry case as shown in the figure below. There should be two bolts (item 4) inserted to each bottom side of the carry case of the motorized screen main case. Be careful to not over-tighten the bolt to avoid damaging the threading in the screen's carry case.



Safety precaution: We recommend that two people lift and mount the screen on to the cart.

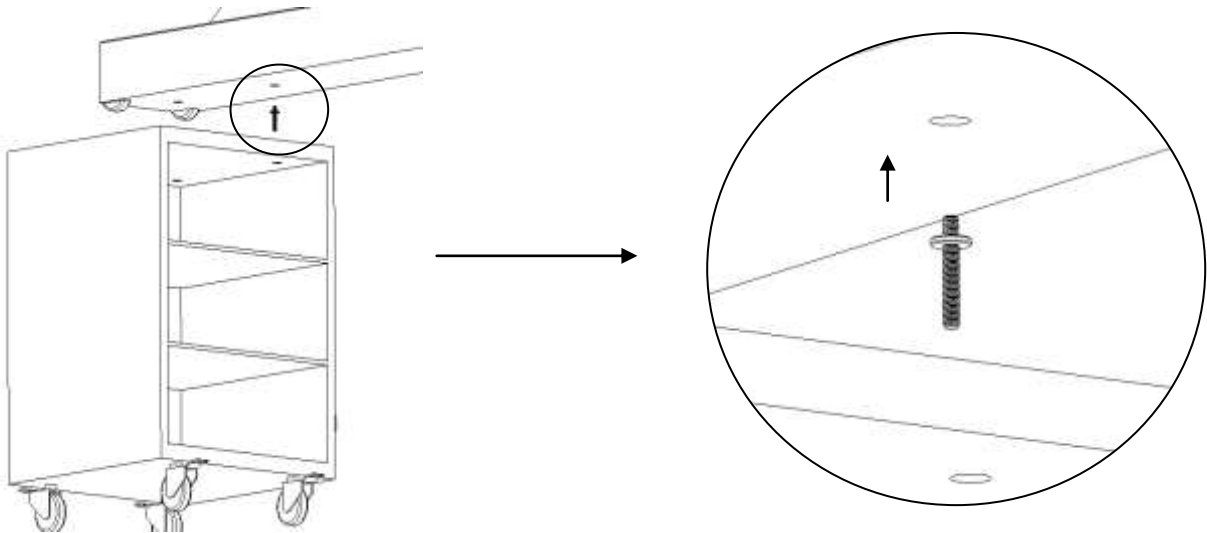


2b. Carefully place the main screen's carry case on top (facing the front) of the two separate carts by inserting the longer side of the bolts in to the top front holes of the storage carts (item 2) as shown below.

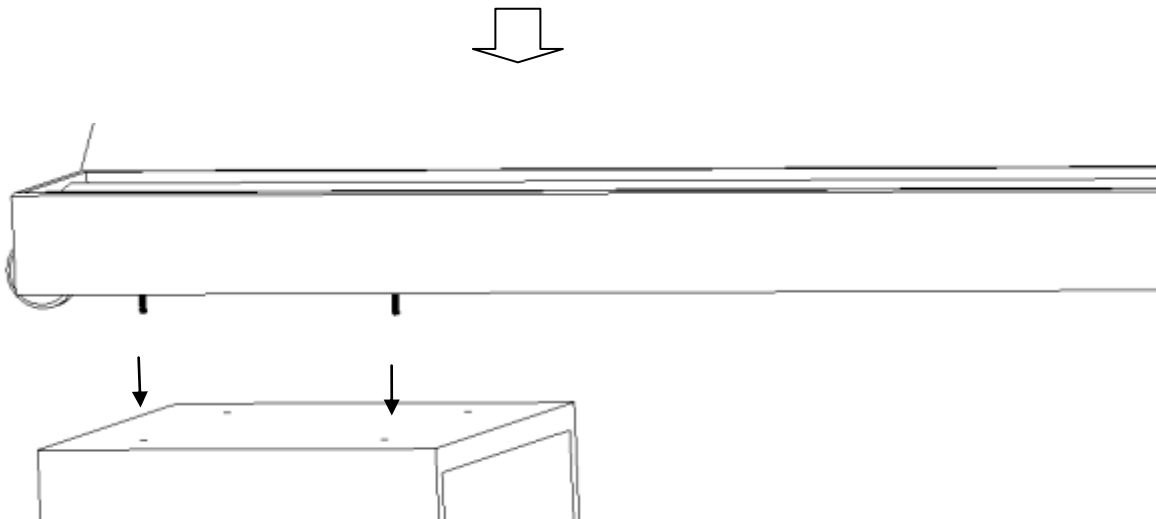

3. Using the provided butterfly nuts, tighten the bolts to secure the screen's carry case to the carts as shown in the figures below. Be careful to not over-tighten the butterfly nuts to avoid damage to the threading in the screen's carry case.

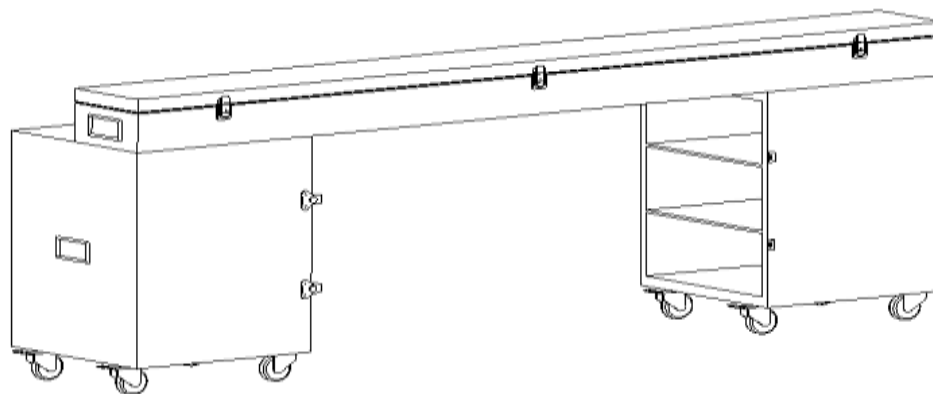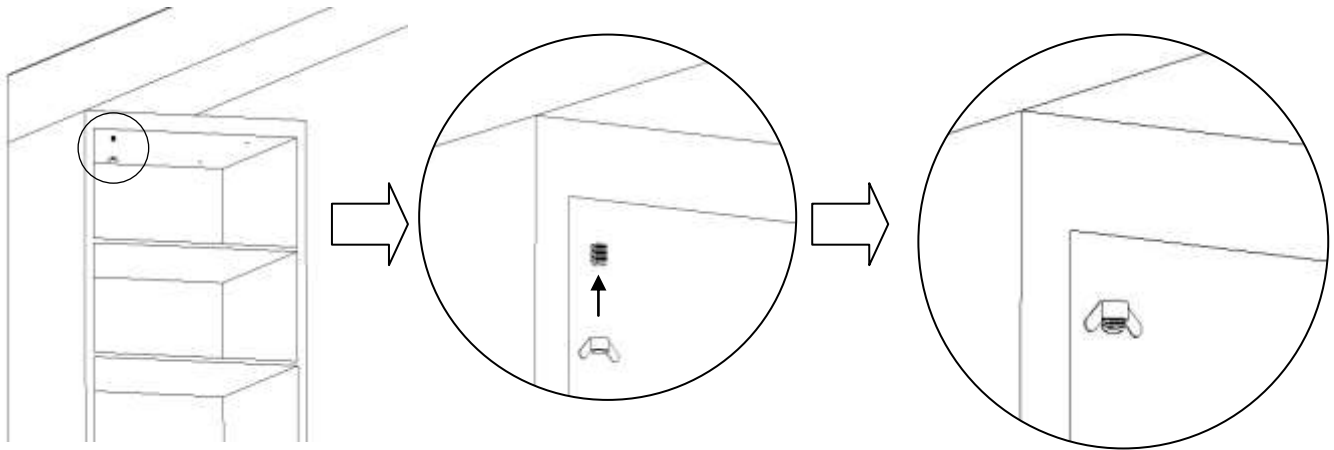


4. Insert ring bolt (item 5)

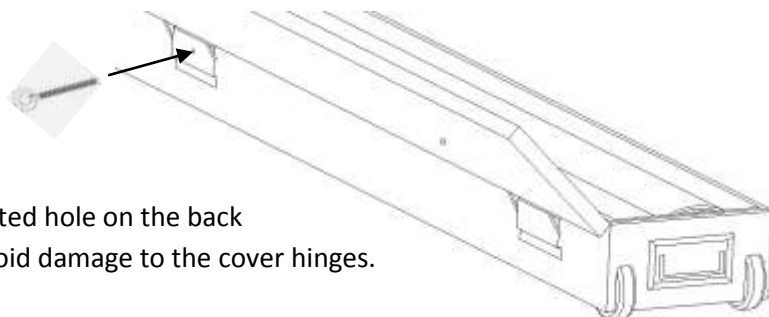


Insert the ring bolt into the indicated hole on the back of the main travel case to help avoid damage to the cover hinges.


5. Connect the power cord

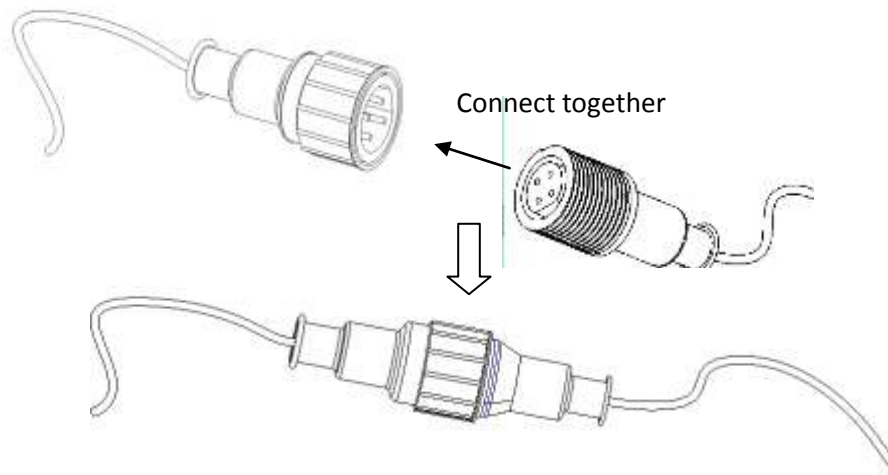

6. Power switch:

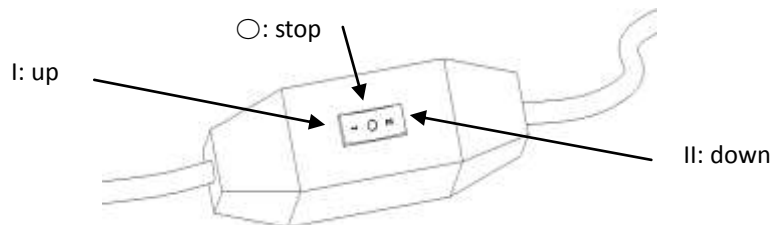


7. Lock / unlock the wheel:

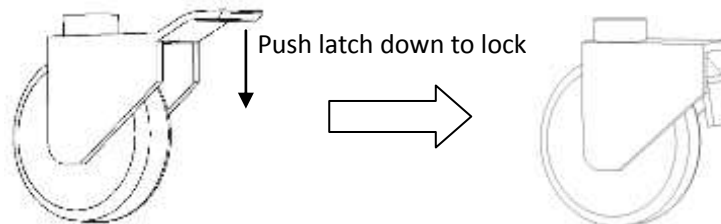

8. Affix the top edge (Velcro) of the curtain to the inner edges (front, left and right side edges) of the storage case.

Note: The curtain will stick to the Velcro inside of the case.

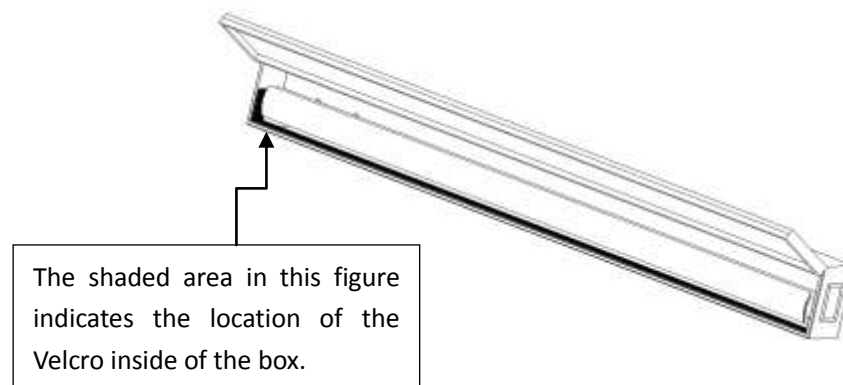

For local Elite Screens contact or Technical Support, please visit

www.elitescreens.com

On-Line User Guide or Download

线上说明书或下载 / 線上說明書或下載
オンラインユーザーマニュアル／ダウンロード

Manual del usuario on-line o descargar

On-Line-Benutzerhandbuch oder Herunterladen

Manuel de l'utilisateur en ligne ou télécharger

On-Line manuale d'uso o download

ออนไลน์ใช้คู่มือหรือดาวน์โหลด

On-Line Руководство пользователя или скачать

On-line Manual de utilizare sau de descărcare

Hướng dẫn sử dụng trực tuyến hay tải xuống

علا الخطلا يلا لمد تخدمأوت حم يل

ऑनलाइनउपयोगकर्ताकिमैनुअलयाडाउनलोड

온라인사용자설명서또는다운로드

On-Line Instrukcja obsługi lub pobierania

On-Line Manual do Usuário ou Download

BukuPanduan Online atauunduh

www.elitescreens.com/UG

