


Use a hex wrench to adjust the damp for swiveling. Turn counter-clockwise to reduce damping and clockwise to increase damping.



Insert cables into cable covers. Leave enough slack of cables at arm joints for full adjustment.

Use cable clamp to limit cables close to steel pipe.

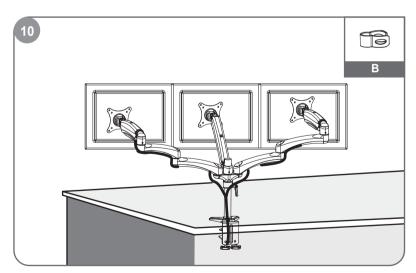

Installation

INSTRUCTIONS

WARNING STATEMENTS

Warning



Prior to the installation of this product, the installation instruction must be read and completely understood. Failure to do so may result in personal injury, property damage or voiding of factory warranty.



Do not install on a structure that is prone to vibration, movement or chance of impact. Reinforce the structure as required before installation.



The desk clamp can support a maximum thickness of 9 cm. Confirm the desk edge before installation.





Pay attention to the weight capacity of the mount. Exceeding the limitation can result in function unworkable or even serious personal injury and property damage.




Never operate the mount if parts are missing or damaged. Contact your local service center for warranty service.

PRODUCT LINE GRAPH

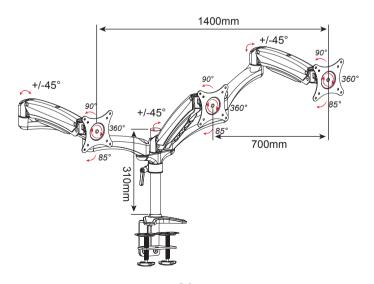

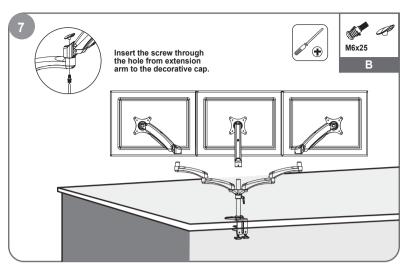

Lift the spring arm along with the monitor and put it on the supporting part.

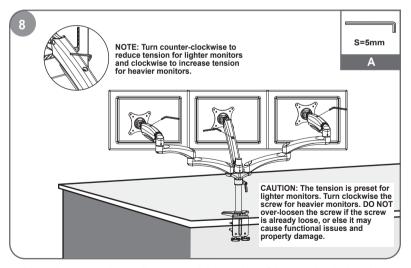


Use a hex wrench to adjust the height tension of the mechanical spring arm, to keep different weight of monitors still at any position.

— 01 —

M4x12 A

Flush surface installation: Install 4 screws through faceplate to monitor via mounting holes.

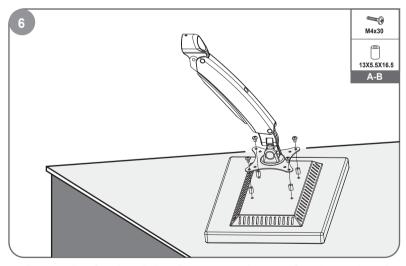


Recessed surface installation: Put 4 spacers between faceplate and monitor. Install 4 screws through faceplate, spacers to monitor via mounting holes.


TOOLS REQUIRED NOT INCLUDED




 PARTS INCLUDED

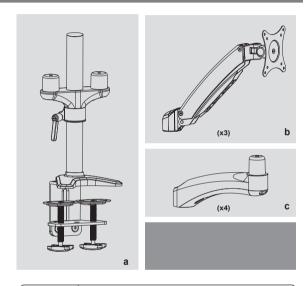







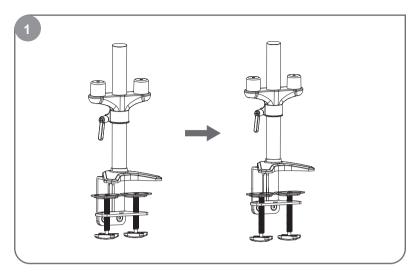


Loosen clamp screw until enough space is left for the edge of the desk.

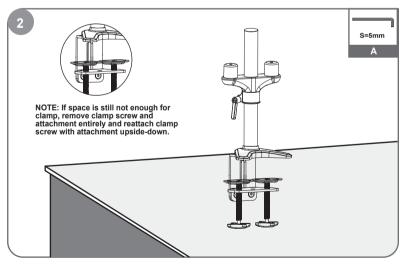

Tighten clamp using clamp screw until mount is securely fastened to desk.

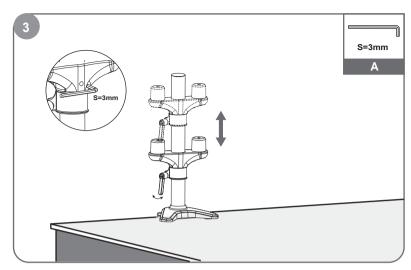

Adjust locating ring at proper height and screw up tight to hold the mount. Adjust aluminum support part above the locating ring and use a hex key to fix it.

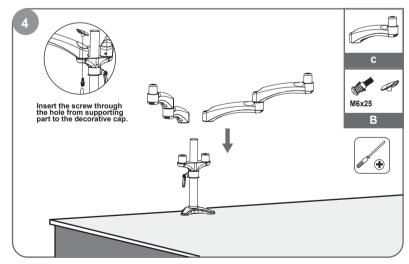

Insert extension arms to the supporting part.