



# Portable Wireless Sound System with Bluetooth®

NAS-3060



## Instruction Manual

Please read carefully before use and keep for future reference.

---

---

# Thank You

We know you have many choices when it comes to technology; thank you for choosing us here at Naxa Electronics. Established in 2001 in Los Angeles, California, we are dedicated to delivering products that entertain and delight.

We trust that you will be happy with your purchase. Please read this manual carefully and save it for reference. You may also find the latest FAQ, documentation, and other product material at our website. Come visit us on the web at **[www.naxa.com](http://www.naxa.com)** and see all that we have to offer!

---

---

# In the Box

Please take a moment to make sure that you have everything in the list below. Although we make every effort to ensure that each Naxa device is securely packed and sealed, we know a lot can happen in between us and you. If anything is missing, check back with your local retailer to get immediate assistance. If they cannot help you, please contact our Naxa Support team at **[www.naxa.com/naxa\\_support](http://www.naxa.com/naxa_support)**.

- NAS-3060
- Combination USB charge cable+ 3.5mm AUX audio adaptor

---

# Connecting Power

Your speaker has an integrated rechargeable battery. Upon initial use, the battery should be charged fully to ensure optimal performance and battery life.

## Charging Your Speaker

Use the included USB cable to connect the speaker to a USB power source to charge the battery.

- Connect the small end of the cable to the DC 5V USB charge port of the unit. (The 3.5mm plug is not used for power)
- Connect the large end of the cable to a high-power USB port of a computer. The computer should be powered on.

The status LED will light a steady red when the battery is charging. When charging is complete, the status LED will darken.



*The battery used in this device may present a fire or chemical burn if mistreated. Do not disassemble, incinerate, or heat the battery. Do not leave the battery in a place subject to direct sunlight, or in a car with its windows closed.*

*Do not connect the unit to a power source other than that which is indicated here or on the label as this may result in the risk of fire or electric shock.*

**To turn the speaker on**, push the Mode dial (B/Off/MP3) towards B and hold for 2 seconds. The blue LED will flash quickly.

**To turn the speaker off**, press and hold the B/Off/MP3 dial for 2 seconds.

---

# About the Status Indicator

The status indicators light up to let you know which mode the speaker is in.

Status indicator	Speaker Mode
Steady red when the speaker is connected to USB power	The speaker is charging
Off when the speaker is connected to USB power	The speaker is fully charged
Flashing quickly blue	The speaker is on and in pairing mode (ready to connect to a Bluetooth® device)
Steady blue	The speaker is connected to a Bluetooth® device
Flashing blue every few seconds	The speaker is connected to and playing music from a Bluetooth® device

---

# Pairing a Device with Bluetooth®

A device must be paired with the speaker before using them together for the first time.

When you turn on the speaker, it will automatically search for a paired device. If it does not detect a paired device, it will switch to Pairing mode (the blue LED will flash quickly). Then:

1. Make sure Bluetooth® is enabled on your device. Enable it if it hasn't.
2. Use your device to search for available Bluetooth devices. (This function is usually in the Bluetooth settings menu; refer to your device's instruction manual to learn more.)
3. The speaker will announce itself as "NAXA NAS-3060." Select it from the list of devices.
4. If your device asks for a passcode, use "0000" to complete the pairing process.

When the speaker is paired and connected to a device, the blue LED will light up steadily.



*If the speaker fails to pair with your device:*

*1) Turn the speaker off; 2) Make sure the device is set to be discoverable; 3) Turn the speaker on again. The speaker will attempt to find and pair with your device.*

*Your speaker can be paired with one device at a time, only.*

---

---

## Using the Speaker

When the speaker is connected to a Bluetooth® device:

To do this...	...do this
Start, pause, or resume audio playback	Press the Control dial (⏮).
Skip to the previous track	Push the Control dial towards ⏮/-.
Skip to the next track	Push the Control dial towards +/⏭.

### To do this...

### ...do this

Decrease the volume level      Push and hold the Control dial towards ⏮/-.

Increase the volume level      Push and hold the Control dial towards +/⏭.

Answer or end a call when connected to a smartphone      Press the Control dial (⏮).

Change the active source mode to MP3      Push and hold the Mode dial towards MP3.

Turn the speaker off      Press down and hold the Mode dial (OFF).



*Make sure the volume of your connected device is set to maximum, then use the speaker's controls to adjust the volume to a comfortable listening level.*

---

---

# Using the MP3 Player (microSD)

Load a microSD card that contains MP3 audio files into the microSD card slot of the speaker. Turn the speaker on, then push and hold the MODE dial towards MP3 to set the speaker mode to MP3.

To do this...	...do this
Start, pause, or resume audio playback	Press the Control dial (M).
Skip to the previous track	Push the Control dial towards  / -.
Skip to the next track	Push the Control dial towards + /  .
Decrease the volume level	Push and hold the Control dial towards  / -.
Increase the volume level	Push and hold the Control dial towards + /  .
Change the active source mode to Bluetooth	Push and hold the Mode dial towards B.

To do this...

Turn the speaker off

...do this

Press down and hold the Mode dial (OFF).



*Pause playback before removing a microSD card from the speaker. Do not remove the microSD card while playback is active.*

---

---

# Using the FM Radio

Turn the speaker on, then set the speaker mode to FM Radio mode.



*The microSD card slot must be empty and the AUX jack disconnected in order to access FM Radio mode.*



*Do not remove the microSD card while the speaker is on.*

To do this...

Auto scan for a station within reception range

...do this

Press the Control dial (M).

To do this...	...do this
Manually tune to a lower frequency	Push the Control dial towards <b>⏮</b> /-
Manually tune to a higher frequency	Push the Control dial towards +/ <b>⏭</b>
Decrease the volume level	Push and hold the Control dial towards <b>⏮</b> /-
Increase the volume level	Push and hold the Control dial towards +/ <b>⏭</b>

ume on both.

3. Set the device volume to 80% of its maximum and then start playback.
4. Push and hold the Control dial towards +/**⏭** to gradually increase the volume of the speaker to a comfortable level.



*Use the connected AUX device to control all functions in AUX mode. The speaker can only be used to adjust the volume.*

---

## Using the AUX Input Connector

Connect devices without Bluetooth® by using the AUX connection. The included 3.5mm adapter combination cable is required to make this connection.

1. Use the 3.5mm plug of the included combination cable to connect the device's headphone or microphone jack to the AUX connector of the speaker.
2. Turn on the device and the speaker. Lower the vol-

# Warnings and Precautions

	<b>CAUTION</b> WARNING: SHOCK HAZARD. DO NOT OPEN. AVIS: RISQUE DE CHOC ELECTRIQUE. NE PAS OUVRIR	
<b>CAUTION:</b> TO REDUCE THE RISK OF FIRE AND ELECTRIC SHOCK, DO NOT REMOVE THE COVER (OR BACK) OF THE UNIT. REFER SERVICING ONLY TO QUALIFIED SERVICE PERSONNEL.		



The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of significant magnitude to constitute risk of electric shock



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operation and servicing instructions in the literature accompanying the appliance.

## CAUTION

- Do not block the ventilation openings or holes.
- Do not place any naked flames (such as lighted candles) on the apparatus.
- When discarding batteries, follow all local rules and laws governing the disposal of batteries. Consider the environmental impact of your actions!
- To prevent fire or shock hazard, do not expose this appliance to rain or moisture.

## Important Safety Information

1. **Read Instructions:** All the safety and operating instructions should be read before the product is operated.
2. **Retain Instructions:** The safety and operating instruction should be retained for future reference.
3. **Heed Warnings:** All warnings on the product and in the operating instructions should be adhered to.
4. **Follow Instructions:** All operating and usage instructions should be followed.
5. **Cleaning:** Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
6. **Attachments:** Use only attachments recommended by the manufacturer. Use of other attachments may be hazardous.
7. **Water and Moisture:** Do not use this product near water (e.g., near a bathtub, washbowl, kitchen sink, laundry tub, in wet basements, or near a swimming pool and the like).
8. **Accessories:** Do not place this product on an unstable cart, stand, tripod, bracket, or table. Use only with carts, stands, tripods, brackets, or tables recommended by the manufacturer or sold with the product. Any mounting of the product should follow the manufacturer’s instructions and should use a mounting accessory recommended by the manufacturer. A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.
9. **Ventilation:** Slots and openings in the cabinet are provided for ventilation to ensure reliable operation of the product and to protect it


from overheating. These openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer instructions have been adhered to.

10. **Power Sources:** This product should be operated only from the type of power source indicated on the rating label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power or other sources, refer to the operating instructions.
11. **Grounding or Polarization:** This product may be equipped with a polarized alternating-current line plug that has one blade wider than the other. This plug will only fit into the power outlet in one direction. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the direction of the plug. If the plug should still fail to fit, contact an electrician to replace the obsolete outlet. Do not defeat the safety purpose of the polarized plug.
12. **Power-Cord Protection:** Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and at the point which they exit from the product.



13. **Protective Attachment Plug:** The product may be equipped with an attachment plug with overload protection. This is a safety feature. See the operating instructions for replacement or directions to reset the protective device. If replacement of the plug is required, be sure the service technician has used a replacement plug that has the same overload protection as the original plug as specified by the manufacturer.

14. **Outdoor Antenna Grounding:** If an outside antenna is connected to the product, be sure the antenna system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code, ANS/NFPA 70 provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna-discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode (see figure).

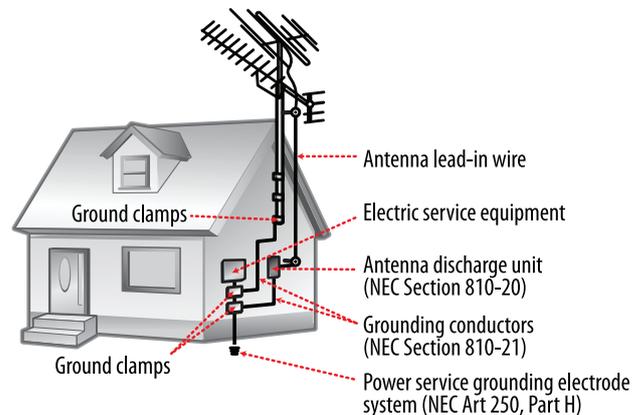

15. **Lightning:** For added protection for this product, unplug it from the wall outlet and disconnect the antenna or cable system during a lightning storm or when it is left unattended and unused for long periods of time. This will prevent damage to the product due to lightning or power-line surges.
16. **Power Lines:** An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When in-

stalling an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits, as contact with them might be fatal.

17. **Overloading:** Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
18. **Object and Liquid Entry:** Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
19. **Servicing:** Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
20. **Damage Requiring Service:** Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions: a) when the power-supply or plug is damaged; b) if liquid has been spilled or if objects have fallen into the product; c) if the product has been exposed to rain or water; d) if the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation; e) if the product has been dropped or damaged in any way; f) when the product exhibits a distinct change in performance—this indicates a need for service.
21. **Replacement Parts:** When replacement parts are required, be sure that your service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.

22. **Safety Check:** Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to ensure that the product is in proper operating condition.

23. **Wall or Ceiling Mounting:** The product should be mounted to a wall or ceiling only as recommended by the manufacturer.

24. **Heat:** The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

### **WARNING:**

This product contains lead, a chemical known to the State of California to cause cancer and birth defects or other reproductive harm. ***Wash hands after handling.***

### **FCC NOTICE**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### **CAUTION ON MODIFICATIONS**

Any changes or modifications not expressly approved by the grantee of this device may void the authority granted by the FCC to operate the equipment.

### **Trademark & Regulatory Statements**

Bluetooth® is a registered trademark of Bluetooth SIG, Inc. Other trademarks and names are those of their respective owners.

---

---

# Troubleshooting Guide

This guide lists common problems and their solutions. Please refer to this guide before requesting service. If you need further assistance, please contact Naxa Technical Support ([www.naxa.com/naxa\\_support/](http://www.naxa.com/naxa_support/)).

Symptom	Possible Cause	Possible Solution
There is no power.	The battery is exhausted.	Connect the unit to a USB power source to charge it.
	The speaker hasn't been turned on.	Push the Mode dial (B/Off/MP3) towards B and hold for a few seconds to turn the speaker on.
The device is unable to connect to the speaker.	The speaker is not in pairing mode.	Reset the speaker (turn it off and then on again.) Wait for the status indicator to flash quickly blue.
	Bluetooth may be disabled on your device.	Make sure Bluetooth is enabled on your device and that it is set to be discoverable.

Symptom	Possible Cause	Possible Solution
The device is connected but there is no sound.	Your device may be beyond the effective range of the speaker.	Move closer to the speaker. Range may be affected adversely by environmental conditions.
	Your device may not be in playback mode.	Ensure that your device is operating correctly. Start playback on your device.

---

---

# Specifications

<b>Speakers</b>	45 mm full-range driver
<b>Frequency Response</b>	280–16,000 Hz
<b>Removable Memory Support</b>	microSD, microSDHC (max 32 GB)
<b>Playable Media Formats</b>	MP3
<b>Radio Tuner</b>	FM
<b>Input</b>	Bluetooth® 3.5mm AUX
<b>Power</b>	Rechargeable battery (500 mAh) USB charge port (DC 5V)
<b>Battery Life*</b>	5 hours

\* Estimated time based on Bluetooth use at 100% volume; battery life will vary depending on use conditions.

Note: Product are improved continuously. We reserve the right to modify the product and specifications without prior notice.

---

---

# Support

If you have problems with your device, please consult the instructions in this manual. Please also visit us on the web at [www.naxa.com](http://www.naxa.com) to get up to the minute news, alerts, and documentation for your device. For additional assistance, please contact Naxa Technical Support.

## **NAXA Technical Support**

2320 East 49th St.  
Vernon, CA 90058

[http://www.naxa.com/naxa\\_support/](http://www.naxa.com/naxa_support/)

