

SAMSUNG **Galaxy Tab S2**

User Guide



[UG template version 15b]

[Sprint-Samsung-T817P-UM-Eng-082715-Final]

Table of Contents

Introduction.....	1
About the User Guide.....	1
Access Instructions on Tablet.....	1
Get Started.....	3
Parts and Functions	3
Tablet Layout	3
Charge the Battery.....	4
Turn Your Tablet On and Off	5
Use the Touchscreen.....	7
Activate Your Tablet.....	11
Complete the Setup Screens	12
Basic Operations.....	14
Basics.....	14
Home Screen and Applications (Apps) List	14
Tablet Settings Menu	15
Portrait and Landscape Screen Orientation.....	15
Capture Screenshots	16
Applications.....	17
Launch Applications.....	17
Apps List	17
Phone Number.....	21
Airplane Mode	23
Enter Text.....	24
Samsung Keyboard	24
Google Voice Typing.....	25
Tips for Editing Text	26
Google Account.....	26
Create a Google Account.....	27
Sign In to Your Google Account.....	33
Google Play Store	38
Find and Install an App	38
Request a Refund for a Paid App	39

Update an App	39
Uninstall an App	42
Get Help with Google Play	43
Lock and Unlock Your Screen	43
Update Your Tablet	45
Update Your Tablet Software	45
Update Your Profile	49
Update Your PRL	49
Your Tablet Interface	51
Home Screen Basics	51
Home Screen Layout	51
Extended Home Screens	52
Status Bar and Notification Panel	54
Status Bar	54
Notification Panel	56
S Finder	58
Quick Connect	59
Customize the Home Screen	60
Change the Wallpaper	60
Add Shortcuts to the Home Screen	61
Add Widgets to the Home Screen	62
Add Folders to the Home Screen	63
Contacts	65
Add a Contact	65
Check Contacts	67
Edit a Contact	69
Delete a Contact	70
Share a Contact	72
Import Contacts	73
Back Up Contacts	75
Messaging and Internet	77
Gmail	77
Create and Send a Gmail Message	77
Check Received Gmail Messages	79
Use Gmail Labels	81

Archive Gmail Threads	82
Mute Gmail Threads	83
Delete Gmail Threads	85
Search Gmail Messages.....	86
Report Spam or Phishing Gmail	88
Add Another Google (Gmail) Account	89
Switching Between Gmail Accounts	91
Email	93
Set Up an Email Account	93
Add an Email Account.....	93
Add an Exchange ActiveSync Account.....	97
Compose and Send Email	99
Open Email Messages.....	102
Delete an Email Account.....	103
Manage Your Email Inbox.....	105
Exchange ActiveSync Email Features	107
Data Services General Information (4G LTE Network).....	109
4G LTE	110
Your User Name	110
Data Connection Status and Indicators	112
Browser	112
Use the Browser	113
Add a Bookmark	113
View Browser History	115
Open New Browser Tab.....	117
Browser Settings	117
Chrome Browser	117
Camera and Video	120
Camera Overview	120
Take Pictures and Record Videos	122
Take a Picture	122
Record Videos	123
Shooting Modes	124
View Pictures and Videos Using Gallery.....	125
Edit Pictures	129

Share Pictures and Videos	137
Send Pictures or Videos by Email or Gmail.....	137
Send Pictures or Videos Using Bluetooth.....	138
Share Pictures or Videos via Additional Apps or Social Media	140
Share Videos on YouTube.....	142
Camera Options and Settings.....	144
Switch Cameras.....	144
Set Camera Options	145
Useful Apps and Features.....	148
Calculator	148
Calendar.....	148
Add an Event to the Calendar.....	149
View Calendar Events.....	151
Share Calendar Events.....	153
Sync Calendars.....	155
Synchronize an Exchange ActiveSync Calendar.....	157
Clock	157
Set Alarms.....	159
World Clock.....	160
Stopwatch	160
Timer	161
Excel	162
Galaxy Apps.....	162
Gallery.....	162
Google Hangouts	164
Google Maps.....	166
Google Play Movies & TV	168
Google Play Music	168
Google Search	171
Use Google Search.....	171
Use Google Voice Search.....	173
Instagram	173
Messenger	174
Milk Music	174
Music.....	174

My Files.....	178
OneDrive.....	178
OneNote.....	179
PowerPoint.....	179
SideSync.....	179
Video.....	179
Word.....	180
YouTube.....	180
1Weather.....	183
Facebook.....	183
Lookout.....	184
NASCAR Mobile.....	184
Pages Manager.....	184
Samsung+.....	184
Connectivity.....	185
Transfer Files Between Your Tablet and a Computer.....	185
Wi-Fi.....	186
Turn Wi-Fi On and Connect to a Wireless Network.....	187
Wi-Fi Settings.....	189
Disconnect Wi-Fi.....	191
Wi-Fi Direct.....	192
Bluetooth.....	194
Bluetooth Information.....	195
Enable Bluetooth.....	195
Pair Bluetooth Devices.....	197
Connect to a Paired Bluetooth Device.....	200
Share Information Using Bluetooth.....	201
Receiving Data via Bluetooth.....	203
Settings.....	205
Basic Settings.....	205
Wi-Fi Settings Menu.....	207
Bluetooth Settings.....	210
Hotspot Settings.....	212
Airplane Mode.....	217
Data Usage Settings.....	219

Mobile Networks Settings	221
More Connection Settings.....	222
Tethering Settings.....	224
Printing	226
Virtual Private Networks (VPN).....	228
Sounds and Notifications Settings	237
Sound Mode.....	238
Volume	239
Sounds	240
Vibrations	241
Sound Quality and Effects	243
Notifications.....	243
Display Settings	244
Motions and Gestures.....	246
Applications Settings.....	248
Application Manager	249
Default Applications	251
Calendar Settings	252
Camera Settings	254
Contacts Settings.....	255
Email Settings	257
Internet Settings.....	260
Music Settings.....	262
Weather Settings	263
Users.....	265
Wallpaper	265
Lock Screen and Security Settings	266
Lock Screen and Security Overview.....	266
Screen Lock	268
Disable the Screen Lock.....	275
Device Security	277
Privacy	279
Location Settings	280
Private Mode	284
Report Diagnostic Info	285

Accessibility Settings.....	286
Vision Accessibility Settings.....	287
Hearing Accessibility Settings.....	289
Dexterity and Interaction Settings.....	291
Configure Other Accessibility Settings.....	293
Account Settings	294
Backup and Reset.....	297
Language and Input Settings	301
Battery Settings.....	303
Power Saving Mode.....	305
Ultra Power Saving Mode	306
Storage Settings.....	308
Accessories.....	309
Date and Time Settings	309
Help	311
Activate This Device.....	312
System Update.....	313
About Device.....	314
For Assistance	317
Sprint Account Information and Help	317
Sprint Account Passwords.....	317
Manage Your Account	317
Sprint Support Services	318
Copyright Information.....	318
Index.....	319

Introduction

The following topics describe the basics of using this guide and your new tablet.

About the User Guide

Thank you for purchasing your new Samsung Galaxy Tab S2. The following topics explain how best to use this guide to get the most out of your tablet.

Before Using Your Tablet

Thoroughly read the Get Started guide and Important Information booklet that were packaged with your tablet for proper usage.

Accessible services may be limited by subscription contract conditions.

Descriptions in the User Guide

Note that most descriptions in this guide are based on your tablet's setup at the time of purchase. Unless otherwise noted, instructions begin from the tablet's home screen, which is displayed by pressing the Home key. Some operation descriptions may be simplified.

Screenshots and Key Labels

Screenshots in the user guide may appear differently on your tablet. Key labels in the user guide are simplified for description purposes and differ from your tablet's display.

Other Notations

In the user guide, the tablet may be referred to either as "tablet" or "device."

Access Instructions on Tablet

Whether you're new to Android or just new to your Galaxy Tab S2, your tablet can help you learn how to use it.

Access Help

Use the tablet's Help menu to learn about your tablet.

1. Press  to display the home screen.



2. From home, tap **Apps**  > **Settings**  > **Help** .
3. Tap a topic to view its contents, or tap **SEARCH** to search for a topic.

Get Started

The following topics give you all the information you need to set up your tablet and wireless service the first time.

Parts and Functions

These topics illustrate your tablet's primary parts and key functions.

Tablet Layout

The following illustration outlines your tablet's primary external features and buttons.



Part	Description
Back key 	Return to the previous screen, or close a dialog box, options menu, the notification panel, or keyboard.
Front camera	Take pictures and record videos while facing the screen, and video conference.
Headset jack	Plug in a headset for convenient, hands-free conversations.
Home key/fingerprint sensor	Return to the home screen. Press and hold to open Google Search/Google Now. Use to register fingerprints for security.

Part	Description
Light sensor	Use the ambient light level to adjust the screen brightness and contrast.
Microphone	Transmit your voice for tablet calls or record your voice or ambient sounds for voice recordings and videos.
Power/Lock key	Turn the tablet or screen on or off, or switch your tablet to silent mode, vibration mode, or airplane mode.
Rear camera	Take pictures and videos.
Recent Apps key 	Access recently used apps.
SD card	Location of the SD card.
SIM card	Location of the SIM card.
Speakers	Play sounds.
Touchscreen	Display information needed to operate your tablet, such as the call status, the Contacts list, and the date and time. Also provides one-tap access to all of your features and applications.
USB charger/accessory port	Connect the tablet to the charger via a USB cable.
Volume key	Adjust media volume.

CAUTION! Inserting an accessory into the incorrect jack may damage the tablet.

Charge the Battery

Follow these instructions to charge your tablet's battery using either the included charging head and USB cable or via a USB connection on your computer.

Note: This tablet has an integrated battery that cannot be removed by the user.

Battery Cautions

Storage: Avoid storing or leaving the tablet with no battery charge remaining. Saved information and settings may become lost or changed, or the tablet may become unusable. Charge once every six months before storing or leaving unused for a long period.

Charge Using the USB Charger

Use the charger that came with your tablet.

1. Plug the USB cable into the USB charger/accessory port on the bottom of your tablet.



2. Plug the other end of the USB cable into the charging head.
3. Plug the charging head into an electrical outlet.
4. After charging, disconnect the tablet from the charger.
 - Unplug the charging head from the outlet, and remove the USB cable from both the tablet and the charging head.

Charge Using a PC Connection

Before using a PC connection to charge your tablet, ensure that the computer is turned on. Depending on the type of connection, your tablet's battery may not charge.

1. Insert the small end of the USB cable into the USB charger/accessory port on the bottom of your tablet.



2. Insert the large end of the USB cable into a USB port on your computer.
3. After charging, remove the USB cable from both the tablet and the computer.

Turn Your Tablet On and Off

The instructions below explain how to turn your tablet on and off.

Turn Your Tablet On

- Press and hold the **Power/Lock** key.




- ❖ Your tablet will power on. Depending on the settings, you may see the Lock screen.
 - See [Lock and Unlock Your Screen](#) and [Screen Lock](#) for information about using the screen lock.
 - The first time you turn the tablet on, you will see the startup screens. See [Complete the Setup Screens](#) for details.
 - If your tablet is not yet activated, see [Activate Your Tablet](#) for more information.

Turn Your Tablet Off

1. Press and hold the **Power/Lock** key to open the tablet options menu.



2. Tap **Power off** to turn the tablet off.

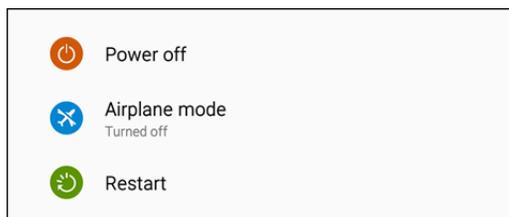

- ❖ Your tablet will power off.

Your screen remains blank while your tablet is off (unless the battery is charging).


Note: If your device is not responding, press and hold both the **Power/Lock** and **Volume Down** keys simultaneously for more than seven seconds to restart the device.

Use the Touchscreen

Your tablet's touchscreen lets you control actions through a variety of touch gestures.

Tap or Touch

When you want to type using the keyboard, select items onscreen such as application and settings icons, or press onscreen buttons, simply tap or touch them with your finger.

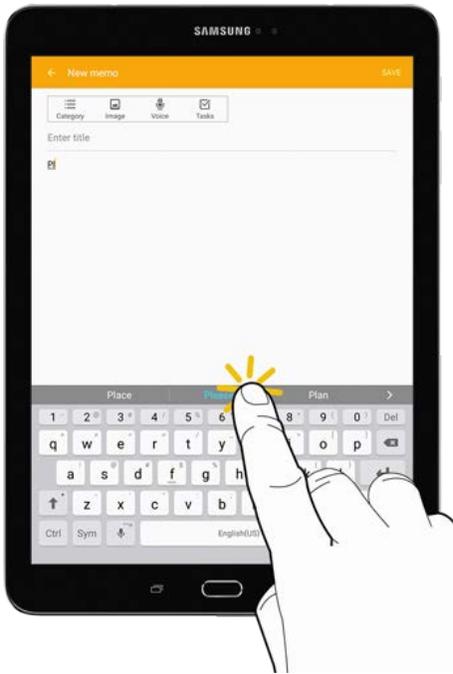

Touch and Hold

To open the available options for an item (for example, a contact or link in a Web page), touch and hold the item.




Swipe or Slide

To swipe or slide means to quickly drag your finger vertically or horizontally across the screen.




Drag

To drag, press and hold your finger with some pressure before you start to move your finger. While dragging, do not release your finger until you have reached the target position.

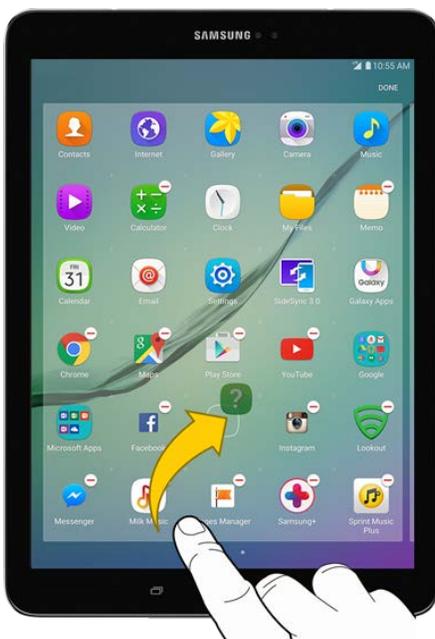

Flick

Flicking the screen is similar to swiping, except that you need to move your finger in light, quick strokes. This finger gesture is always in a vertical direction, such as when flicking the contacts or message list.

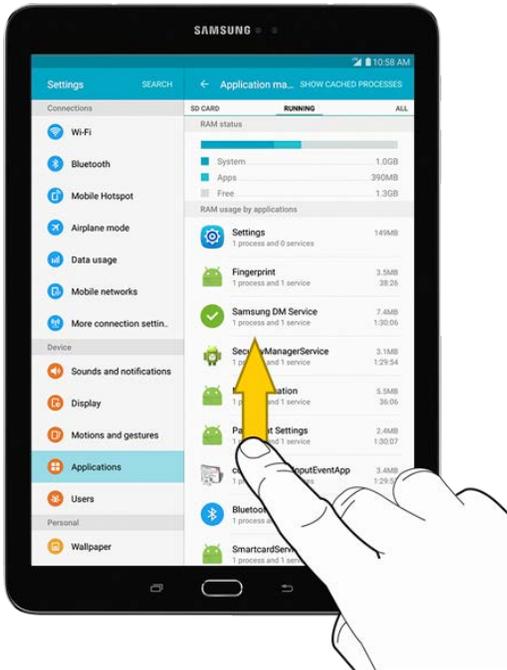

Rotate

For most screens, you can automatically change the screen orientation from portrait to landscape by turning the tablet sideways. When entering text, you can turn the tablet sideways to bring up a bigger keyboard. See [Enter Text](#) for more details.



Note: Screen rotation must be enabled for the screen orientation to automatically change. To enable screen rotation, slide your finger down from the status bar to display the Notification table, and then tap **Screen rotation** to enable the option.

Pinch and Spread

Pinch the screen by moving two fingers inward to zoom out, or spread by moving two fingers outward to zoom in.



Activate Your Tablet

Follow the instructions below to activate your tablet if it has not already been activated. Depending on your account or how and where you purchased your tablet, it may be ready to use or you may need to activate it on your Sprint account.

- If you purchased your tablet at a Sprint Store, it is probably activated and ready to use.
- If you received your tablet in the mail and it is for a new Sprint account or a new line of service, it is designed to activate automatically.
 - When you turn the tablet on for the first time, you should see a **Hands Free Activation** screen, which may be followed by a **PRL Update** screen and a **Firmware Update** screen. Follow the onscreen instructions to continue.
- If you received your tablet in the mail and you are activating a new tablet for an existing number on your account (you're swapping tablets), you can activate on your computer online or directly on your tablet.
 - **Activate on your computer:**
 - Go to sprint.com/activate and complete the online instructions to activate your tablet.
 - **Activate on your tablet:**

- Turn on your new tablet. (Make sure the old one is turned off.) Your tablet will automatically attempt Hands-Free Activation.
- Tap **Activate** to override auto-activation and start the manual activation wizard.
- Follow the onscreen prompts to complete the activation process.

If your tablet is still not activated, visit sprint.com/support for assistance. If you do not have access to the Internet, call Sprint Customer Service at **1-888-211-4727** from another tablet.

Tip: Do not press the **Power/Lock** key while the tablet is being activated. Pressing the **Power/Lock** key cancels the activation process.

Note: If you are having any difficulty with activation, visit sprint.com/support.

Complete the Setup Screens

The setup screens help you set up certain features and preferences on your tablet. Once your tablet has been turned on, you will see a Welcome message. You can then complete the setup process.

Note: You may be able to complete the setup screens before your tablet has been activated on your Sprint account.

1. At the Welcome screen, choose options, and then tap  to begin setup:
 - **Language:** Choose the default language for your tablet's operation.
 - **Accessibility:** Configure settings to access settings to improve the accessibility of your tablet's features if you are visually impaired or hard of hearing.
2. Follow the onscreen instructions to complete setup for each topic. Tap **Next**, or the right arrow, to move through the steps. You can skip options to continue to the Next one. During setup, you may see these options:

Note: Screens may vary based on the activation status of your tablet.

- **Wi-Fi:** By default, your tablet prompts you to use Wi-Fi when accessing data services. Tap a Wi-Fi access point to connect to it, or you can continue setup using your tablet's connection to the wireless network.
- **Terms and conditions:** Read the End User License Agreement (EULA) and consent for diagnostic and usage data. If you consent to provide diagnostic and usage data to Samsung, tap the check box. Tap **Next** to proceed, and then tap **Agree** to confirm that you understand and agree to the terms and conditions. If you do not agree to the EULA, you cannot continue with setup.
- **Hands Free Activation:** Automatically connect to Sprint network and set up voice and data services.
 - After Hands Free Activation completes, tap **OK** to continue.

- You may see a message indicating your tablet needs to restart. Tap **OK** again and wait for your tablet to restart.
 - **Add your account (Google):** Your tablet uses your Google Account to provide access to many features and apps. Complete the steps to sign in to your current Google Account, or sign up for a new Google Account right from your tablet. You can also skip signing in to your Google Account, or sign in later.
 - To sign in to an existing Google Account, you will need your account name (Gmail address) and password.
 - For both new and existing accounts, you will need to review and accept the Terms of Service and Privacy Policy by tapping **Accept** when prompted.
 - **Name:** Enter your First and Last name, to personalize Google features and apps.
 - **Protect your tablet:** Set up a screen lock to prevent others from using the tablet without your permission.
 - **Google services:** Select Google service preferences, including Backup & Restore, Location and Communication options.
 - **Samsung account:** Some apps and features use your Samsung account. You can sign in to your Samsung account, or follow the prompts to create a new account.
 - To sign in to or set up a Samsung account, you will have to review and agree to the Terms and Conditions by tapping **Agree** when prompted.
 - **Add fingerprint:** Register your fingerprint to unlock your device and sign in to services securely without entering your password.
3. Tap **Finish** to complete setup.
- Your tablet is now set up for use. If you skipped any part of the setup, you can access additional options through the Apps list or through Settings.

Note: You do not need to sign up for a Google Account to use your tablet. However, to download apps from the Google Play store app, you must link your tablet to a Google Account.

Basic Operations

The following topics outline basic features and operations of your tablet.

Basics

The following topics offer an overview of your tablet's basic operations.


Home Screen and Applications (Apps) List

Most of your tablet's operations originate from the home screen or the apps list.

1. From any screen, press the **Home** key to display the home screen.
2. Tap **Apps**  to display the apps list.



Home screen

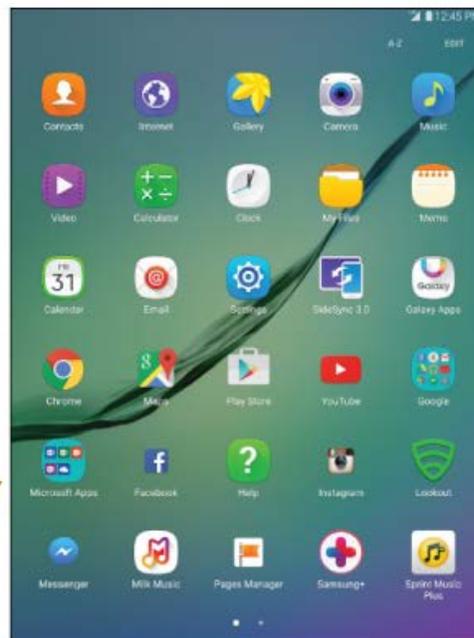

Apps list

For information about using the home screen, see [Home Screen Basics](#).

Select Options and Navigate Screens

Tap icons, keys, and other items to open or activate the assigned function.

- Tap the **Back** key  to return to the previous screen.

Recent Applications

You can display a list of recently used applications using the Recent Apps key.

- Tap the **Recent Apps** key  to view a list of recently used applications.


Tablet Settings Menu

You can customize your tablet's settings and options through the Settings menu.

- From home, tap **Apps**  > **Settings** .

– or –

Drag the notification panel down and tap **Settings** .

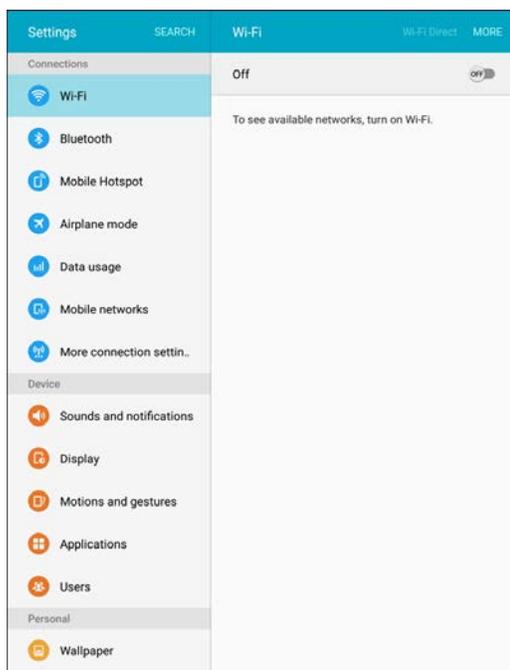


- ❖ The Settings menu displays.

For more information, see [Settings](#).

Portrait and Landscape Screen Orientation

The default orientation for your tablet's screen is portrait (vertical), but many apps will change to landscape orientation (widescreen) when you rotate the tablet sideways.

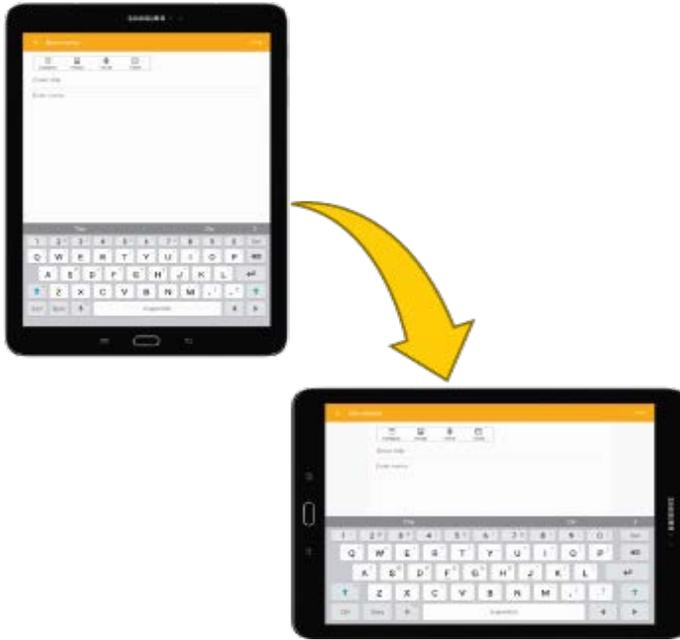

Turn Screen Rotation On or Off

1. Open the notification panel by dragging down from the top of the screen.
2. Tap **Screen rotation**  to turn the option on or off.
 - You may need to scroll left or right to see the Screen rotation option.
 - If the Screen rotation option is not available, tap **Edit**  to display the full options list.
 - Not all screens will adjust for landscape orientation.

Capture Screenshots

You can use your tablet's Power/Lock and Home keys to capture screenshots.

- Press and hold the **Power/Lock** key and **Home** key at the same time to capture a screenshot of the current screen.
- ❖ The current screenshot will be captured and stored in the Screenshots album in the tablet's Gallery. From home, tap **Apps**  > **Gallery** .

Depending on your settings, you may also capture a screenshot by swiping your palm across the screen from side to side.

To set up palm swipe screen capture:

1. From home, tap **Apps**  > **Settings** .
2. Tap **Motions and gestures**  and then tap **ON/OFF** next to **Palm swipe to capture**.

Applications

The following topics describe how to access the applications (apps) list and launch apps on your tablet.

Launch Applications

All installed apps can be accessed and launched from the apps list.

1. From home, tap **Apps** .



- ❖ The apps list opens.
2. Tap an app icon to launch the corresponding application.
- ❖ The application opens.

Apps List

The apps list expands to include any apps you download and install on your tablet. The following table outlines the primary apps that have been preinstalled on your tablet.

App	Function/Service
 1Weather	Receive real-time local weather information at any location in the world. Access 7-day and hourly weather forecasts for your area.
 Calculator	Perform basic and advanced mathematical calculations.

App	Function/Service
 Calendar	Use Calendar to create and manage events, meetings, and appointments, organize your time, and be reminded of important events.
 Camera	Take pictures and record videos using the front and rear cameras.
 Chrome	Browse the Internet using Google's Chrome Web browser. Located in the Google folder in the apps list.
 Clock	Set alarms, view time in time zones around the world, use a stopwatch, set a timer, and use your tablet as a desk clock.
 Contacts	Store and manage contacts from a variety of sources, including contacts you enter and save directly in your tablet as well as contacts synchronized with your Google account, compatible email programs (including Exchange Server), and your Facebook friends.
 Drive	Store, sync, and access your data across multiple devices with Google Drive's cloud storage. Located in the Google folder in the apps list.
 Email	Send and receive email from a variety of email service providers.
 Excel	Create and share spreadsheets quickly and easily with Microsoft Excel. Located in the Microsoft Apps folder in the apps list.
 Facebook	Keep up with friends and family with the Facebook app. Share updates, photos, and videos, as well as text, chat, and play games.
 Galaxy Apps	Discover apps designed exclusively for your Galaxy device.
 Gallery	View and edit pictures and watch videos that you have taken with your tablet's camera or downloaded.
 Gmail	Send and receive messages using Google's Gmail service. Located in the Google folder in the apps list.
 Google	Search the Internet using Google Search. Located in the Google folder in the apps list.
 Google Settings	Use Google Settings to manage your Google apps and account settings. Located in the Google folder in the apps list.
 Hangouts	Instant message with your friends and family using Google Hangouts. Located in the Google folder in the apps list.

App	Function/Service
 Help	View tips and guidelines to help you use your tablet.
 Instagram	Capture and share photos and videos with your friends. Customize what you capture, and then share it on your feed or post it directly to your friends. Located in the Social folder in the apps list.
 Internet	Browse the Internet using a full-featured browser.
 Lookout	Lookout Mobile Security provides key security options, such as anti-virus and anti-malware technology, a lost and stolen device locator service, an application privacy adviser, and a backup service.
 Maps	Use Google Maps to determine your current location with or without GPS, get driving and transit directions, and find phone numbers and addresses for local businesses.
 Memo	Organize your life by creating, editing, and managing memos. Located in the Samsung folder in the apps list.
 Messenger	Instantly reach your friends and family with Facebook Messenger. Located in the Social folder in the apps list.
 Milk Music	Exclusive to Galaxy owners, Milk Music is a radio service that gives you more of the music you love, curated by top DJs and industry pros and all for free. Located in the Samsung folder in the apps list.
 Music	Use Music to browse your music library, play songs, and create playlists. You can also set songs as alarm tones.
 My Files	Manage your sounds, images, videos, Bluetooth files, Android files, and other data in one convenient location. Located in the Samsung folder in the apps list.
 NASCAR Mobile	NASCAR Mobile is designed to bring you what you, our fans, want directly to your Android device. Follow NASCAR News, Video Highlights, and immerse yourself even further into the NASCAR experience with driver informational stats, plus more.
 OneDrive	OneDrive gives you free online storage for all your personal files so you can get to them from your Android device, computer, and any other devices you use. Located in the Microsoft Apps folder in the apps list.

App	Function/Service
 OneNote	Stay organized using text, pictures, or audio notes. Create Quick Notes or review and edit shared OneNote notebooks using OneDrive. Located in the Microsoft Apps folder in the apps list.
 Pages Manager	The Pages Manager App lets you manage up to 50 Pages from your smartphone or tablet. You can check Page activity, share with your audience and see insights.
 Photos	View photos and videos on your tablet, and sync them with your Google+ account. Located in the Google folder in the apps list.
 Play Movies & TV	Google Play Movies & TV allows you to watch movies and TV shows purchased on Google Play. You can stream instantly on your Android tablet or download so you can watch from anywhere, even when you are not connected. Located in the Google folder in the apps list.
 Play Music	Use the Google Play Music app to browse, shop, and play back songs purchased from Google Play as well as songs you have loaded from your own music library. Located in the Google folder in the apps list.
 Play Store	The Google Play store app is the place to go to find new Android apps, games, movies, music, and books for your tablet. Choose from a wide variety of free and paid apps ranging from productivity apps to games.
 PowerPoint	Create and share presentations quickly and easily with Microsoft PowerPoint. Located in the Microsoft Apps folder in the apps list.
 Samsung+	Get live help, discover new features, and unlock promotions for your Samsung device.
 Settings	Configure settings and options on your tablet.
 SideSync 3.0	SideSync is a PC-Mobile solution that enables the screens, windows, and data to be shared easily between a PC and Samsung Android Device.
 Sprint Music Plus	Purchase, download, and play music and tones for your tablet.
 Video	View videos on your tablet.
 Voice Search	Search the Internet and your tablet using voice commands. Located in the Google folder in the apps list.
 Word	Create and share word processing documents quickly and easily with Microsoft Word. Located in the Microsoft Apps folder in the apps list.


App	Function/Service
	YouTube is a video sharing website on which users can upload and share videos. The site is used to display a wide variety of user-generated video content, including movie clips, TV clips, and music videos, as well as video content such as video blogging, informational shorts, and other original videos.

Note: Available apps are subject to change.


Phone Number

Follow the instructions below to display your tablet's wireless phone number.


1. From home, tap **Apps**  > **Settings** .

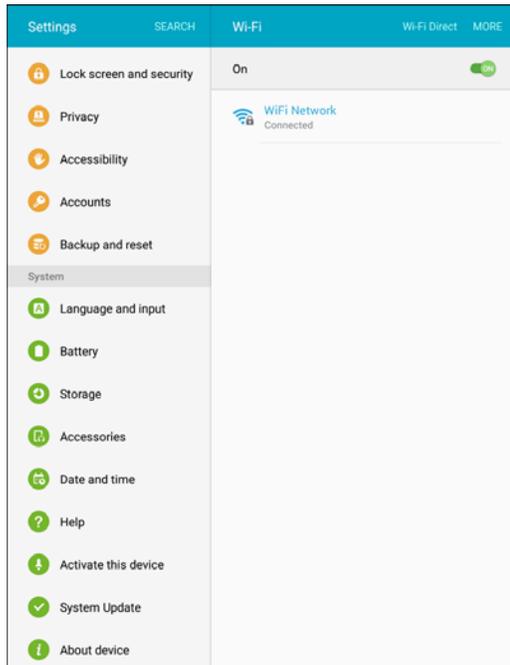

2. Tap **About device** .

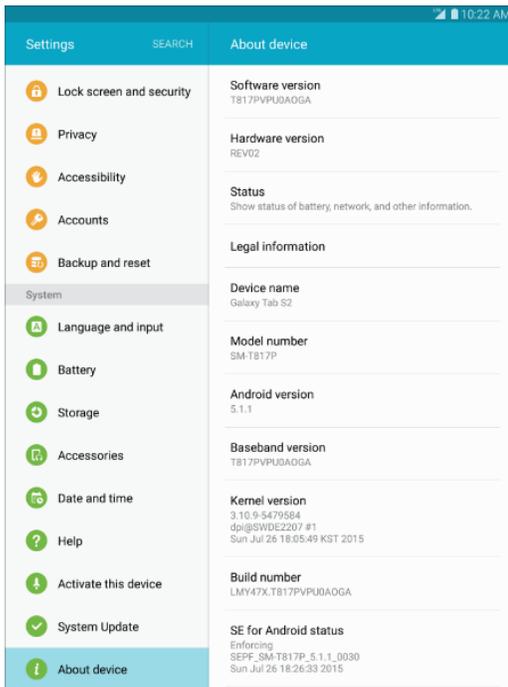

3. Tap **Status > Sim card status**.

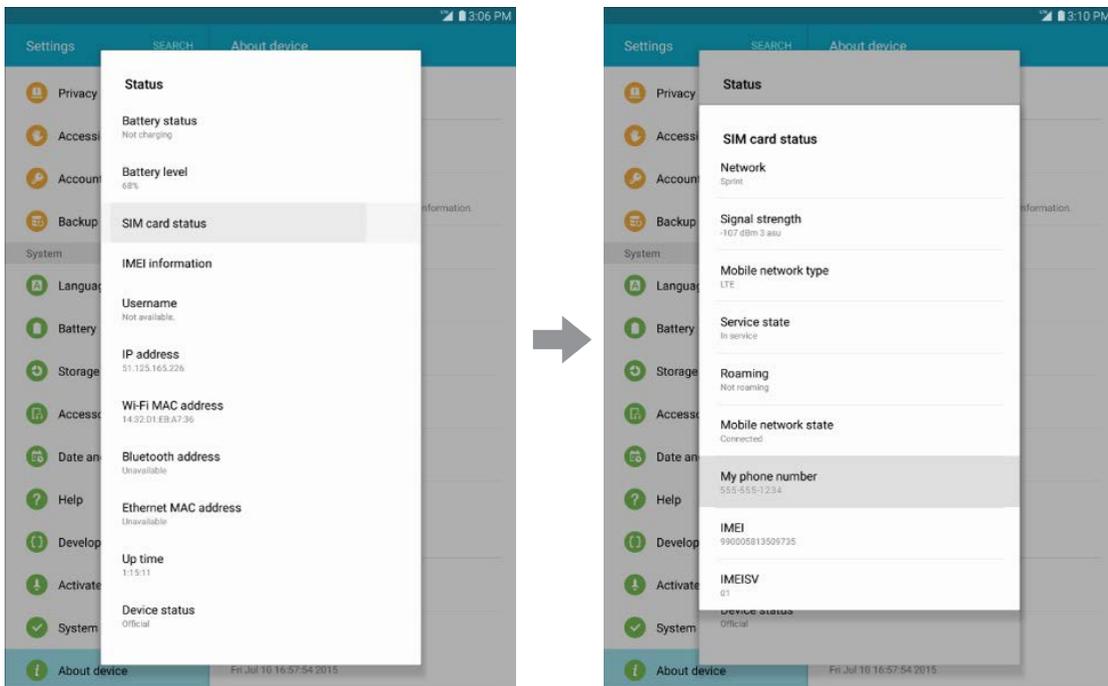


❖ You will see the number listed under **My phone number**.

Airplane Mode


Airplane mode turns off all functions that emit or receive signals, while leaving your tablet on so you can use apps that don't require a signal or data.

To turn on airplane mode:

1. Press and hold the **Power/Lock** key to display the device options menu.

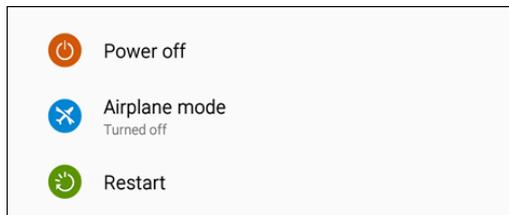

2. Tap **Airplane mode** > **Turn on** to turn Airplane mode on.

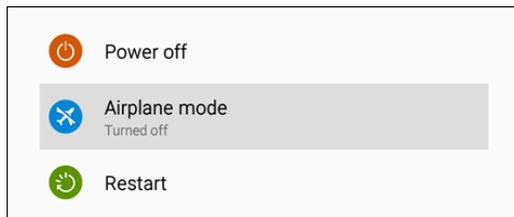


❖ Your tablet is now in airplane mode. An airplane mode icon  displays on the status bar.


Tip: You can also access Airplane mode through the notification panel. Drag the status bar down to reveal the notification panel, slide the Quick settings buttons to the left, and then tap **Airplane mode**  to turn Airplane Mode on.

To turn off airplane mode:

1. Press and hold the **Power/Lock** key to display the device options menu.

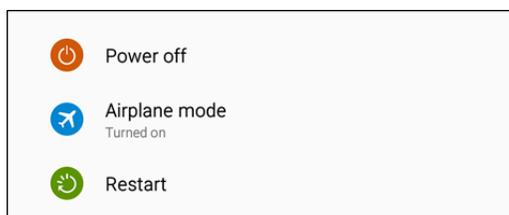

2. Tap **Airplane mode**.

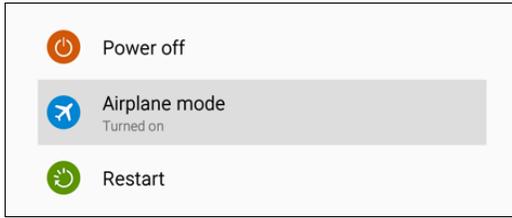

- ❖ Your tablet's wireless connection features are now restored.

Tip: You can also access Airplane mode through the notification panel. Drag the status bar down to reveal the notification panel, slide the Quick settings buttons to the left, and then tap **Airplane mode**  to turn Airplane Mode off.

Enter Text

You can type on your tablet using the touchscreen Samsung keyboard or Google voice typing.

Samsung Keyboard

Use the touchscreen Samsung keyboard for entering text. The keyboard appears automatically when you tap a text entry field, and can be used in either portrait or landscape mode. You can also use the Google Voice typing option to enter text using your voice (see [Google Voice Typing](#) for details).

The Samsung keyboard offers a traditional QWERTY keyboard setup for entering text by tapping keys (like on a computer), along with enhancements and options that allow you to enter text faster and more accurately, such as continuous key input, personalized usage dictionaries, and more.



Portrait



Landscape

Note: Depending on which app you're using (Messages, Email, etc.), the keyboard appearance may differ.

Assigning the Samsung Keyboard for Text Entry

If you have multiple text input methods installed on your device, you can select the Samsung keyboard to be your default text input method from Settings, or you can choose it at any time while entering text.

Note: The Samsung keyboard is the default text input method on your tablet. Additional keyboards and input methods are available for download at the [Google Play store](#). See [Google Play Store](#).

To select the Samsung keyboard:

- From home, tap **Apps**  > **Settings**  > **Language and input**  > **Default keyboard**, and then choose **Samsung keyboard**.

While entering text:

1. Drag down from the top of the screen to open the notification panel.
2. Tap **Select keyboard**, and then choose Samsung keyboard.

Use Samsung Keyboard to Enter Text

- Tap keys to enter text. While entering text, use these options:
 - Tap  to delete incorrect characters. Touch and hold  to delete a whole word or field.
 - Tap  to change the case of the text (the arrow will turn blue). Tap  twice to switch to all capitals (the key will turn blue).
 - Tap  to switch to a symbols keyboard, to enter symbols. There are two symbol keyboards.
 - Touch and hold  for quick access to cut (x), copy (c), paste (v), undo (z), redo (y), and select all (a).
 - Touch and hold  to switch to Google Voice typing to enter text by speaking. See [Google Voice Typing](#).
 - If you have more than one language selected in Samsung Keyboard settings, you can swipe your finger over  to switch between languages.

Configure Samsung Keyboard

- From home, tap **Apps**  > **Settings**  > **Language and input**  > **Samsung keyboard**.

Google Voice Typing

Google Voice typing uses Google voice recognition to convert speech to text.

Use Google Voice Typing to Enter Text


1. While entering text, drag down from the top of the screen to open the notification panel, and then tap **Select keyboard** > **Google voice typing**.

– or –

Tap  on the Samsung keyboard.

– or –

Touch and hold  on the Samsung keyboard, and then tap .

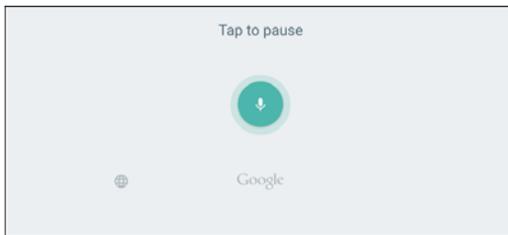

2. Speak into the microphone and watch your text being entered onscreen.
3. If the text is incorrect, tap **Delete**.
4. Once you have completed entering your text, tap . The keyboard will reappear.

Note: You can assign a new language to Google voice typing. Tap  and tap a language to select it. To add more languages, tap  > **Settings** > **Voice** > **Language**, tap the language(s) you want to add, and then tap the **Back** key .

Configure Google Voice Typing

- From home, tap **Apps**  > **Settings**  > **Language and input**  > **Google voice typing**.

Tips for Editing Text

Your tablet gives you many options to make entering text easier, including copying, cutting, and pasting text, using voice-to-text input, customizing the user dictionary, using predictive text, and more.

- Double-tap text to highlight it, and then select from the following options:
 -  **Select all:** Highlight all the text in the field.
 -  **Cut:** Remove the selected text and save it to the clipboard.
 -  **Copy:** Copy the selected text to the clipboard.
 -  **Paste:** Insert the last copied or cut text into the current field.
 -  **Clipboard:** Display the clipboard to choose previously cut or copied text.
 -  **Dictionary:** Access your personal dictionary.

Google Account

You will need a Google Account to access several tablet features such as Gmail, Google Maps, Hangouts, and the Google Play applications. Before you are able to access Google applications, you must enter your account information. These applications sync between your tablet and your online Google Account.

! Google Account Cautions

Be sure not to forget your Google Account ID or password.

Create a Google Account

If you do not already have a Google Account, you can create one online or by using your tablet.

Note: You can also create and sign into your Google/Gmail account through your tablet's Setup application.


Note: Although you need a Gmail account to use certain features of your tablet, such as Google Play, you do not need to use Gmail as the default account for your tablet.

Create a Google Account Online


1. From a computer, launch a Web browser and navigate to google.com.
2. On the main page, click **Sign in**.
3. Click **Create an account**, and then follow the prompts to create your free account.
4. Look for an email from Google in the email box you provided, and respond to the email to confirm and activate your new account.

Create a Google Account Using Your Tablet



1. From home, tap **Apps**  > **Settings**  > **Accounts** .

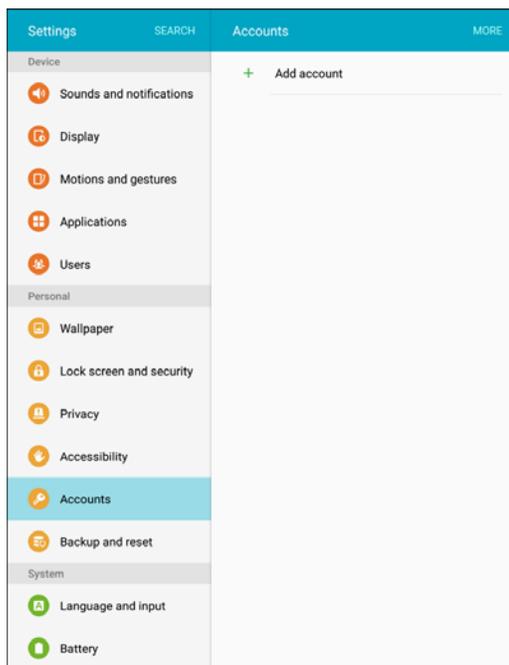


2. Tap **Add account**.

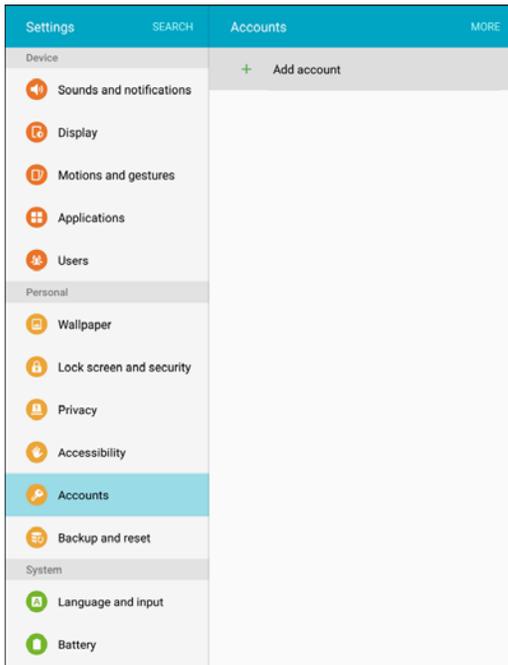


3. Tap **Google** > **Or create a new account**.

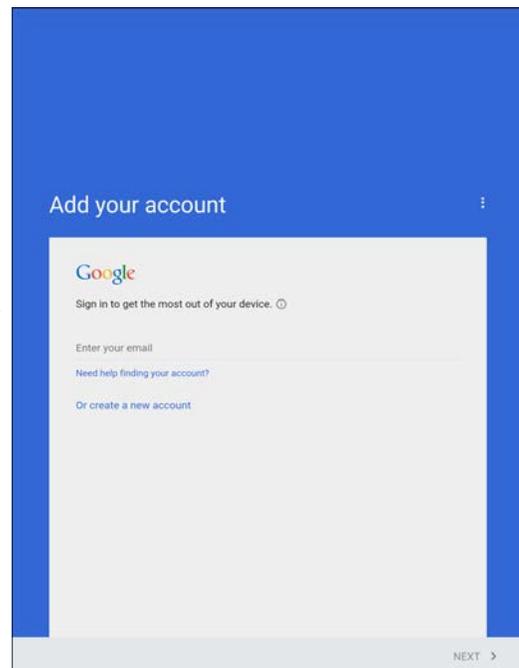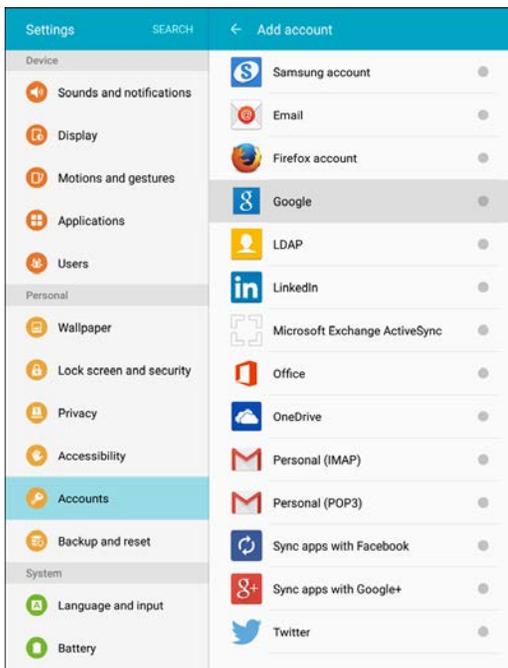


4. Enter your **First name** and **Last name**, and then tap **Next**.

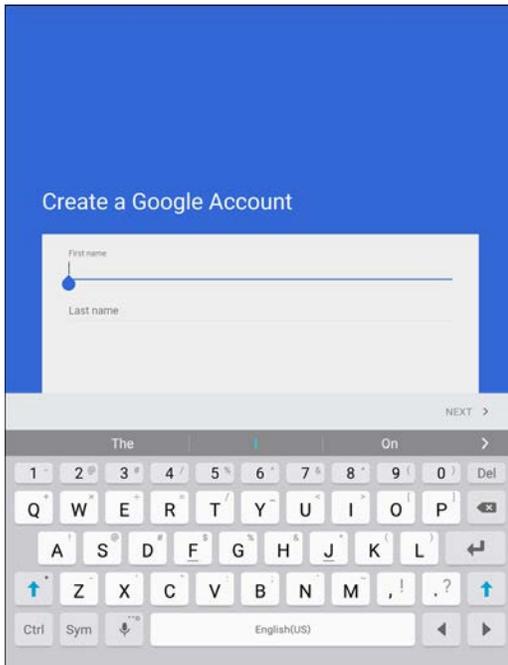


5. Enter a desired **Username**, and then tap **Next**.

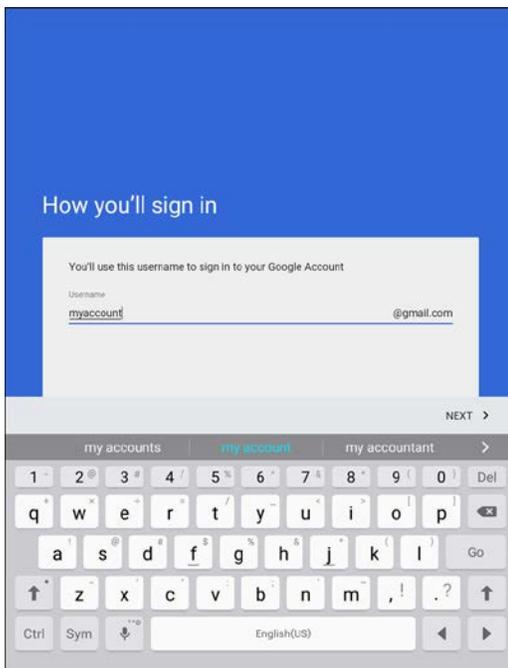

- When prompted, enter and re-type a password. Then tap **Next**.

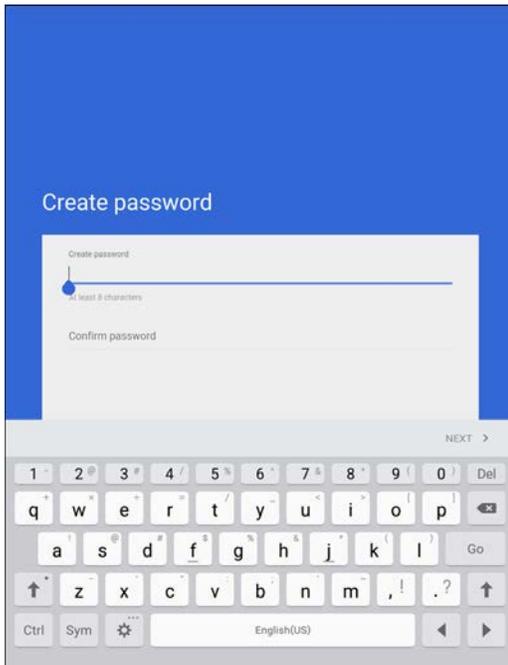


- Enter a valid phone number to help you recover your Google Account and password if you ever forget it, and then tap **Next**.

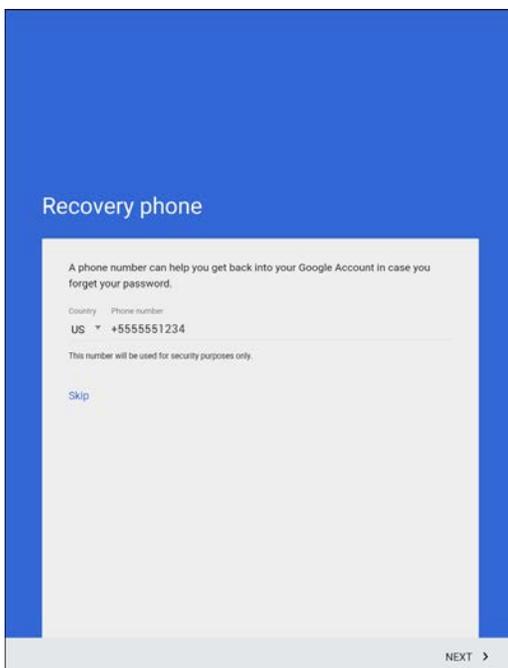

Note: When setting up a new Google Account, either on your tablet or online, it may prompt you to add a secondary email address. Enter a second Gmail address or any other email address from which you currently send and receive email. This address is used to authenticate your account should you ever


encounter problems or forget your password. It is strongly encouraged for Android users so you can regain access to Google services and purchases on your tablet.

8. Read the Google Terms of Service, Privacy Policy, and other legal documents, and then tap **I agree**.

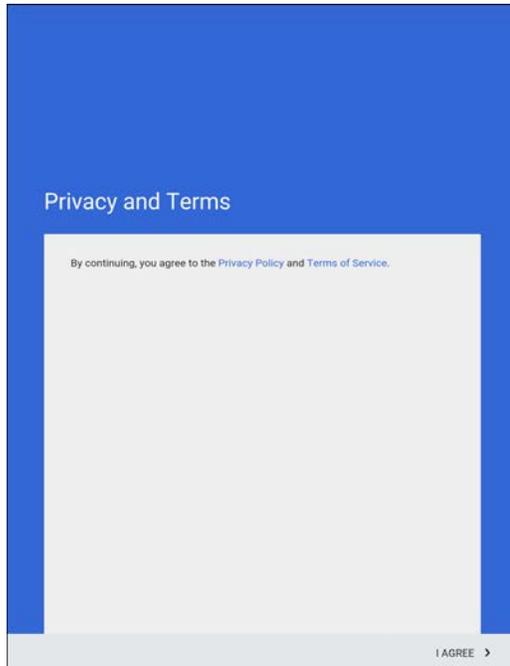


- ❖ Your tablet connects with the Google servers and displays your account information.


9. Tap **Next**.

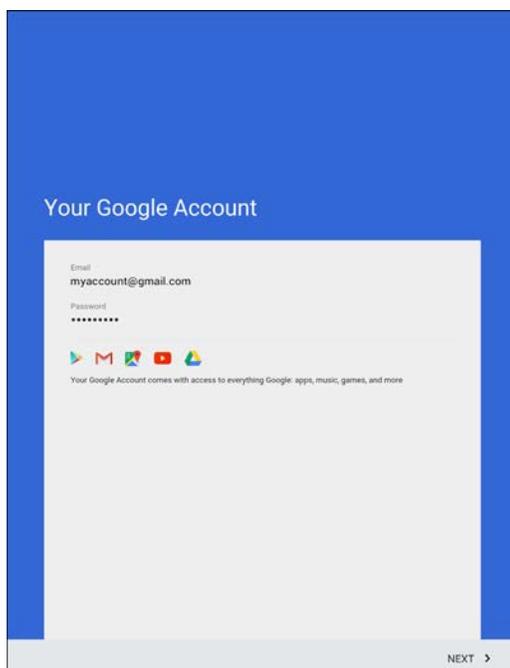

10. Configure your Google data backup and communication, and then tap **Next**.

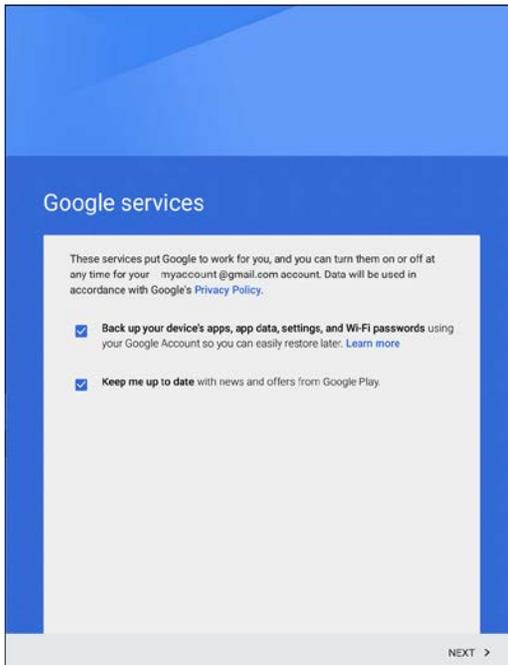


11. If desired, you can set up payment options for purchases through the Google Play store, and then tap **Next**.

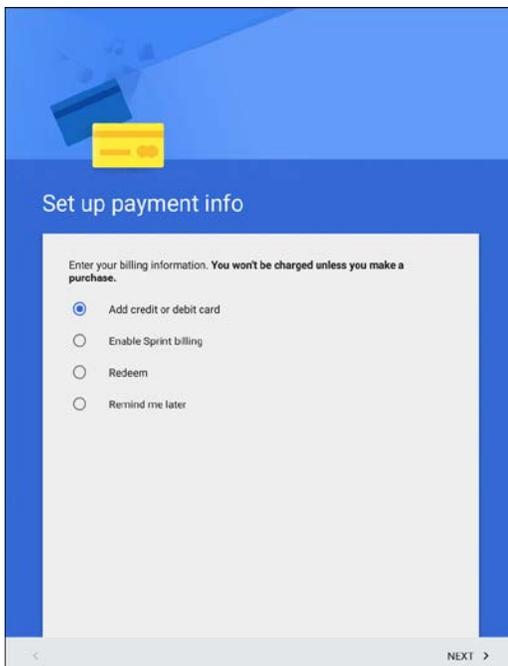

❖ You are signed in to your new Google Account.


- ❖ Your Google account is listed in **Apps**  > **Settings**  > **Accounts** .

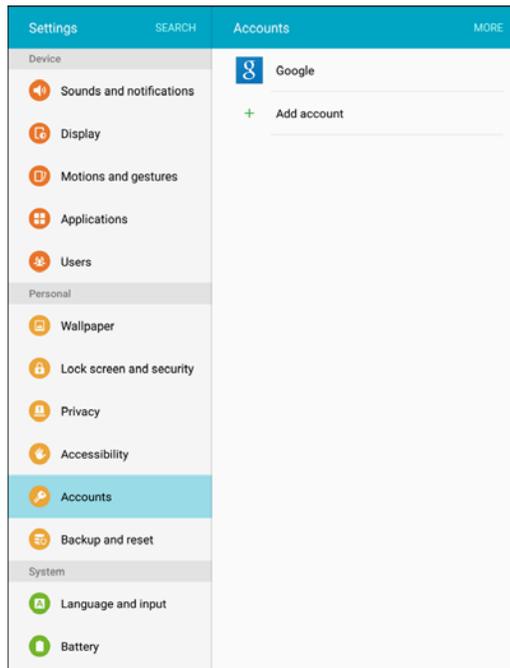


Sign In to Your Google Account

If you have a Google Account but have not yet signed in with your tablet, follow these instructions to sign in to your Google Account.


1. From home, tap **Apps**  > **Settings**  > **Accounts** .

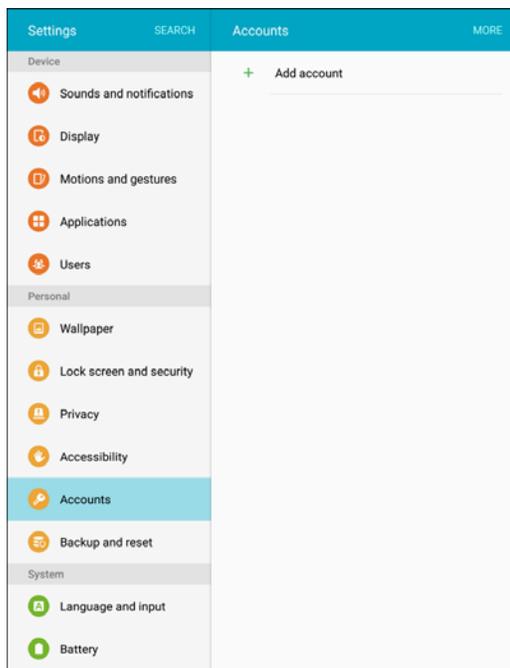


2. Tap **Add account**.

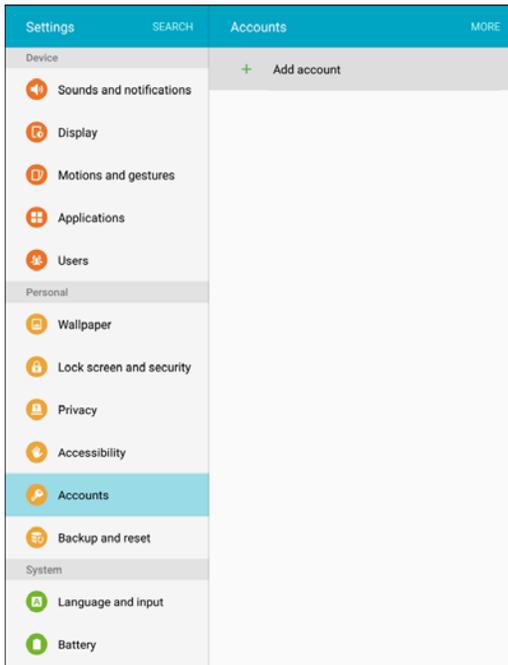


3. Tap **Google**.

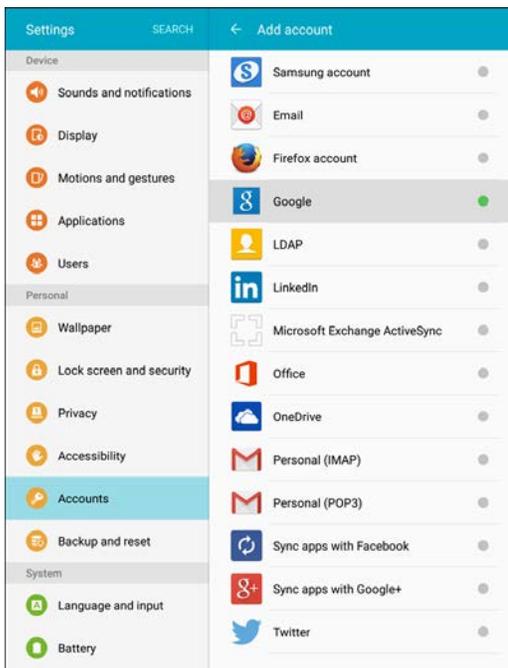


4. Tap **Enter your email**, enter your Gmail address, and then tap **Next**.

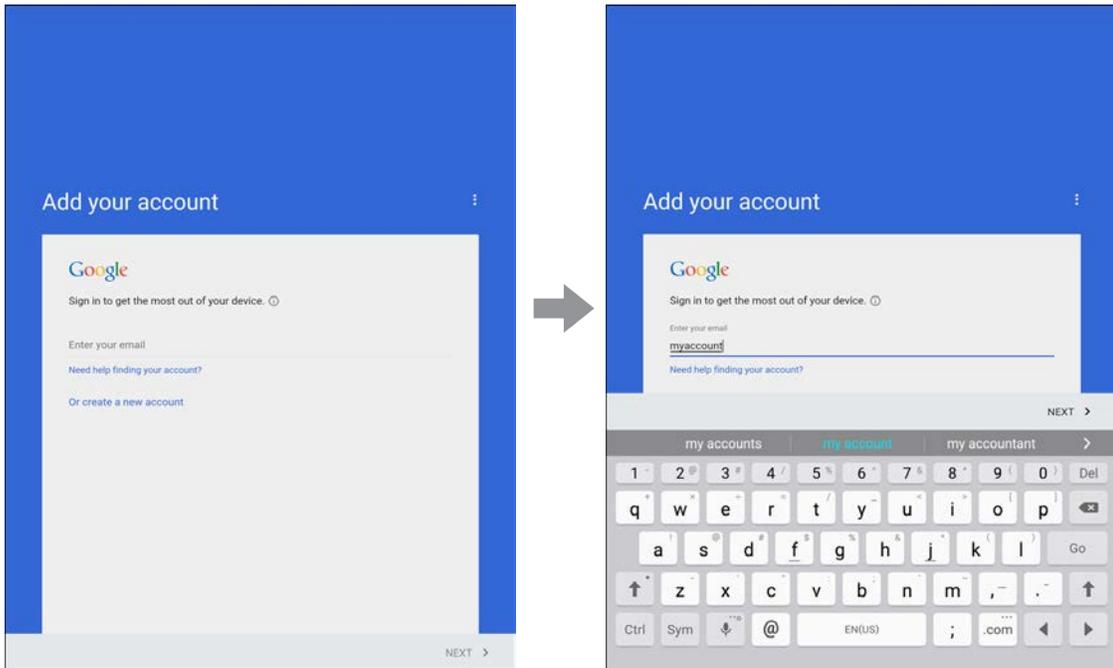


5. Enter your password, and then tap **Next**.

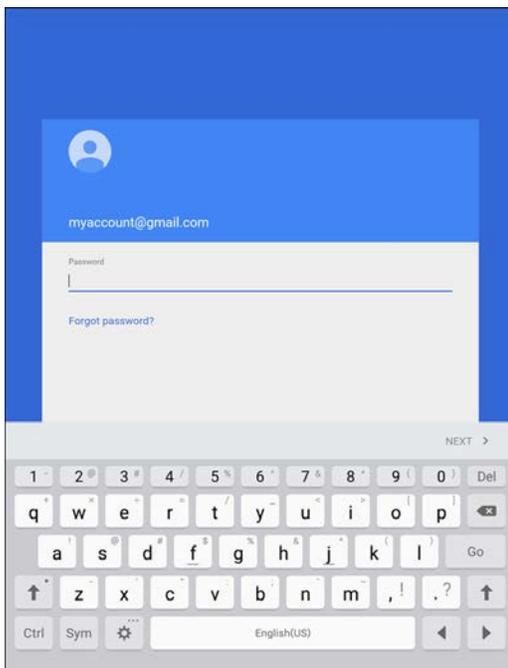


6. Read the Google Terms of Service, Privacy Policy, and other legal documents, and then tap **Accept**.

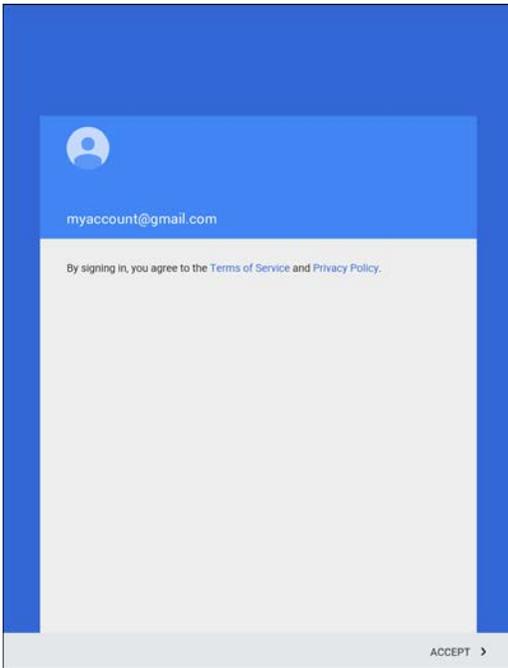


7. Configure your Google data backup and communication, and then tap **Next**.

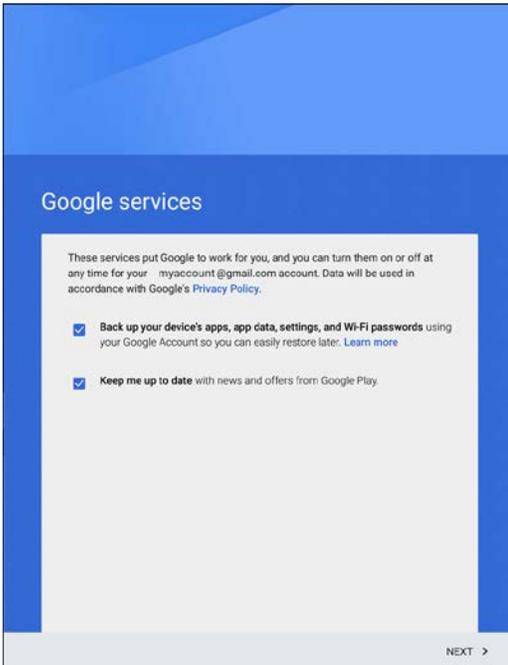

8. Set up payment information for use in the Google Play store, and then tap **Next**.

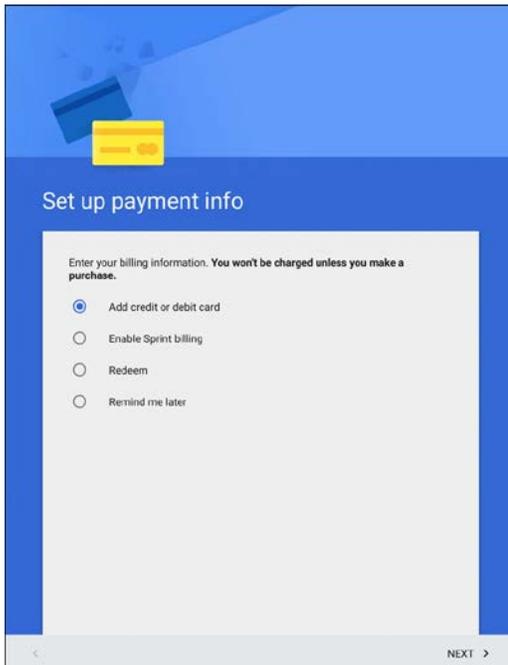

- ❖ You are now signed in to your Google Account, and your tablet will start synchronizing with your Google Account.
- ❖ Your Google account is listed in **Apps**  > **Settings**  > **Accounts** .

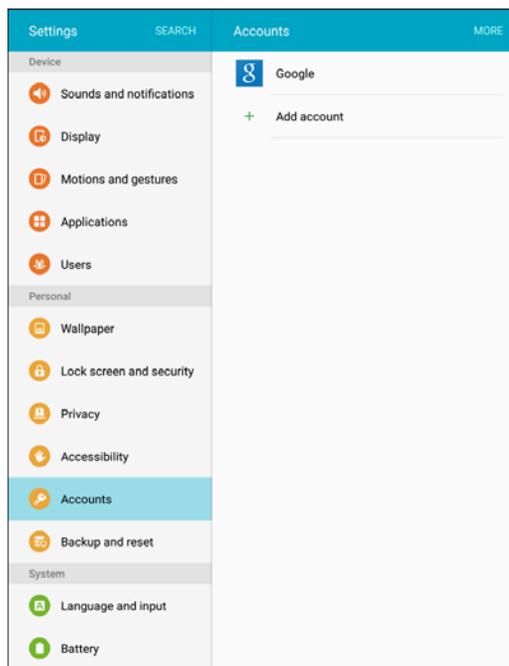

Google Play Store

Google Play is the place to go to find new Android apps, books, movies, and music for your tablet. Choose from a wide variety of free and paid content ranging from productivity apps and games, to bestselling books, blockbuster movies, and music. When you find what you want, you can easily download and install it on your tablet.

To access the Google Play store app, you must first connect to the Internet using your tablet's Wi-Fi or mobile data connection and sign in to your Google Account. See [Browser](#) and [Sign In to Your Google Account](#) for details.

Installing Applications

Many different kinds of applications can be installed on your tablet from Google Play (provided by Google Inc.). Sprint is not responsible in any way for user-installed applications (quality, reliability, legality, fitness for a purpose, credibility, accuracy, etc.) or resulting malfunctions (viruses, etc.).

Important: Our policies often do not apply to third-party applications. Third-party applications may access your personal information or require us to disclose your customer information to the third-party application provider. To find out how a third-party application will collect, access, use, or disclose your personal information, check the application provider's policies, which can usually be found on their website. If you are not comfortable with the third-party application's policies, don't use the application.

Find and Install an App

When you install apps from Google Play app and use them on your tablet, they may require access to your personal information (such as your location, contact data, and more) or access to certain functions or settings of your tablet. Download and install only apps that you trust.

1. From home, tap **Apps**  > **Play Store** .
2. When you open the Google Play store app for the first time, the Terms of Service window will appear. Tap **Accept** to continue.
3. Browse through the categories (**Apps, Games, Movies & TV, Music, Books, or Newsstand**), find an item you are interested in, and tap the name.



- Browse through featured apps. Scroll through the list of featured apps when you open Google Play.
 - Search for an app. Tap the **Google Play** search field, enter the name or type of app you are looking for, and then tap  on the keyboard.
4. Tap an app to read a description about the app and user reviews.
 5. Tap **Install** (for free applications) or the price (for paid applications).

Note: If you did not set up a payment option during tablet setup or when adding your Google Account, you will be prompted to add a payment method when making a purchase from Google Play.

6. The subsequent screen notifies you whether the app will require access to your personal information or access to certain functions or settings of your tablet. If you agree to the conditions, tap **Accept** (for free apps) or **Accept** and then **Buy** (for paid apps) to begin downloading and installing the app.

❖ The selected app is downloaded and installed on your tablet.

Warning: Read the notification carefully! Be especially cautious with applications that have access to many functions or a significant amount of your data. Once you tap **OK** on this screen, you are responsible for the results of using this item on your tablet.

Purchasing Applications

Purchase apps at your own risk. Sprint is not responsible for any harm to you or third parties resulting from the use of purchased applications.

Request a Refund for a Paid App

If you are not satisfied with an app, you can ask for a refund within 15 minutes of the purchase. Your credit card is not charged and the app is uninstalled from your tablet.

If you change your mind, you can install the app again, but you can't request a refund a second time.

1. From home, tap **Apps**  > **Play Store** .
2. Tap **Menu**  > **My apps**.
3. Tap the app to uninstall for a refund. The details screen for the app opens.
4. Tap **Refund**, and then tap **Yes** to confirm. Your app is uninstalled and the charge is cancelled.


Update an App

Depending on your settings, many apps will update automatically, or you can update apps directly from the Play Store app.


Update an App Directly

1. From home, tap **Apps**  > **Play Store** .

2. Tap **Menu**  > **My apps**.

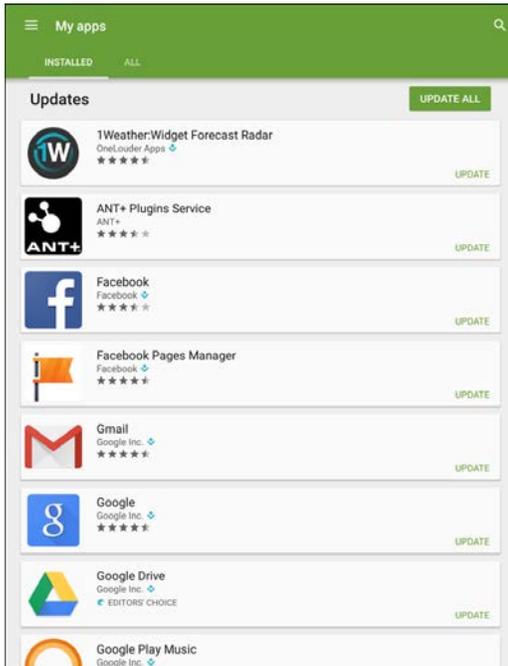

3. Tap the app you want to update, and then tap **Update** > **Accept**.

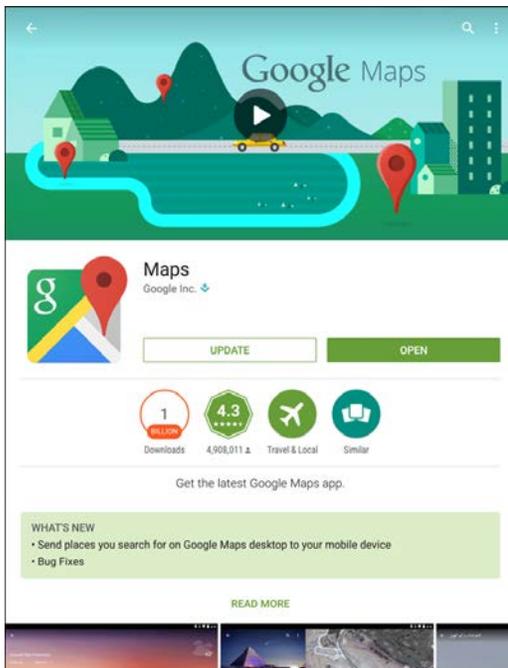


- ❖ The app update is downloaded and installed.


Set Automatic App Updates

1. From home, tap **Apps**  > **Play Store** .

2. Tap **Menu**  > **My apps**.

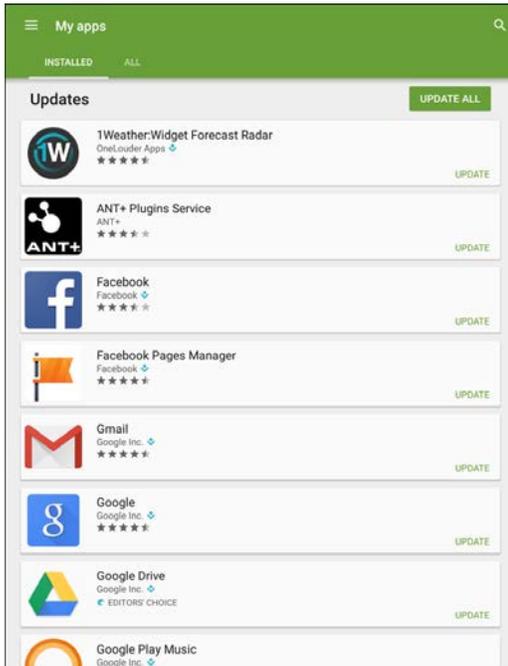

3. Tap the app you want to set for auto-update, and then tap **More options**  > **Auto-update**.

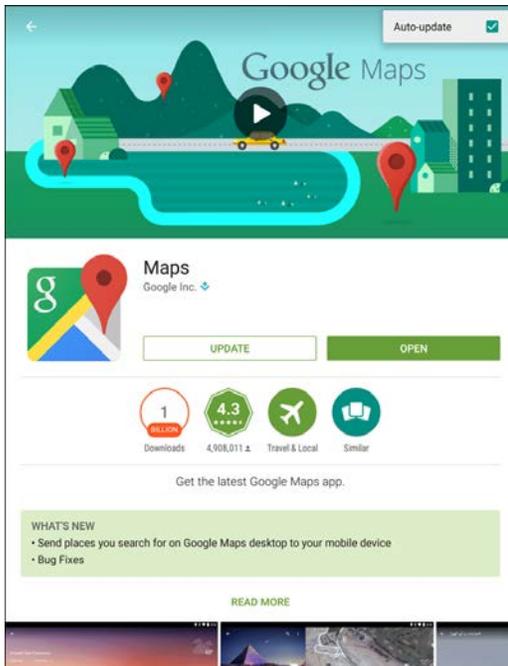


❖ The app is set to update automatically whenever an update becomes available.

Note: Automatic updates are unavailable for some apps.


Uninstall an App

You can uninstall any app that you have downloaded and installed from Google Play.

1. From home, tap **Apps**  > **Play Store** .
2. Tap **Menu**  > **My apps**.

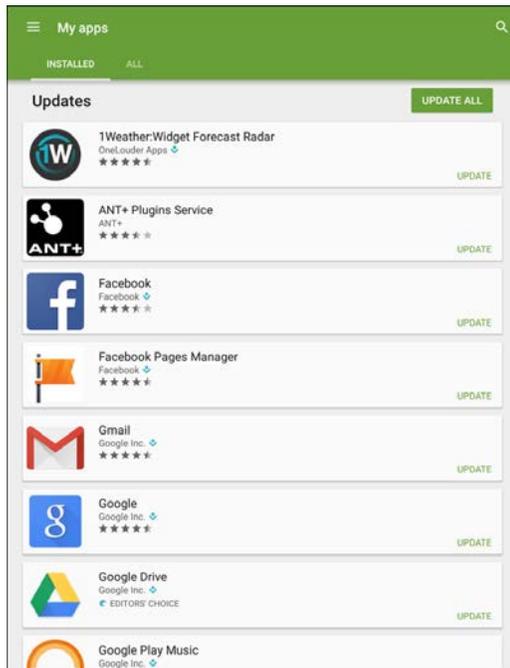

3. On the Installed screen, tap the app you want to uninstall, and then tap **Uninstall** > **OK**.

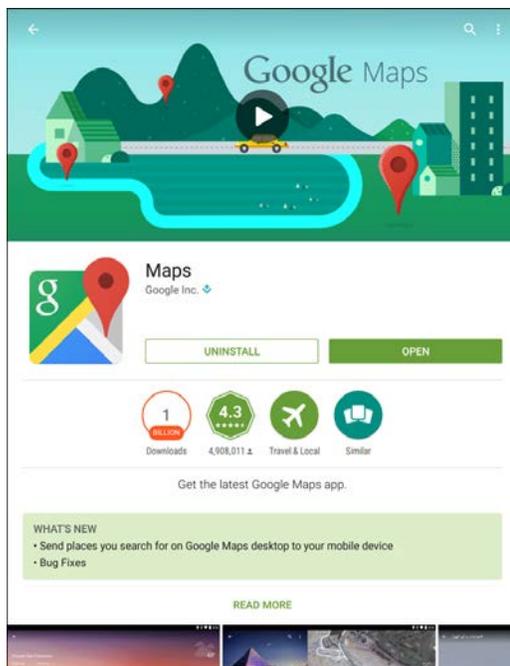


- ❖ The app is uninstalled and removed from your tablet.

Get Help with Google Play

The Google Play store app offers an online help option if you have questions or want to know more about the app.

1. From home, tap **Apps**  > **Play Store** .
2. Tap **Menu**  > **Help & feedback**.

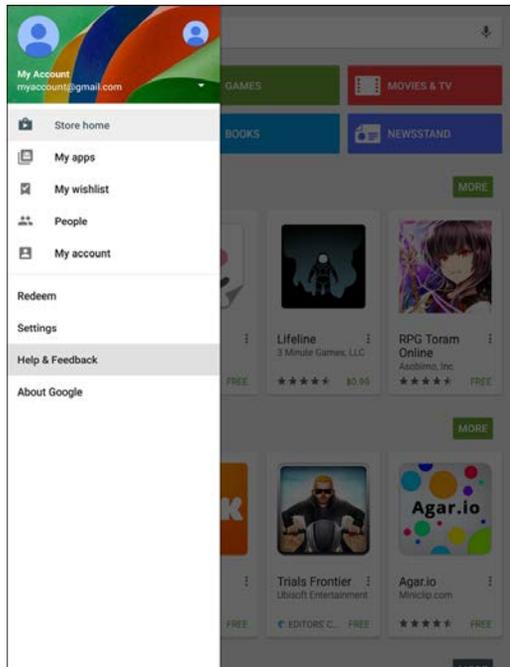

- ❖ The Web browser will take you to the Google Play Help Web page, where you will find comprehensive, categorized information about Google Play.

Lock and Unlock Your Screen

Your tablet allows you to quickly turn the screen off when not in use and to turn it back on and unlock it when you need it.

Turn the Screen Off When Not in Use

- To quickly turn the screen off, press the **Power/Lock** key. Pressing the **Power/Lock** key again or receiving an incoming call will turn on your tablet screen and show the Lock screen.



To save battery power, the tablet automatically turns off the screen after a certain period of time when you leave it idle. You will still be able to receive messages and calls while the tablet's screen is off.

Note: For information on how to adjust the time before the screen turns off, see [Display Settings](#).

Turn the Screen On and Unlock It

1. To turn the screen on, press the **Power/Lock** key.



- ❖ The Lock screen appears.

2. Swipe your finger across the screen to unlock it.



- ❖ The screen is unlocked.
 - If you have set up a screen lock, you will be prompted to draw a pattern, enter a password or PIN, or scan your fingerprint. See [Screen Lock](#).

Update Your Tablet

From time to time, updates may become available for your tablet. You can download and apply updates through the **Settings > System update** menu.

! Software Update Cautions

During update: The tablet cannot be used until the software update is complete. It may take time to update your tablet's software.

Signal during update: Update your tablet where signal reception is good, and do not change location during the update process. Make sure the battery is adequately charged before beginning an update. A weak signal or low battery during an update may cause the update to fail. An update failure may disable the tablet.

Other functions during update: Other tablet functions cannot be used during a software update.

Update Your Tablet Software

You can update your tablet's software using the **System update** option.

Before Updating Your Tablet

Updating your tablet may result in a loss of saved data depending on the condition of your tablet (malfunctioning, damaged, water seepage, etc.). You must back up all critical information before updating your tablet firmware.

Back Up All Data Prior to Update

To back up your Gmail information:

1. From home, tap **Apps**  > **Settings**  > **Accounts**  > **Google** > [your account].
2. Tap **ON/OFF** to enable backup of each item.
3. Tap **More** > **Sync now** to sync your Google Account information.

To back up your Exchange Mail information:

1. From home, tap **Apps**  > **Settings**  > **Accounts**  > **Microsoft Exchange ActiveSync**.
2. Tap **ON/OFF** to enable backup of each option (Calendar, Contacts, Email, Tasks).
3. Tap **More** > **Sync now** to sync your Microsoft Exchange ActiveSync information.

To back up your Google apps:


1. From home, tap **Apps**  > **Play Store** .
2. Tap **Menu**  > **My apps** > **All** tab.
3. Scroll through the list of previously downloaded Google apps and choose those you wish to reinstall.
4. Follow the onscreen instructions.

Note: Your Google app purchases are saved remotely and can be re-installed after the update is applied.

Update Your Tablet's Software

Once you have backed up all your data, use the **Update now** option to update your tablet's software.

- From home, tap **Apps**  > **Settings**  > **System update**  > **Update now**.

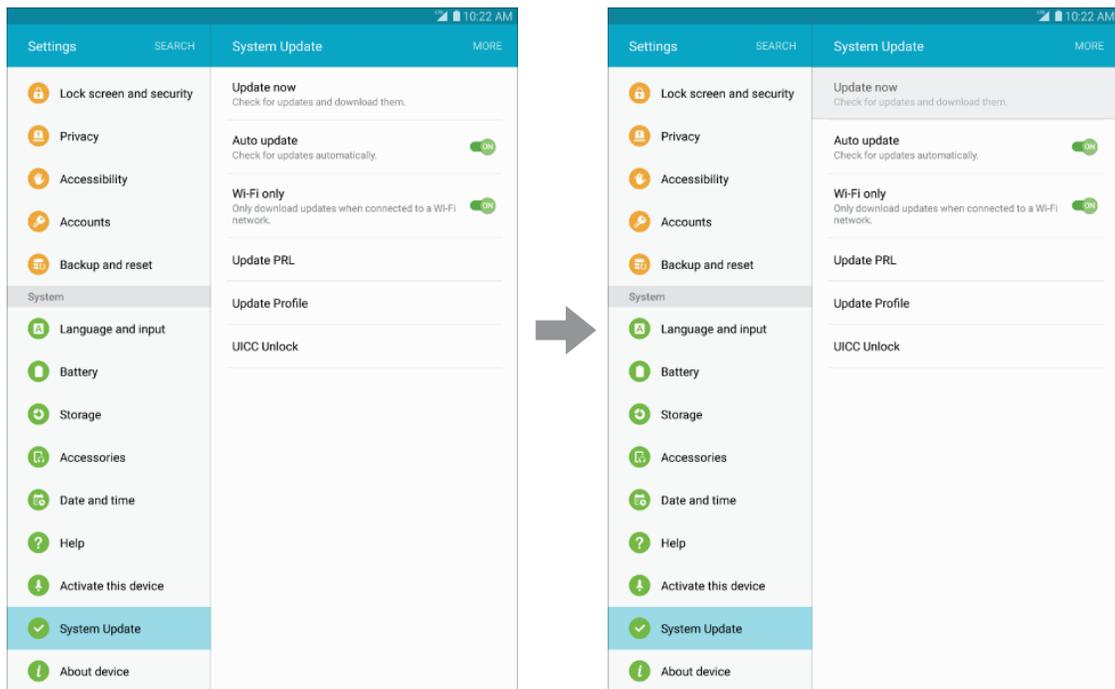


- ❖ Your tablet automatically downloads and installs any available updates. You may be required to power your tablet off and back on to complete the software upgrade.

– or –


1. Locate the Software update icon  in notifications.
2. Drag the status bar down.
3. Tap  to open the Software update screen.
4. Tap **Download** and follow the onscreen instructions. The downloading icon  appears within the status bar to indicate the tablet is downloading the necessary files.
5. Follow the prompts to install the update and restart your tablet.

Confirm Your Current Tablet Software

1. From home, tap **Apps**  > **Settings**  > **About device** .

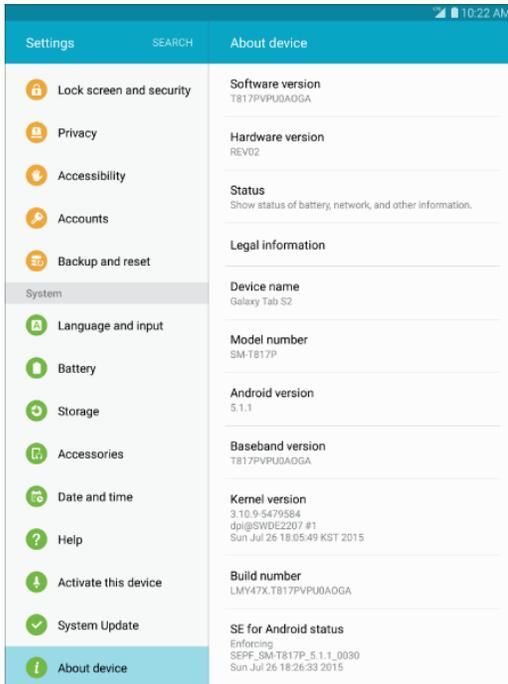


2. Locate the **Software version** read-only field.

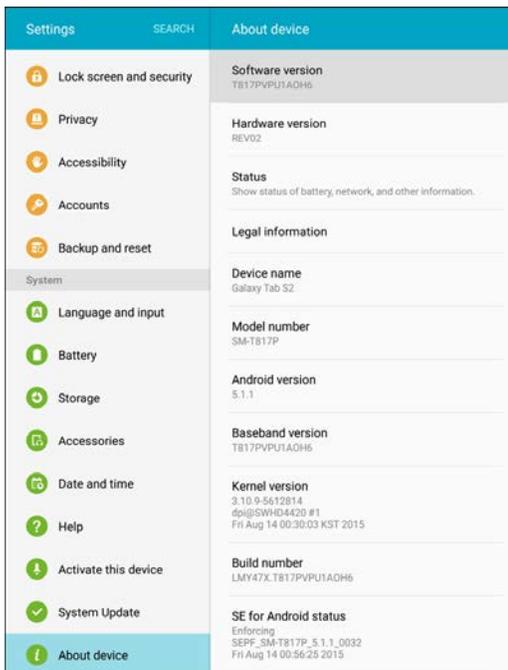

Update Your Profile

This option allows you to automatically update your online user profile information. If you choose to change your user name and select a new one online, you must then update the user name on your tablet.

1. From home, tap **Apps**  > **Settings**  > **System update**  > **Update Profile**.

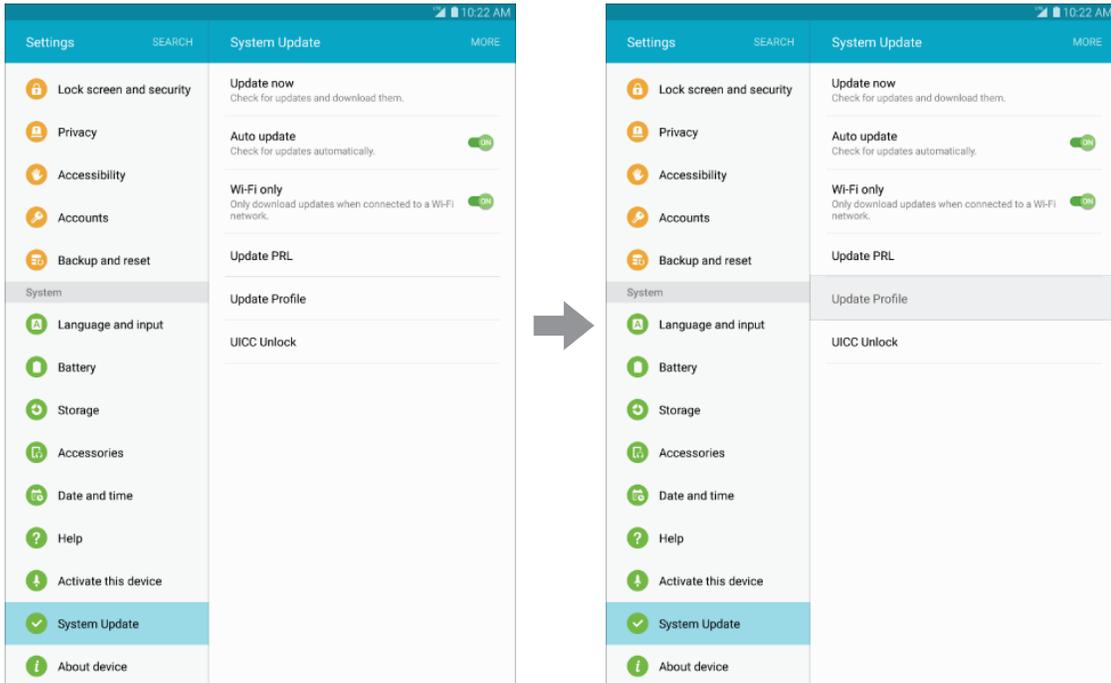

2. Follow the onscreen instructions.


- ❖ The tablet will download and install the profile update and you will see a confirmation when complete.

Note: If your data services or account syncing ever seems to go out unexpectedly, use this feature to reconnect with the network.

Update Your PRL

This option allows you to download and update the PRL (preferred roaming list) automatically.

1. From home, tap **Apps**  > **Settings**  > **System update**  > **Update PRL**.

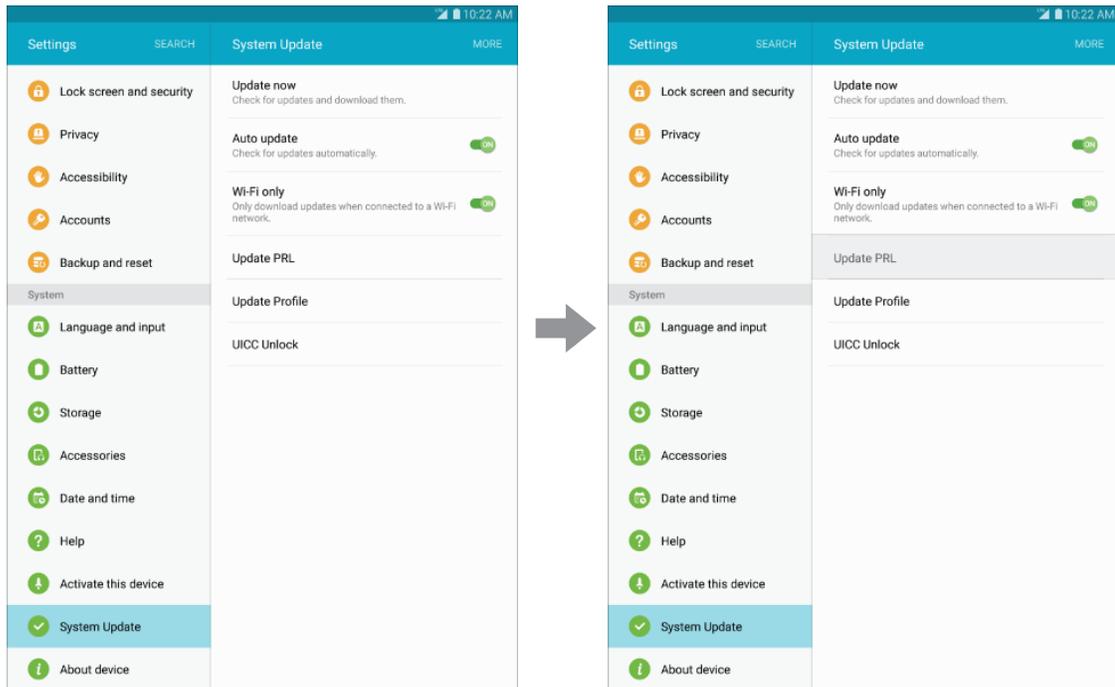

2. Follow the onscreen instructions.

- ❖ The tablet will download and install the PRL update and you will see a confirmation when complete.

Your Tablet Interface


The following topics describe how to use and customize your tablet's home screen, understand the status bar, and use the notification panel.

Home Screen Basics

The home screen is the starting point for your tablet's applications, functions, and menus. You can customize your home screen by adding application icons, shortcuts, folders, widgets, and more.

Home Screen Layout

Your home screen extends beyond the initial screen. Swipe the screen left or right to display additional screens.

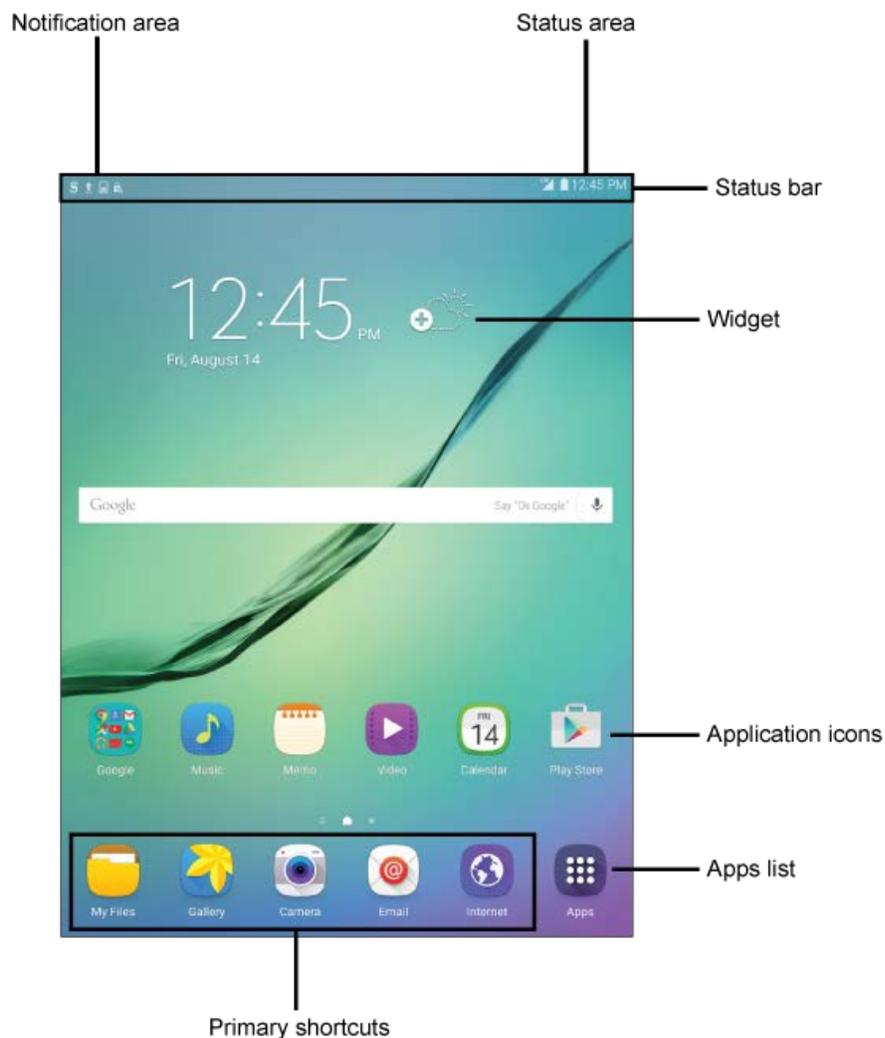

Item	Description
Application icons	Application icons are shortcuts to favorite applications. You can add and remove these shortcuts as you wish.
Applications (Apps) list	Tap to open the applications (apps) list. The apps list key is a primary shortcut available from all home screens.
Notification area	The notification area of the status bar (on the left) displays notifications for incoming messages, missed calls, application updates, and more.
Primary shortcuts	Primary shortcuts are application shortcuts that appear in the same location on all of your tablet's home screens. These are customizable except for the Applications (Apps) shortcut, which remains static.
Status area	The status area of the status bar (on the right) displays tablet and service status information such as signal strength, battery status, Wi-Fi and data connectivity, and time.
Status bar	The status bar displays icons to notify you of your tablet's status (on the right side) and notifications (on the left side).
Widget	Widgets are self-contained onscreen apps that reside on your tablet's home screen.

Note: The indicator above the primary shortcuts lets you know your current screen position.

Tip: Press the **Home** key to return to the main home screen from any other screen.

Extended Home Screens

In addition to the main home screen, your tablet features extended home screens to provide more space for adding icons, widgets, and more. Press the **Home** key to display the main home screen and then drag across the screen to move from the main screen to an extended screen.




- Swipe left or right to go to an extended home screen.
- While on an extended screen, press the **Home** key to return to the main home screen.

Add Home Screens

If you want to set up more shortcuts or widgets than you have space for, you can add more home screens.

1. Touch and hold an empty area on a home screen.
2. Scroll through the thumbnail screens to the right until you see a blank screen with a + sign.

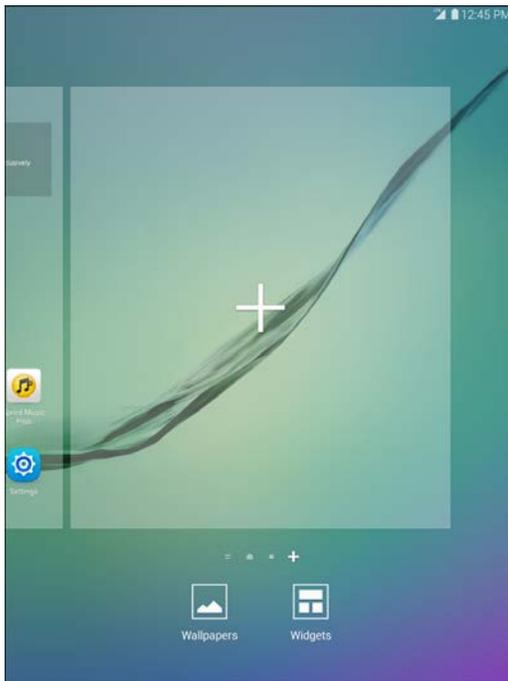

3. Tap **+** to add the screen.

- ❖ A new blank home screen will be added to the far right of your screens.


Status Bar and Notification Panel

Your tablet's status and notifications are available at a glance at the top of the screen.

Status Bar

The status bar at the top of the home screen provides tablet and service status information on the right side and notification alerts on the left. To view the notification panel or access the quick settings menu, tap the status bar and drag it down.

Status Bar Layout

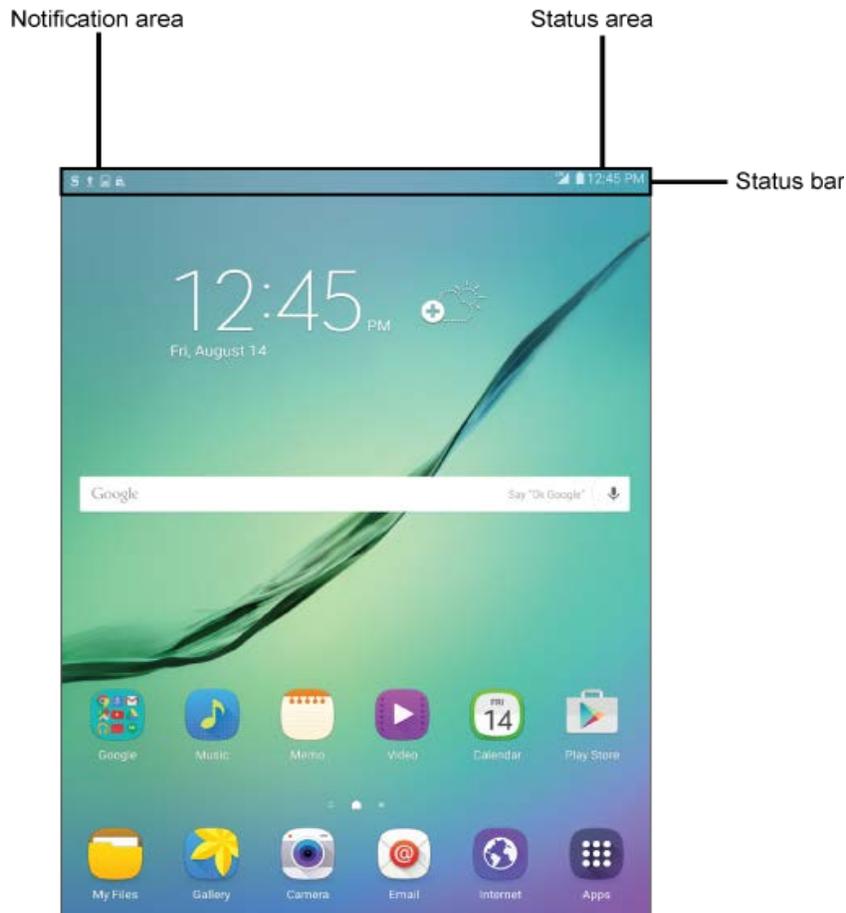

Main Status Icons

Icon	Status
	Bluetooth active

Icon	Status
	GPS active
	Wi-Fi active
	Downloading
	Mute mode
	Vibrate mode
	Network (full signal)
	Network (roaming)
	Airplane mode
	Sync active
	Battery (charging)
	Battery (full charge)

Main Notification Icons

Icon	Notification
	New email
	New Gmail
	New Hangout message
	Event
	USB connection
	Alarm
	Warning


Icon	Notification
	Update available
	Update downloading
	Update successful
	Keyboard active
	More notifications available (drag down to view)

Notification Panel

Your tablet's notifications appear at the left side of the status bar, and you can access the full notification panel by pulling down the status bar. From there, you can check notifications, download updates, open messaging apps, use the quick settings menu, and more.

Open the Notification Panel

- Slide the status bar down. (Slide your finger down from the top of the screen.)

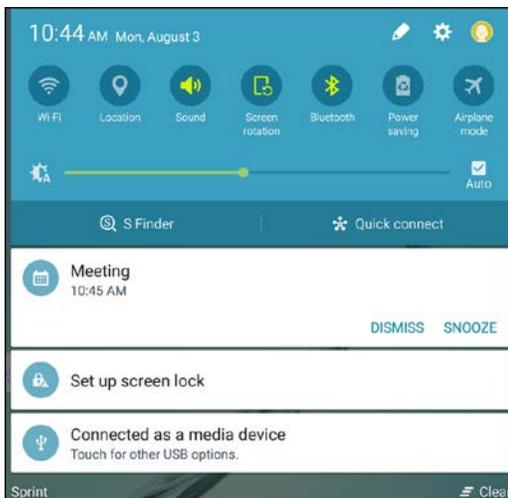

- ❖ The notification panel opens. To check notifications, tap an item in the list.

Close the Notification Panel


- Slide the notification panel up. (Slide your finger up from the bottom of the screen.)

– or –

Tap the **Back** key  to close the notification panel.

Notification Panel Layout

The notification panel gives you access to notifications, settings, and the quick settings menu.

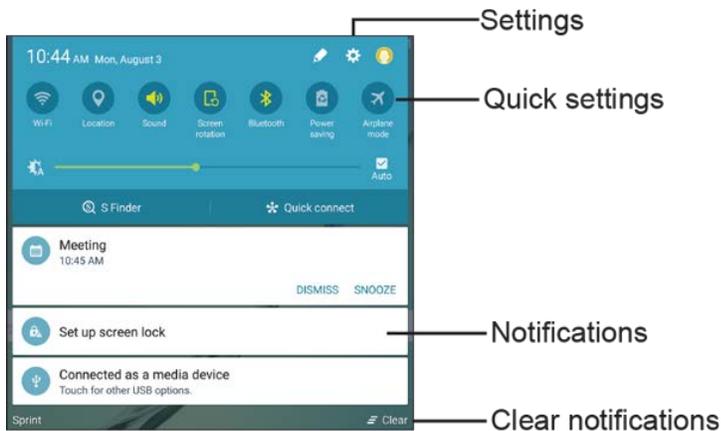


Notification Panel Quick Settings

The Quick Settings list at the top of the notification panel lets you quickly access frequently used settings options. Scroll left or right to display all available settings, and tap an icon to turn the selected feature on or off.

You can customize which settings are available in your Quick Settings list.

1. From a home screen, drag the status bar down to display the notification panel.
2. Tap **Edit**  to display the quick settings panel options.

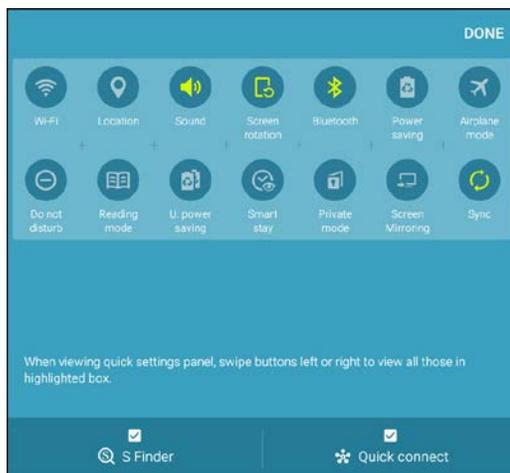


3. Drag buttons to arrange the order in which options appear in the quick settings panel.
4. Tap **Done** when you are finished.

S Finder


Search your device for apps, contacts, messages, email, files, settings, and more.

1. Open the notification panel by sliding your finger down from the top of the screen.

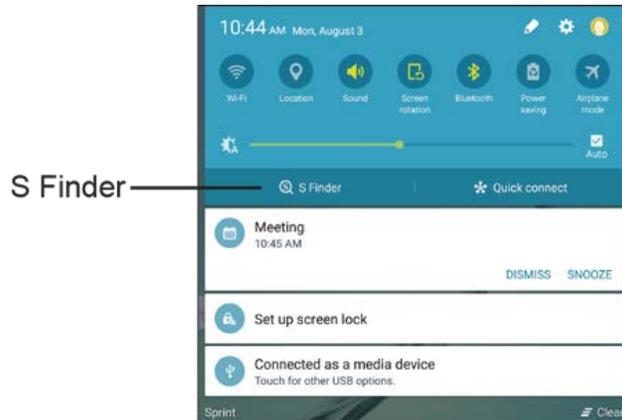

- ❖ The notification panel opens.

2. Tap **S Finder**.

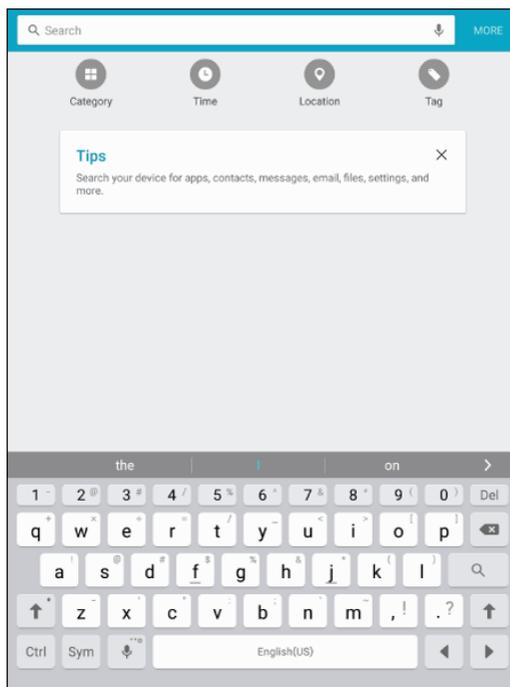


3. Tap the **Search** field and enter search criteria.
4. Tap an item to view or launch.

Quick Connect


Quickly connect wirelessly to nearby devices that support Quick connect, Wi-Fi Direct, and devices that can share media via Wi-Fi.

1. Open the notification panel by sliding your finger down from the top of the screen.

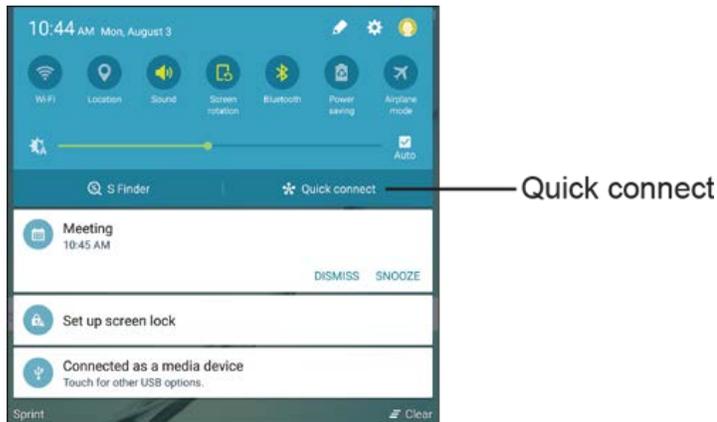

- ❖ The notification panel opens.

2. Tap **Quick connect** and set your device visibility:

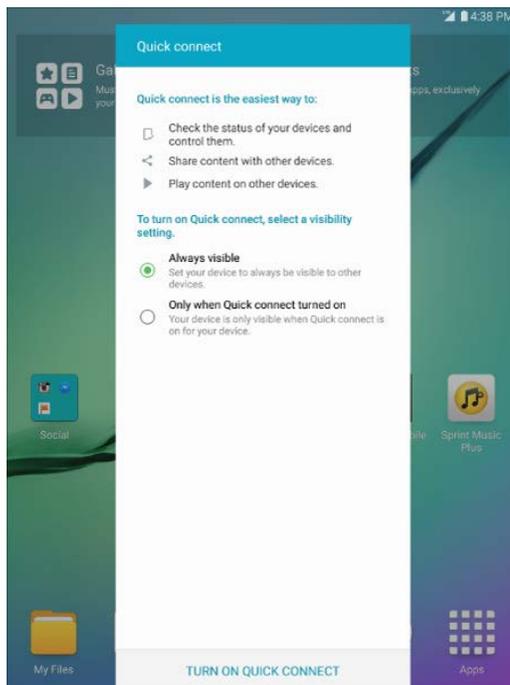

- **Always visible:** Your device will always be visible to other devices.
- **Only when Quick connect turned on:** Your device will only be visible to other devices when Quick connect is turned on.

3. Tap **Turn on quick connect** to view available devices.
4. Tap a device and follow the prompts to connect.

Tip: For more information about Quick connect, tap **More > Help** from the connections screen.

Customize the Home Screen

Learn how to set the wallpaper and add, move, or remove shortcuts, widgets, and folders from the home screen.

Operations for Rearranging the Home Screen

- **Moving Widgets and Icons:** From home, touch and hold an item and then drag it to the desired location.
- **Deleting Widgets and Icons:** From home, touch and hold an item and then drag it to **Remove** .
- **Displaying the Home Screen Menu:** From home, touch and hold an empty space to display the home screen menu. Menu options include Wallpapers and Widgets.

Change the Wallpaper

Select and assign your tablet's background wallpaper.

1. From home, touch and hold an empty space, and then tap **Wallpapers** .



Tip: You can also access the wallpaper menu through settings. From home, tap **Apps**  > **Settings**  > **Wallpaper** .

2. Tap home screen, and then tap an option to select the wallpaper.



- **Home screen:** Set the background wallpaper for your home screen.
 - **Lock screen:** Set the wallpaper for your tablet's lock screen.
 - **Home and lock screens:** Set a wallpaper for both your home screen and your lock screen.
3. Select a wallpaper and tap **Set as wallpaper**.
 - ❖ The wallpaper is set.

Add Shortcuts to the Home Screen

You can add shortcuts for quick access to favorite apps from the home screen.

1. From home, tap **Apps** .



- ❖ The Apps list opens.
2. Touch and hold an app icon.
 - ❖ The icon will disengage and you will see thumbnails of your home screens.
 3. Drag the icon to an empty location on one of the home screens.
 - ❖ The shortcut is added to the home screen.

Add Widgets to the Home Screen

You can add widgets to your tablet's home screen. Widgets are self-contained apps that display on a home screen. Unlike a shortcut, the Widget works like an onscreen application. There are all kinds of widgets, including links to a specific contact, Internet bookmarks, Gmail and email accounts, and many others.

1. From home, touch and hold an empty space, and then tap **Widgets** .



2. Touch and hold a widget icon.
 - ❖ The icon will disengage and you will see thumbnails of your home screens.
3. Drag the icon to an empty location on one of the home screens.
 - ❖ The widget is added to the home screen.

Add Folders to the Home Screen

You can group home screen shortcuts into folders for convenient access.

1. From home, touch and hold a shortcut you want to place in a folder, and then drag it on top of another shortcut and release it.



2. Type a name for the folder and tap **Done**.
 - ❖ A new folder is created.
3. To add more app shortcuts to the folder, touch and hold a shortcut and drag it on top of the new folder.
 - ❖ The new shortcut is added to the folder.

Change Folder Names

Once you have added folders, you can change the name easily from the folder display.

1. From home, tap the folder to open it, and then tap the folder name.
2. Type a new name and then tap **Done**.

Change the Folder Color

You can change the color of a folder.

1. From home, tap the folder to open it.
2. Tap  and select a color.

Contacts

The Contacts application lets you store and manage contacts from a variety of sources, including contacts you enter and save directly in your tablet as well as contacts synchronized with your Google Account, your PC, compatible email programs (including Exchange Server), and your Facebook friends.


! Contacts Cautions

Information saved in Contacts may be lost or changed if the battery is left uncharged. Accident or malfunction may also cause loss or change to information. It is recommended that you keep a separate copy of contacts and other important information. Sprint is not responsible for any damages from lost or changed contacts.

Add a Contact

You can add contacts from the Contacts application. Enter details such as name, phone numbers, email addresses, mailing addresses, and more.

1. From home, tap **Apps**  > **Contacts** .

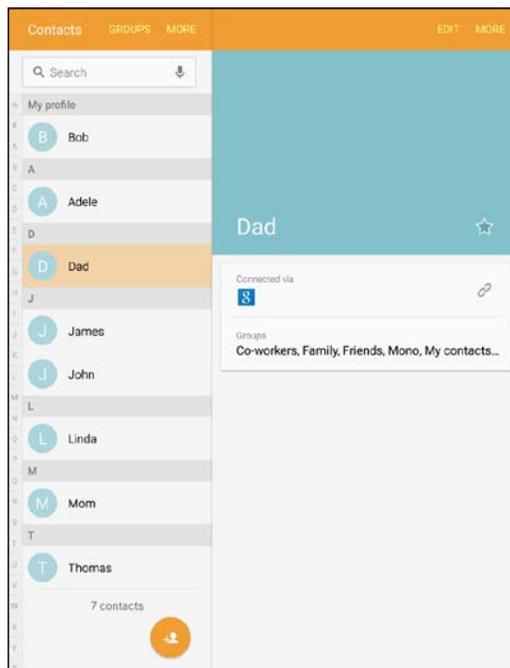


❖ You will see the Contacts list.

2. Tap  to add a contact.
3. If you have multiple account types associated with your tablet, select a contact type by tapping the account type in the upper left corner.

- Select **Device** as the sync account if you want your contacts on your tablet only; they will not be synced with your Google Account.
- Select **Google** if you want to save contacts to your Google Account; these will be synced automatically with your Google Account online. If you have multiple Google Accounts set up, you will need to pick a specific account.
- Select **Samsung account** to sync your contacts automatically with your Samsung account.
- Select **Microsoft Exchange ActiveSync** to sync your contacts automatically with your Microsoft Exchange account.

4. Use the keyboard to enter as much information as you want.

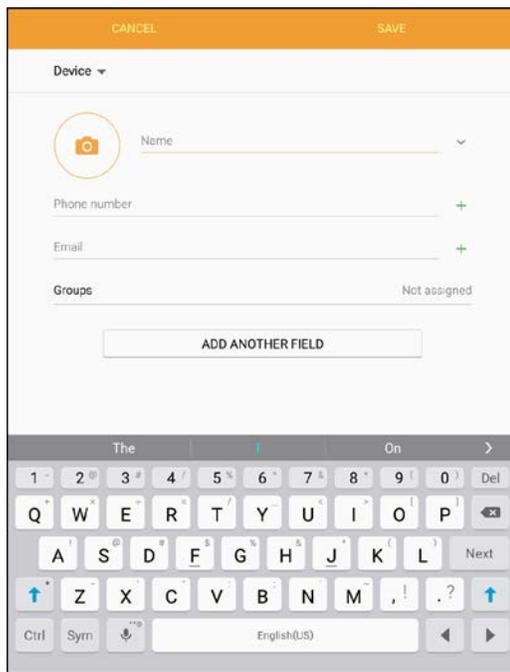


- **Photo:** Tap  to assign a picture to the contact.
- **Name:** Enter the contact's name.
- **Phone number:** Enter a phone number for the contact.
- **Email:** Enter an email address.
- **Groups:** If desired, assign the contact to one or more contact groups.
- **Add another field:** Add additional information, such as Organization, Address, Web address, IM account, Event (e.g., birthday), Notes, Nickname, Phonetic name, and Relationship.

Note: To select a type (label) for a phone number, email address, or address (such as Mobile, Home, Work, etc.), tap the type to the right of the field and select the appropriate type.

Note: To add more phone numbers, email addresses, etc., tap  on the right side of the entry field.

5. When you have finished adding information, tap **Save**.

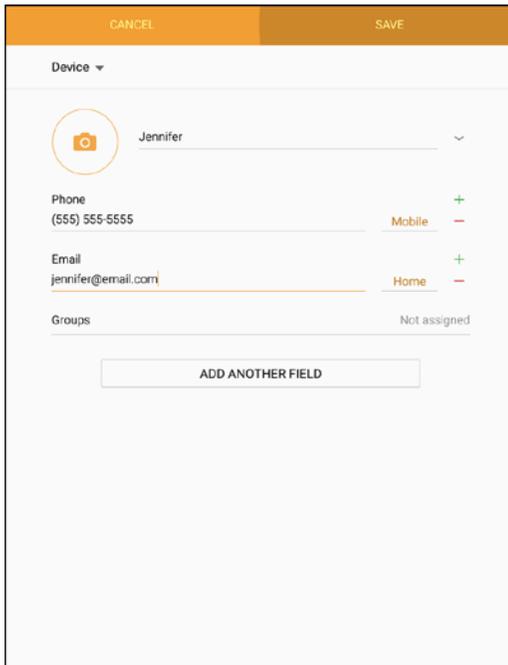


- ❖ The contact is added.

Check Contacts

View a contact's details by displaying a contact entry.


1. From home, tap **Apps**  > **Contacts** .

2. Tap a contact to view its details.

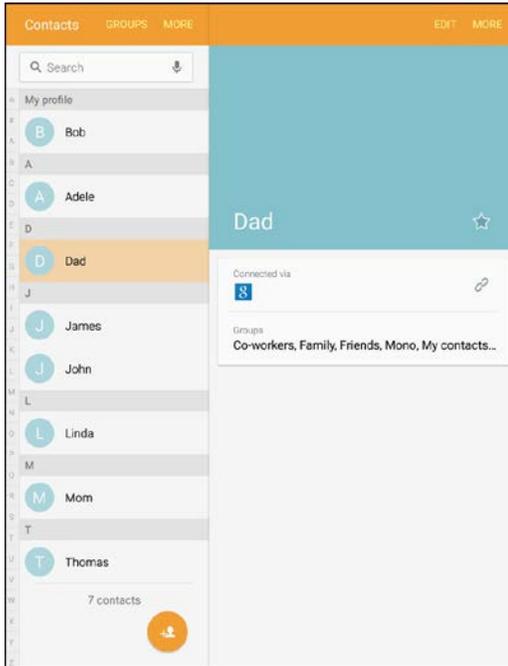

Contacts Screen Layout

The following illustration show's your Contacts app layout and describes the various features.

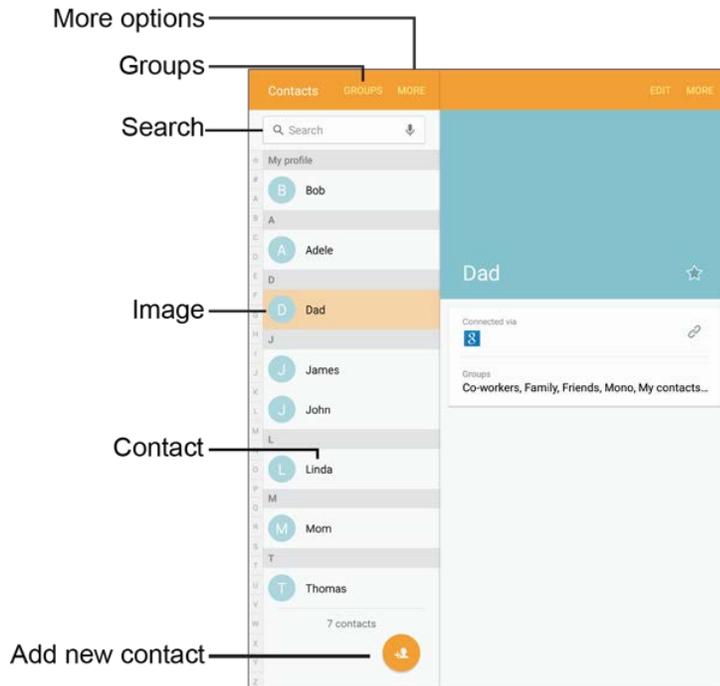


Item	Description
Add new contact	Add a new contact.
Contact	Tap to show the contact's details.
Groups	Show contact groups.
Image	Show the contact's image.
More options	Access additional options.
Search	Search contacts.

Edit a Contact


Once you have added a contact, you can add or edit any of the information in the entry, assign a caller ID picture, customize with a unique ringtone, and more.

1. From home, tap **Apps**  > **Contacts** .
2. Tap a contact to view its details.

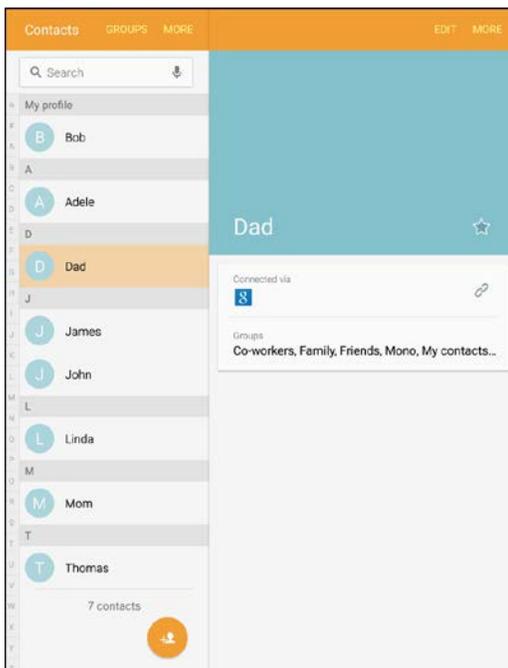

- ❖ The contact's detailed listing appears.

3. Tap **Edit**.
4. Tap any field you want to change or add. See [Add a Contact](#).
5. Add or edit the information, and then tap **Save**.

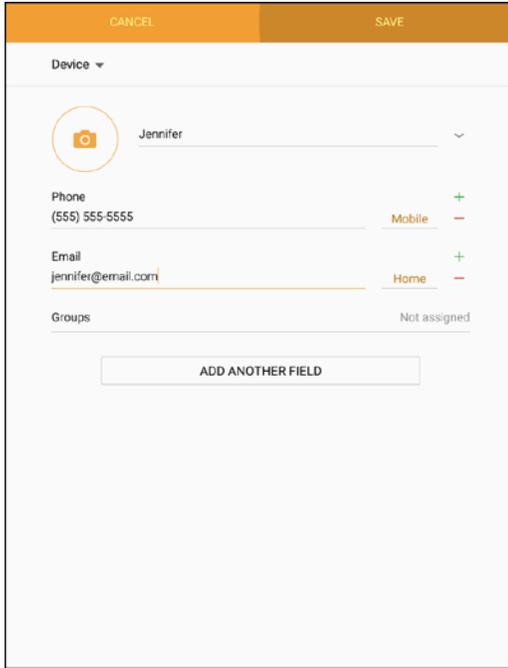


- ❖ Your changes are saved to the contact entry.

Delete a Contact

You can delete a contact from the contacts details page.


1. From home, tap **Apps**  > **Contacts** .

2. Tap a contact to view its details.

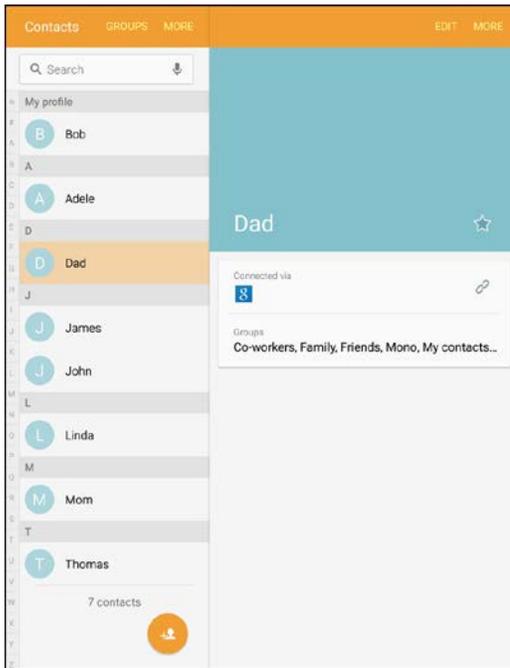

- ❖ The contact's detailed listing appears.

3. Tap **More** > **Delete** > **Delete**.

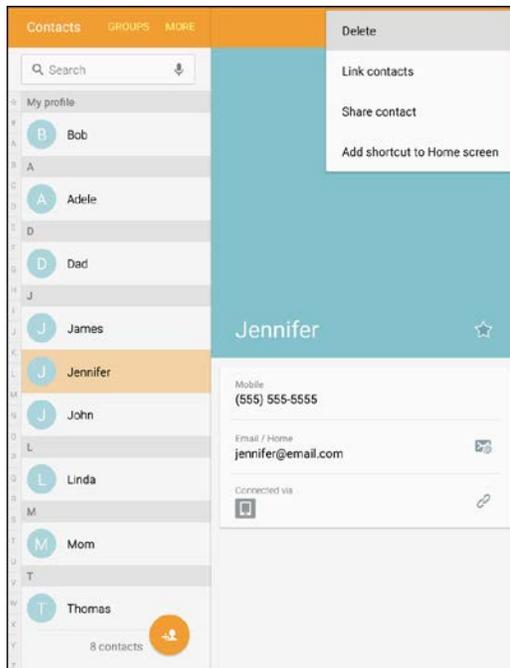


- ❖ The contact is deleted.

Tip: You can also touch and hold the contact from the Contacts list and tap **Delete** > **Delete**.


Share a Contact

You can quickly share contacts using Bluetooth, email, Gmail, or text messaging.

1. From home, tap **Apps**  > **Contacts** .

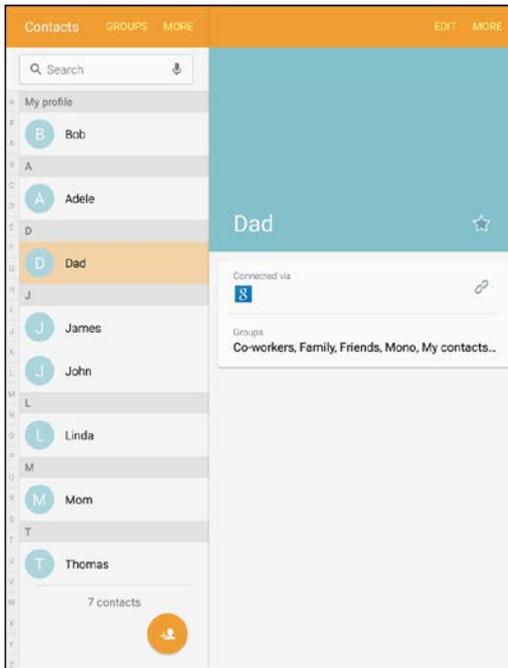

2. Tap a contact to display it, and then tap **More** > **Share contact**.

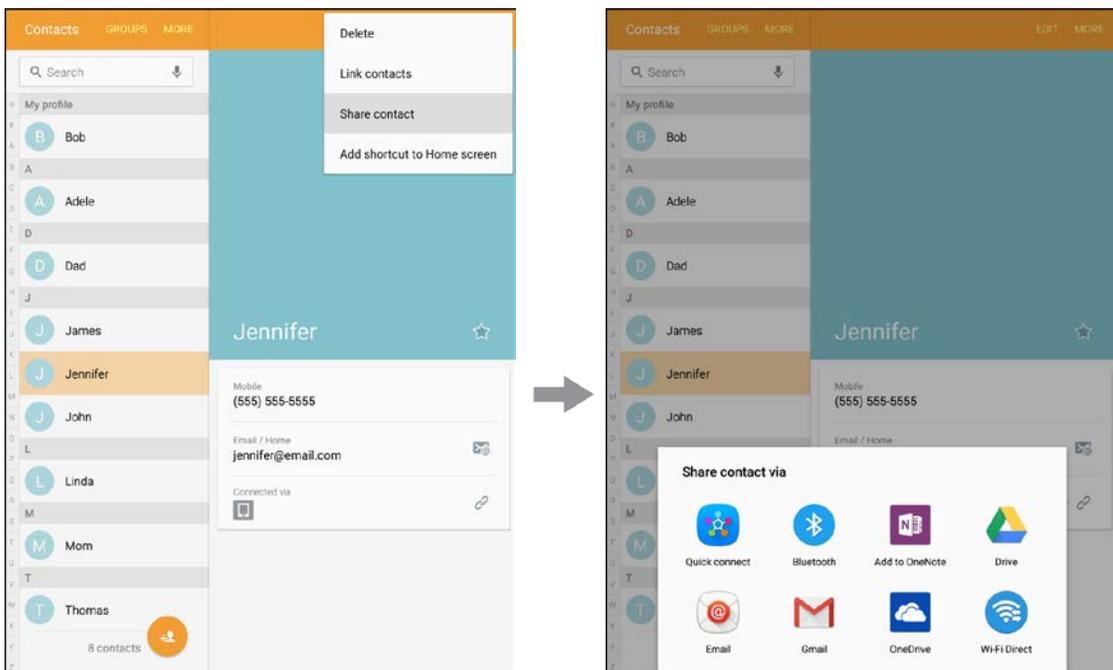


- ❖ You will see list of sharing methods.
3. Select a sharing method:
 - **Add to OneNote:** Save the information to your OneNote account.
 - **Bluetooth** to send the information via Bluetooth. See [Bluetooth](#) for information on pairing and sending via Bluetooth.
 - **Drive** to save the information to your Google Drive account.
 - **Email** to send the information as an email attachment. See [Compose and Send Email](#).
 - **Gmail** to send the information as a Gmail attachment. See [Create and Send a Gmail Message](#).
 - **OneDrive:** Save the information to your OneDrive account.
 - **Quick connect:** Send the information to a nearby device.
 - **Wi-Fi Direct** to send the information to another device via Wi-Fi Direct. See [Wi-Fi Direct](#).
 4. Follow the prompts for the selected method.
 - ❖ The selected contact will be shared.

Import Contacts

Import (load) contacts that have been backed up to device storage.

Import Contacts from Device Storage

1. From home, tap **Apps**  > **Contacts** .

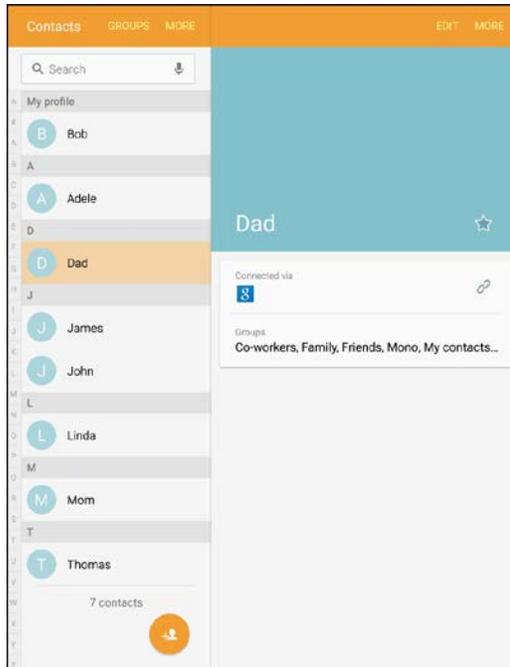

2. Tap **More** > **Settings** > **Import/Export contacts**.



- ❖ You will see the Import/Export contacts menu.


3. Tap **Import**.

4. Select a destination for the imported contacts.
5. Follow the onscreen instructions to complete the import.
 - ❖ The contacts are imported and stored in the selected account.

Back Up Contacts


If you are saving contacts to an account that does not automatically back them up via the Cloud, you can manually back them up to your tablet's memory for re-import if needed.

1. From home, tap **Apps**  > **Contacts** .

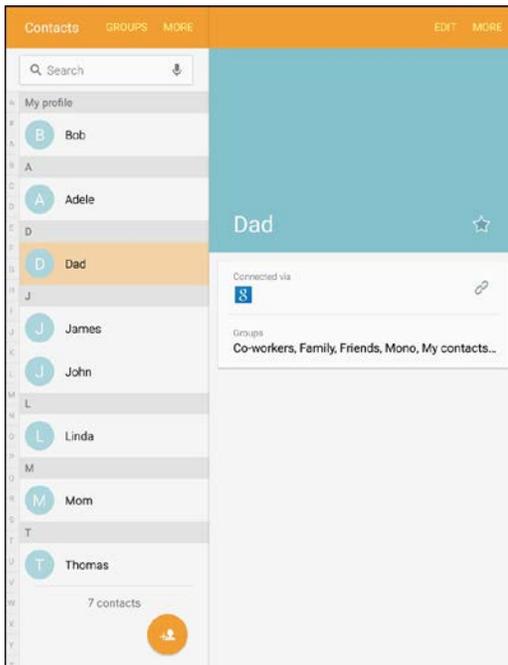

- ❖ You will see the Contacts list.

2. Tap **More** > **Settings** > **Import/Export contacts**.

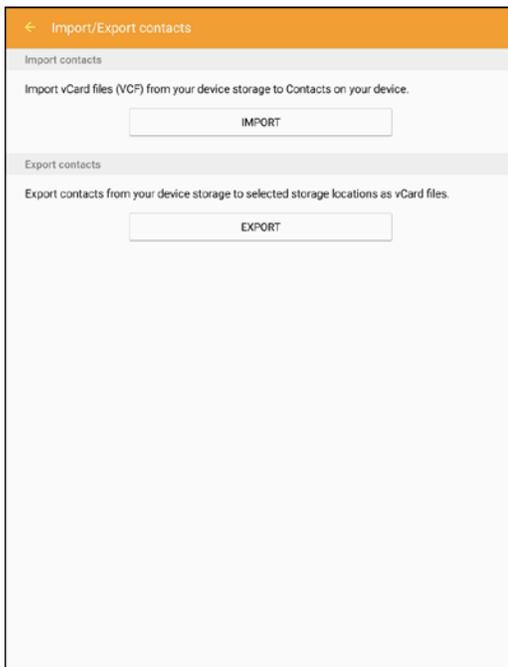

- ❖ You will see the Import/Export contacts menu.
3. Tap **Export**.
 4. Select an export location.
 5. Follow the onscreen instructions to complete the export.
- ❖ The contacts are exported.

Messaging and Internet

With wireless service and your tablet's messaging and data capabilities, you have the opportunity to share information through many different channels and accounts, including Gmail (Google), personal and corporate email, social networking accounts, and Hangouts.

Gmail

Use Google's Gmail service and your Google Account to send, receive, and manage your Gmail messages. Before using Gmail, you must register a Google (Gmail) Account on your tablet. See [Google Account](#) for details.


! Gmail Cautions

Gmail is handled as email from a PC. Restricting email from PCs on your tablet prevents your tablet from receiving Gmail.

Create and Send a Gmail Message


Use your tablet to create and send Gmail messages.

1. From home, tap **Apps**  > **Google**  > **Gmail** .

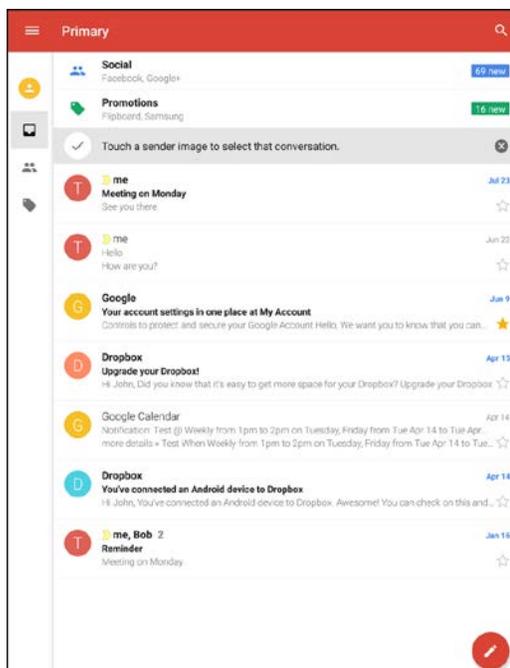


- ❖ The Gmail inbox opens.

2. In the inbox, tap **Compose** .

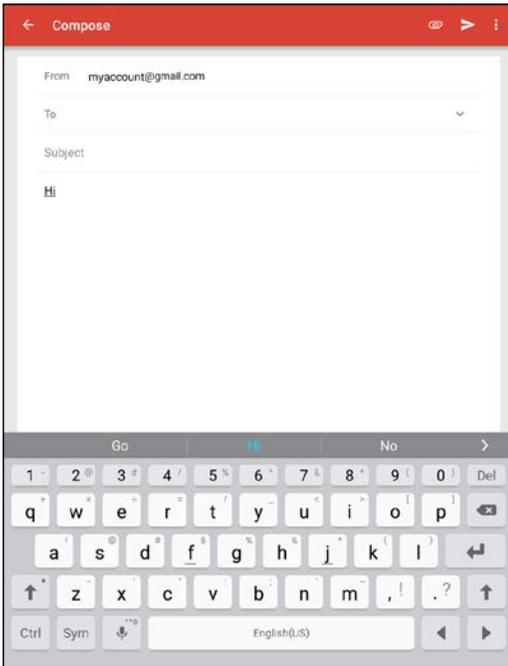

- ❖ The Gmail composition window opens.

3. Enter the message recipient(s), subject, and message, and then tap **Send** .

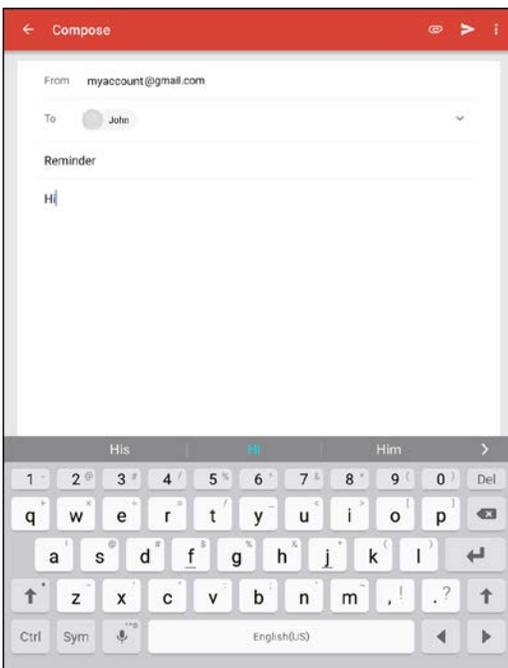

- ❖ The Gmail message is sent.

Gmail Composition Options

- **Adding Cc/Bcc:** In the To field, tap  to display Cc and Bcc fields.
- **Attaching Pictures or Videos:** In the mail composition window, tap  > **Attach file**. Locate and tap the picture or video you want to attach.
- **Save as a draft (Send Later):** While composing your message, tap **More options**  > **Save draft**. The message is saved as a draft.
- **Delete Mail Being Composed:** In the mail composition window, tap **More options**  > **Discard** > **Discard**.

Note: To view your draft email messages, in the inbox, tap **Menu**  > **Drafts**.

Note: To view your sent messages, in the inbox, tap **Menu**  > **Sent**.


Check Received Gmail Messages

Your tablet allows you to access, read, and reply to all your Gmail messages.

Open New Gmail Messages

When new Gmail arrives, you will see  in the status bar.

1. Drag the status bar down to display the notification panel.

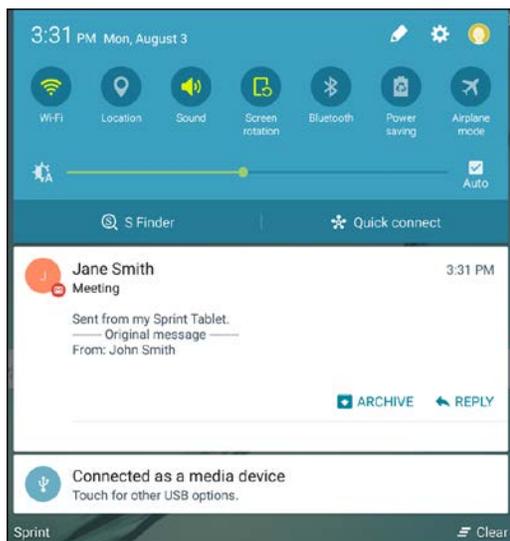


2. Tap the new message from the notification panel.
 - ❖ The new Gmail message opens.
 - If you have two or more new Gmail messages, tapping the notification opens the Gmail inbox.

Open Gmail Messages


You can also read and reply to all your Gmail messages from the Gmail inbox.

1. From home, tap **Apps**  > **Google**  > **Gmail** .

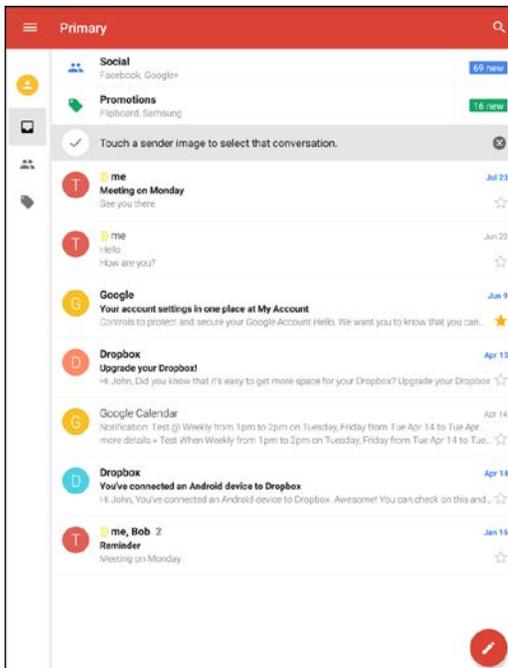

❖ The Gmail inbox opens.

2. Tap the message thread you want to view.

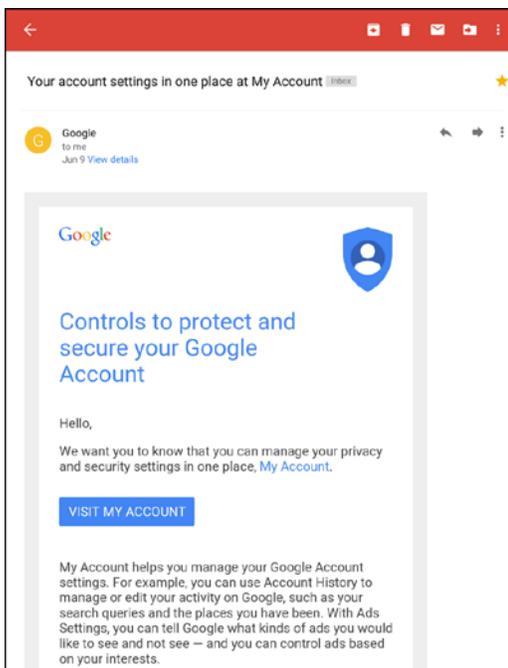

- ❖ The message thread opens, with the newest message displayed.


Options when Reviewing Gmail Messages

- **Replying to Gmail Messages:** With the Gmail message open, tap **Reply** , compose your reply message, and tap **Send** 
 - To reply to all, tap **More options**  > **Reply all**.
- **Forwarding Gmail Messages:** With the Gmail message open, tap **Forward** , enter a recipient and an additional message, and tap **Send** .


Use Gmail Labels

Gmail saves all mail in one box, but you can add labels that allow you to sort your Gmail conversation threads. For example, when a new thread starts with a received mail, the label “Inbox” is automatically added to the thread. By then adding the label “travel,” all threads with “travel” are shown in a list.

1. From home, tap **Apps**  > **Google**  > **Gmail** .

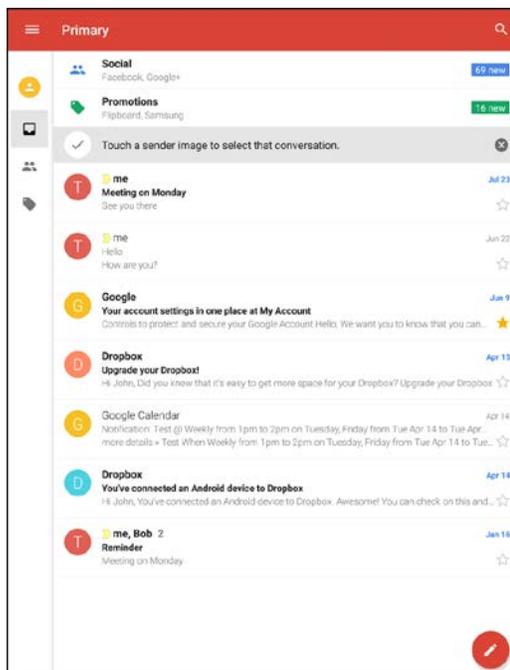

- ❖ The inbox opens.
2. Touch and hold a conversation thread (or touch the thread's icon/picture) to add a checkmark to it, and then tap **More options**  > **Move to**.

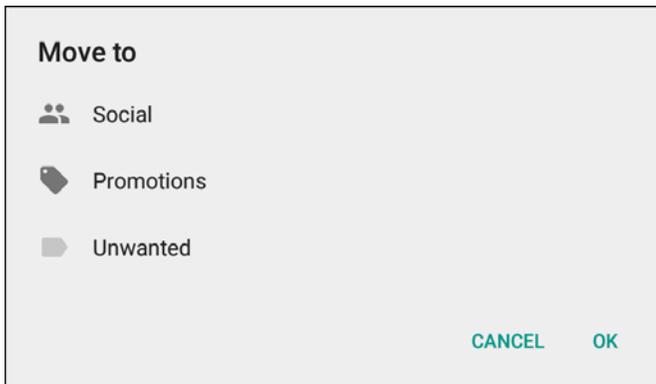


3. Tap a label for the thread.
 - ❖ The thread is added to the selected label.


Archive Gmail Threads

Remove sent and received Gmail threads so they do not appear in the inbox. When replies arrive for archived threads, they appear in the inbox again.

1. From home, tap **Apps**  > **Google**  > **Gmail** .

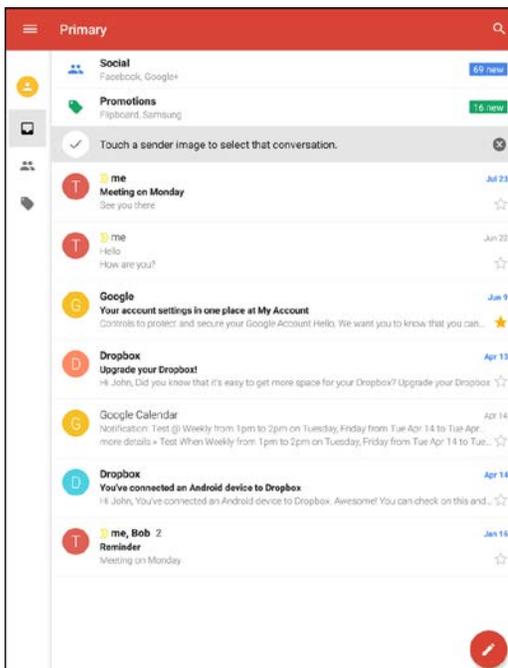

- ❖ The inbox opens.
2. Touch and hold a conversation thread (or touch the thread's icon/picture) to add a checkmark to it, and then tap **Archive** .

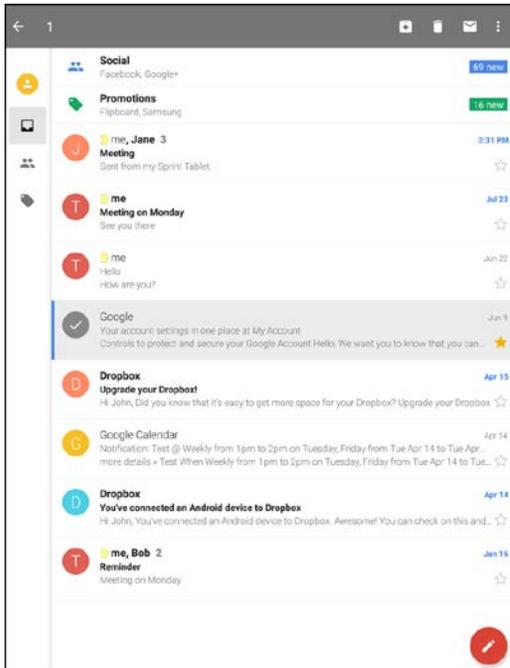


❖ The thread is now archived.

Mute Gmail Threads


If registered on a mailing list, there will be threads with always-continuing conversations. For long threads that are not important, mute the threads and they will no longer appear in the inbox. When new mail arrives that includes user's address as a recipient or in Cc, mail will again appear in the inbox.

1. From home, tap **Apps**  > **Google**  > **Gmail** .

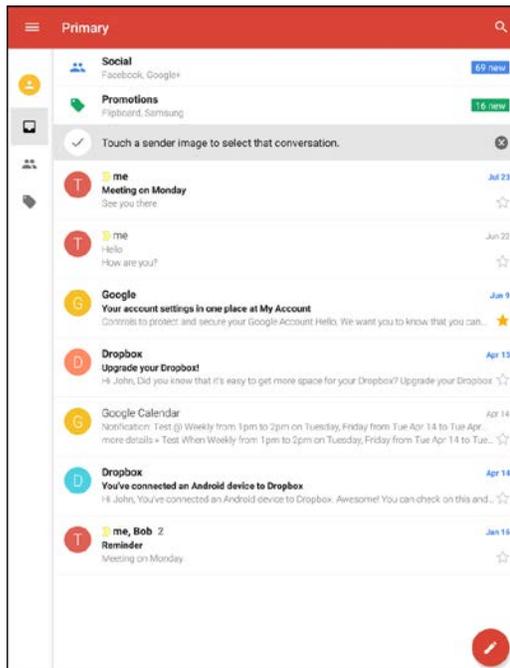

❖ The inbox opens.

2. Touch and hold a conversation thread (or touch the thread's icon/picture) to add a checkmark to it, and then tap **More options**  > **Mute**.

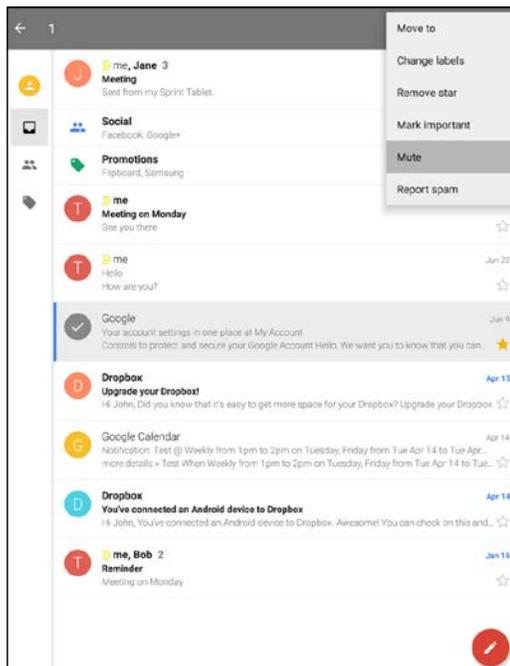


❖ The thread is now hidden.

Delete Gmail Threads


If you no longer wish to keep a Gmail conversation thread, you can simply delete it from the inbox.

1. From home, tap **Apps**  > **Google**  > **Gmail** .

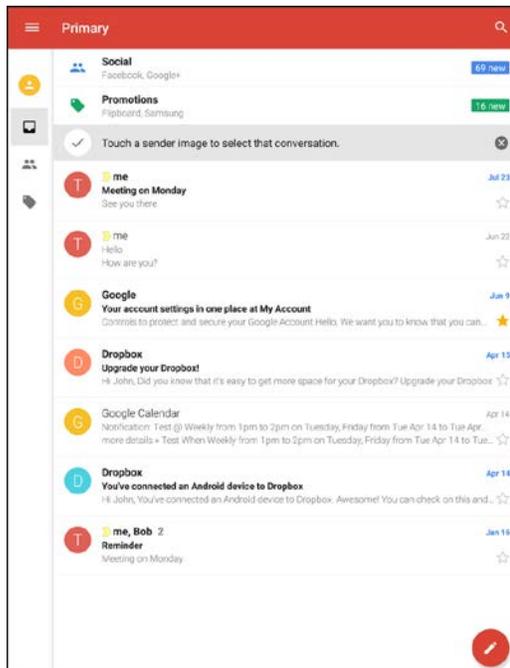

❖ The inbox opens.

2. Touch and hold a conversation thread (or touch the thread's icon/picture) to add a checkmark to it, and then tap **Delete** .

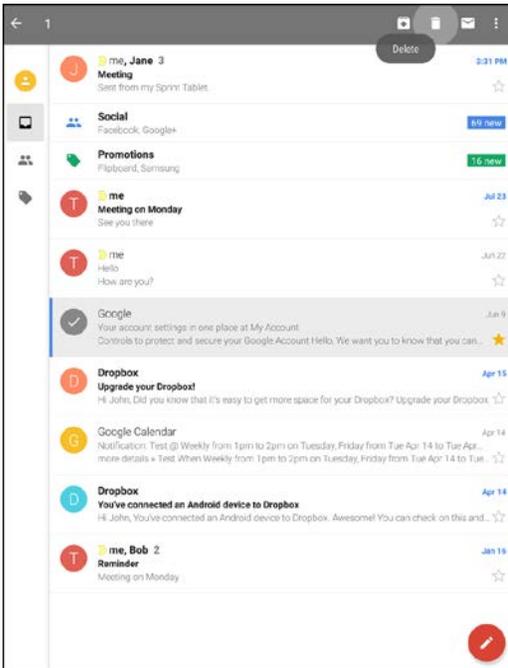


❖ The thread is deleted.

Search Gmail Messages


If you need to find a specific message or message thread, you can search Gmail from the inbox.

1. From home, tap **Apps**  > **Google**  > **Gmail** .

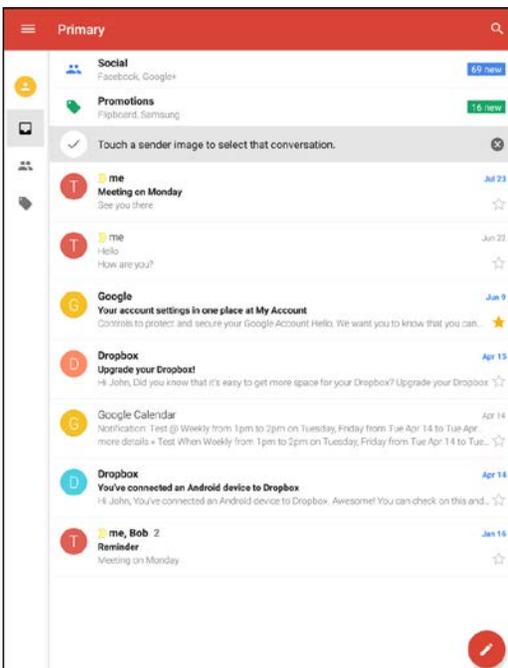


❖ The inbox opens.

2. Tap **Search** .

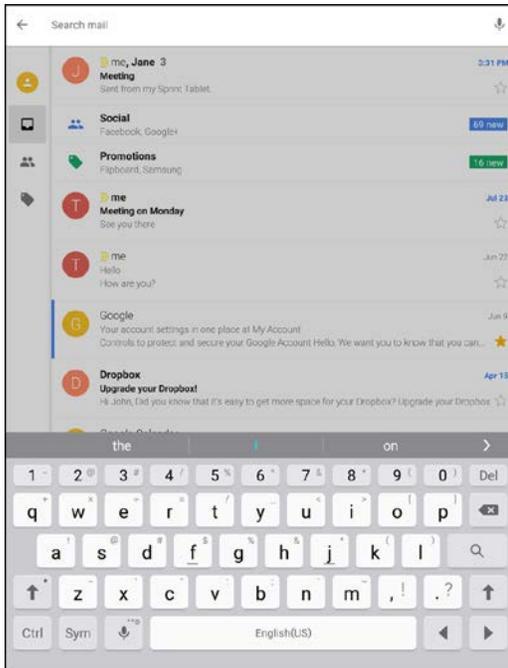

3. Enter your search text and tap **Search** .

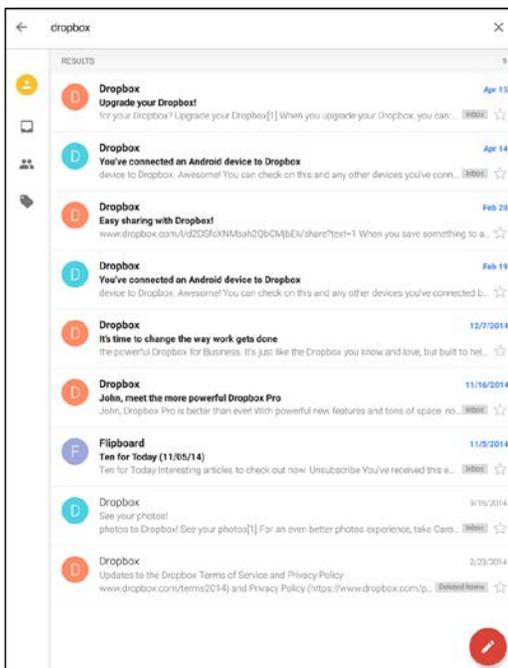


❖ The search results appear. Tap a message or thread from the list to display it.

Report Spam or Phishing Gmail


You can report spam or phishing Gmail messages from your tablet's Gmail inbox.

1. From home, tap **Apps**  > **Google**  > **Gmail** .

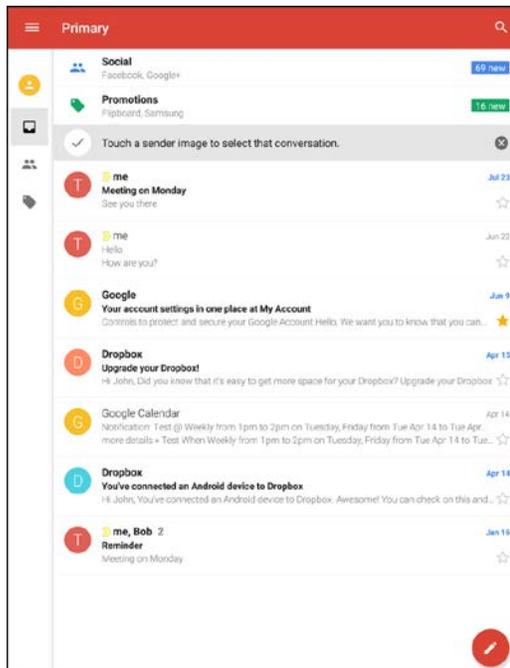

❖ The inbox opens.

2. Touch and hold a conversation thread (or touch the thread's icon/picture) to add a checkmark to it, and then tap **More options**  > **Report spam**.

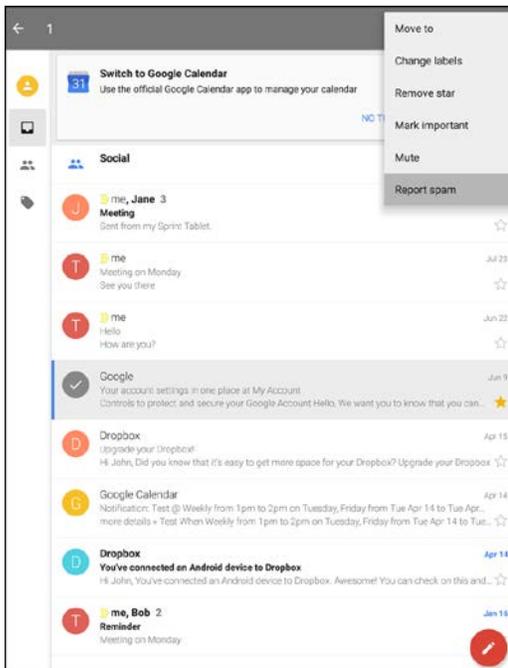


- ❖ The selected message is reported as spam or phishing.


Add Another Google (Gmail) Account

If you have multiple Gmail accounts you wish to view on your tablet, you can add them from the **Settings** > **Accounts** menu.


1. From home, tap **Apps**  > **Settings**  > **Accounts**  > **Add account**.

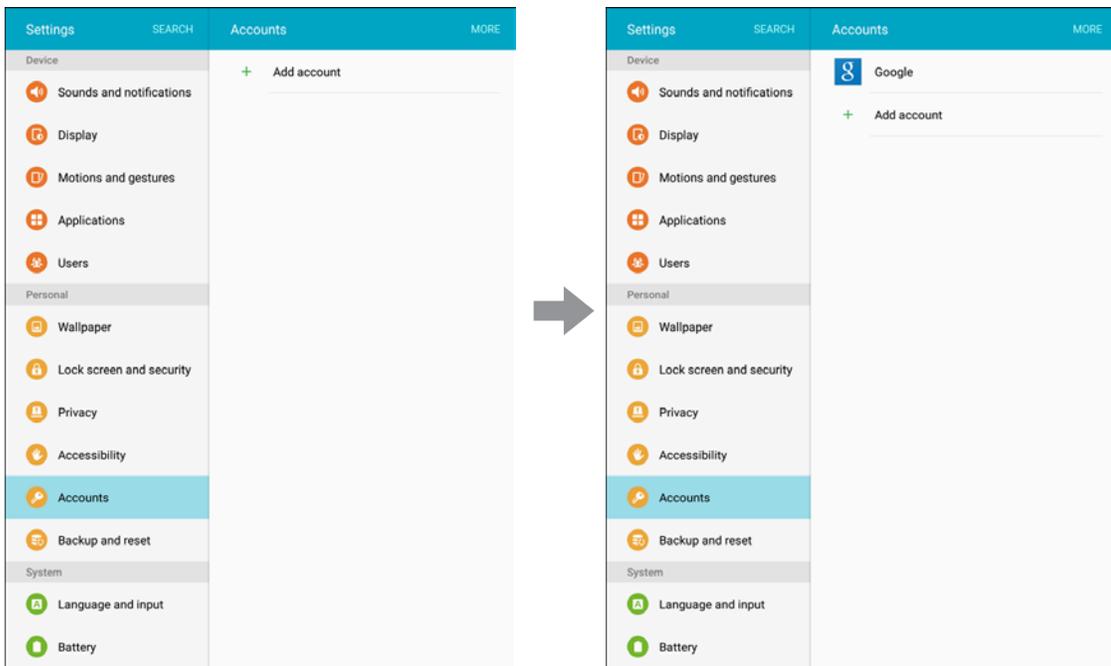


2. Tap **Google**.

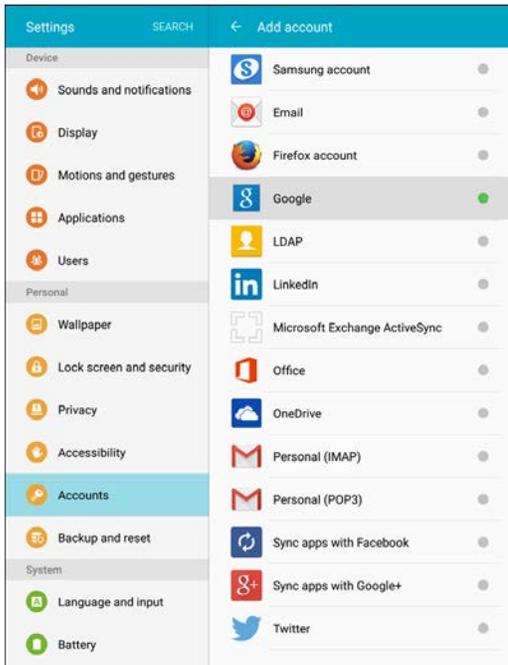

3. Enter your Gmail username, and then tap **Next**.

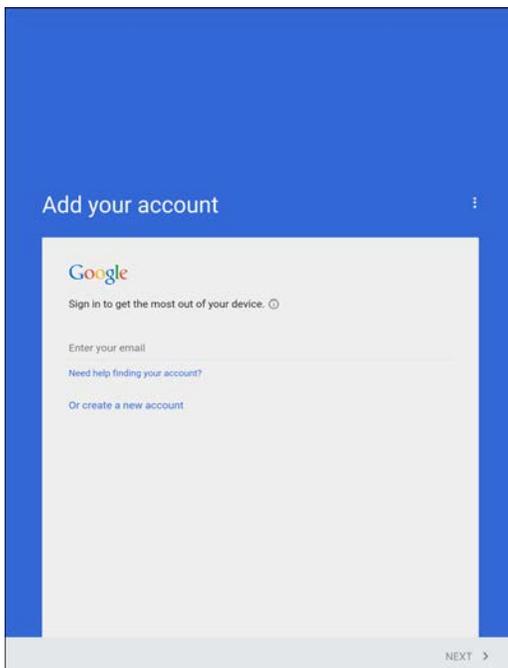

4. Enter your password, and then tap **Next**.

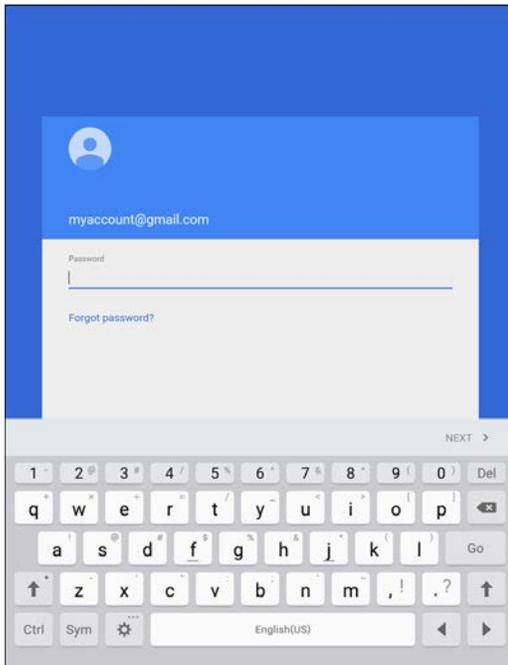


5. Follow the prompts to review and agree to the Terms of Service and Privacy Policy, and then tap **Accept**.
 6. After your tablet connects with the Google servers, select the items you would like to sync with your tablet and then tap **Next**.
- ❖ You are signed in to your Google Account, and you can access both of your Gmail accounts from the Gmail app.

Switching Between Gmail Accounts


If you have more than one Gmail account set up, you can switch between them in the Gmail app.

1. From home, tap **Apps**  > **Google**  > **Gmail** .

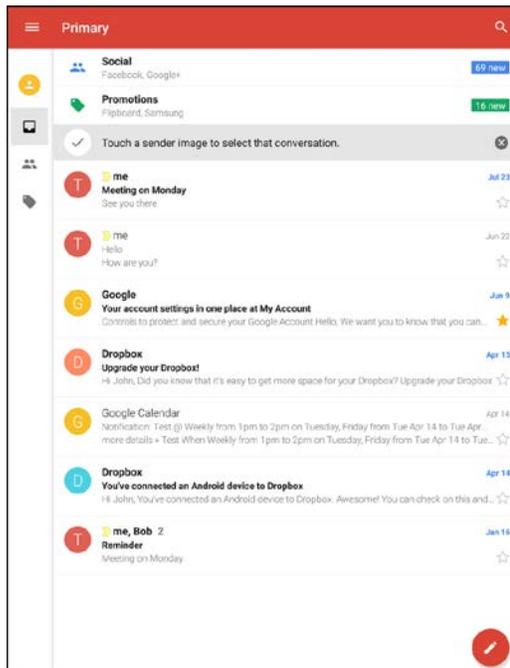

- ❖ The Primary inbox opens.

2. Tap **Menu** .

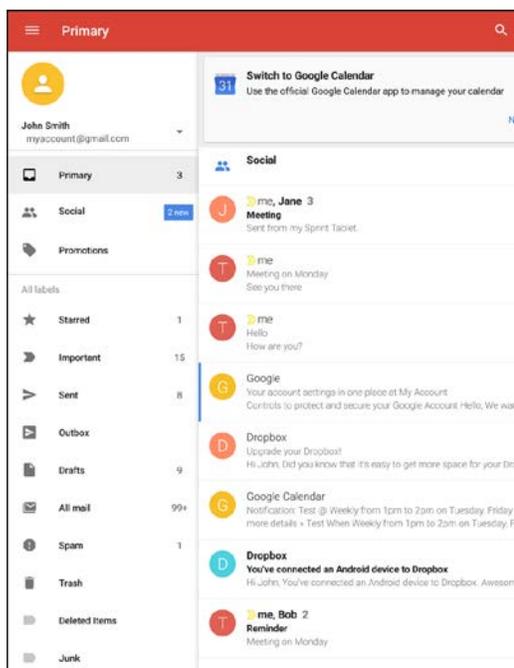

3. Tap the icon for the account you want to view from the list at the top of the menu.

- ❖ The selected account inbox is displayed.

Email


Use the Email application to send and receive email from your webmail or other accounts, using POP3 or IMAP, or access your Exchange ActiveSync account for your corporate email needs.

Set Up an Email Account

Your tablet supports several types of email accounts and allows you to have multiple email accounts set up at one time.

Before setting up an email account, make sure you have the username (user ID), password, server name, etc., so you can get set up successfully.

1. From home, tap **Apps**  > **Email** .

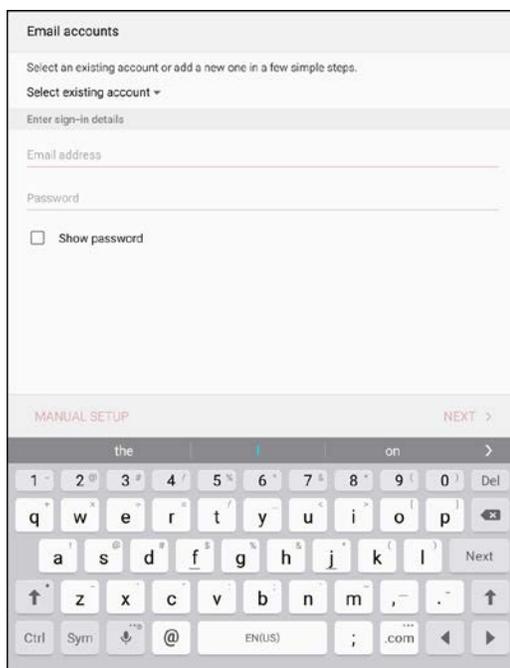

- ❖ A window for adding an account appears if no email account has been previously set up.
2. Follow the onscreen instructions to set up your email account.
 - ❖ The email account is set up and you will begin receiving email.


Add an Email Account

You can add several types of personal email accounts, such as POP3 and IMAP accounts, on your tablet.

Add an Email Account from the Email App


You can add email accounts directly from the email app, even if you have another email account set up.

1. From home, tap **Apps**  > **Email** .

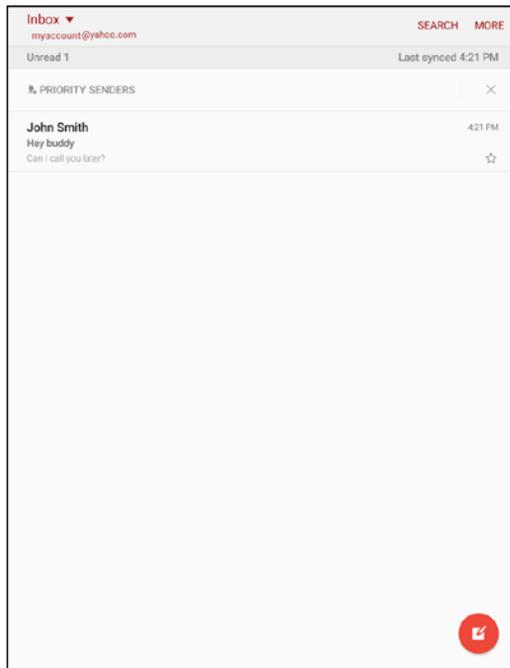

- ❖ The email inbox opens.

2. Tap **More** > **Settings** > **Add account**.

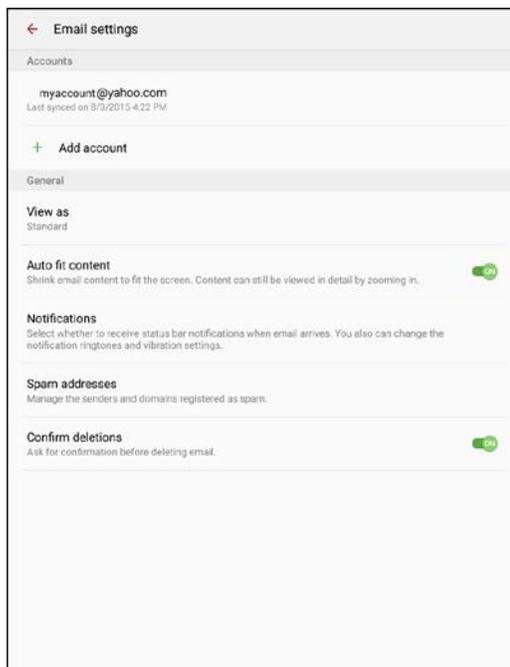


3. Follow the onscreen instructions to complete the account setup.

- ❖ The email account is added and you will begin receiving email for the account.


Add an Email Account from the Settings Menu

You can also set up email accounts from the **Settings > Accounts** menu.


1. From home, tap **Apps**  > **Settings**  > **Accounts**.

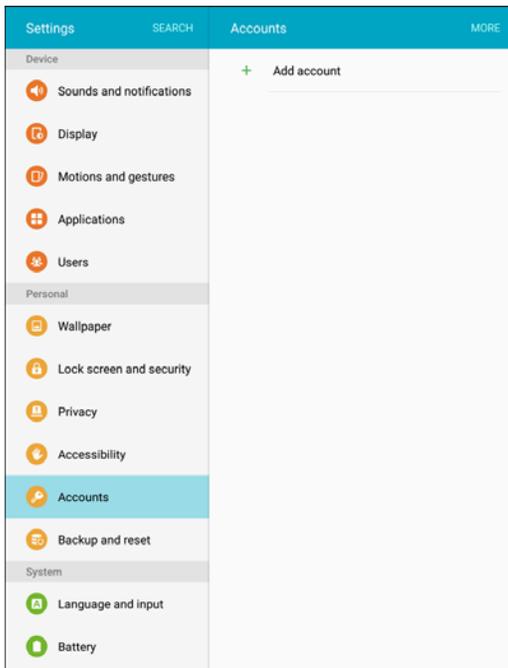


2. Tap **+ Add account > Email**.

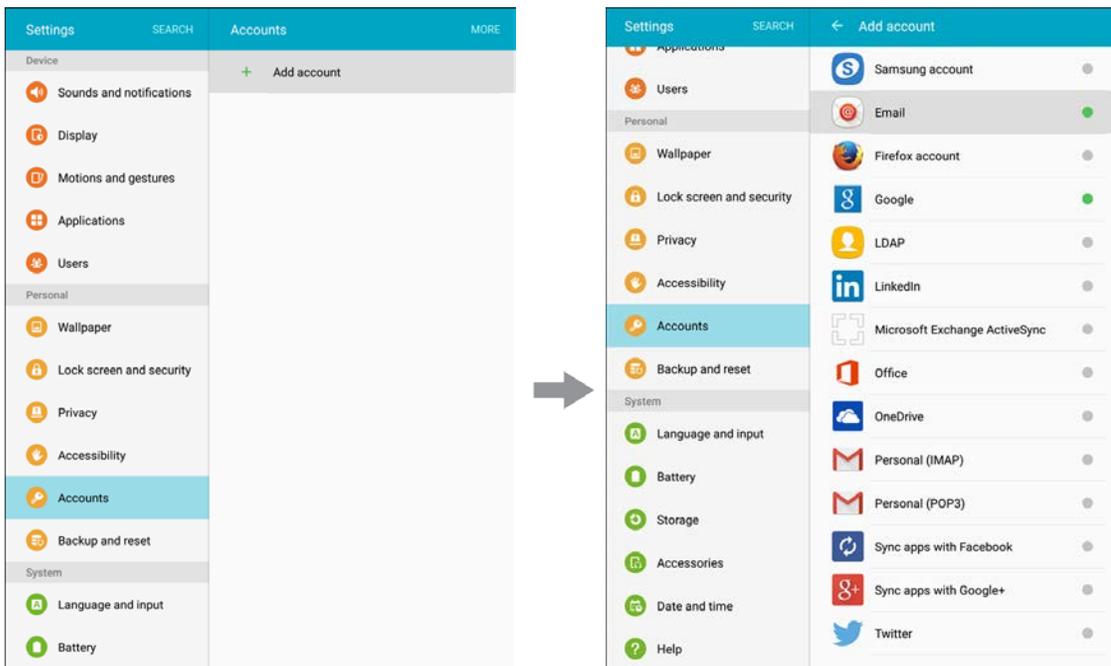


3. Enter the **Email address** and **Password** for the email account, and then tap **Next**.

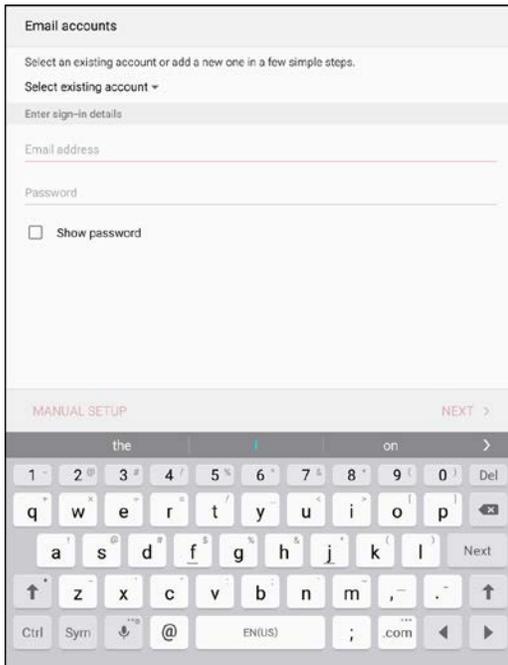

- ❖ Tapping **Next** prompts your tablet to attempt a “regular” email setup and test the incoming and outgoing servers.
 - If you have custom settings you need to configure, tap **Manual Setup** and enter your settings. These may include mail type, user name, password, server, security type, etc.
4. Select your sync settings, and then tap **Next**.

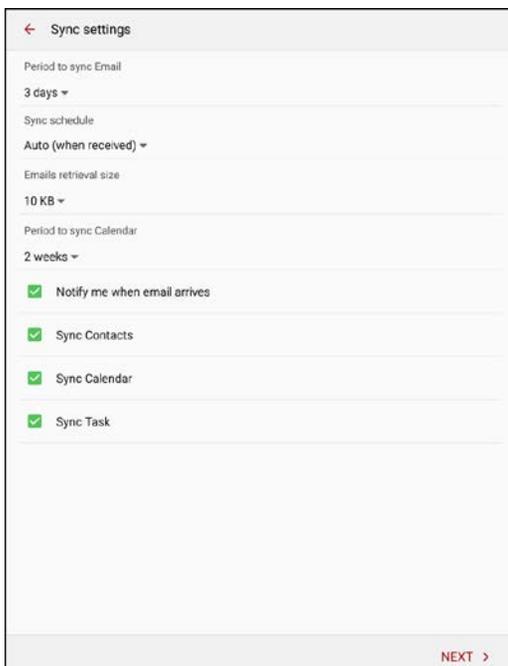

5. Enter an account name and a name for outgoing email and tap **Done** to complete setup.

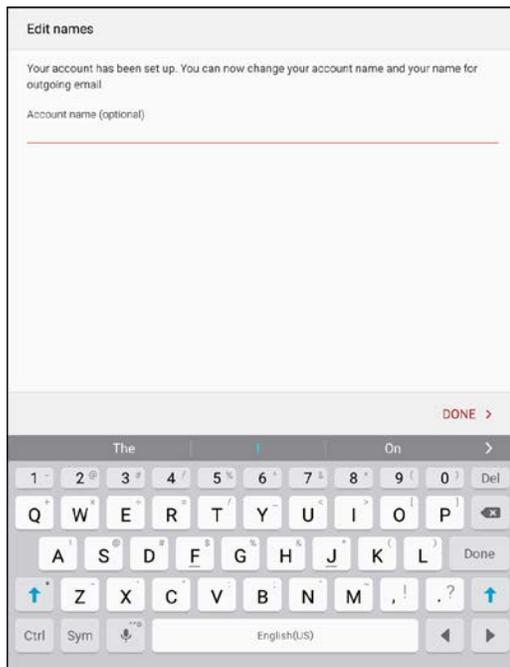

- ❖ The email account is set up and you will begin receiving email for the account.


Important: If the account type you want to set up is not in the tablet database, you will be asked to enter more details. You should get all pertinent information for the email account, such as incoming and outgoing server settings, before you proceed.

Add an Exchange ActiveSync Account


If you synchronize your tablet with your Exchange ActiveSync account, you can read, manage, and send email in the same easy way as with a POP3/IMAP account. However, you can also access some powerful Exchange features.

Important: Before setting up a Microsoft Exchange ActiveSync Account, contact your company's Exchange Server administrator for required account settings information.

1. From home, tap **Apps**  > **Settings**  > **Accounts** > **Add account** > **Microsoft Exchange ActiveSync**.

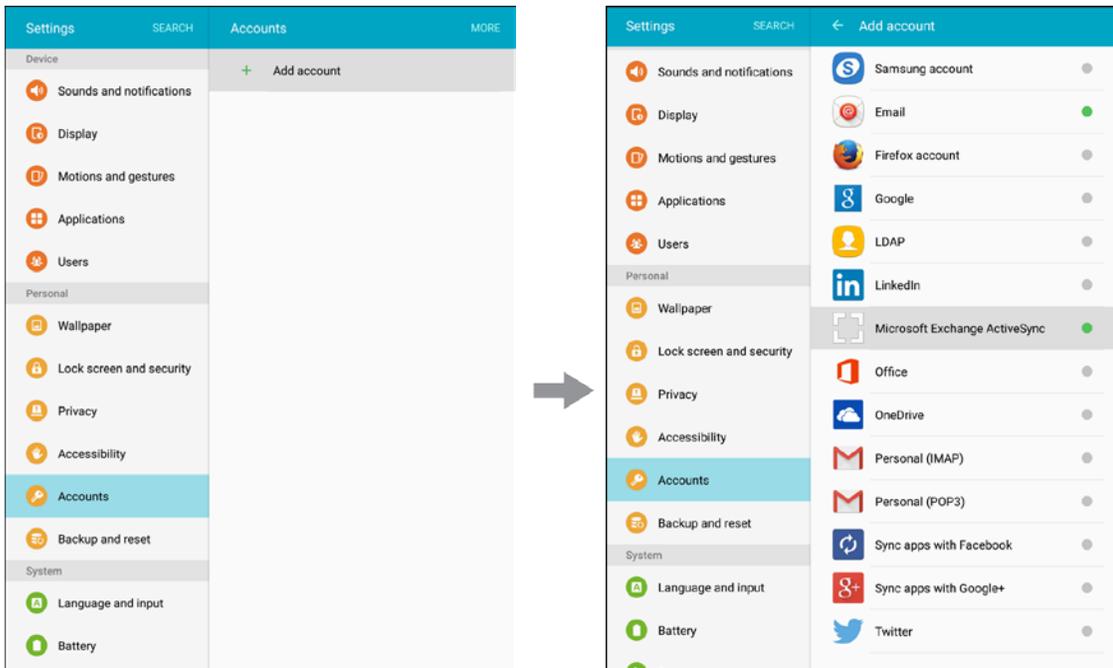


2. Enter the **Email address** and **Password** for the email account, and then tap **Manual setup**.

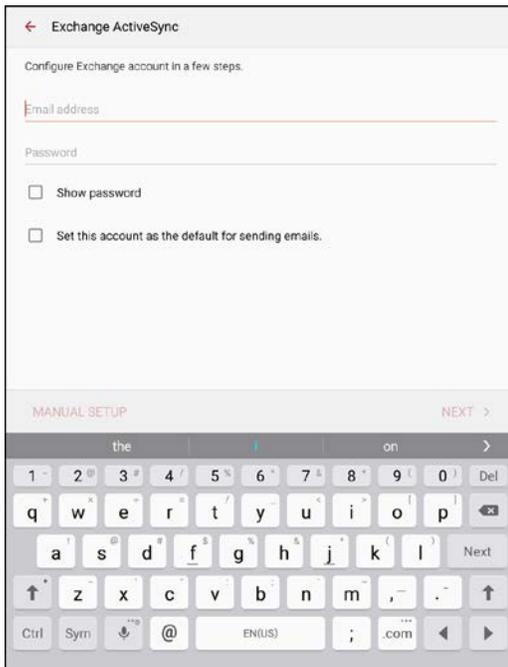

3. Enter the required information.
 - **Email address:** Enter your email address.
 - **Domain\username:** Enter your network domain and username, separated by “\”.
 - **Password:** Enter your network access password (case-sensitive).

- **Show password:** Display the password as you enter it.
 - **Exchange server:** Enter your system's Exchange server remote email address. Obtain this information from your company network administrator.
 - **Use secure connection (SSL):** Tap to place a checkmark in the box, if your system requires SSL encryption.
 - **Use client certificate:** Tap to place a checkmark in the box, if your system requires certification.
4. Tap **Next**, and then follow the prompts to configure options for the account.

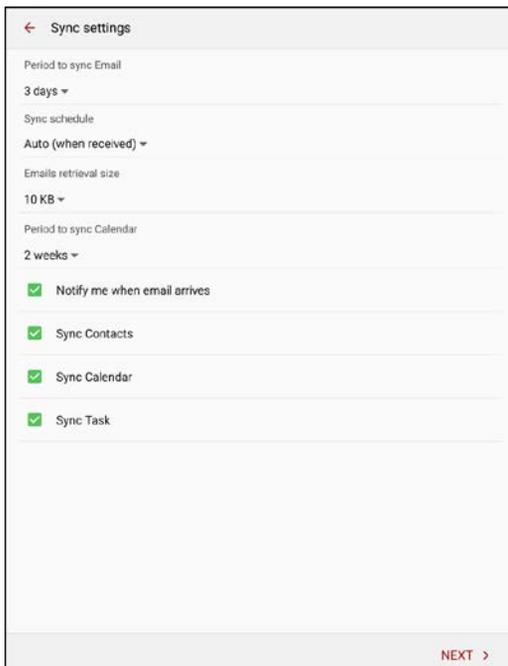


5. Enter an account name and a name for outgoing email. Tap **Done** to complete setup.
- ❖ Your corporate email account is set up and you will begin receiving email for the account.

Compose and Send Email


Compose and send email using any account you have set up on your tablet. Increase your productivity by attaching files such as pictures, videos, or documents to your email messages.

1. From home, tap **Apps**  > **Email** .

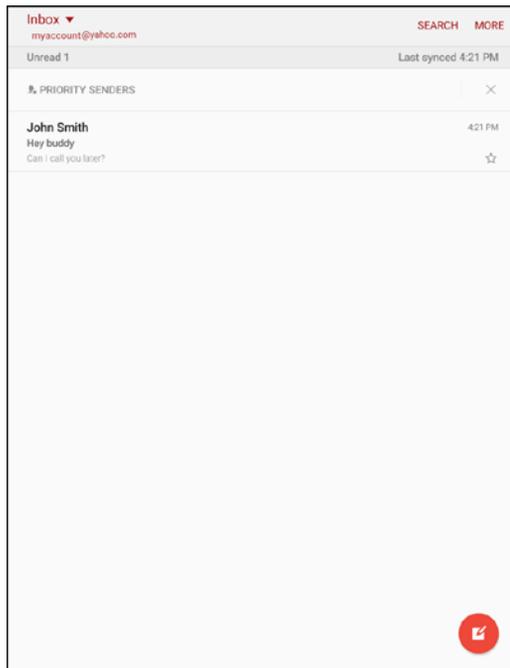

- ❖ The email inbox opens.
 - If you want to switch to a different email account, tap the account name at the top of the screen and select another account.
 - You can also view multiple inboxes at once. Tap the account name at the top of the screen and then tap **Combined inbox** to see messages from all your configured email accounts.


2. Tap **Compose** .

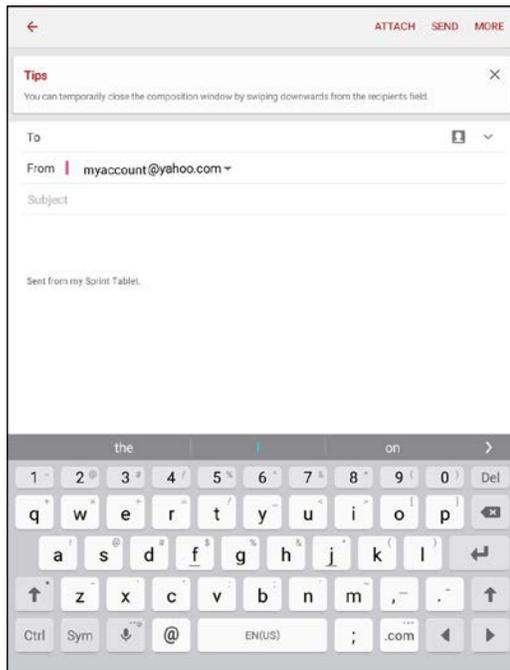

❖ The email composition window opens.

3. Enter the message recipient(s), subject, and message.

4. Tap **SEND**.

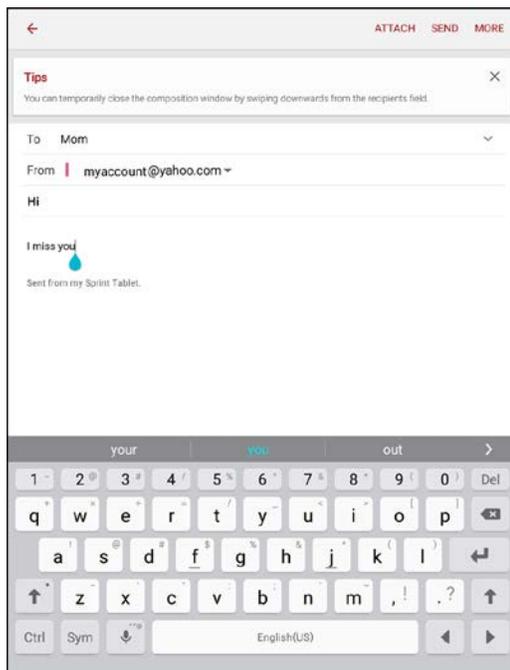


❖ The email message is sent.

Open Email Messages


You can open and read email messages directly from the email inbox. Reading and replying to email on your tablet is as simple as on your computer.

1. From home, tap **Apps**  > **Email** .

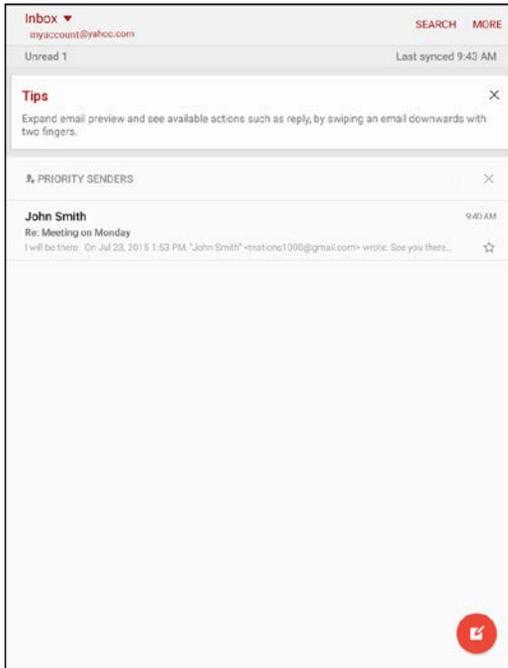

- ❖ The email inbox opens.

2. Tap the message you want to view.

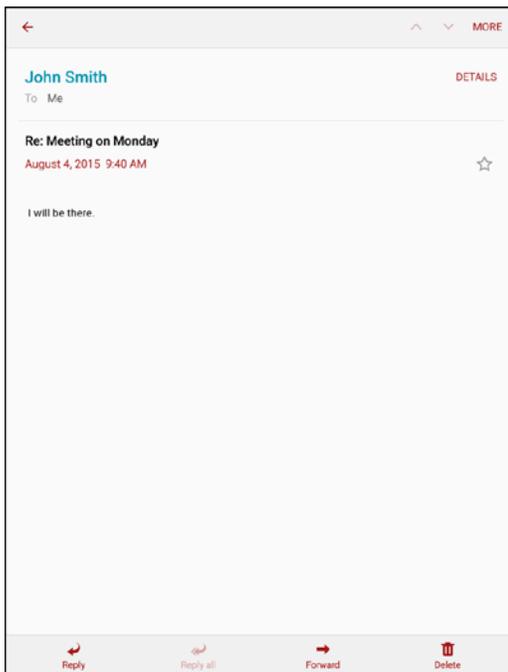

- ❖ The email message opens.

Tip: Tap the account name at the top of the screen to switch to a different email account.

3. Tap **Reply**  or **Reply all**  to reply to the message.


Options When Reviewing Email Messages

- **Resetting Mail as Unread:** Touch and hold a read message, and then tap More > Mark as unread.
- **Deleting Email:** From the Inbox, touch and hold a message, select any additional messages, and then tap **Delete** > **Delete**.
 - When reading an email, tap  **Delete** > **Delete**.
- **Replying to Email Messages:** With an email message open, tap **Reply**  or **Reply all** , compose your reply message, and tap **Send**.
- **Forwarding Email Messages:** With the email message open, tap **Forward** , enter a recipient and an additional message, and tap **Send**.

Delete an Email Account


You can delete an email account from your tablet if you no longer wish to receive messages for the account on your tablet.

1. From home, tap **Apps**  > **Email** .

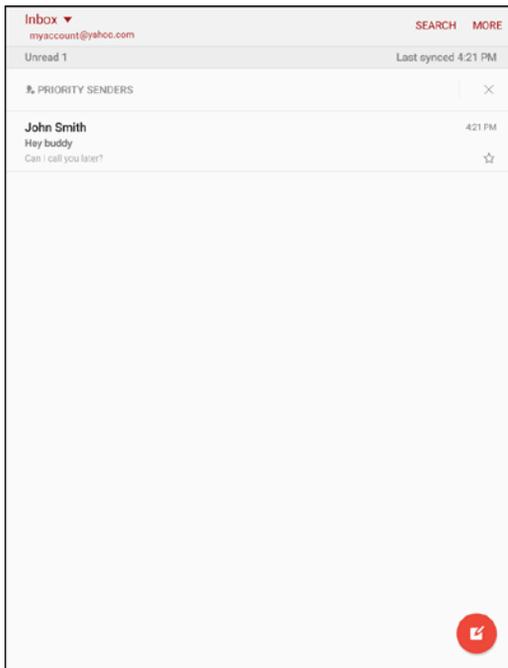


- ❖ The email inbox opens.

2. Tap **More** > **Settings**.

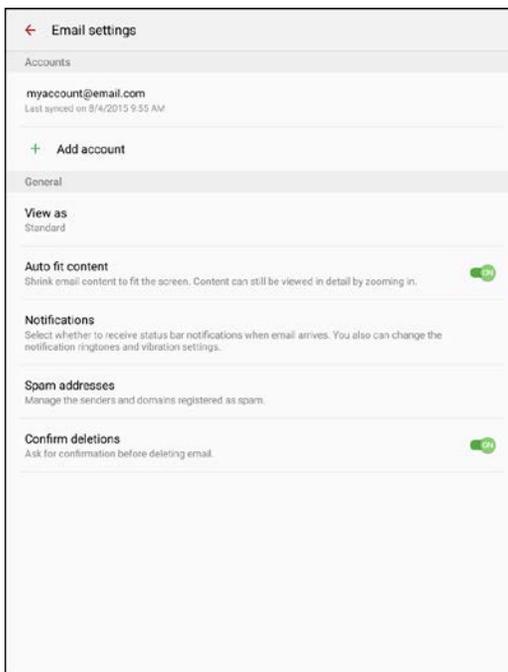

3. Tap the account name, and then tap **Remove > Remove**.

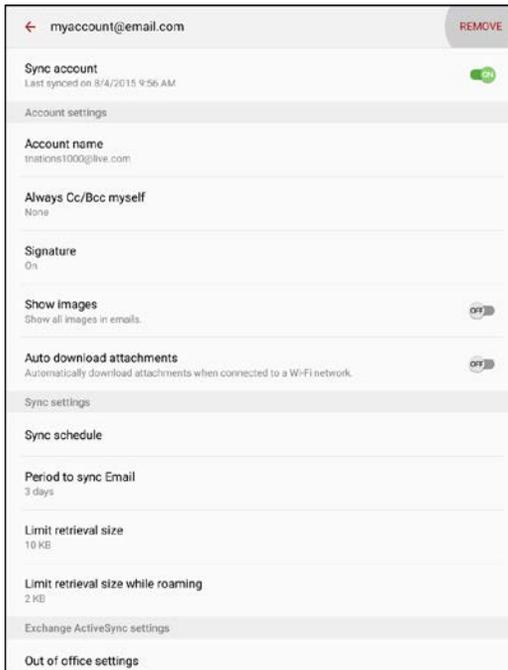


- ❖ The account is deleted from your tablet

Manage Your Email Inbox

Your email inbox provides management options for viewing, sorting, and deleting your email messages.

View Your Email Inbox

1. From home, tap **Apps**  > **Email** .

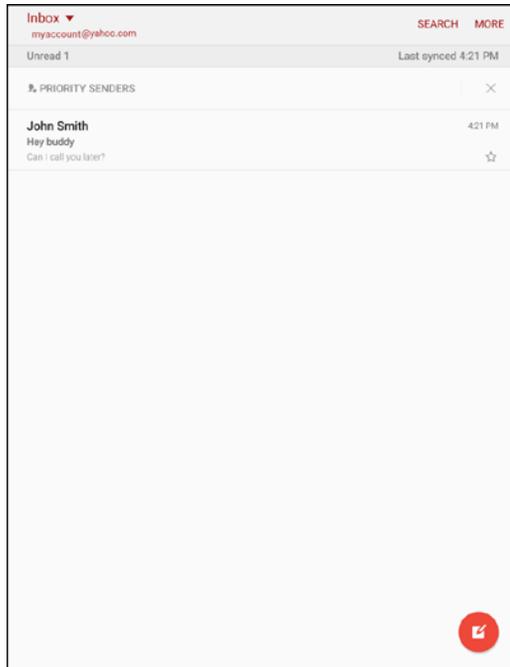

❖ The email inbox opens.

2. Tap the email account at the top of the screen to select a different inbox, or tap **Combined view** to see all your email inboxes at once.

Filter Email Messages

1. On the email account inbox, tap **More > Sort by**.
2. Select options for filtering email messages.

Delete Email Messages

1. On the email account inbox, touch and hold the message you want to delete.
 - Tap additional emails to delete.
2. Tap **Delete**.

Priority Senders

Messages from priority senders automatically display at the top of your email inbox. Emails from priority senders display  in their subject line.

To add priority senders:

1. On the email account inbox, tap **Priority senders**.
2. Tap  **Tap to add priority senders**.
3. Select a recommended contact, or tap the **Contacts** tab to select additional contacts.
4. Tap **Done**.

To view only emails from priority senders:


- On the email account inbox, tap  **Priority senders**.

Exchange ActiveSync Email Features


Set options for your corporate Exchange ActiveSync email messages, including synchronization options, out-of-office messages, account settings, and so on.

To access Exchange ActiveSync settings:


1. From home, tap **Apps**  > **Email** .

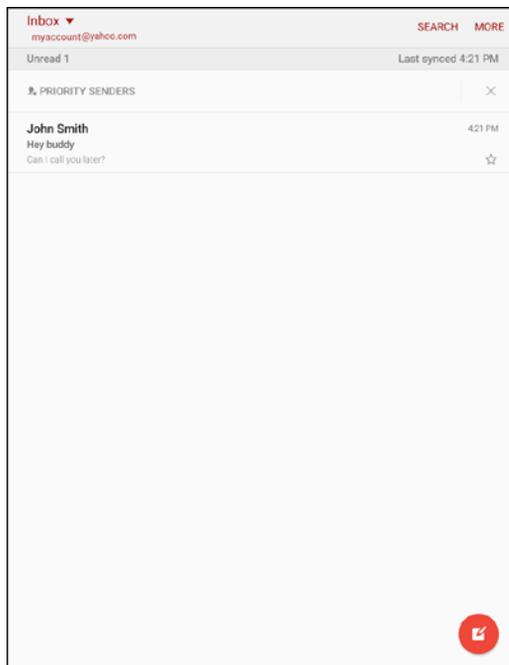

2. Tap **More > Settings**.

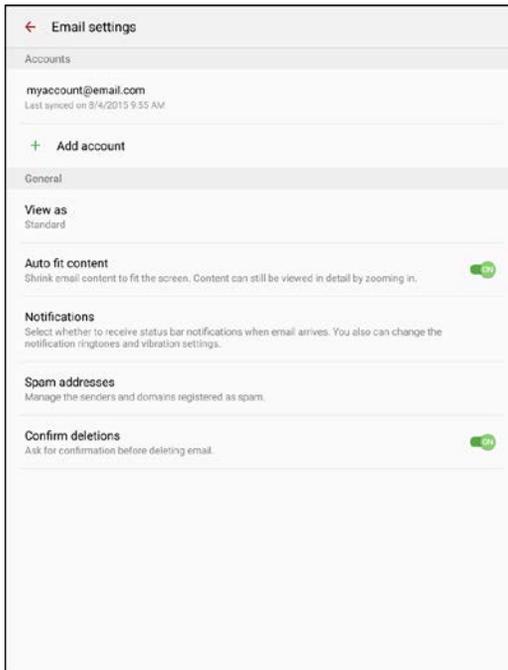

3. Tap the **Exchange ActiveSync** account name to view its options.

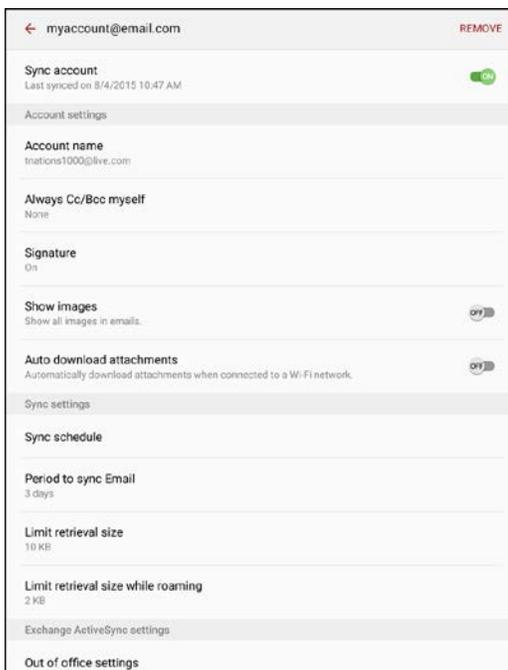

- The following options are available:
 - **Sync account:** Keep the account synchronized on your tablet.
 - **Account name:** Change the account name.

- **Always Cc/Bcc myself:** Send a copy of each email you send to yourself.
- **Signature:** Enable and configure your signature for each email you send.
- **Show images:** Show all images in emails.
- **Auto download attachments:** Automatically download attachments when connected to a Wi-Fi network.
- **Sync schedule:** Configure a schedule for syncing your email account.
- **Period to sync Email:** Configure how far back in time you want to sync your email account.
- **Limit retrieval size:** Set a limit to the size of email messages you want to receive on your tablet.
- **Limit retrieval size while roaming:** Set a different email size limit when your tablet is on roaming.
- **Out of office settings:** You can set your Out of Office status and auto-reply message right from your tablet.
- **Folder sync settings:** Select which email folders to sync with the server.
- **Period to sync Calendar:** Set the time period for syncing your calendar with the server.
- **Empty server trash:** Delete the content of the trash folder on the server.
- **In case of sync conflict:** Select whether the device or the server has priority during a sync conflict.
- **Sync Contacts:** Sync your Contacts with your Exchange account.
- **Sync Calendar:** Sync your calendar with your Exchange account.
- **Sync Task:** Sync your tasks with your Exchange account.
- **Security options:** Manage encryption and signature options for outgoing email.
- **Exchange server settings:** Modify the Exchange server settings for this email account.

Data Services General Information (4G LTE Network)

The following topics will help you learn the basics of using your data services, including managing your user name, launching a data connection, and navigating the Web with your tablet.

Important: Certain data services requests may require additional time to process. While your tablet is loading the requested service, the touchscreen or QWERTY keyboard may appear unresponsive when in fact they are functioning properly. Allow the tablet some time to process your data usage request.

4G LTE

The 4G LTE network provides your tablet with wireless Internet access over greater distances than Wi-Fi and delivers data transfer rates of up to 60 Mbps. To connect your tablet to a 4G LTE network, you need to be in an area covered by a 4G LTE network.

For more information about the availability of Sprint 4G LTE service in your location, visit sprint.com/coverage.

Note: The availability and range of the network depends on a number of factors, including your distance to the base station, and infrastructure and other objects through which the signal passes.

Your User Name


When you buy your tablet and sign up for service, you're automatically assigned a user name, which is typically based on your name and a number, followed by "@sprintpcs.com". (For example, the third John Smith to sign up for Sprint data services might have jsmith003@sprintpcs.com as his user name.)

When you use data services, your user name is submitted to identify you network. Your user name is automatically programmed into your tablet. You don't have to enter it.


Find Your User Name

You can find your user name through your tablet's device menu.

1. From home, tap **Apps**  > **Settings**  > **About device** .

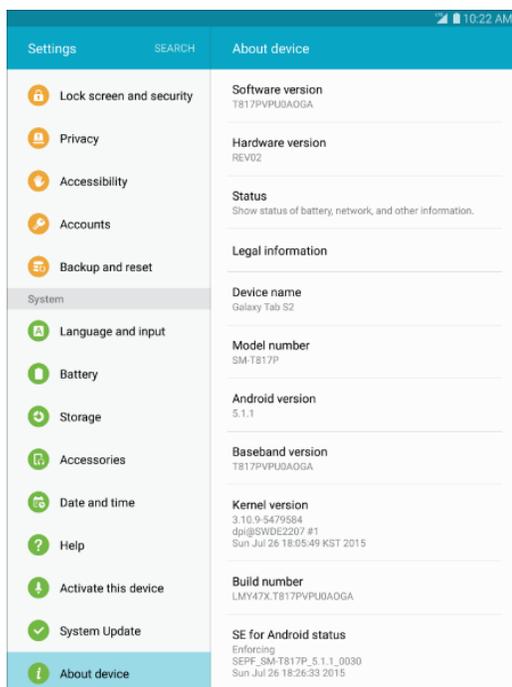

2. Tap **Status**.

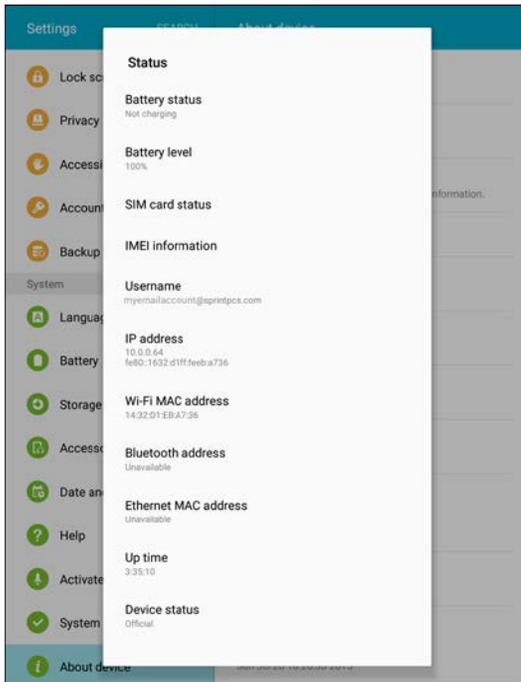


❖ You will see your user name under the “Username” heading.

Update Your User Name

If you choose to change your user name and select a new one online, or make any changes to your services, you must then update the profile on your tablet.

1. From home, tap **Apps**  > **Settings**  > **System Update** .

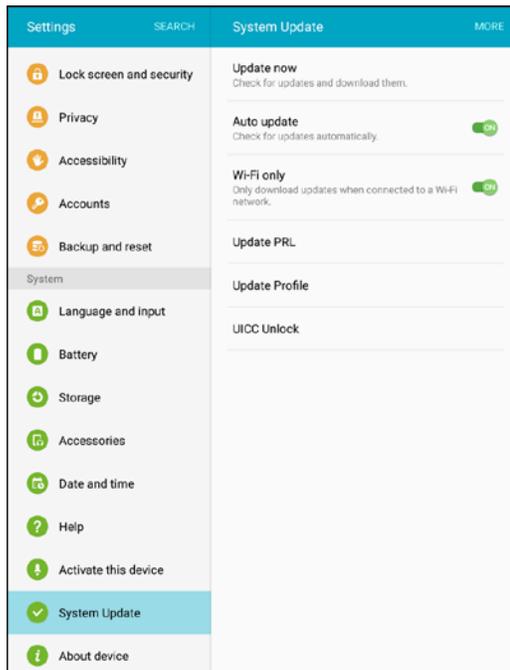

2. Tap **Update profile**.

❖ Your tablet will download and install the profile update.

Data Connection Status and Indicators

Your tablet displays the current status of your data connection through indicators at the top of the screen. The following symbol is used:

Icon	Status
	Network (full signal): The number of bars indicates the strength of the signal. More bars mean a better signal.

Browser

Your tablet's Web browser gives you full access to both mobile and traditional websites on the go using 4G or Wi-Fi data connections.

SSL/TLS

SSL (Secure Sockets Layer) and TLS (Transport Layer Security) are protocols for encrypting sent/received data. While in a screen connected by SSL/TLS, data is encrypted to safely send/receive private information, credit card numbers, corporate secrets, etc., and provide protection against online threats (eavesdropping, falsification, impersonation, etc.).


! SSL/TLS Cautions

When opening a secured page, users must decide as their responsibility whether or not to open the page with use of SSL/TLS. Sprint and the applicable Certification Authorities make no guarantees whatsoever to users regarding security of SSL/TLS.

Use the Browser

Launching the browser is as easy as tapping an icon.

- From home, tap **Apps**  > **Internet** .

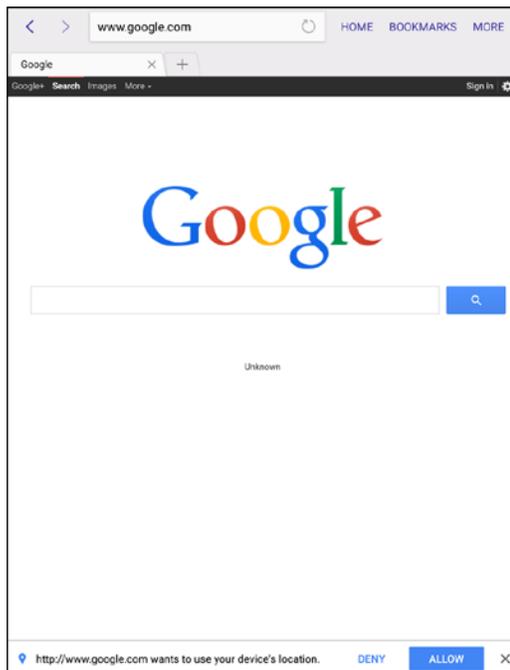


- ❖ The browser opens.
 - The first time you launch Internet, you may be prompted to enter your 10-digit wireless phone number to access the Sprint Mobile home page.
 - You can also launch the browser by tapping a URL in a text message, email message, or Gmail message.

Tip: To change the tablet's default launch page to your current page, tap **More > Settings > Homepage > Current page**.

Add a Bookmark


Bookmark favorite sites using the browser menu options.

1. From home, tap **Apps**  > **Internet** .

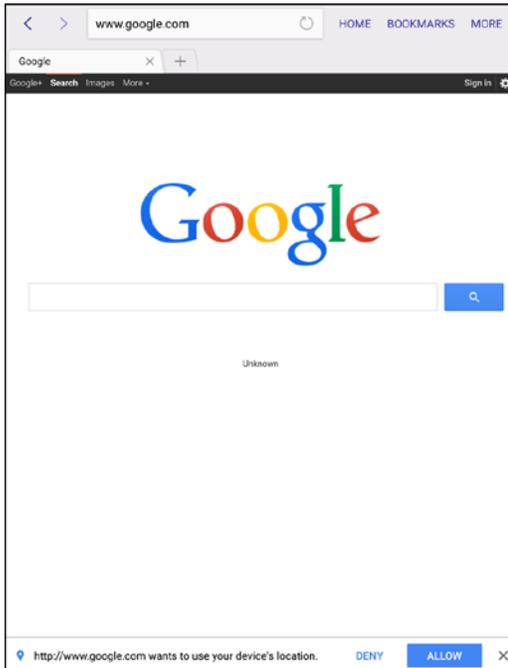

❖ The browser opens.

2. Navigate to the Web page you want to bookmark, and tap **Bookmarks** > **Add**.

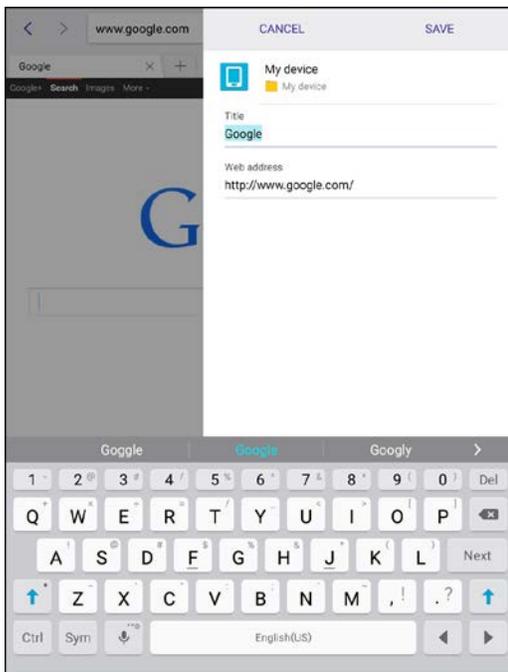

❖ The add bookmark window opens.

3. Check or change the bookmark title, URL, etc., and then tap **Save**.

- ❖ The Web page is added to bookmarks.


Bookmark Options

- **Edit Bookmarks:** From the browser, tap **Bookmarks**, touch and hold a bookmark, tap **More > Edit bookmark**, edit the bookmark, and then tap **Save**.
- **Delete Bookmarks:** From the browser, tap **Bookmarks**, touch and hold a bookmark, and then tap **Delete**.

View Browser History


Use the browser menu options to view your browsing history.

1. From home, tap **Apps**  > **Internet** .

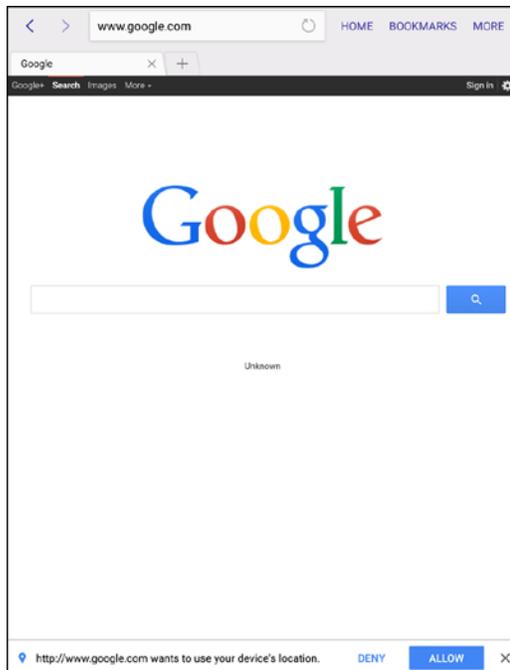


- ❖ The browser opens.

2. Tap **Bookmarks**.

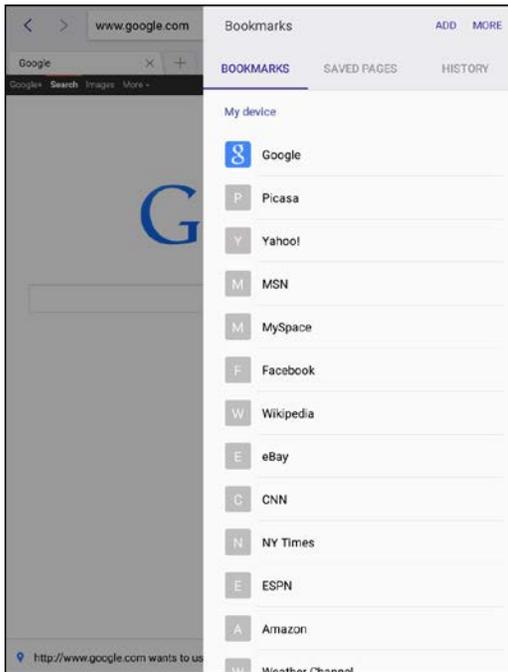

❖ The bookmark window opens.

3. Tap the **History** tab, and then tap an entry.

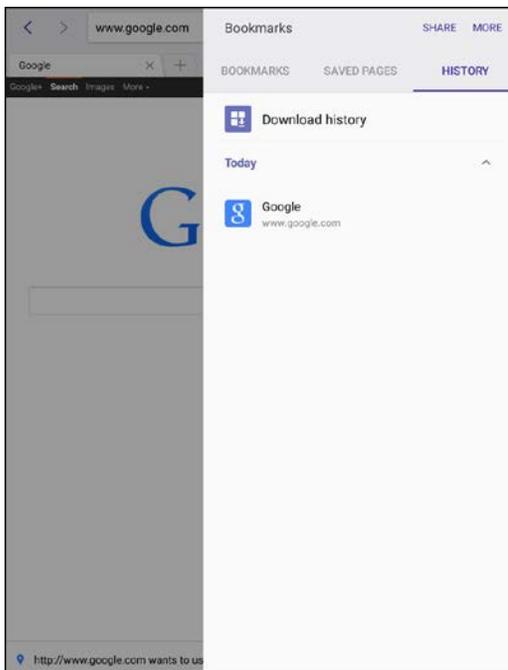


❖ The Web page opens.

Open New Browser Tab

Use tabs to switch between websites quickly and easily.

1. From home, tap **Apps**  > **Internet** .

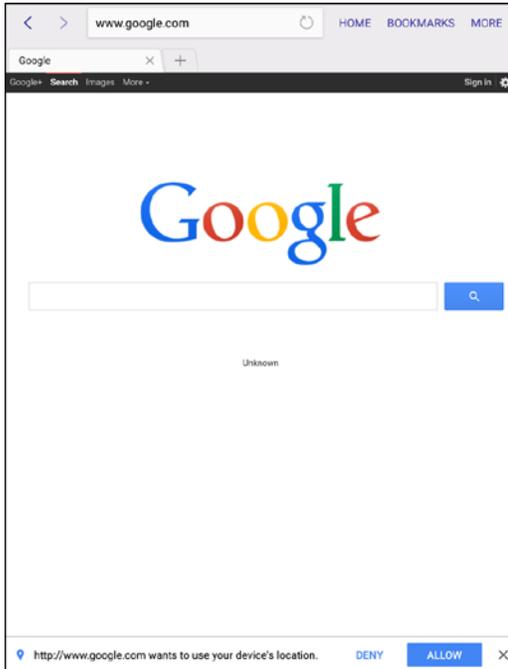

❖ The browser opens.

2. Tap **+** **New tab**.

❖ The tab opens.

Browser Settings

Configure Internet browser settings.


1. From home, tap **Apps**  > **Internet** .
2. Tap **More** > **Settings**.

For more details, see [Internet Settings](#).

Chrome Browser


In addition to the default “Internet” Web browser, your tablet supports the Chrome mobile Web browser. If you are signed in with a Google Account, the Chrome browser will import all your bookmarks and other Web preferences for use on your tablet.

1. From home, tap **Apps**  > **Chrome** .

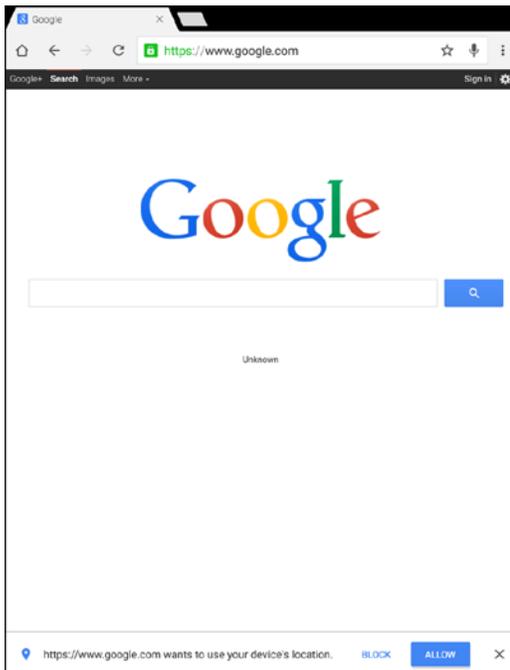

❖ Chrome opens.

2. Tap the address bar at the top and enter search words (for a Google search) or a Web address (URL).

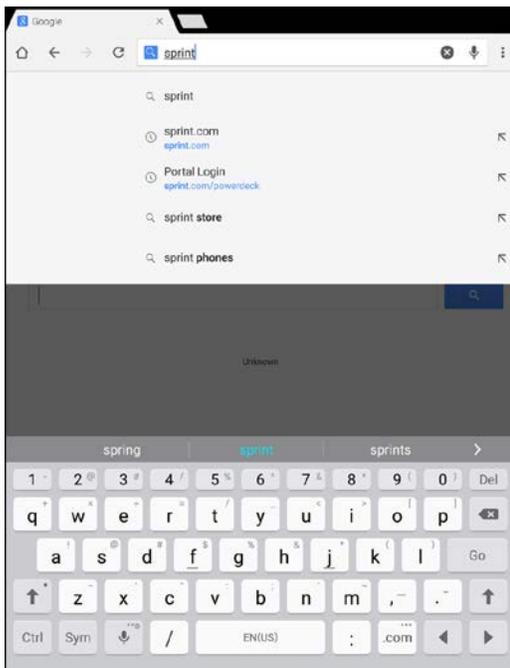

❖ The search results appear or a Web page opens.

Chrome Support

- To find on-tablet help with Chrome, from Chrome, tap **More options**  > **Help & feedback**.
 - ❖ A Web page will open displaying Google help for Chrome.


Tip: For more information, from your computer, visit: google.com/chrome.

Camera and Video

You can use the camera or video camera to take and share pictures and videos. Your tablet comes with a 16 megapixel rear camera and a 5 megapixel front camera that let you capture sharp pictures and videos.

Camera Overview

The camera's viewfinder screen lets you view your subject and access camera controls and options.

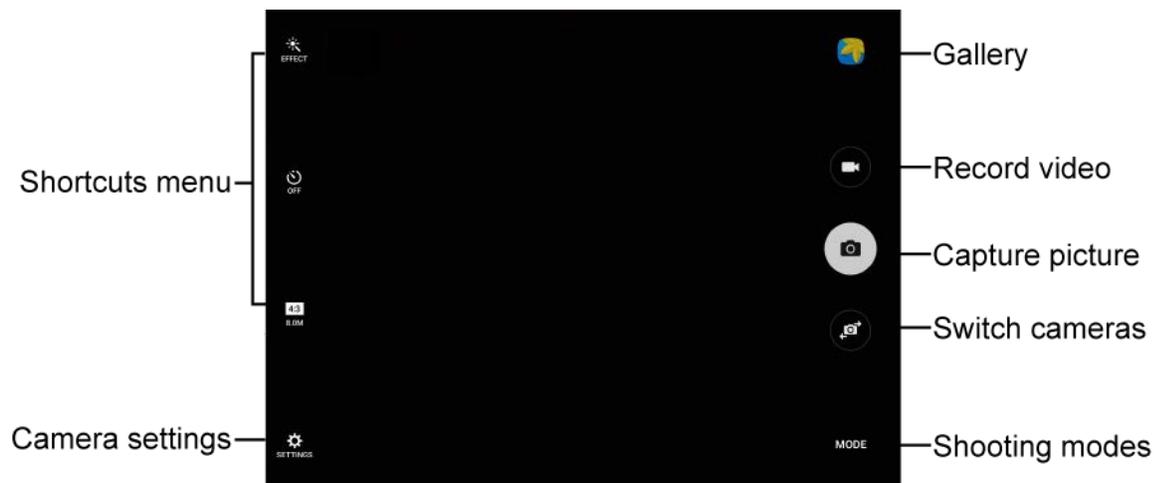


- **Shortcuts Menu:** Gives quick access to frequently-used camera settings:
 - **Effect:** Add a special graphical effect.
 - **Timer:** Take time-delayed pictures or videos.
 - **Beauty:** Take a picture with lightened faces for gentler images (front camera only).
 - **Picture size:** Change the resolution of pictures.
-  **Camera settings:** Opens the camera settings menu and lets you change additional camera settings. See [Camera Options and Settings](#).
-  **Gallery:** View your picture or video in the Gallery application.
-  **Record video:** Begin recording video.
-  **Capture picture:** Take a picture.
-  **Switch cameras:** Switch between the rear camera and the front camera.
-  **Shooting modes:** Select a shooting mode.


Learn About Your Tablet's Camera

For an overview of your tablet's camera and its features, access the tablet settings menu.

1. From home, tap **Apps**  > **Camera** .

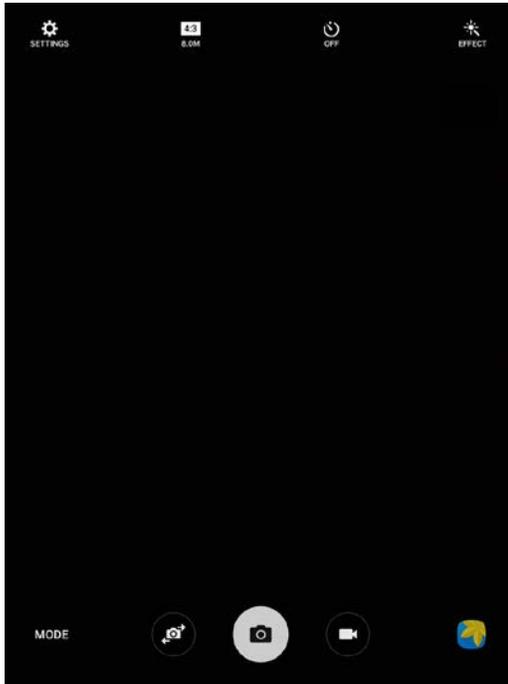

2. Tap **Settings**  > **Help**, and tap a topic to learn more.

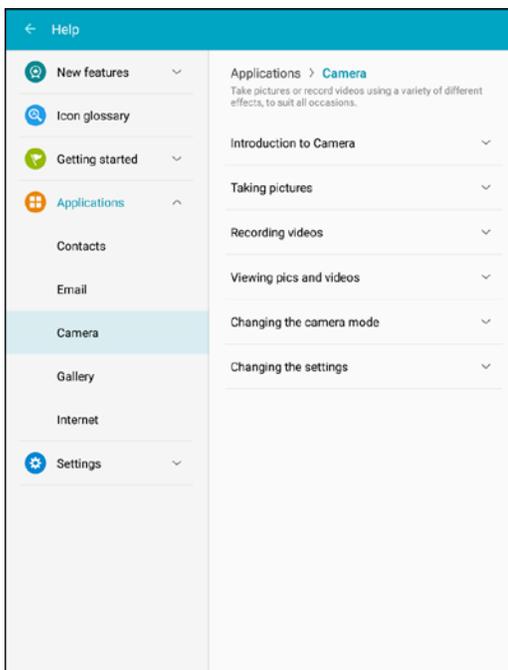

Take Pictures and Record Videos

The following topics teach you how to take pictures and record videos with your tablet's camera.

Capturing Pictures/Videos

- **File Format for Pictures:** File format for pictures is JPEG (.jpg).
- **File Format for Videos:** File format for videos is MPEG4 (.mp4).

! Camera Cautions

If Lens Becomes Dirty: Fingerprints/smudges on lens prevent capturing of clear still images/videos. Wipe lens with a soft cloth beforehand.


Avoid Exposure to Direct Sunlight: Be careful not to expose lens to direct sunlight for long periods. This may discolor color filter and affect color of images.

Take a Picture

You can take high-resolution pictures using your tablet's camera.


Note: Prior to using the camera, remove the plastic protective covering from the camera lens.

1. From home, tap **Apps**  > **Camera** .

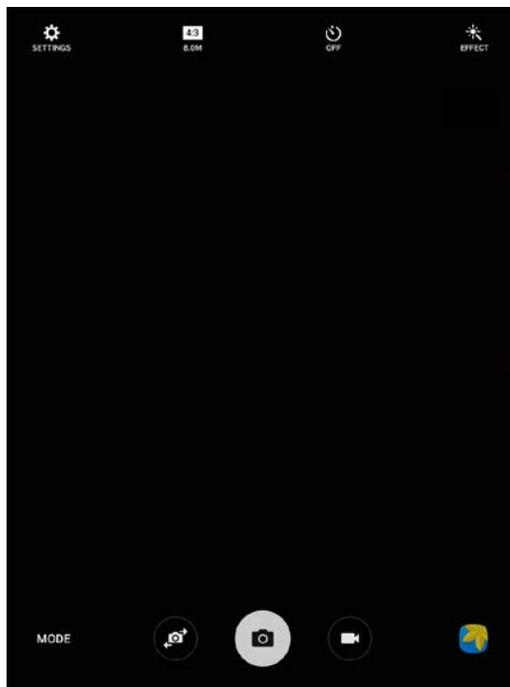

- ❖ The camera viewfinder appears.

2. Aim the camera at your subject and then tap .

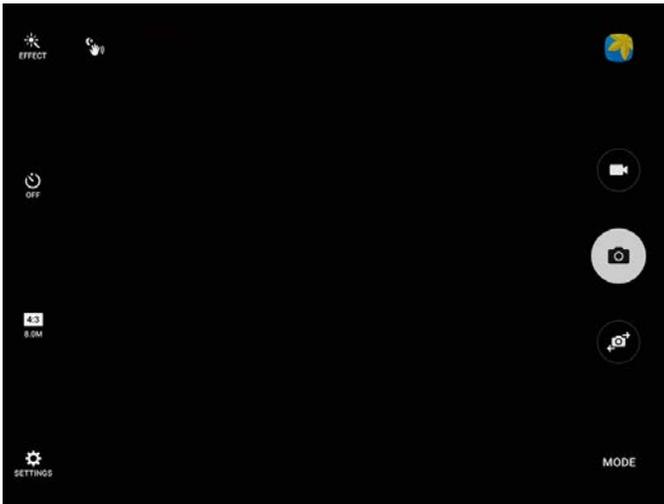


- ❖ The shutter clicks and the picture is captured and saved to your tablet.

Tip: You can launch the camera from the lock screen. Swipe  up from the lock screen to open the camera.

Record Videos


Record high-quality videos using your tablet's video camera.

1. From home, tap **Apps**  > **Camera** .

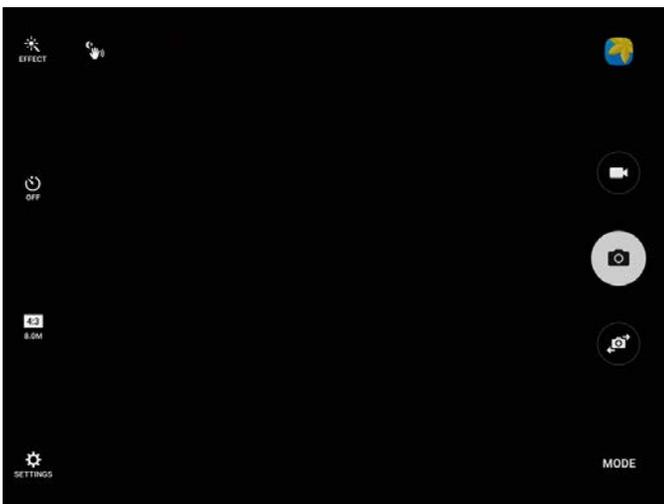

- ❖ The camera viewfinder appears.

2. Aim the camera at your subject and then tap **Record** .

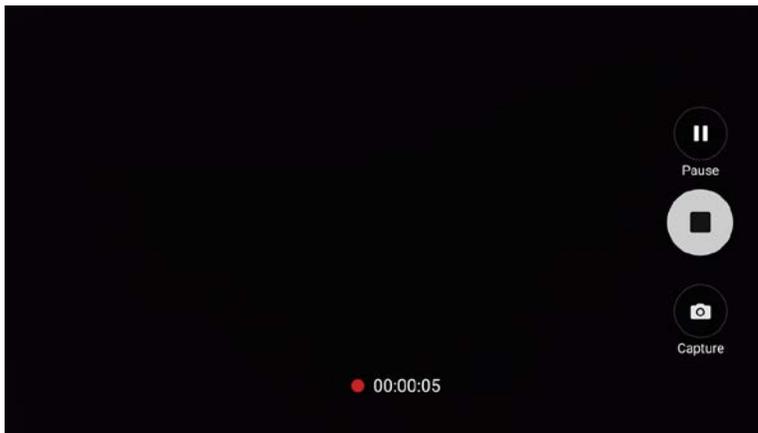

❖ Video recording begins.


3. Tap  to pause recording. Tap  to stop recording.

❖ The camera stops recording and the video is captured and saved to your tablet.

Shooting Modes

Your tablet's camera offers many shooting modes, to make your pictures or videos special.

1. From home, tap **Apps**  > **Camera** .

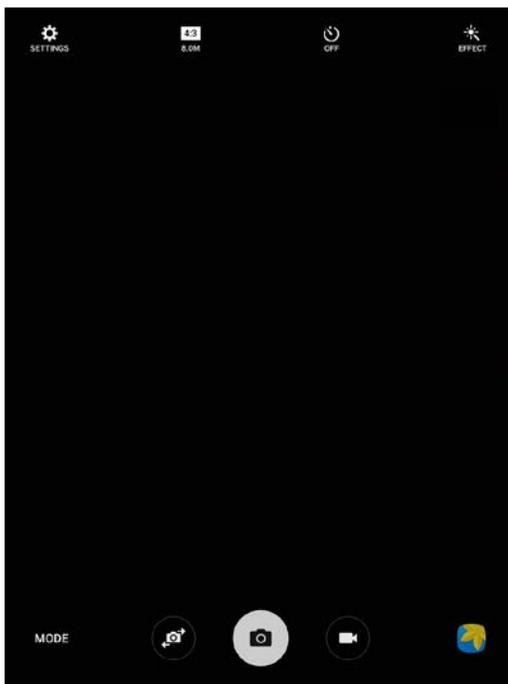

❖ The camera viewfinder appears.

2. On the Camera screen, tap  **Mode** to choose a shooting mode. Scroll available modes, and then tap a mode to select it.

Both cameras

- **Virtual shot:** Create multi-directional views of objects.
- **Download:** Download additional shooting modes from the Galaxy Apps store.

Rear camera

- **Auto:** Allow the camera to evaluate the surroundings and determine the ideal mode for the picture.
- **Pro:** Manually adjust the ISO sensitivity, exposure value, white balance, and color tone while taking pictures.
- **Panorama:** Create a linear image by taking pictures in either a horizontal or vertical direction.
- **HDR (Rich tone):** Take multiple shots in various exposures and combine them to create soft and rich colors.
- **Shot & more:** Browse the various affects available for burst shots.
- **Dual camera:** Take pictures and record videos using the front and rear cameras at the same time. A variety of picture-in-picture styles is available.

Front camera

- **Selfie:** Take selfie shots and apply various effects, such as an airbrushed effect.
- **Interval shot:** Select the best pictures from a series of continuous shots taken at set intervals.


Note: All modes may not be shown when you tap  **Mode**, depending on your tablet's setup and which camera is active (front or rear).

View Pictures and Videos Using Gallery

Using the Gallery application, you can view pictures and watch videos that you have taken with your tablet's camera, downloaded, or copied to tablet memory. You can also take a look at your pictures and your friends' pictures that are on your social networks.


For pictures that are on your tablet, you can do basic editing such as rotating and cropping. You can also easily assign a picture as your contact picture or wallpaper and share pictures with your friends.

1. From home, tap **Apps**  > **Gallery** .

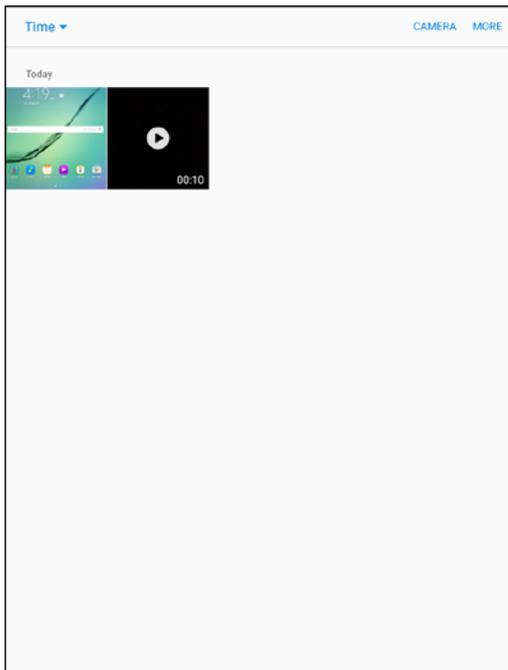

❖ The Gallery opens.

2. Tap **Time** to open a drop-down list and select other views, such as **Albums**.

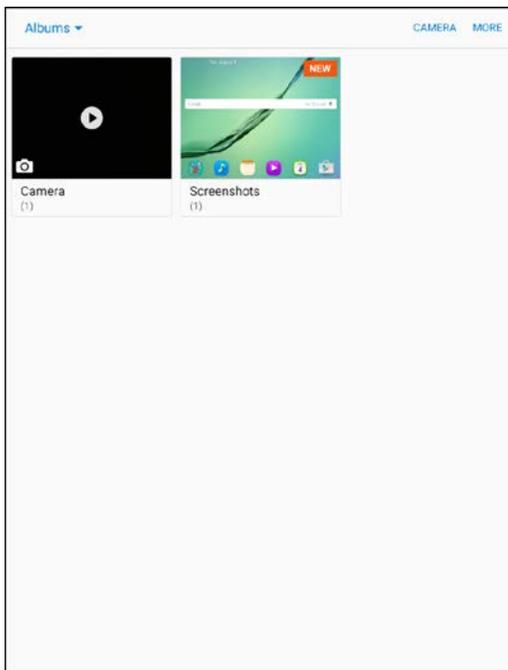


❖ The list of albums opens.

3. Tap an album to view its contents.

- To select another album, tap the **Back** key  to return to the Albums.
4. For a picture, tap a thumbnail to view the picture. While viewing a picture full-screen you can use these options:



- **Favorite:** Tag a picture as a favorite.
 - **Share:** Choose a method for sharing the picture.
 - **Edit:** Modify your picture.
 - **Delete:** Erase the current picture.
 - **Camera:** Tap to open the camera app.
 - **More:** Choose other options, including:
 - **Details:** View file details.
 - **Slideshow:** Create a slideshow.
 - **Set as contact picture:** Set the picture as the photo for a contact.
 - **Set as wallpaper:** Set the picture as wallpaper for your Home or Lock screens.
5. For a video, tap a video to select it. When the video is displayed full-screen, you can use these options:

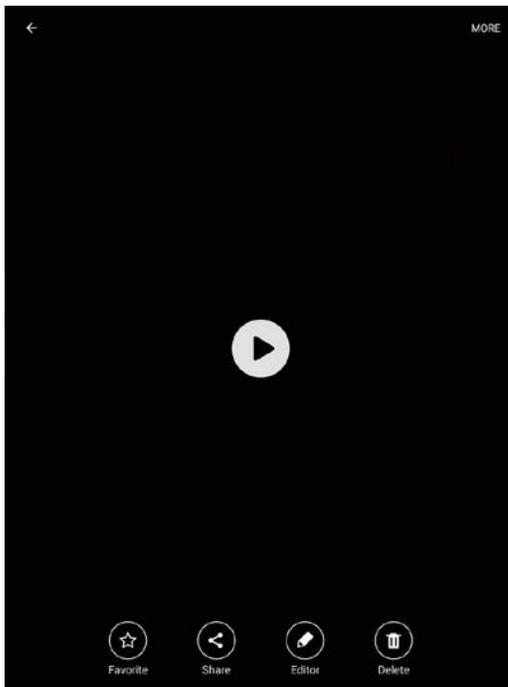

- Tap **Play**  to play the video.
- **Favorite:** Tag a video as a favorite.
- **Share:** Choose a method for sharing the video.
- **Editor:** Edit the video.
- **Delete:** Erase the current video.
- **More:** Choose other options, including:
 - **Details:** View file details.
 - **Slideshow:** Create a slideshow.

Pictures and Videos: Review Screen

After capturing a picture or video, from the camera screen, tap the thumbnail image at the upper right corner of the screen to see the item in the review screen. From there, you can access options such as save, view, send, or delete the picture or video.

Pictures and Videos: Options while Viewing

- **Zoom In or Out on a Picture:** Tap the screen twice or pinch the screen to zoom in or out on a picture.
- **Viewing Videos:** Use the onscreen controls to play, pause, or stop the video playback.

After selecting an album from the Albums tab, you can browse through the pictures and videos of that album. Tap a picture or video to view it in full screen.


Note: When viewing pictures, you can tap a picture or video to open a selection menu and choose what to do with the picture or video.

Edit Pictures

Whether you are browsing pictures in filmstrip or grid view in the Gallery application, you can tap a picture to open a selection menu and choose to delete the picture, rotate or crop it, and more.


Rotate and Save a Picture

1. From home, tap **Apps**  > **Gallery** .

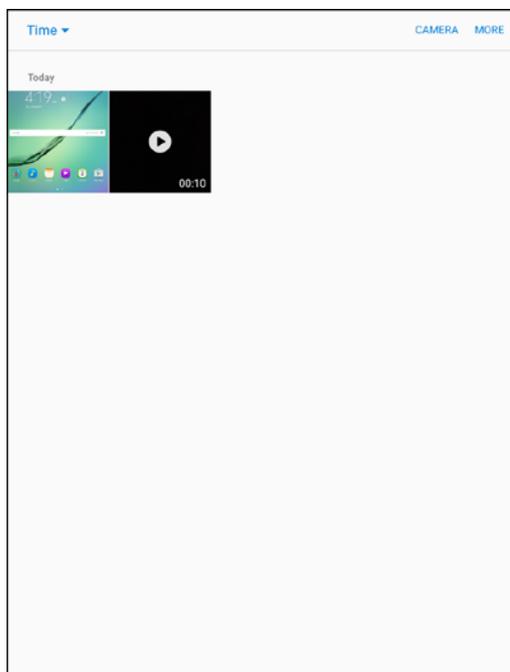

- ❖ The Gallery app opens.
2. Tap the picture you want to rotate.


3. Tap **Edit**  > **Rotate**.

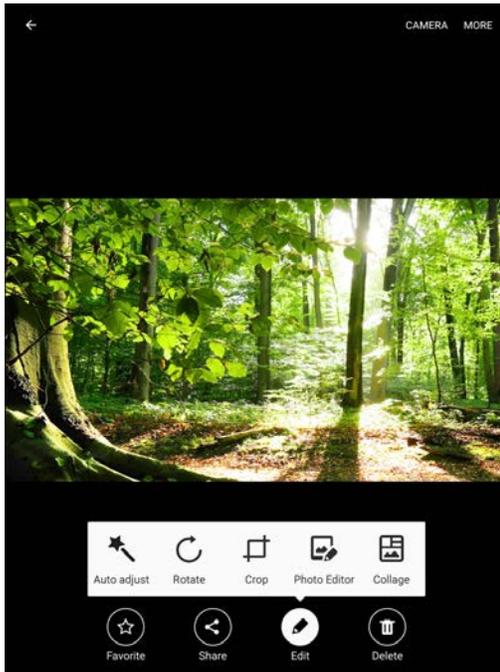


- ❖ The picture is rotated and saved to the tablet.

Crop a Picture


1. From home, tap **Apps**  > **Gallery** .

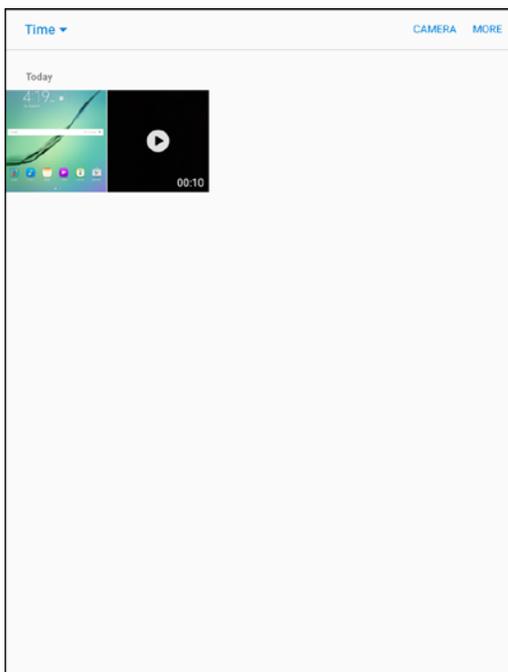

- ❖ The Gallery app opens.
2. Tap the picture you want to crop.
 3. Tap **Edit**  > **Crop**.

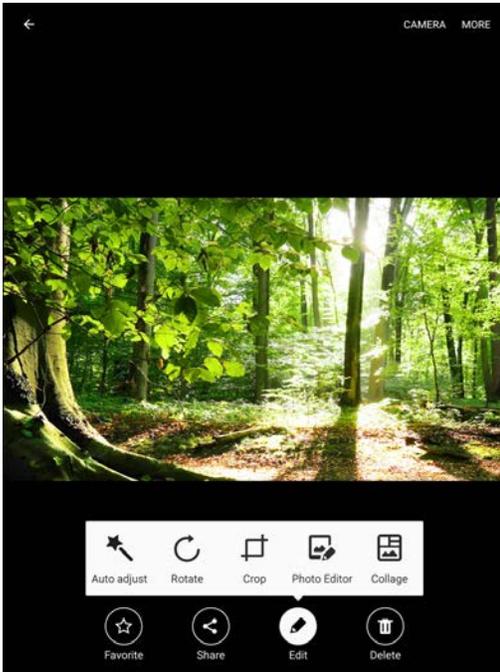

- ❖ A crop box appears on the picture.
4. To adjust the crop box size, touch and hold the edge of the box. When directional arrows appear, drag your finger inward to or outward to resize the crop box.

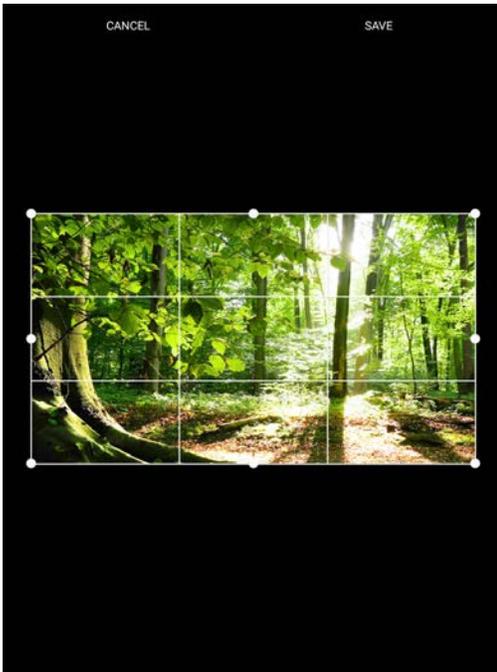


- To move the crop box to the part of the picture that you want to crop, drag the crop box to the desired size and position.
5. Tap **Save** to apply the changes to the picture.
- ❖ The cropped picture is saved in the album as a copy. The original picture remains unedited.


Photo Editor

Perform advanced edits on your pictures, including straightening, adjusting the tone, adding visual effects, and enhancing portraits.

1. From home, tap **Apps**  > **Gallery** .

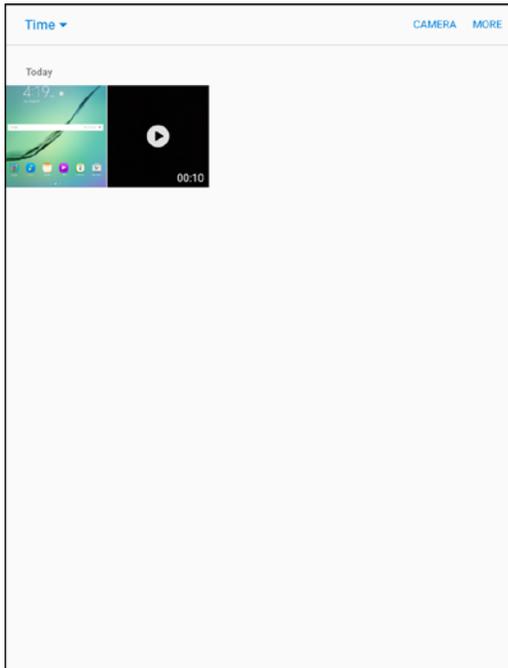

- ❖ The Gallery app opens.
2. Tap the picture you want to edit.
 3. Tap **Edit**  > **Photo Editor**.

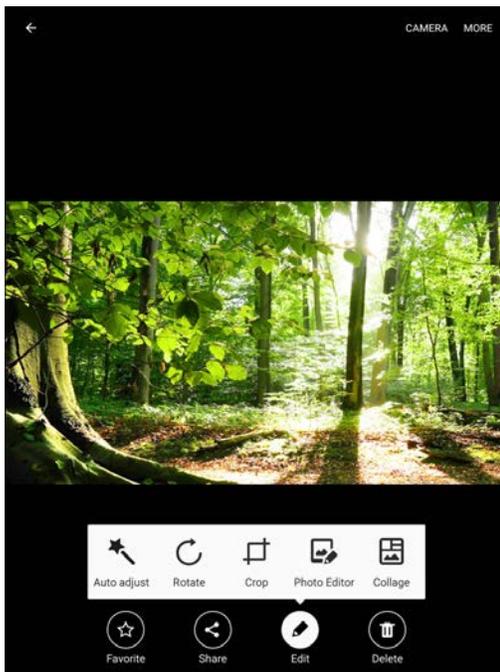

❖ Enhancement tools display.

4. Adjust your picture with these tools:




- **Adjustment:** Straighten and freely rotate your picture.
- **Tone:** Adjust the brightness, contrast, saturation, temperature, and hue of the picture.
- **Effect:** Add color effects to your picture.
- **Drawing:** Draw or write on your picture.


Collage

Create a photo collage with your pictures.

1. From home, tap **Apps**  > **Gallery** .

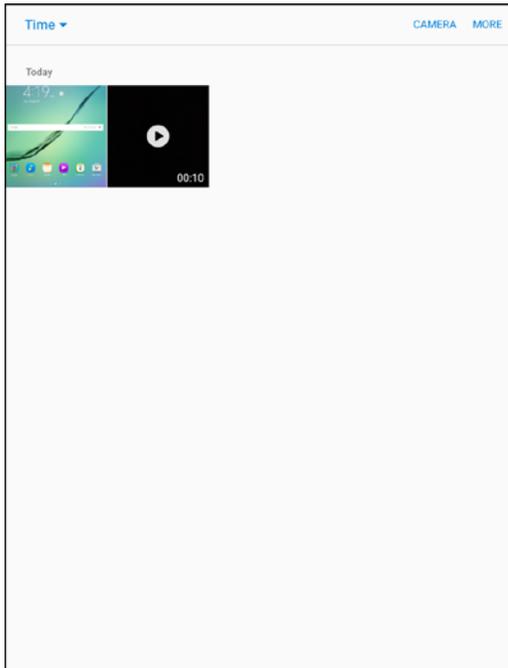

- ❖ The Gallery app opens.
2. Tap a picture you want to add to a collage.
 3. Tap **Edit**  > **Collage**.

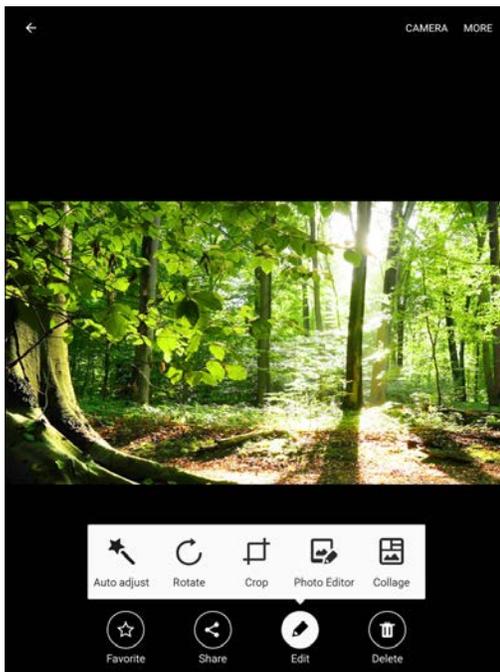

4. Tap **+** or **ADD** to select additional pictures for the collage.
 - Tap pictures to select them.
 - Tap **Done** when you are finished selecting.
- ❖ Your collage layout will be displayed.
5. Use the tools at the bottom of the screen to adjust your collage.



- **Aspect ratio:** Adjust the aspect ratio of the collage.
 - **Layout:** Change the layout of the collage.
 - **Border:** Add a border to the collage.
 - **Background:** Change the background of the collage.
6. To adjust an individual picture within the collage, tap a picture and use the pop-up menu options:
 - **Replace:** Replace the selected picture.
 - **Remove:** Remove the selected picture from the collage.
 - **Effect:** Assign an effect to the picture.
 - **Adjustment:** Crop, rotate, flip, reverse, or resize the picture.
 - With a picture selected, you can also drag it to reposition it within its place in the collage.
 7. Tap **Save** to save the collage to the Photo editor album.


Share Pictures and Videos

The Gallery application lets you send pictures and videos using email or multimedia messages. You can share pictures on your social networks (such as Facebook) and share videos on YouTube. You can also send them to another tablet or your computer using Bluetooth.

Send Pictures or Videos by Email or Gmail


You can send several pictures, videos, or both in an email or Gmail message. They are added as file attachments in your email. For more information about using email and Gmail, see [Compose and Send Email](#) or [Create and Send a Gmail Message](#).

1. From home, tap **Apps**  > **Gallery** .

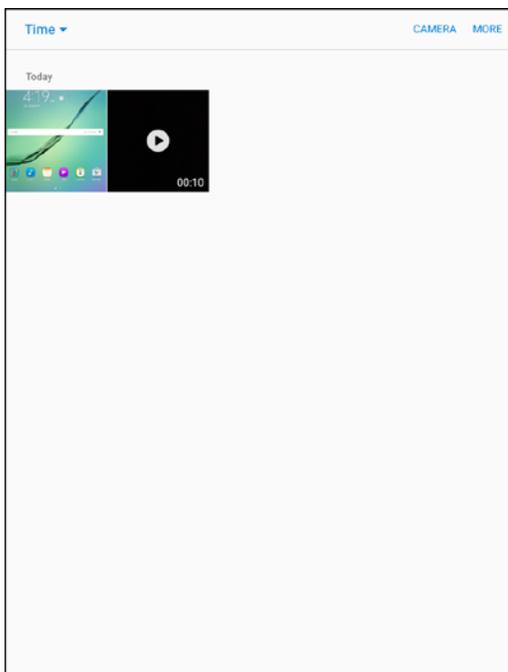

- ❖ The Gallery app opens.
2. Tap the pictures or videos you want to share.
 - To select multiple items, touch and hold an image to turn on multiple select. Tap all the items you want to include.

3. Tap **Share**, and then on the sharing menu, tap **Email** or **Gmail**.

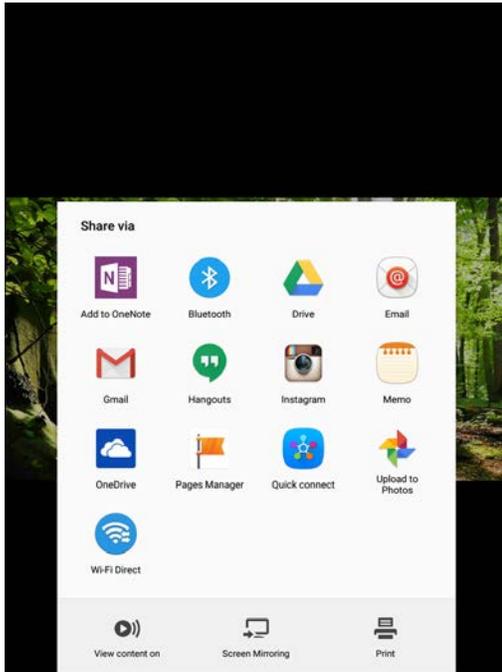

- ❖ Follow onscreen prompts to complete and send the message.


Note: If you have multiple email accounts or Gmail accounts, the default account will be used. Check the "From" line to determine which account is being used.

For more information about using email and Gmail, see [Compose and Send Email](#) or [Create and Send a Gmail Message](#).

Send Pictures or Videos Using Bluetooth


You can select several pictures, videos, or both and send them to someone's tablet or your computer using Bluetooth.

1. From home, tap **Apps**  > **Gallery** .

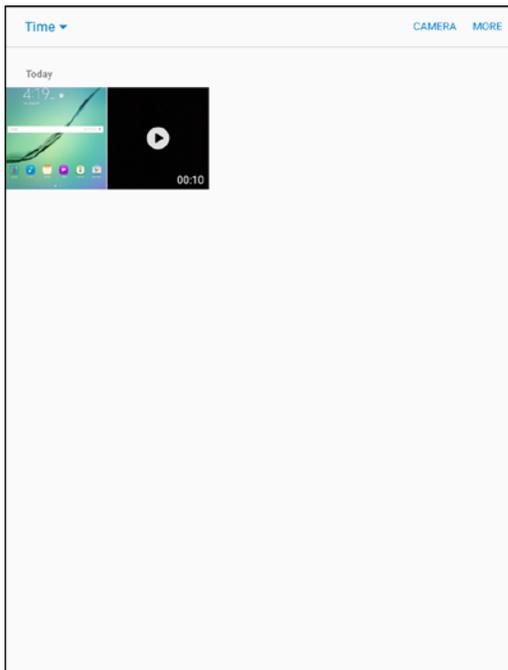

- ❖ The Gallery app opens.
2. Tap the pictures or videos you want to share.
 - To select multiple items, touch and hold an image to turn on multiple select. Tap all the items you want to include.

3. Tap **Share**, and then on the sharing menu, tap **Bluetooth**.

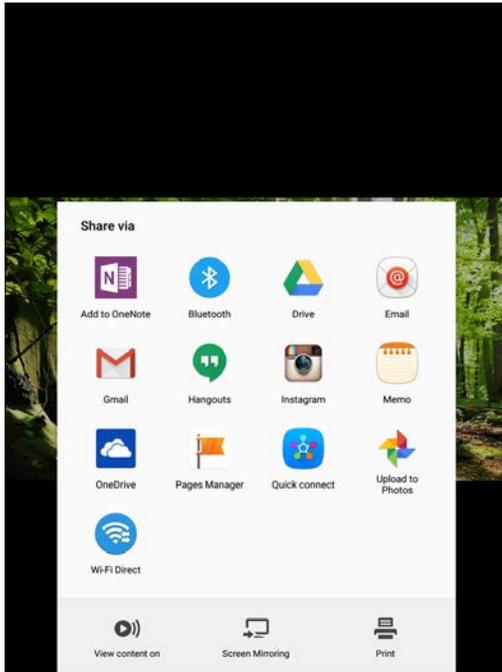


- ❖ Follow the onscreen prompts to complete and send the files.

For more information, see [Bluetooth](#).

Share Pictures or Videos via Additional Apps or Social Media


From Gallery, you can share your pictures and videos from a variety of apps and social media sites, such as Facebook, Hangouts, Instagram, and more. Available apps will vary depending on what you have installed on your tablet.

1. From home, tap **Apps**  > **Gallery** .

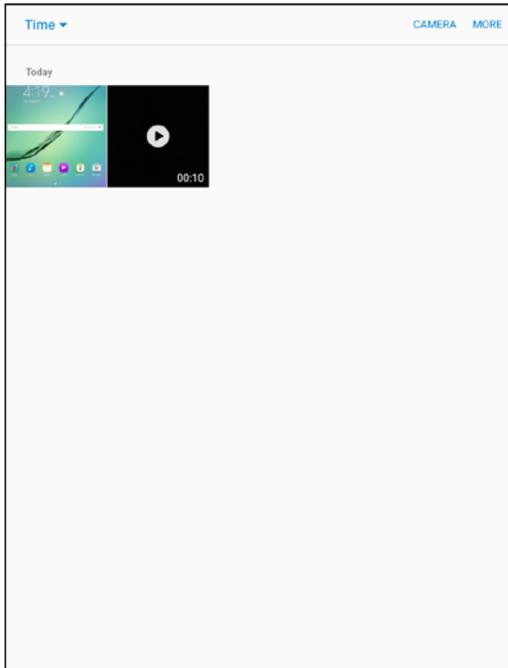

2. Tap the album that contains the photos or videos you want send.
3. Select the items you want to send.
 - To select multiple items, touch and hold an image to turn on multiple select. Tap all the items you want to include.

4. Tap the screen, tap **Share**, and then tap the app you want to use.

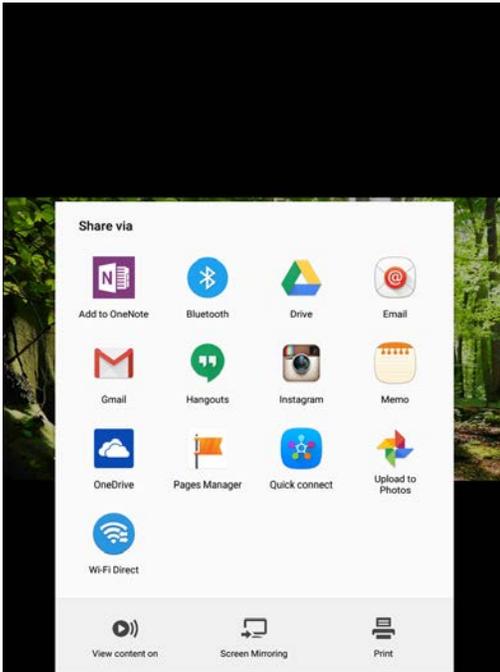


5. Follow the prompts to complete the share.

Share Videos on YouTube


You can share your videos by uploading them to YouTube. Before you do this, you must create a YouTube account and sign in to that account on your tablet.

1. From home, tap **Apps**  > **Gallery** .

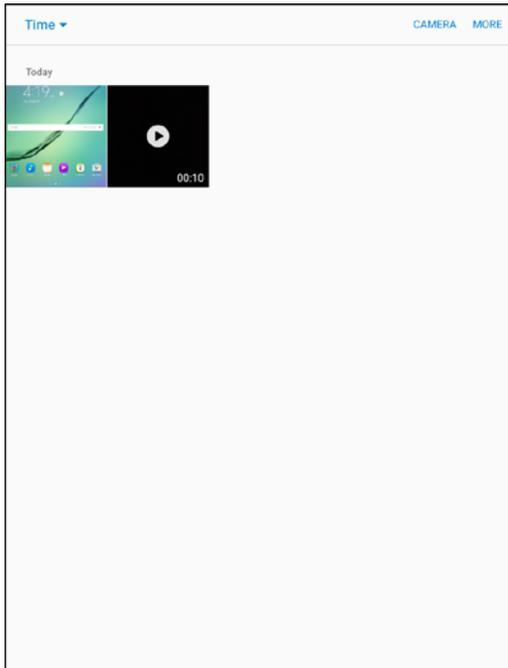

- ❖ The Gallery app opens.
2. Tap the videos you want to share.
 - To select multiple videos, touch and hold an image to turn on multiple select. Tap all the videos you want to include.

3. Tap **Share**, and then on the sharing menu, tap **YouTube**.

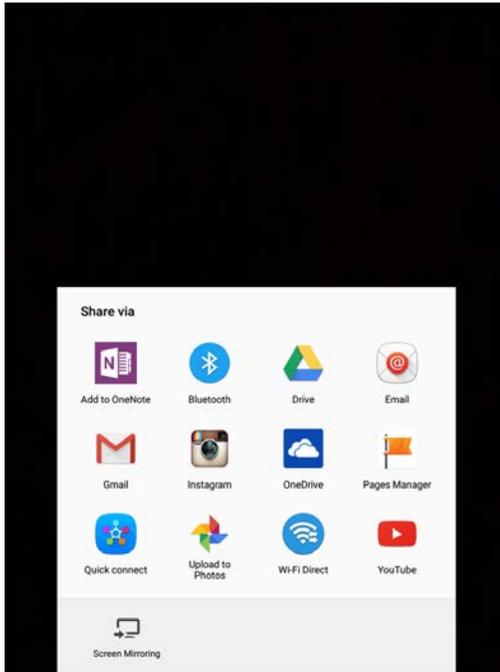

4. Enter the prompted information, such as description and tags, and select a privacy option.
5. Tap **Upload** .
- ❖ The upload is completed.


Camera Options and Settings

You can adjust your camera's settings using the icons on the main camera screen and the full camera settings menu.

Switch Cameras

Your tablet lets you switch between the front and rear cameras.

1. From home, tap **Apps**  > **Camera** .

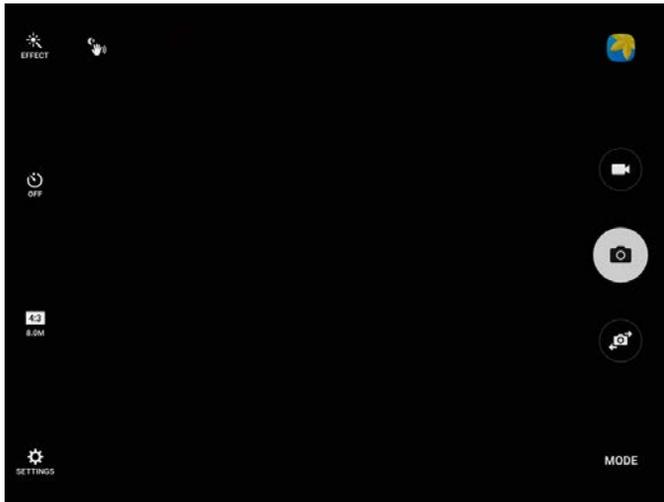

- ❖ The camera viewfinder appears.


2. Tap .

- ❖ The camera switches type.

Set Camera Options


You can configure your camera's settings to fit any situation and event.

1. From home, tap **Apps**  > **Camera** .

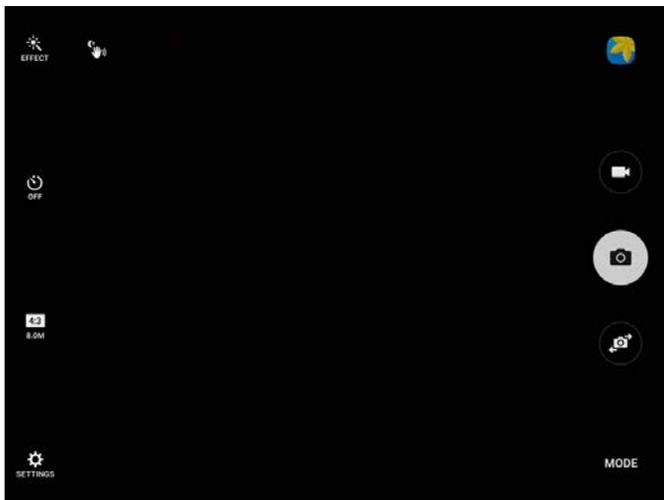

- ❖ The camera viewfinder appears.

2. Tap **Settings** .

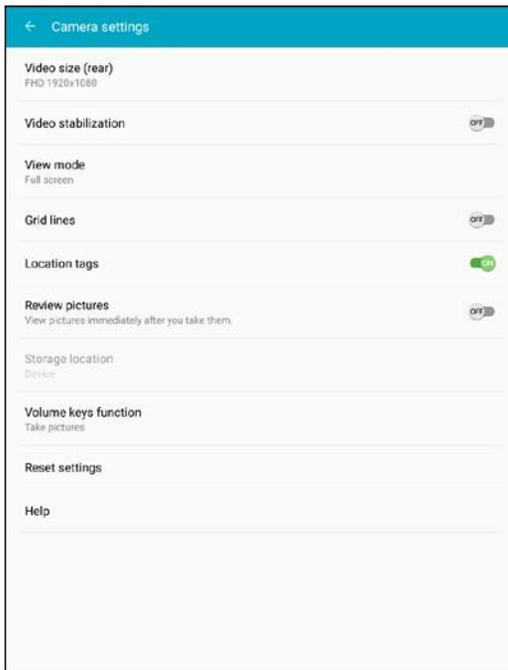

❖ The camera settings menu opens.

3. Select your desired settings:

Note: Not all settings will be available at all times, depending on which camera is in use (front or rear).

▪ **Both cameras**

- **Video size:** Select a resolution. Use higher resolution for higher quality. Higher resolution videos take up more memory.
- **View mode:** Change the view mode to **Full screen** or **Standard**.
- **Grid lines:** Display viewfinder grid lines to help composition when selecting subjects.
- **Location tags:** Attach a GPS location tag to the picture.
- **Review pictures:** Set to show pictures after taking them.
- **Storage location:** Select the memory location for storage.
- **Volume keys function:** Use the Volume key as the capture key, the record key, or as a zoom key.
- **Reset settings:** Reset the camera settings.
- **Help:** View information on using the camera.

▪ **Rear camera**

- **Video stabilization:** Activate anti-shake. Anti-shake helps to keep the focus steady when the camera is moving.
- **Front camera**
 - **Gesture control:** Detect palm and automatically take a picture two seconds later.
 - **Save pictures as previewed:** Save the self-portrait or self-recording as viewed on the camera screen.

For additional camera settings, see [Camera Settings](#).


Useful Apps and Features

The following topics detail many of your tablet's tools and features such as maps and navigation, calendar, clock, social networking apps, music, memos, and more.

Calculator

Your tablet's convenient built-in calculator lets you perform basic mathematical equations.

1. From home, tap **Apps**  > **Calculator** .

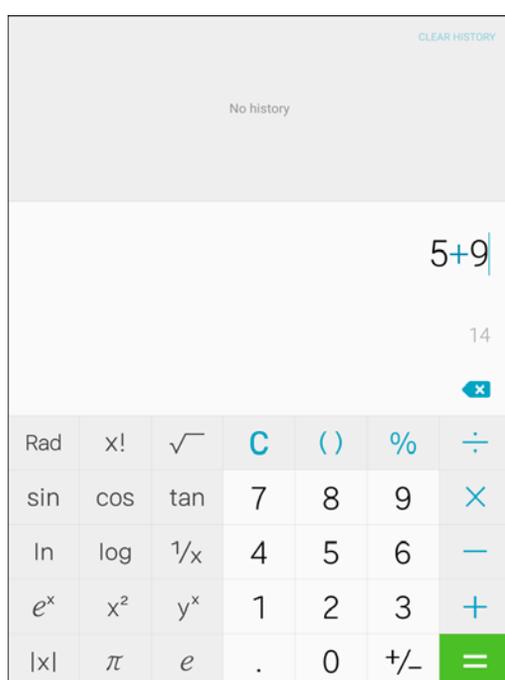

- ❖ The calculator app launches.

2. Tap onscreen keys for calculations.

- ❖ Calculation results appear.

Calendar

Use Calendar to create and manage events, meetings, and appointments. Your Calendar helps organize your time and reminds you of important events. Depending on your synchronization settings, your tablet's Calendar stays in sync with your Calendar on the Web, Exchange ActiveSync calendar, Google Calendar, and Outlook calendar.

In order to sync with your Google calendar, you must sign in to a Google account on your tablet. See [Google Account](#).

Calendar Operations

- **View Today's Calendar:** From the Calendar, tap **Today**.
- **Change Calendar View:** From the Calendar, tap the drop-down menu in the upper left corner, and then tap **Year**, **Month**, **Week**, **Day**, or **Tasks** to change the current view.
- **View the Next/Previous Time Period (Year/Month/Week/Day view):** From the Calendar, flick the screen left or right.

Add an Event to the Calendar


Add events to your calendar directly from the Calendar application.

1. From home, tap **Apps**  > **Calendar** .




- ❖ The Calendar app opens.

2. Tap **New** .

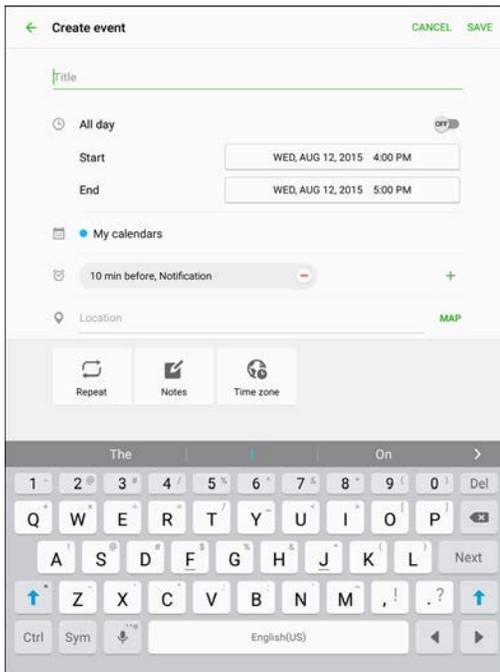

❖ The add event window opens.


3. Enter an event title, start date/time, end date/time, etc., and then tap **Save**.

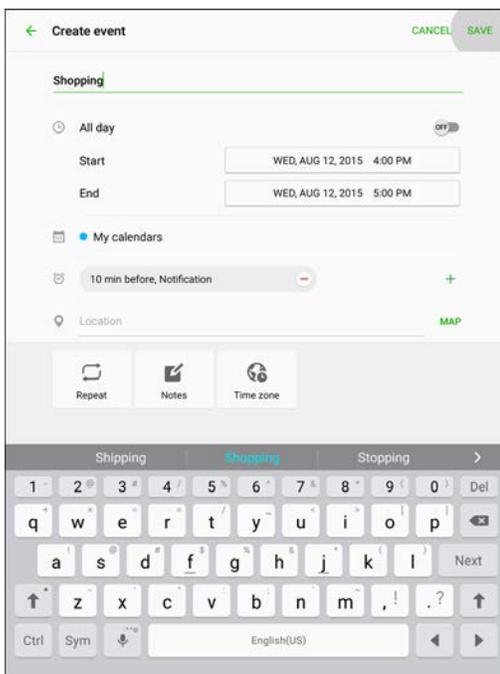

❖ The event is added to your calendar.

Selecting a Calendar

- If you have more than one calendar, select a calendar by tapping the current Calendar on the Create Event screen.

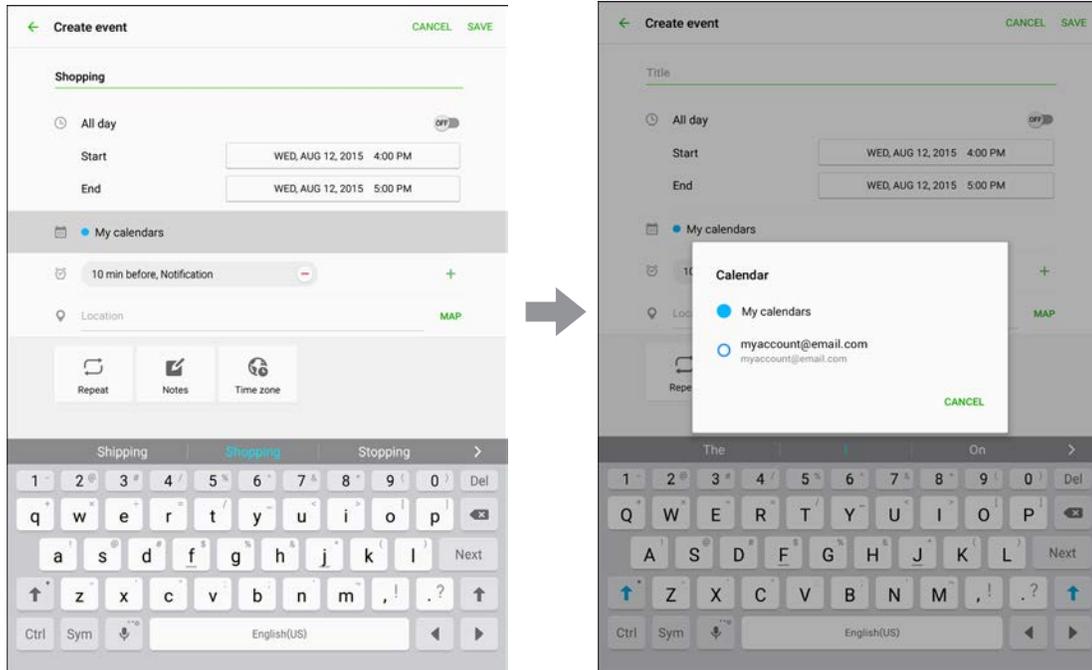


- Select **My Calendars** to create an event that will appear only on your tablet.
- Select your Google Account to create a Google Calendar event. If you have several Google Calendars on the Web, select one in which to add your event.
 - You can create multiple Google Calendars only in Google Calendar on the Web. After creating them in Google Calendar on the Web, you will be able to see them in the Calendar application on your tablet. For more information about creating and managing multiple Google Calendars, visit calendar.google.com.
- Select **Samsung Calendar** to create an event that will sync with your Samsung account.
- Select your Outlook or Exchange account to create an event that will sync with these account types.

Note: Available options differ depending on the type of account selected for an event.

View Calendar Events


You can display the Calendar in year, month, week, day, or task view. To change the Calendar view, tap the drop-down menu at the upper-left corner and tap an option.

1. From home, tap **Apps**  > **Calendar** .

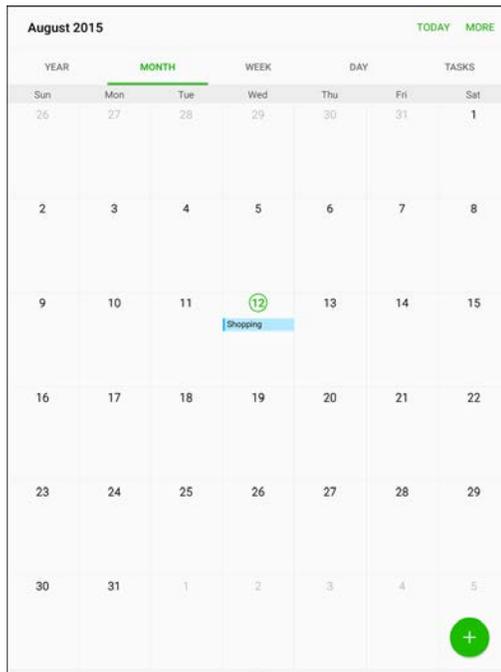

- ❖ The Calendar app opens.

2. Tap an event.

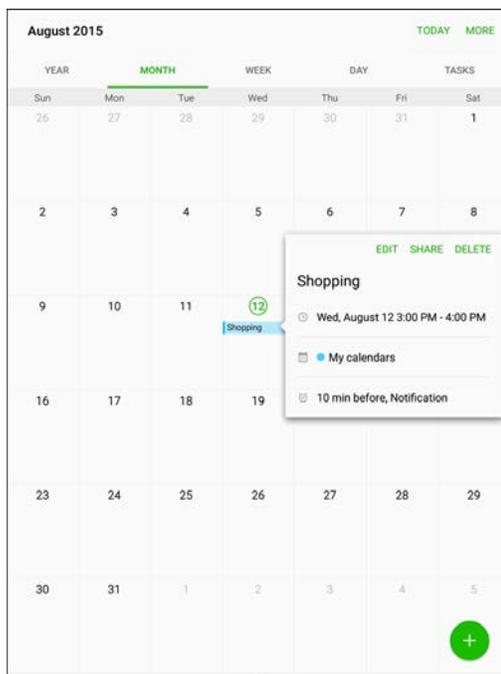

- ❖ The event details appear.
 - Tap the event to view details and edit the event.


Share Calendar Events

Once you have created a Calendar event, you can share it with others via a variety of methods.


1. From home, tap **Apps**  > **Calendar** .



2. Tap an event to see its details.

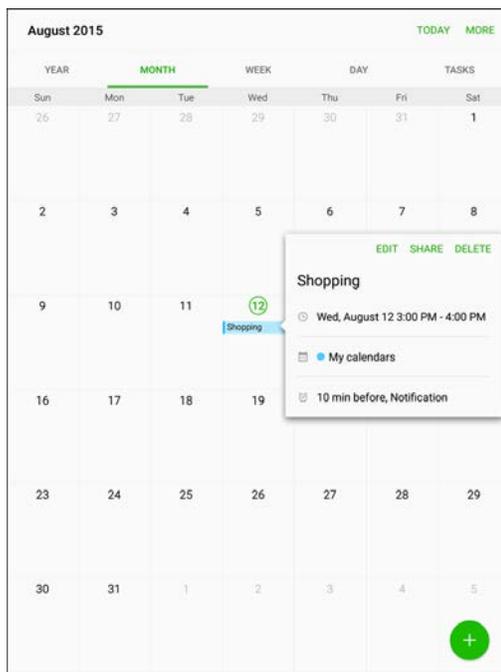


- From the event details screen, tap **Share**.

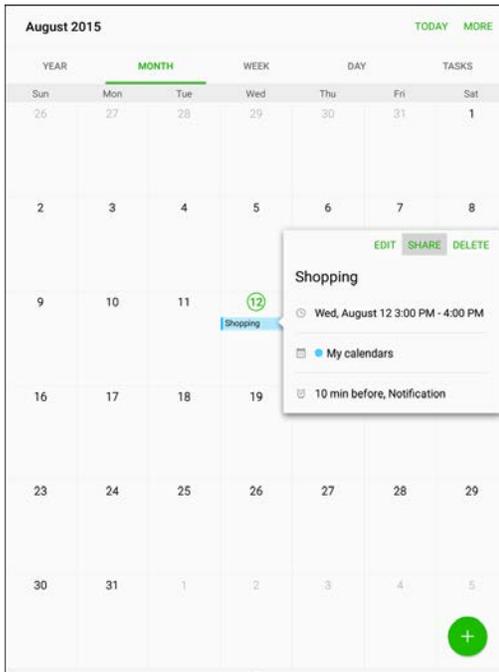

- Choose a **Share as** option (**Event file (VCS)** or **Text**).



5. Select a sharing method and follow the prompts to send the Event information.

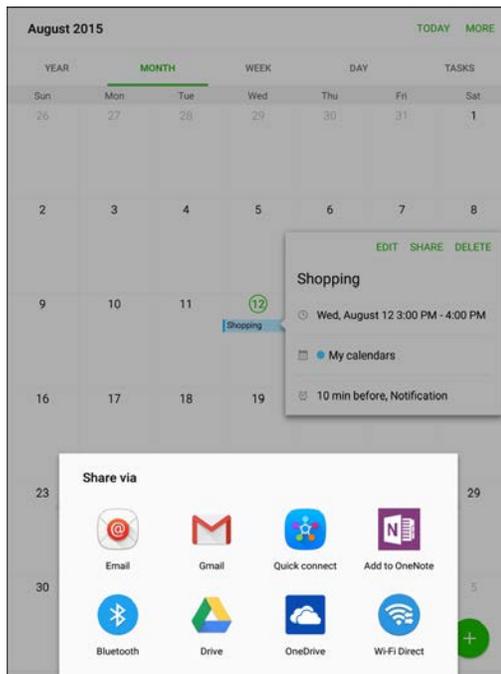

Sync Calendars


You can select which calendars you'd like to sync on your tablet, along with what types of information you want to sync.

1. From home, tap **Apps**  > **Calendar** .




❖ The Calendar app opens.

2. Tap **More > Manage calendars**.

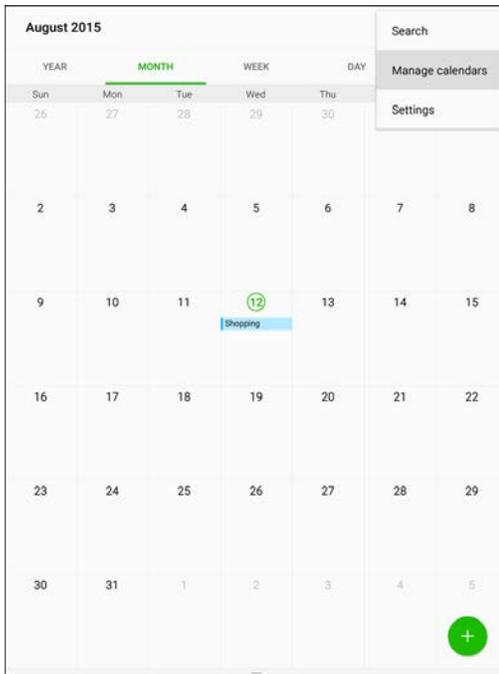

3. Select sync options by tapping **ON/OFF** next to each item.

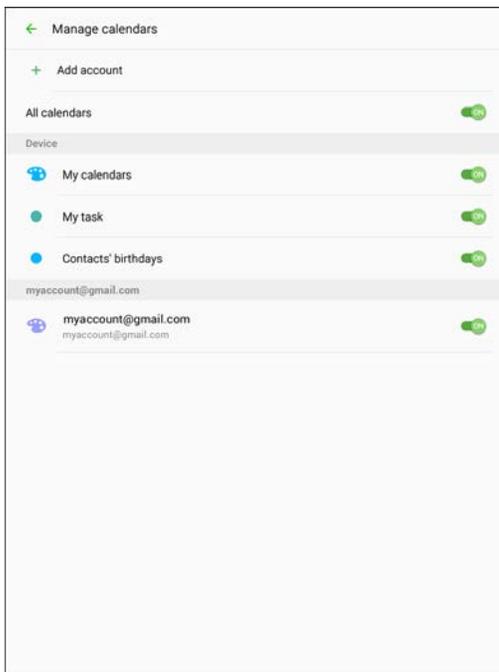

❖ The sync settings have been updated.

Synchronize an Exchange ActiveSync Calendar

If you have set up a Microsoft Exchange ActiveSync account on your tablet, you can also synchronize Exchange ActiveSync calendar events on your tablet. Calendar events on your Exchange ActiveSync will also show in Calendar if you chose to synchronize with the Exchange ActiveSync Server.

To check if Exchange ActiveSync items are set to be synchronized:

1. From home, tap **Apps**  > **Settings**  > **Accounts**  > **Microsoft Exchange ActiveSync**.
 - If Microsoft Exchange ActiveSync doesn't appear under the Accounts heading in the Settings menu, you do not have an Exchange ActiveSync account configured on the tablet. For information about adding an account, see [Add an Exchange ActiveSync Account](#).
2. If your Exchange ActiveSync account is set for synchronization, tap **ON/OFF** next to Sync Calendar will be .

Clock

Your tablet has a clock app that lets you set alarms, view time in time zones around the world, use a stopwatch, set a timer, and use your tablet as a desk clock.


Checking the Time

You can always check the time on your tablet. The current time displays in the upper right corner of the status bar. Many widgets and Lock screens also display the time and provide options for how time is displayed.


Setting Date and Time

Your tablet automatically receives the current date and time from the wireless network. You can set the date by hand by overriding the default setting.

1. From home, tap **Apps**  > **Settings** .

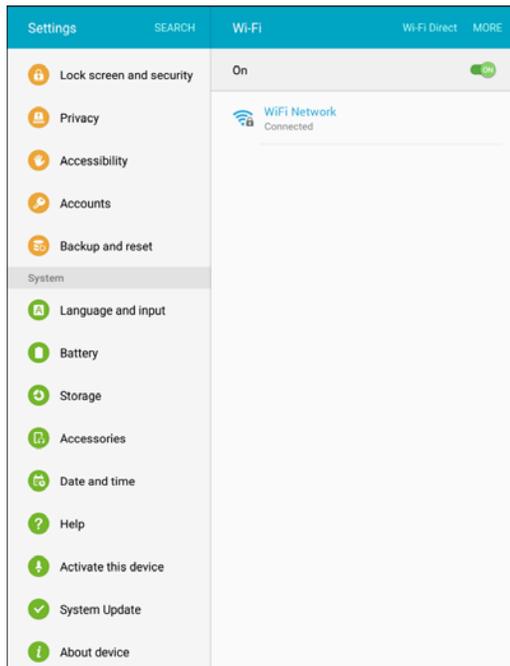

2. Tap **Date and time**.

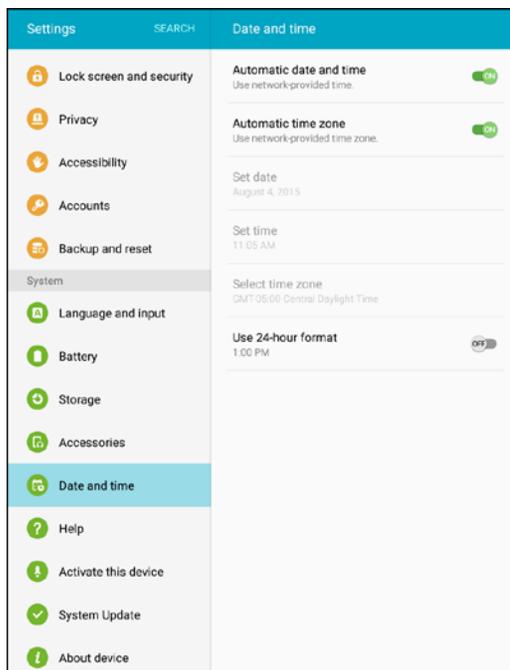


3. Set available date and time options.
 - To set the date and time, tap **ON/OFF** to turn Automatic data and time off.
 - To select a time zone, tap **ON/OFF** to turn Automatic time zone off.

- ❖ Your date and time settings are applied and saved.


Set Alarms

Set multiple alarms using your tablet's Clock app.

1. From home, tap **Apps**  > **Clock**  > **Alarm**.

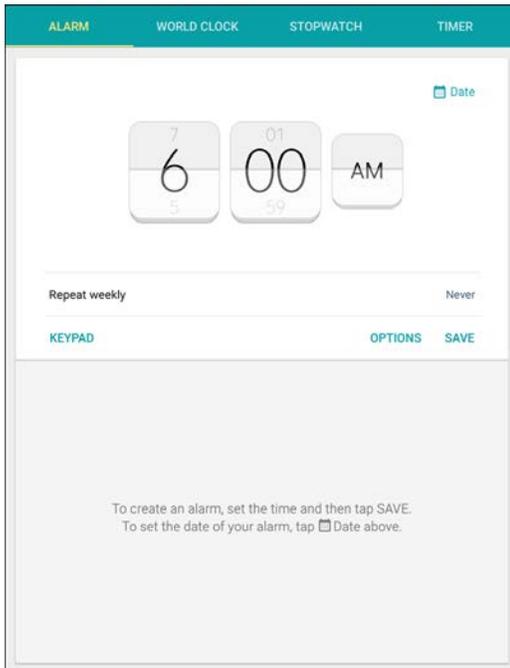

2. Set the alarm options, including time, days, and repeat pattern. For more options, tap **Options**.

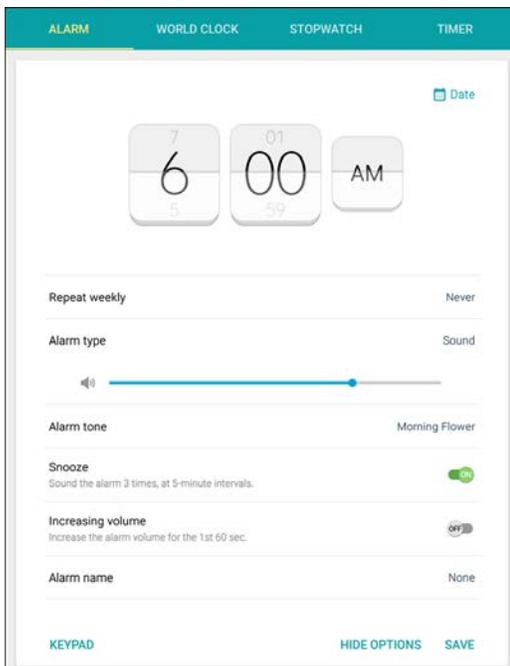

3. When finished, tap **Save**.

❖ You will see the alarm icon  in the status bar.

Tablet at Alarm Time

- At the set alarm time, the tablet sounds the alarm and/or vibrates.
- When the alarm sounds, drag  to left or right to dismiss it.

World Clock

The world clock lets you keep track of the current time in multiple cities around the globe.

1. From home, tap **Apps**  > **Clock**  > **World Clock**.




2. Tap a city, and then tap **Add City**  to add it to your list.

3. Repeat to add multiple cities.

Stopwatch

The stopwatch lets you time events down to the hundredth of a second.

1. From home, tap **Apps**  > **Clock**  > **Stopwatch**.

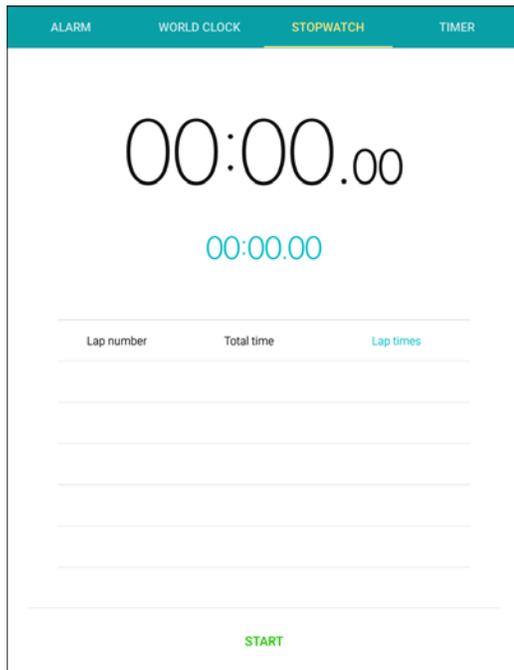


2. Tap **Start** to begin timing.
3. Tap **Stop** to stop timing.
 - Additional options include **LAP** to keep track of laps, **RESUME** to continue timing, and **RESET** to reset the stopwatch to zero.

Timer

The timer provides a countdown timer for up to 99 hours, 59 minutes, and 59 seconds.

1. From home, tap **Apps**  > **Clock**  > **Timer**.

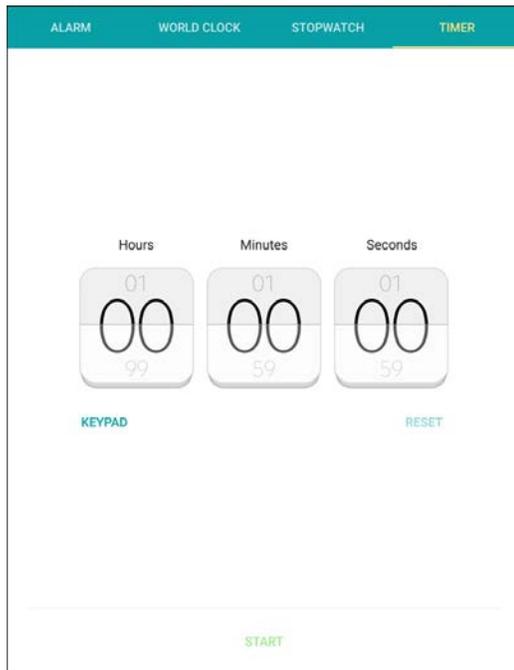

2. Tap **Keypad** and then use the keypad to set the length of the timer.
3. Tap **Start** to begin the timer.

Excel

Create and share spreadsheets quickly and easily with Microsoft Excel.

- From home, tap **Apps**  > **Microsoft Apps**  > **Excel** .

Galaxy Apps

Discover apps designed exclusively for your Galaxy tablet.

Note: You must sign in to a Samsung account in order to download Galaxy Apps.

- From home, tap **Apps**  > **Galaxy Apps** .

Gallery


Using the Gallery application, you can view pictures and watch videos that you have taken with your tablet's camera or downloaded.

You can do basic editing such as rotating and cropping. You can also set a picture as your contact picture or wallpaper and share pictures with your friends.

While viewing pictures in the Gallery, scroll up the screen to view more albums. Simply tap an album to view the photos or videos in that album.

If you have downloaded any photos and videos, these will be placed in the All downloads album.

1. From home, tap **Apps**  > **Gallery** .

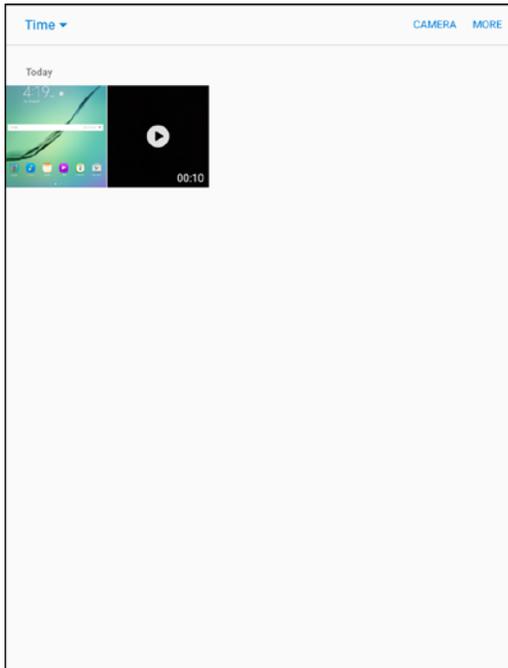

❖ The Gallery app opens.

2. From the main Gallery screen, you can use these options:

- Tap a picture or video to display it in full screen view.
- Touch and hold thumbnails to select them (indicated by a check mark).
- Tap the drop-down list in the upper-left corner (Time is the default view) to choose another display style. You can view by Albums, Events, Categories, or Locations.
- Tap **Camera** to launch the Camera to take pictures or record video.
- Tap **More** for options. Available options depend on which Gallery screen you are viewing, and may include:
 - **Edit:** Depending on the view, tap albums or items to select them. After selection, you can tap **More** again for options you can use with the selected item(s).
 - **Share:** Share albums, pictures, or videos.
 - **Search:** Search for a picture or video.
 - **Help:** View help topics on using the Gallery app.


For more information about using Gallery, see [View Pictures and Videos Using Gallery](#), [Edit Pictures](#), and [Share Pictures and Videos](#).

Google Hangouts

Hangouts is Google's instant messaging service. Use to communicate with other Hangout users, as well as for video calling. Log in to a Google account beforehand (see [Google Account](#)).

Using Hangouts

1. From home, tap **Apps**  > **Google**  > **Hangouts** .

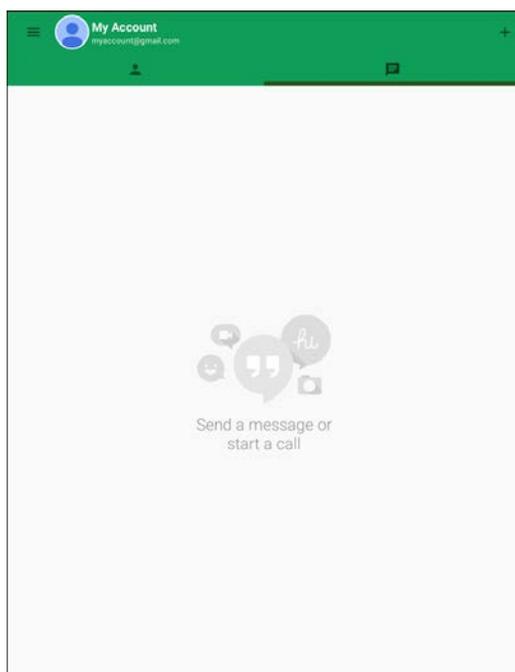


- ❖ The Hangouts app will open.

2. Tap **Add**  to start a new Hangout.



3. Type a name, email, number, or circle, or select a contact from the list.

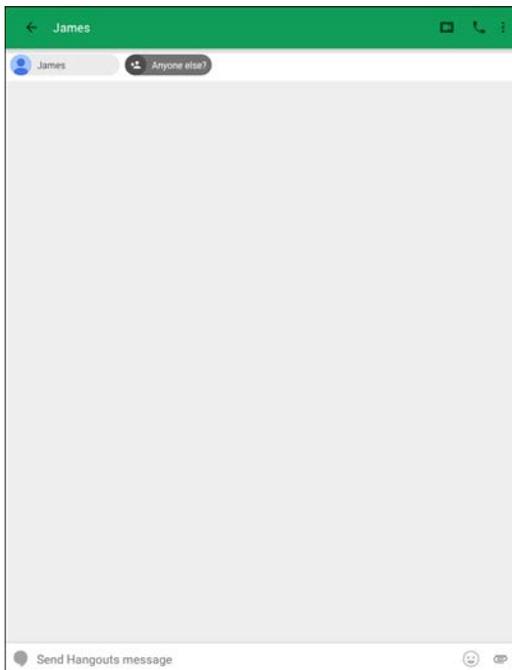

4. Type a message or tap  to start a video chat.
 - ❖ A chat window or a video chat window opens.
 - Each time text is entered, the corresponding friend appears.

- If a friend is not in a Hangout, you will see a message. Tap **Send invitation** to invite them to join the Hangout.

Hangouts Operations

- **Ending a Video Chat:** In the video chat window, tap .
- **Disabling Chat History:** If you don't want to keep chat history, in the chat window, tap **More options**  > **Turn history off**.
- **Delete Chat History:** To delete all your chat history, in the chat window, tap **More options**  > **Delete** > **Delete**.

Google Maps


Use the Google Maps app to determine your location, find directions, browse local businesses and attractions, rate and review places, and more.

Note: To use Google Maps, you will need to have your tablet's Location feature turned on. See [Location Settings](#) for information about enabling Location on your tablet.

View Maps of Specified Places

Use Google Maps to locate and map a specific address or destination.


1. From home, tap **Apps**  > **Maps** .

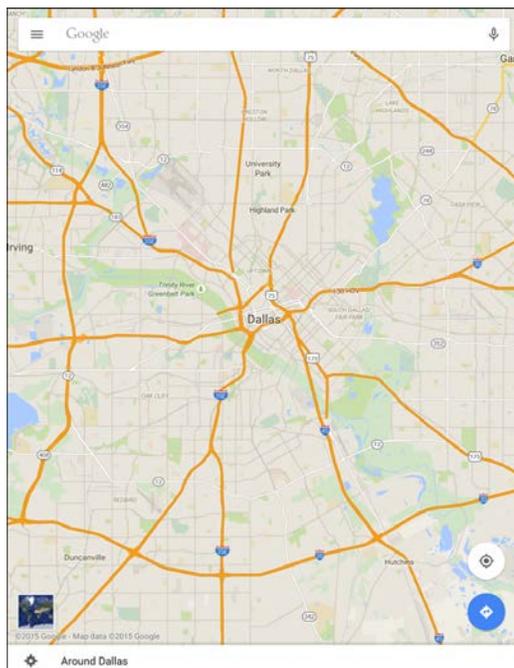


- ❖ Google Maps opens.

Note: The first time you access Maps, you may be prompted to accept the Terms of Service and Privacy Policy. Tap **Accept & continue** to continue.

2. Tap in the search box to start a search.

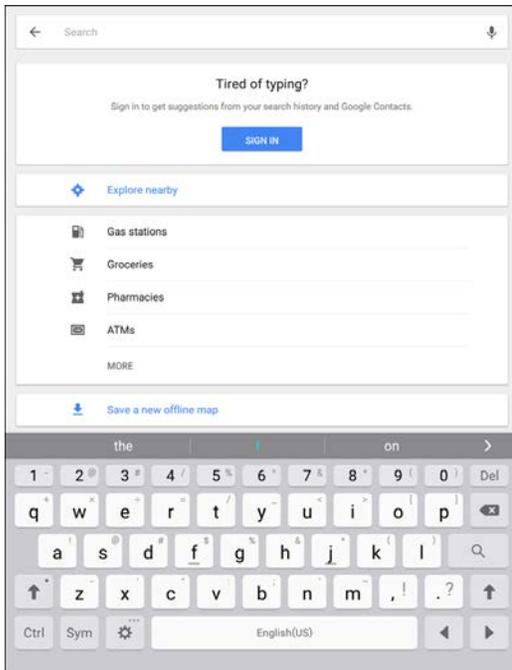

3. Enter an address, city, facility name, etc., and then tap a candidate in the results list.

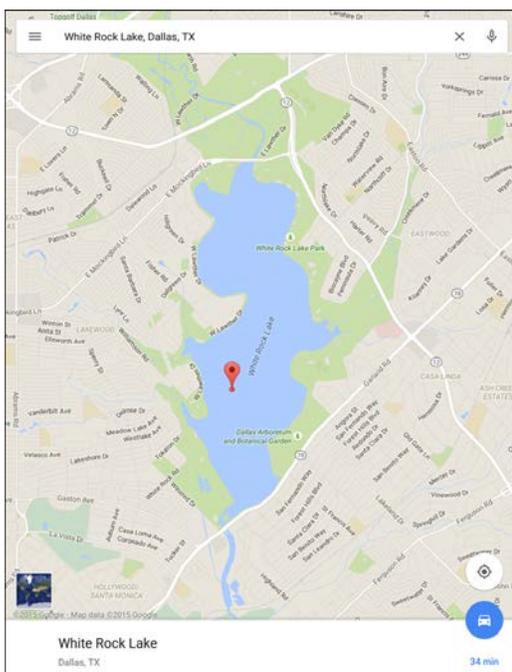

- ❖ A map of the specified location opens.

Google Maps Operations

- **Viewing Current Location:** From the Maps app, tap .
- **Obtain Useful Area Information for Current Location:** Tap the Search field, enter the information you are looking for, and then tap a result to view it.
- **View Traffic Information, Aerial Photos, Etc.:** Tap **Menu**  and then tap **Traffic**, **Satellite**, **Google Earth**, or other options.
- **Check Route to Destination:** Tap , enter your current location and your destination, and then tap a method of transport (car, public transit, bicycle, or on foot) to see available routes.
- Check Detailed Operation for Maps: From the Maps app, tap **Menu**  > **Help**.

Google Play Movies & TV

Google Play Movies & TV allows you to watch movies and TV shows purchased on Google Play. You can stream instantly on your Android tablet or download so you can watch from anywhere, even when you are not connected. Also, get quick access to your personal video collection, including those taken on your tablet.

Learn more about Google Play Movies & TV at play.google.com/about/movies.

- From home, tap **Apps**  > **Google**  > **Play Movies & TV** .

Google Play Music


The Google Play Music app lets you browse, shop, and play back songs purchased from Google Play as well as songs you have loaded from your own music library. The music you choose is automatically stored in your Google Play Music library and instantly ready to play via streaming or download.

Note: For information about loading music onto your tablet, see [Transfer Files Between Your Tablet and a Computer](#).

Using Google Play Music

Use the Google Play Music app to listen to all your music on your tablet. Compatible music file formats include: MP3 (.mp3), AAC (m4a), WMA (.wma), FLAC (.flac), OGG (.ogg), DRM protected AAC (m4p), and ALAC (.m4a).


1. From home, tap **Apps**  > **Google**  > **Play Music** .

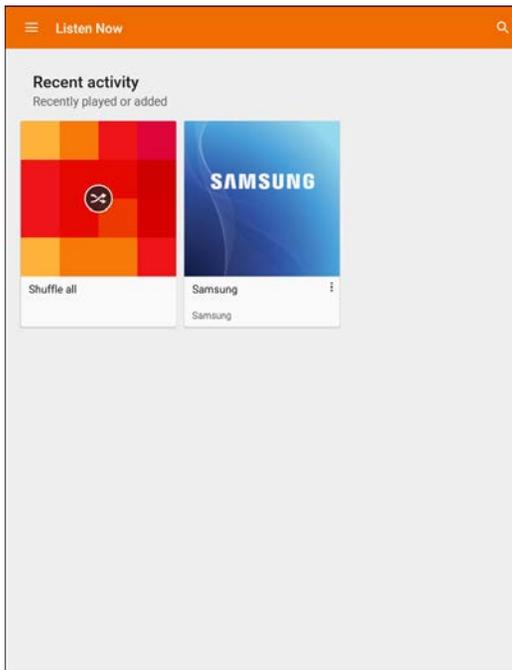

- ❖ The Play Music app opens to the Listen Now screen. To view additional music options, tap **Menu**  and select an option (My Library, Playlists, Instant Mixes, or Shop).
2. Tap an item from the category window and then tap a song.
 - ❖ The song begins playing.

Google Play Music Screen Layout

The following diagram outlines the main features of the Play Music app player screen.

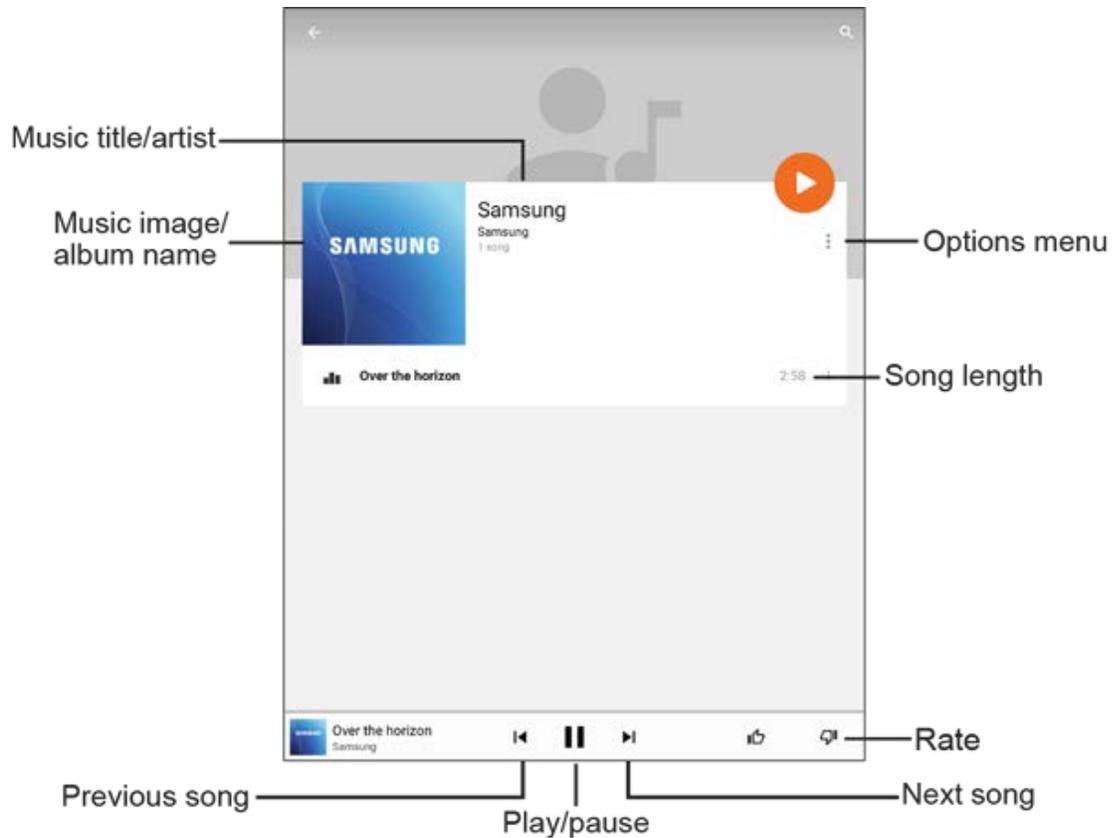


Feature	Description
Music image/album name	Display music images and album names (if available).
Music title/artist	Displays music title and artist (if available).
Next song	Play the next song.
Options menu	Access the options menu.
Play/pause	Play or pause the current song.
Previous song	Play the previous song.
Rate (thumbs up/thumbs down)	Rate the current song.
Song Length	The length of the song.

Create Playlists in Google Play Music

Organize music into playlists to fit every occasion.

1. From home, tap **Apps**  > **Google**  > **Play Music** .

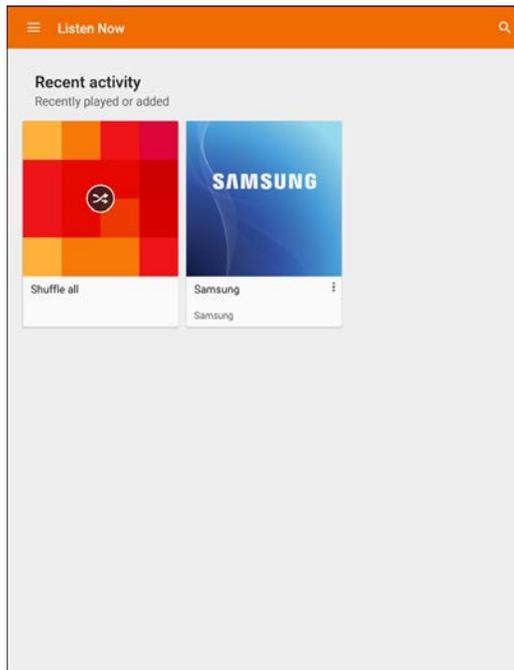

- ❖ The Play Music app opens to the Listen Now screen.
2. Tap **Menu**  to view your library, playlists, or access Google Play Music online.
 3. From a list displaying songs, tap **More options**  next to a song you want to add to a playlist.
 4. Tap **Add to playlist > New playlist**.
 5. Enter a Name, Description, and accessibility option for the playlist, and then tap **Create playlist**.
 6. To add more songs, tap **More options**  next to a song and then tap **Add to Playlist > [playlist name]**.

Adding Currently Playing Music to a Playlist

- From the player view, tap **More options**  > **Add to playlist** and then tap the name of a playlist.
- ❖ The music is added to the playlist.


Google Search

Search information saved on the tablet and in tablet applications as well as on the Internet.

Use Google Search

Type search terms in the Google Search bar to find information on your tablet and around the globe.

1. From home, tap the Google search bar or tap **Apps**  > **Google**  > **Google** .

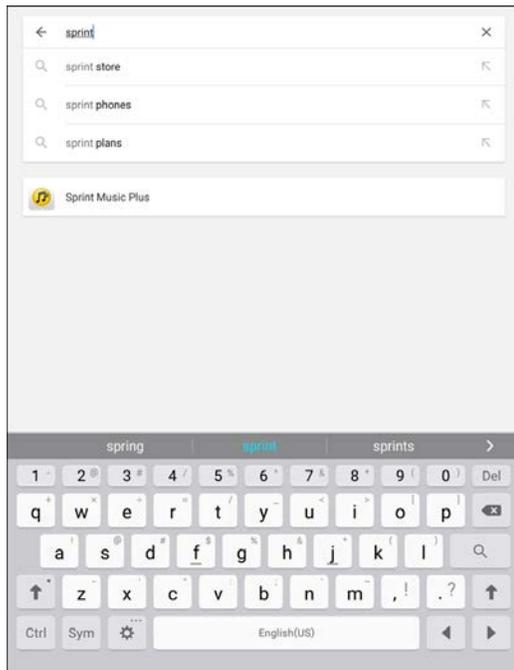

- ❖ The Search window opens.

2. Type your search keywords and tap **Search** .

- ❖ Search results appear.

- To search by voice, tap  in the search bar and speak your search terms.

Google Search Options


Note: To set Google Search options, from the main Google Search screen, press the **Back** key .

- **Changing Search Information:** In the search window, tap **Menu**  > **Settings** > **Tablet search** and select where to search.
- **Using Google Now:** Google Now automatically searches for information based on search keywords used, your current location, etc., and presents search results in the search screen. Google Now also informs users of scheduled events.
 - To enable Google Now, in the search window, tap **Menu**  > **Settings**. Tap **Now cards**, and then tap **ON/OFF** next to Show cards.
 - To disable Google Now, in the search window, tap **Menu**  > **Settings**. Tap **Now cards**, and then tap **ON/OFF** next to Show cards. Tap **Turn off** to confirm.

Use Google Voice Search

Use your voice to search instead of typing, with Google Voice Search.

1. From home, tap **Apps**  > **Google**  > **Voice Search** .

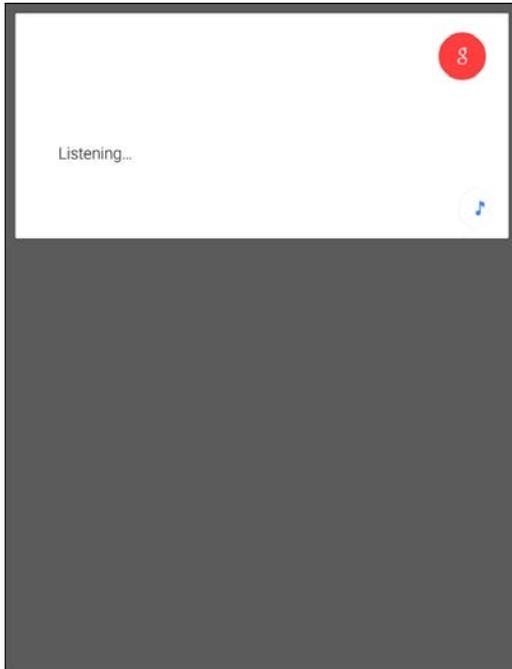

- ❖ The Voice Search window opens.
2. Speak your search terms.
- ❖ Search results appear.

Instagram

Capture and share photos and videos with your friends. Customize what you capture, and then share it on your feed or post it directly to your friends. Located in the Social folder in the apps list.

Install Instagram

1. From home, tap **Apps**  > **Instagram** .
2. Tap **Download**, and then follow the prompts to accept access requirements and update the app.

Use Instagram

- From home, tap **Apps**  > **Instagram** .

Messenger

Send instant messages with all your friends using Facebook's Messenger app.

Install Messenger

1. From home, tap **Apps**  > **Messenger** .
2. Tap **Download**, and then follow the prompts to accept access requirements and update the app.

Use Messenger

- From home, tap **Apps**  > **Messenger** .

Milk Music

Exclusive to Galaxy owners, Milk Music is a radio service that gives you more of the music you love, curated by top DJs and industry pros and all for free.

- From home, tap **Apps**  > **Milk Music** .

Music


The Music app plays music files. Use Music to browse your music library, play songs, and create playlists. You can also set songs as ringtones for incoming calls, or as alarm tones.

Note: For information about loading music onto your tablet, see [Transfer Files Between Your Tablet and a Computer](#).

When you close the Music screen, playback will continue in the background, so you can listen to music while you use other features of your tablet. When music is playing in the background, you can access playback controls from the notification panel.


Play Music

1. From home, tap **Apps**  > **Music** .

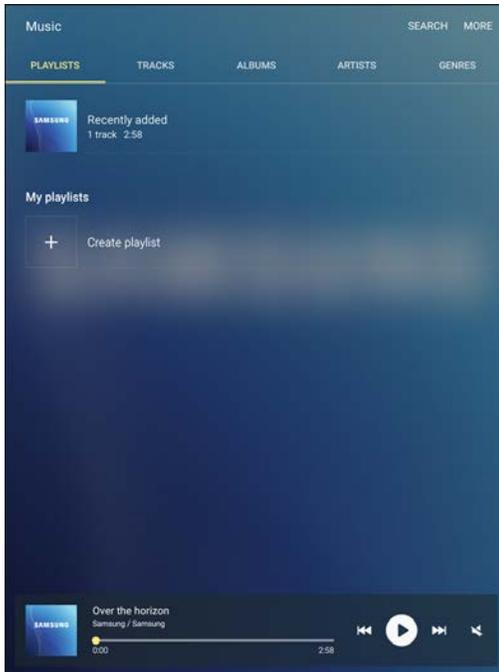

- ❖ The music app opens to the Playlists category.
 - The default categories are **Playlists**, **Tracks**, **Albums**, **Artists**, **Genres**, **Folders**, and **Composers**. Tap the drop-down list at the upper left corner and tap a category to display it.

2. Scroll through the list and tap a song to begin. While playing music, use these controls:

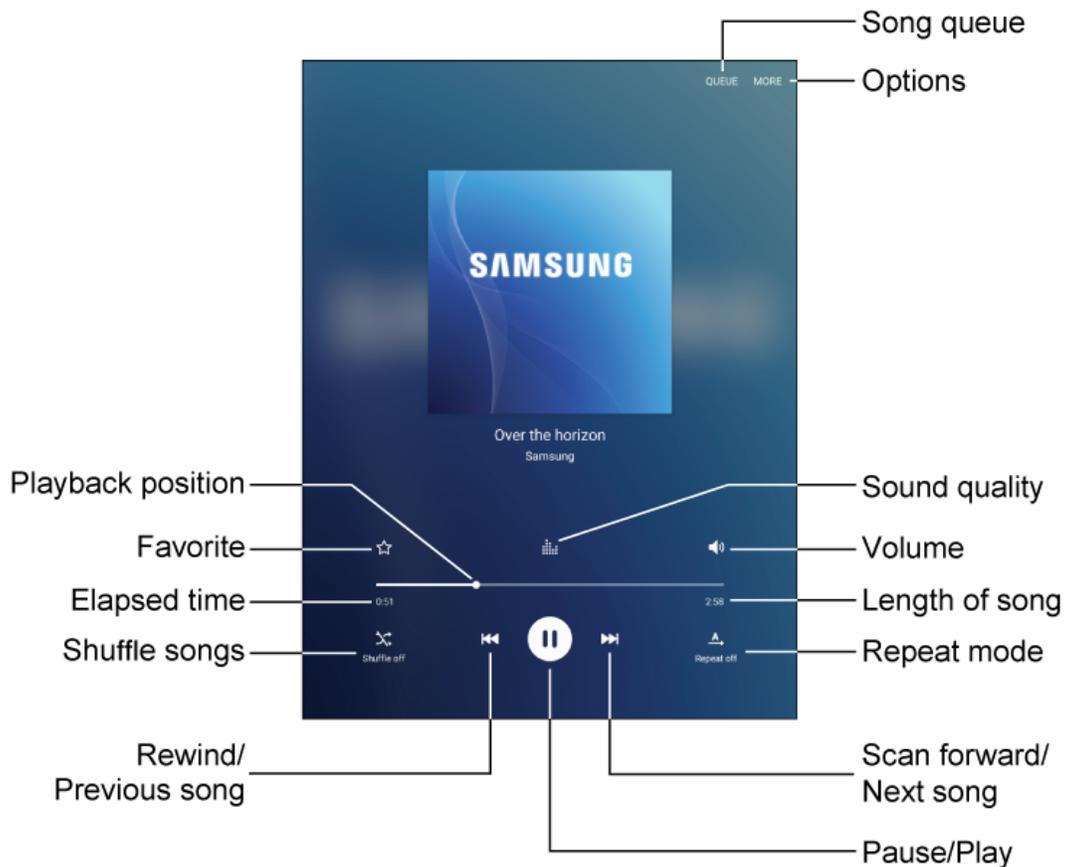


- Tap **||** to pause playback. To start playback again, tap **▶**.
- Tap **⏮** to move to the previous song. Tap **⏭** to move to the Next song.
- Tap the repeat mode button to control playback. Choose **A** to play all songs once. Choose **A** to repeat all songs. Choose **⏮** to repeat the current song.
- Tap the shuffle songs button to control the order songs are played. Choose **⏮** to play songs in the order they appear in the list. Choose **⏮** to play songs in random order.
- Tap **★** to mark a song as a favorite. Whenever a song is a favorite, the star is bright. Favorite songs are included in the Favorites playlist.
- Tap **🔊** to set the volume. You can also set volume by pressing the Volume key on the side of the tablet.

Use Playlists

Create playlists to group songs, so you can listen to them together.

1. From home, tap  **Apps** >  **Music**.

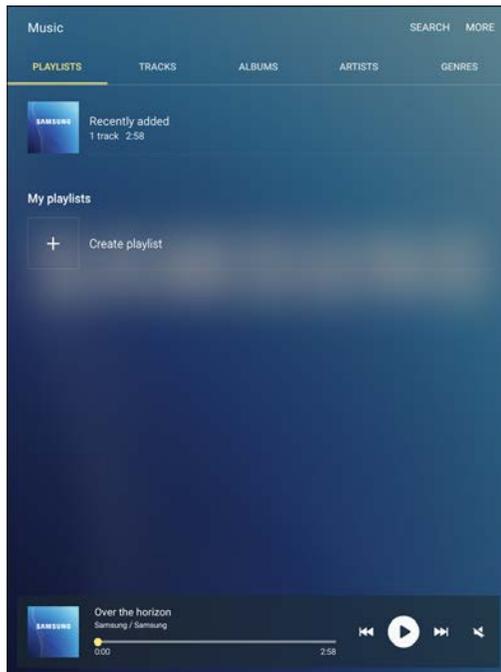

2. Tap **Playlists**, and then use these options:
 - Tap an existing playlist to play its songs.
 - Tap **+** **Create playlist** to create a new playlist.
 - Enter a name for the playlist and tap **Create**.
 - Tap songs from the Tracks list to add them to the playlist. When you're done adding songs, tap **Done**.
 - ❖ The new playlist is saved under My playlists.

Tip: To edit a playlist, tap it from the list and then tap **ADD** to add more songs, or tap **More** to access the Edit, Rename, and Settings options for the playlist.

Music Options and Settings

1. From home, tap  **Apps** > **Music** .
2. Tap **More** for options. Available options depend on the category:
 - **Edit:** Edit the song or playlist.
 - **SoundAlive:** Choose a setting to match the type of music you're playing.
 - **Settings:**
 - **Play speed:** Touch and drag the slider to set the default speed for music playback.

- **Music auto off:** Choose a time period for music to play, after which Music will close.
- **Smart volume:** When enabled, Music automatically adjusts the volume of all songs to an equal level.

My Files

My Files allows you to manage your sounds, images, videos, Bluetooth files, Android files, and other data in one convenient location. This application allows you to launch a file if the associated application is already on your tablet.

1. From home, tap **Apps**  > **My Files** .
2. Folders display, including:
 - **Recent files:** View recently saved files.
 - **Images:** View image files.
 - **Videos:** View video files.
 - **Audio:** View audio files.
 - **Documents:** View document files.
 - **Download history:** View all apps and files that have been downloaded to the tablet.
 - **Local storage:** View folders and files in their storage locations.
 - **Cloud storage:** View folders and files store on the Internet.

Note: Different folders may appear depending on how your tablet is configured.

To view files in My Files:

1. From home, tap **Apps**  > **My Files** .
2. Tap a category to view its files or folders.
3. Tap a file or folder to open it.

OneDrive

OneDrive gives you free online storage for all your personal files so you can get to them from your Android device, computer, and any other devices you use.

- From home, tap **Apps**  > **Microsoft Apps**  > **OneDrive** .

OneNote

Stay organized using text, pictures, or audio notes. Create Quick Notes or review and edit shared OneNote notebooks using OneDrive.

- From home, tap **Apps**  > **Microsoft Apps**  > **OneNote** .

PowerPoint

Create and share presentations quickly and easily with Microsoft PowerPoint.

- From home, tap **Apps**  > **Microsoft Apps**  > **PowerPoint** .

SideSync

SideSync is a PC-Mobile solution that enables the screens, windows, and data to be shared easily between a PC and Samsung Android Device.

- From home, tap **Apps**  > **SideSync 3.0** .

Video

Play videos stored on your tablet, or from your other devices (you must sign in to your Samsung account to play videos synced from your other devices).

1. From home, tap **Apps**  > **Video** .
2. Scroll through the videos stored on your tablet. After a few seconds, each video thumbnail begins playing a preview of the clip.
3. Tap a video to view it.

Use Pop-Up Play

Multitask with Pop-Up Play by transforming your video player into a pop-up window floating on the screen. The video will continue to play, and the pop-up window can be resized or moved anywhere on the screen.

1. From home, tap **Apps**  > **Video** .
2. Tap a video to view it.

3. Tap the screen to display playback options, and then tap **Pop-up**.



- ❖ The video will continue playing in a floating window. Drag the window to any location on the screen, and use two fingers to pinch or spread to resize the floating window.

Word

Create and share word processing documents quickly and easily with Microsoft Word.

- From home, tap **Apps**  > **Microsoft Apps**  > **Word** .


YouTube

View videos uploaded to YouTube and upload your own videos to your YouTube account.

View YouTube Videos

You can use the YouTube app to view videos on YouTube even if you are not signed in to a YouTube account.

1. From home, tap **Apps**  > **YouTube** .

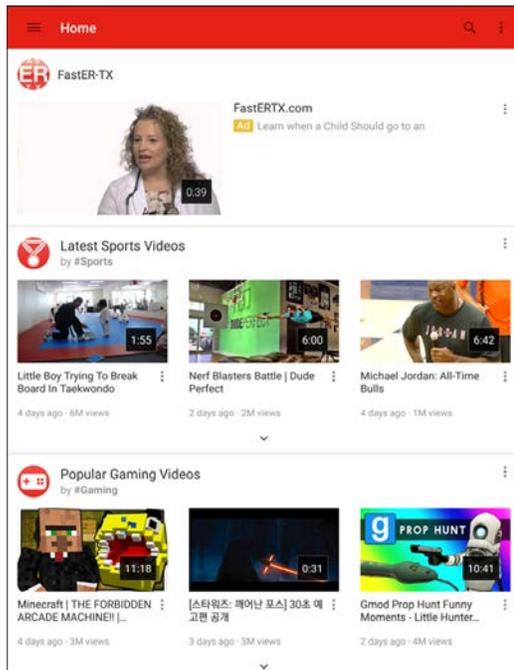


- ❖ The YouTube app launches.
2. Search through the YouTube channels and tap a video you want to see.
 - ❖ The video plays on your tablet screen.
 - Tap the screen to pause or resume play while watching.

Post a Video to YouTube

You can post videos to your YouTube account from your tablet. Before posting, you must set up a YouTube account and sign in to it on your tablet.

1. From home, tap **Apps**  > **YouTube** .

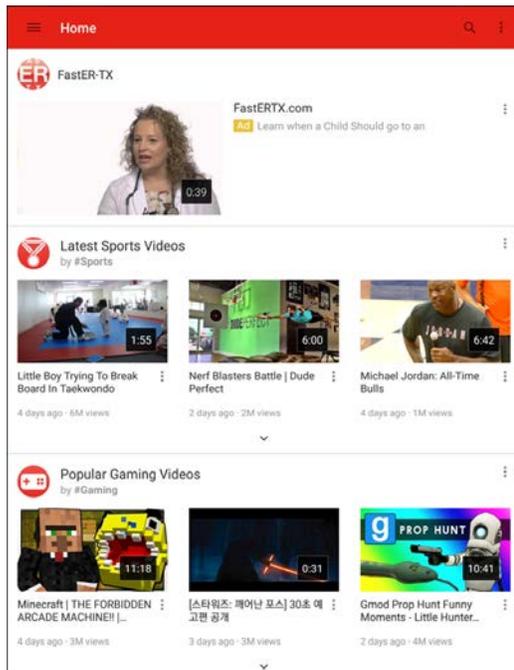

- ❖ The YouTube app launches.

2. Tap **Options**  > **Uploads**.



- ❖ The Uploads menu appears.

3. Tap **Upload**  to select a video from your tablet.
 - Enter a title, description, and tags, and select a privacy setting.
4. Tap **Upload** .
- ❖ The video is uploaded to your YouTube channel.

1Weather

Check weather and forecasts with 1Weather: Widget Forecast Radar, which combines a groundbreaking UI with a power set of weather tools.

- From home, tap **Apps**  > **1Weather** .

Facebook


Post updates, read what your friends are up to, upload pictures and check-ins, and more with on-the-go Facebook access.

Sign In to Facebook

1. From home, tap **Apps**  > **Facebook** .

– or –

From home, tap **Apps**  > **Settings**  > **Accounts** > **Add account** > **Facebook**.

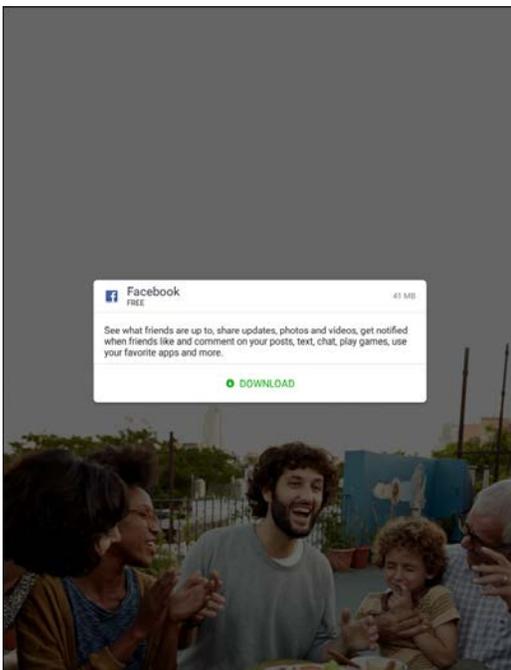

2. Tap **Download** > **Accept and install** to download the app.
3. If you have a Facebook account, enter your user id and password, and then tap **Log in**.

– or –

To create a new Facebook account, tap **Sign Up for Facebook** > **Next**, and then follow the instructions.

- ❖ You are signed in to Facebook.

Lookout

Lookout Mobile Security provides key security options, such as anti-virus and anti-malware technology, a lost and stolen device locator service, an application privacy adviser, and a backup service.

- From home, tap **Apps**  > **Lookout** .

NASCAR Mobile

The NASCAR Mobile app is the official mobile app of NASCAR. Follow NASCAR news, video highlights, and immerse yourself even further into the NASCAR experience with driver stats and live leaderboards.

- From home, tap **Apps**  > **NASCAR Mobile** .

Pages Manager

The Pages Manager app lets you manage up to 50 Pages from your smartphone or tablet. You can check Page activity, share with your audience and see insights.

Install Pages Manager

1. From home, tap **Apps**  > **Pages Manager** .
2. Tap **Download**, and then follow the prompts to accept access requirements and update the app.

Use Pages Manager

- From home, tap **Apps**  > **Pages Manager** .

Samsung+

Get live help, discover new features, and unlock promotions for your Samsung device.

- From home, tap **Apps**  > **Samsung+** .

Connectivity

The following topics address your tablet's connectivity options, including USB file transfer and tethering, Wi-Fi, Bluetooth, IR connectivity, and more.

Transfer Files Between Your Tablet and a Computer

You can use the supplied USB connector to connect your tablet directly to your computer and transfer music, pictures, and other content files.


For example, if you have a music album stored on your computer that you want to listen to on your tablet with any of the music apps, just attach your tablet to the computer and copy the files to the music folder.

Data exchange may use the methods outlined in the following table:

Method	Description
Media Device (MTP)	Transfer files between your tablet and PC such as pictures, videos, and music.
Camera (PTP)	Transfer picture and video files between your tablet and PC.
Mass Storage Mode	Exchange data with a PC using your tablet as an external storage device.


Transfer Files Between the Tablet and a Computer

1. Connect your tablet to your computer using the supplied USB/charging cable.

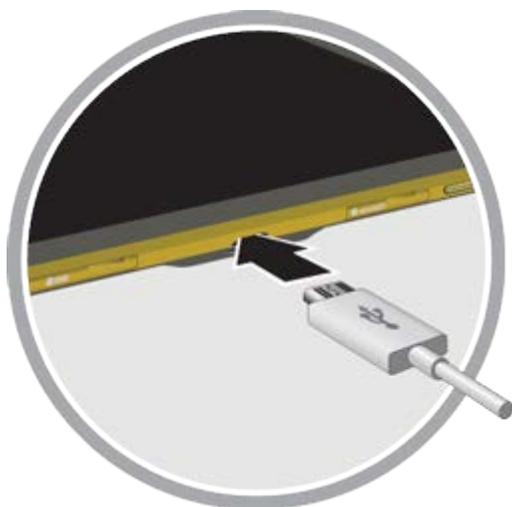

- Insert the larger end of the cable to the charger/accessory port at the bottom of the tablet.
- Insert the USB end of the cable into an available USB port on your computer. You may need to remove the USB cable from the charging head to access it.

2. Drag the status bar down to display the notification panel.

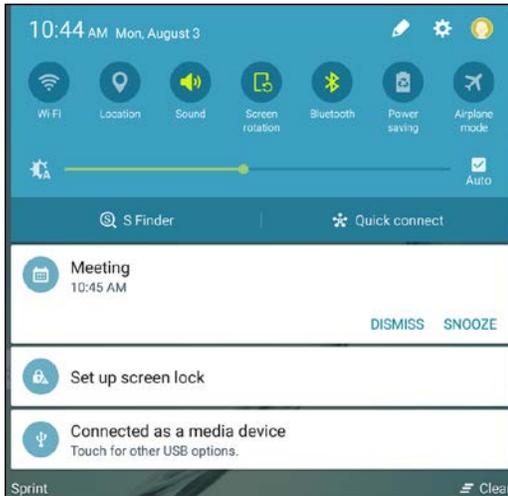

3. You will see either **Connected as a media device** or **Connected as a camera**.

- ❖ The files on your tablet can now be accessed via your computer.
 - For most transfers, you will want to use **Connected as a media device**.
 - To change the option, tap the notification in the notification panel to open the **USB computer connection** window, and then tap the desired option.

4. On your computer, navigate to the detected device (such as through the My Computer menu) and open it.

5. Select **Tablet** for internal tablet storage.

6. Select a folder (for example, **Music** for songs and albums) and copy files to it from your computer.

7. When you are done, disconnect your tablet from your computer.

- ❖ The transferred files are now saved to your tablet.

Note: You can also copy files from your tablet to your computer, for example, if you want to save pictures or videos from your tablet on your computer.

Wi-Fi


Wi-Fi provides wireless Internet access over distances of up to 300 feet. To use your tablet's Wi-Fi, you need access to a wireless access point or "hotspot."

The availability and range of the Wi-Fi signal depends on a number of factors, including infrastructure and other objects through which the signal passes.


Turn Wi-Fi On and Connect to a Wireless Network

Use the Connections setting menu to enable your tablet's Wi-Fi radio and connect to an available Wi-Fi network.

1. From home, tap **Apps**  > **Settings**  > **Wi-Fi** .

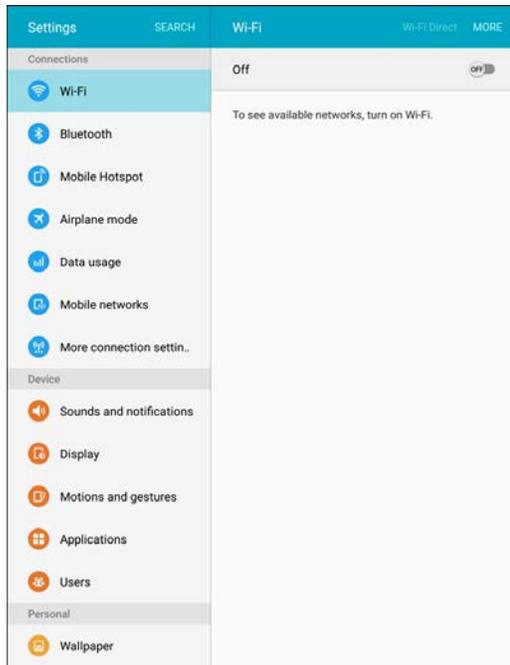


2. Tap **ON/OFF** to turn Wi-Fi on.

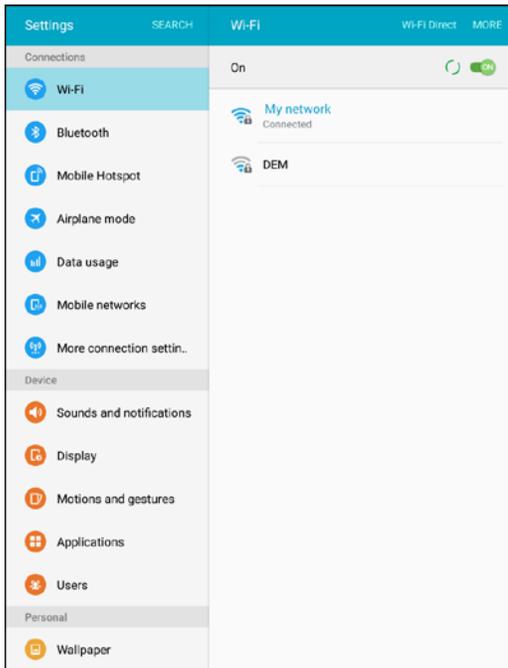

❖ Wi-Fi is enabled. You will see the names and security settings of in-range Wi-Fi networks.

- To disable Wi-Fi, tap **ON/OFF** again.

3. Tap a Wi-Fi network to connect, enter the password (if it is not an open network), and then tap **Connect**.

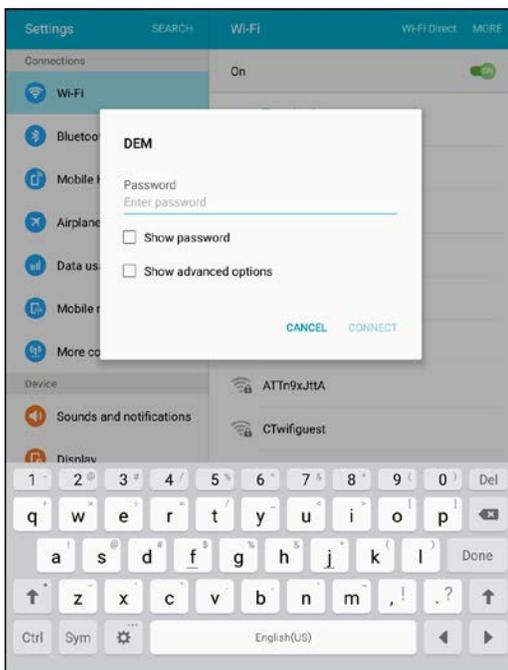


- ❖ Your tablet is connected to the Wi-Fi network. You will see  in the status bar.
 - The password, for a household wireless LAN router, is sometimes found on a sticker on the router (WEP, WPA, KEY, etc.). Contact the router manufacturer for information. For password for a public wireless LAN, check with user's service provider.
 - Entering a password is not required if an access point is not security protected.

Note: The next time your tablet connects to a previously accessed secured wireless network, you will not be prompted to enter the password again, unless you reset your tablet to its factory default settings or you instruct the tablet to forget the network.


Wi-Fi Settings

Use the Wi-Fi settings menu to manually set your Wi-Fi connection options.

1. From home, tap **Apps**  > **Settings**  > **Wi-Fi** .

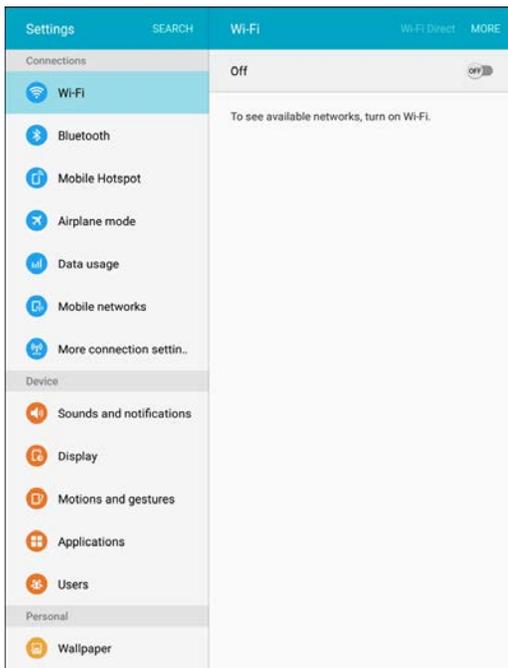


2. Tap **ON/OFF** to turn Wi-Fi on.

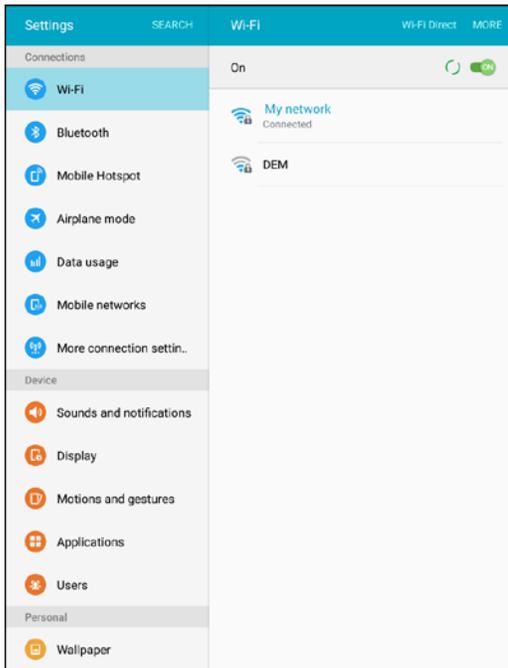

- ❖ Wi-Fi is enabled. You will see the names and security settings of in-range Wi-Fi networks.
 - To disable Wi-Fi, tap **ON/OFF** again.

3. Tap **More > Advanced**.

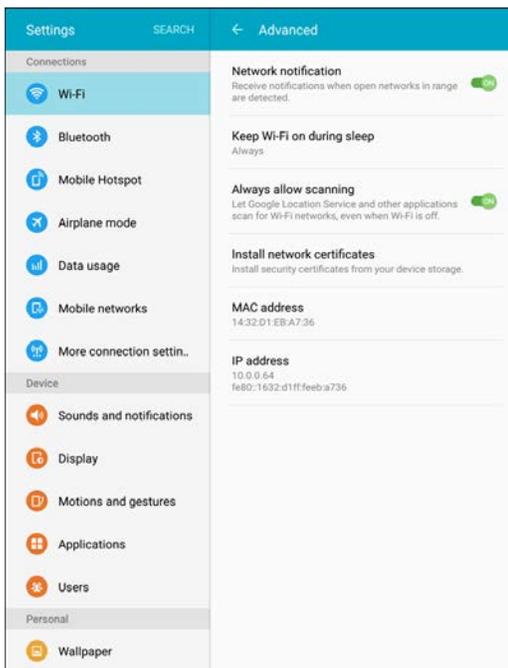

- ❖ The advanced Wi-Fi settings menu appears.


4. Configure your Wi-Fi settings.

- ❖ Your Wi-Fi settings changes are saved.


Disconnect Wi-Fi

You may want to remove a connected Wi-Fi network.

1. From home, tap **Apps**  > **Settings**  > **Wi-Fi** .

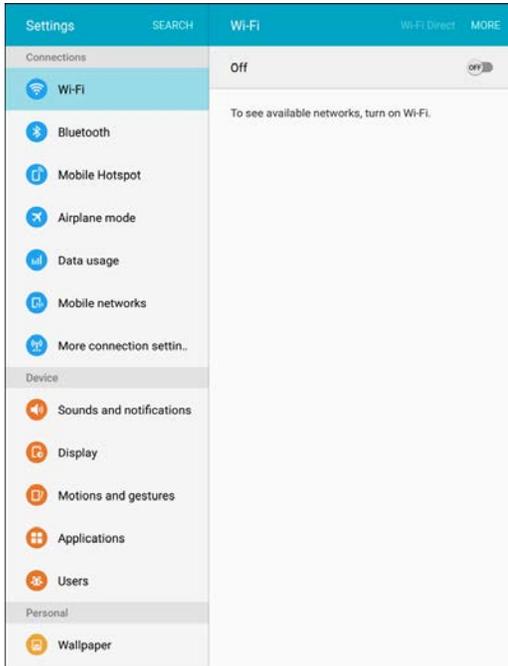

2. Press and hold the name of the connected access point, and then tap **Forget network**.

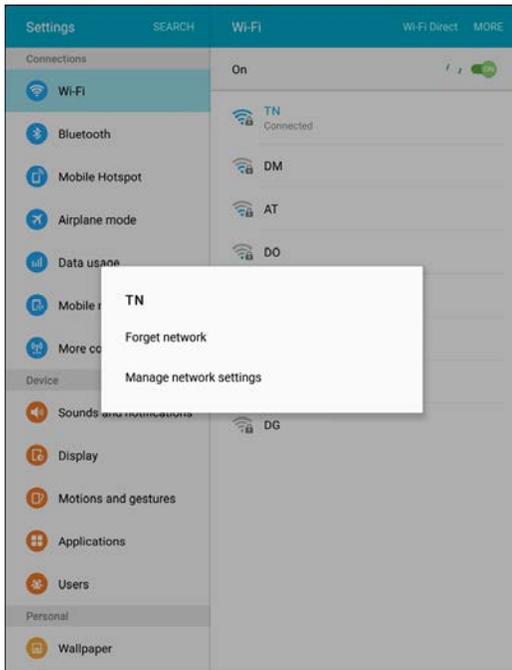


- ❖ Wi-Fi is disconnected and the network settings are removed.
 - After “forgetting” an access point, you need to enter the correct password (and other network settings, if required) to reconnect.


Wi-Fi Direct

Use Wi-Fi Direct to connect directly to other Wi-Fi Direct devices using only Wi-Fi, without a wireless access point (network) or via the Internet.

1. From home, tap **Apps**  > **Settings**  > **Wi-Fi** .

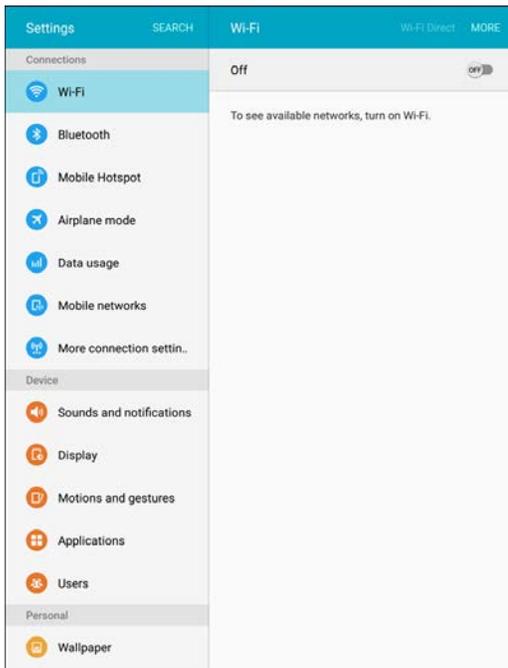


2. Tap **ON/OFF** to turn Wi-Fi on.

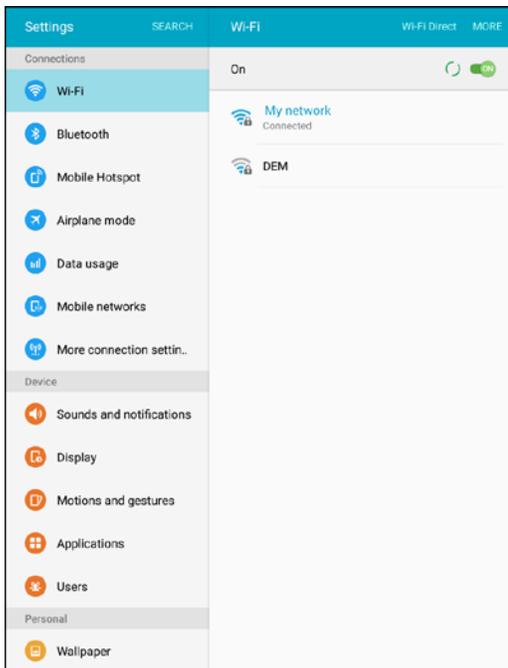

- ❖ Wi-Fi is enabled. You will see the names and security settings of in-range Wi-Fi networks.

3. Tap **Wi-Fi Direct**.

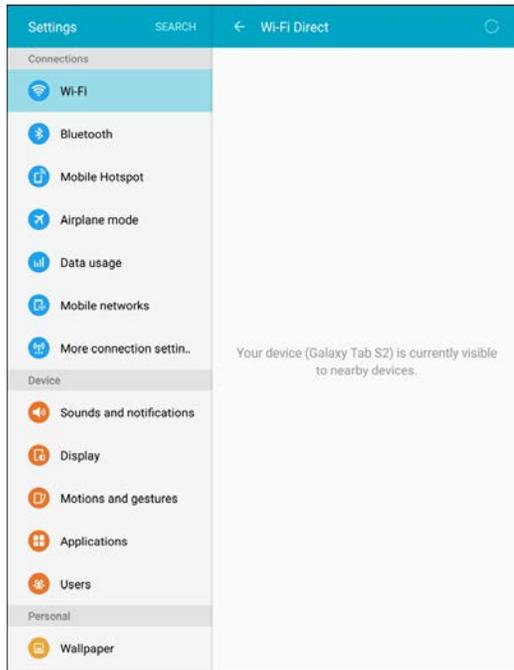

- ❖ The Wi-Fi Direct settings menu appears.
 - Wi-Fi Direct and Wi-Fi are unavailable at the same time.
- 4. If a device is found, tap the device entry to connect.
 - If connected via Wi-Fi, you will see a confirmation. Follow the onscreen instructions.
- 5. Accept the connection on the other device.
 - ❖ The tablet is connected via Wi-Fi Direct.
 - If a connection is not accepted after a certain period, the connection request is cancelled.
 - To stop a connection, tap the device name on the Wi-Fi Direct list.

Bluetooth

Bluetooth is a short-range communications technology that allows you to connect wirelessly to a number of Bluetooth devices, such as headsets and hands-free car kits, and Bluetooth-enabled handhelds, computers, printers, and wireless tablets. The Bluetooth communication range is usually approximately 30 feet.

Bluetooth Hints

Problem: I can't use Bluetooth.

Solution: Is your tablet in airplane mode? Bluetooth is unavailable in airplane mode.

Bluetooth Function Cautions

Information may not appear correctly on connected devices depending on the transferred data.

Bluetooth Information

Bluetooth is a technology that enables wireless connection with PCs, Bluetooth devices with hands-free features, etc.

Function	Description
Audio output	Listen to music, etc., wirelessly.
Data exchange	Exchange data with Bluetooth devices.


Enable Bluetooth

Use the settings menu to enable or disable your tablet's Bluetooth capabilities.


- Wireless connection to all Bluetooth functions is not guaranteed for the tablet.
- The tablet may not connect properly depending on the other device.
- Noise may be experienced with wireless calls and hands-free calls depending on the conditions.

To enable Bluetooth:

1. From home, tap **Apps**  > **Settings** .

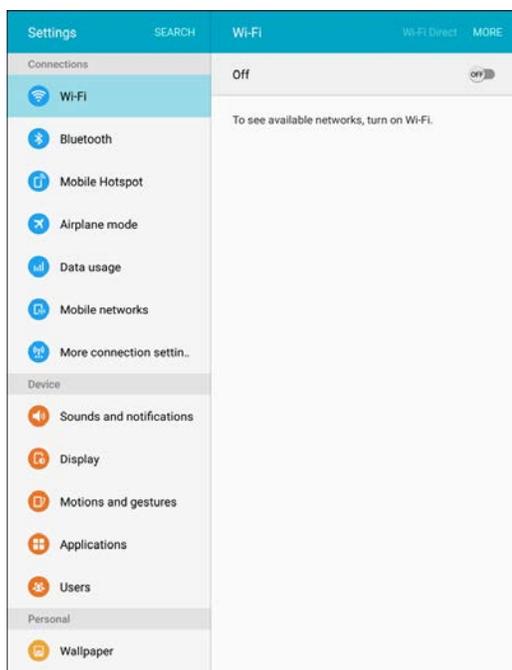


2. Tap **Bluetooth** .

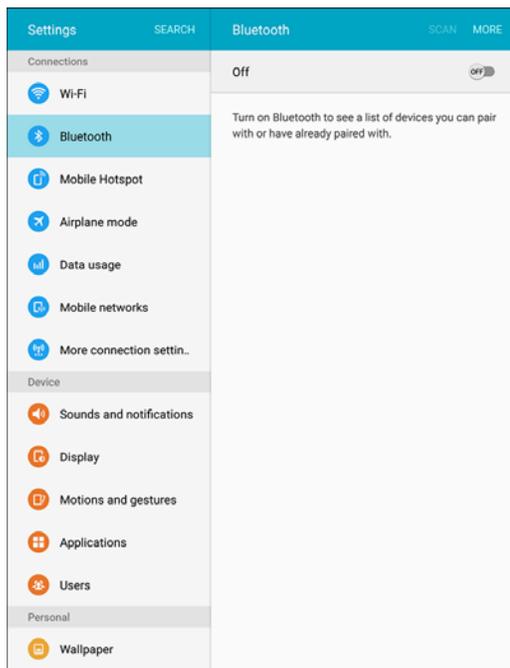

❖ The Bluetooth settings open.

3. Tap **ON/OFF** to turn Bluetooth on.

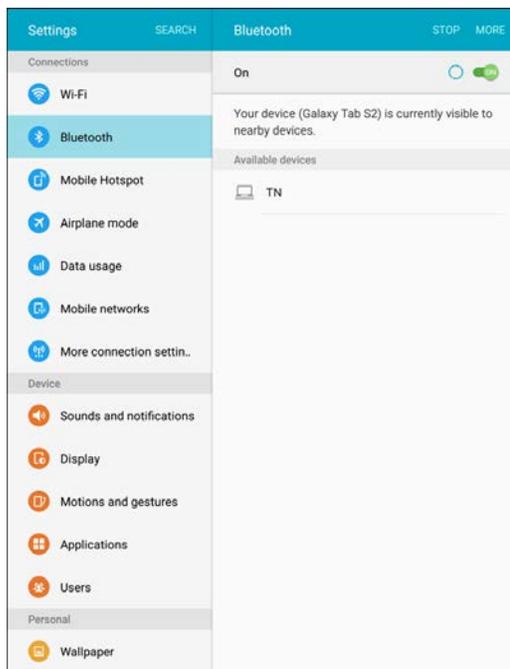

❖ Bluetooth is enabled.

- To disable Bluetooth, tap **ON/OFF** again.

Tip: You can also turn Bluetooth on or off with the Quick settings button in the notification panel. Drag the status bar down to display the notification panel and then tap **Bluetooth** to turn Bluetooth on or off.

Note: Turn off Bluetooth when not in use to conserve battery power, or in places where using a wireless tablet is prohibited, such as aboard an aircraft and in hospitals.


Pair Bluetooth Devices

Search for and pair nearby Bluetooth devices. Saved Bluetooth devices can be connected simply.


Note: Before pairing, turn on Bluetooth on the other device and make sure it is visible or discoverable.

To pair Bluetooth devices:

1. From home, tap **Apps**  > **Settings** .

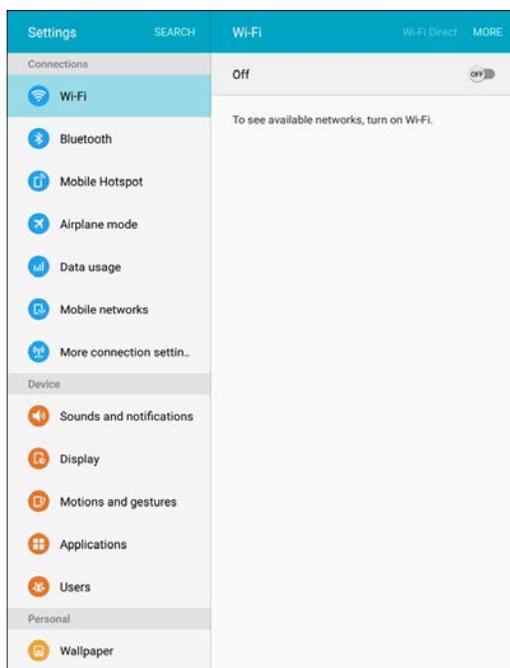


2. Tap **Bluetooth** .

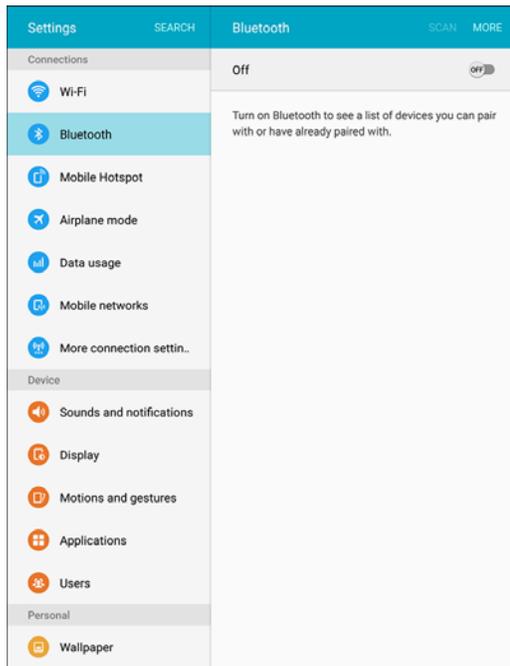

❖ The Bluetooth settings open.

- Nearby devices that are visible or discoverable appear in the “Available devices” list.
- If a target device is not detected, tap **Scan** to search again.


3. Tap a device from the “Available devices” list, and follow the onscreen instructions to pair with the device. Methods to accept a Bluetooth connection differ depending on the device used.

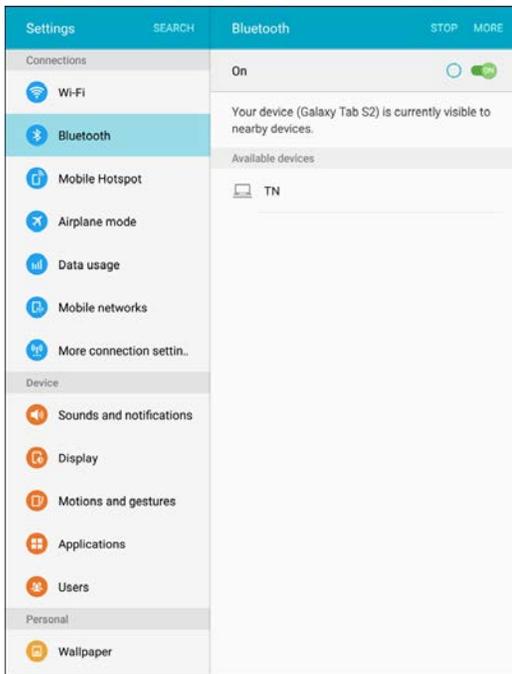

- ❖ The Bluetooth device is paired to your tablet.

Unpairing from a Paired Device

1. From the Bluetooth settings menu, tap **Settings**  next to the paired device you wish to unpair.

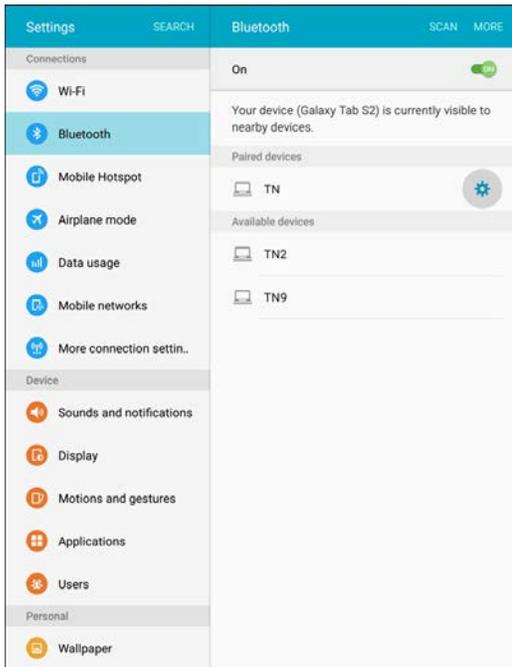


2. Tap **Unpair**.

- ❖ The device is unpaired from your tablet. To make another connection with the device, you will need to pair again.


Connect to a Paired Bluetooth Device

You can listen to music over a Bluetooth stereo headset, or have hands-free conversations using a compatible Bluetooth headset or car kit. It's the same procedure to set up stereo audio and hands-free devices.

1. From home, tap **Apps**  > **Settings** .

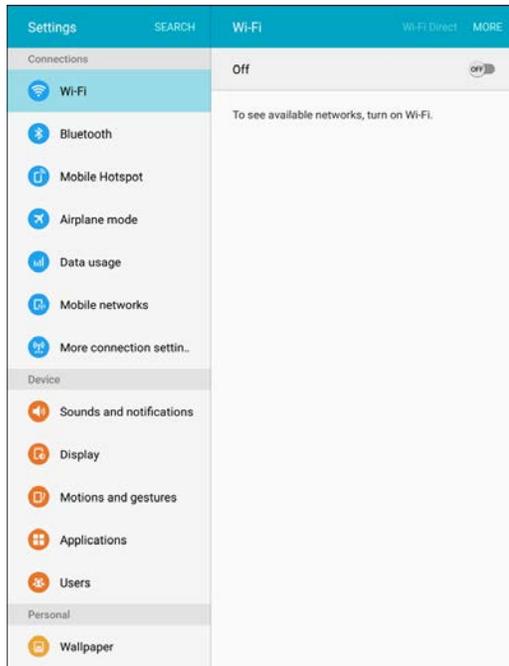

2. Tap **Bluetooth** .

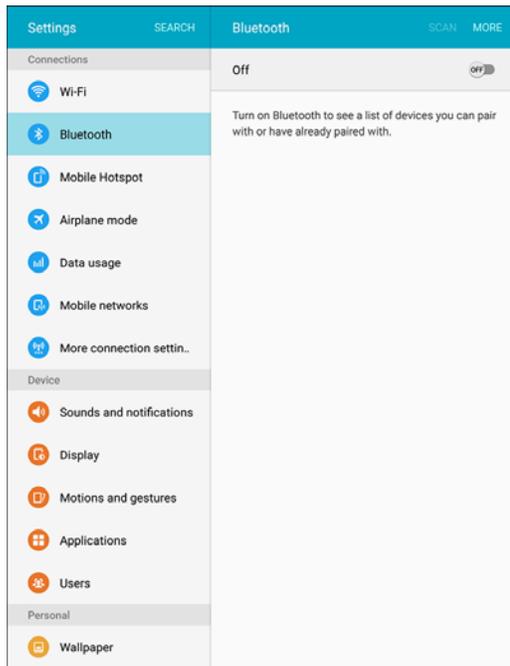

- ❖ The Bluetooth settings open.
 - Paired Bluetooth devices appear in the “Paired devices” list.

3. Tap a device from the “Paired devices” list.

- ❖ Your tablet connects to the paired device.

The pairing and connection status is displayed below the device’s name in the Bluetooth devices section.

When the device is connected to your tablet, the Bluetooth connected icon  is displayed in the status bar. Depending on the type of device you have connected, you can then start using the headset or car kit to listen to music or make and receive tablet calls.

Note: Due to different specifications and features of other Bluetooth-compatible devices, display and operations may be different, and functions such as transfer or exchange may not be possible with all Bluetooth-compatible devices.

Share Information Using Bluetooth

You can use Bluetooth to transfer information between your tablet and another Bluetooth-enabled device such as a tablet or notebook computer.

Types of Data You Can Send via Bluetooth

You can send the following types of information, depending on the device you are sending to:

- Images and videos


- Calendar events
- Contacts
- Audio files

The instructions below illustrate sharing information via Bluetooth by describing how to share a contact.

Sending Contacts Data via Bluetooth

Note: Your tablet must be paired with another Bluetooth-enabled device in order to send information.


1. From home, tap **Apps**  > **Contacts** .

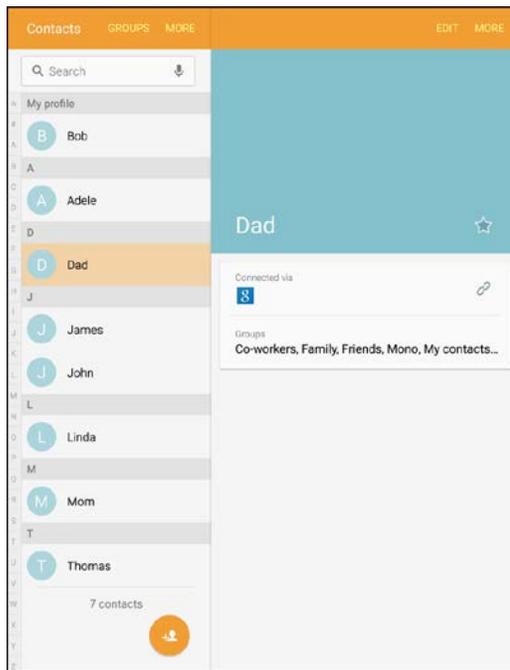


- ❖ You will see the Contacts list.

2. Tap a contact to send.

3. Tap **More > Share contact > Bluetooth**.

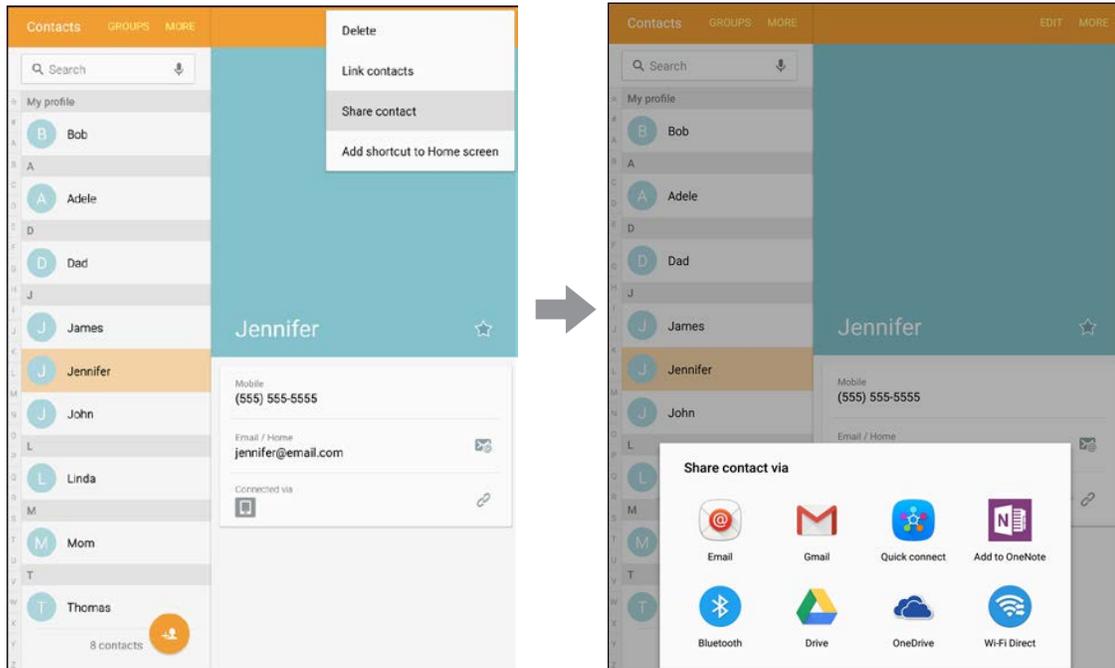

4. Tap a paired device to receive the data.

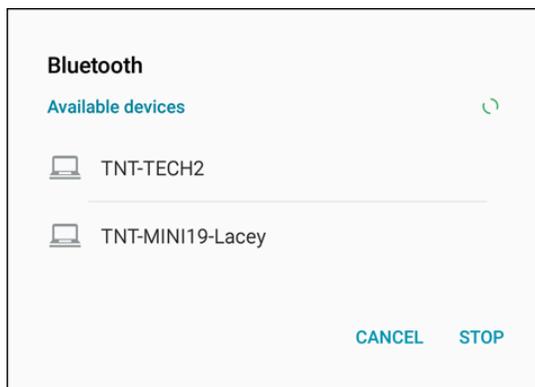


- ❖ The contact information is sent.
 - If you see a message to confirm, follow the onscreen instructions.

Receiving Data via Bluetooth

You can use Bluetooth to receive information from another Bluetooth-enabled device, such as a tablet or notebook computer.

Note: Your tablet must be paired with another Bluetooth-enabled device in order to send information.

1. When another device attempts to send a file to your tablet via Bluetooth, you will see a request to accept the file.

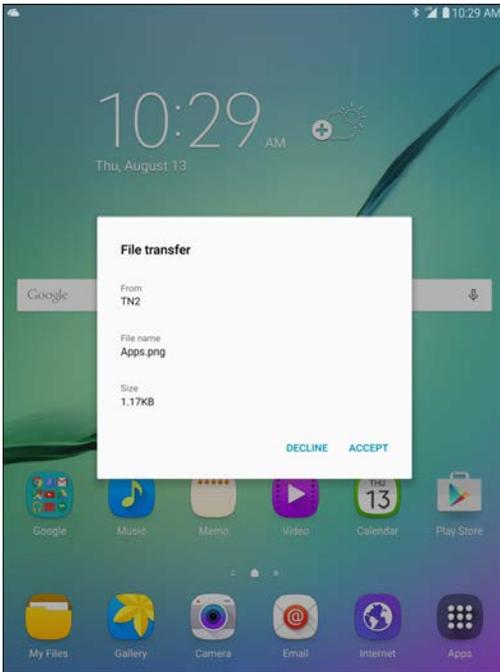

2. Tap **Accept**.

- ❖ The file is sent to your tablet.
 - When your tablet receives a file, you will see a notification. To open the file immediately, drag the status bar down to display the notification panel, and then tap the notification.
 - When you open a received file, what happens Next depends on the file type:
 - Media files and documents are usually opened directly in a compatible application.
 - For a vCalendar file, select the calendar where you want to save the event, and then tap **Import**. The vCalendar is added to your Calendar events. (For more information on using the Calendar, see [Calendar](#).)
 - For a vCard contact file, received contacts are stored in the Contacts list.

Settings

The following topics provide an overview of items you can change using your tablet's **Settings** menus.

Basic Settings

From the home screen, tap **Apps**  > **Settings**  to access your tablet's settings menu.

The table below outlines the top-level settings categories.

Category	Description
Wi-Fi	Enable and set Wi-Fi options.
Bluetooth	Enable Bluetooth connections.
Mobile Hotspot	Use the Mobile Hotspot feature to share your tablet's data connection with other devices via Wi-Fi.
Airplane mode	Turn Airplane mode on or off.
Data usage	Check your tablet's data usage.
Mobile networks	View and configure your mobile network connections and settings.
More connection settings	Set wireless and network functions, including selecting a default messaging app, printing services, and setting up a Virtual Private Network (VPN).
Sounds and notifications	Set notification sounds, operation tones, etc.
Display	Set display features, font, brightness, etc.
Motions and gestures	Enable tablet controls by using motions and gestures.
Applications	Manage applications, default apps, and system processes.
Users	Manage and add User profiles to your device.
Wallpaper	Set wallpaper for the Home and Lock screens.
Lock screen and security	Set your tablet's Lock screen options. Set security features such as device administrators, encryption, and trusted credentials.
Privacy	Configure privacy features like location method.


Category	Description
Accessibility	Set accessibility options such as screen magnification, hearing aid compatibility, etc.
Accounts	Set up accounts such as Samsung, Google, and more.
Backup and reset	Set up backup options for your tablet, as well as resetting the tablet to its factory defaults.
Language and input	Set up language and input methods for your tablet.
Battery	Display the battery charge as a percentage on the status bar, view battery usage by application and system process, and configure power saving modes.
Storage	View total and available system memory.
Accessories	Configure your tablet's behavior when it is connected to optional accessories (not included).
Date and time	Set your tablet's date and time.
Help	View tips and guidelines for using your tablet.
Activate this device	Activate your device with the Sprint network.
System Update	Update your system's software, PRL, and Profile.
About device	View device status, legal information, and hardware information about your device.

Access Settings

- From home, tap **Apps**  > **Settings** .

– or –

Slide the status bar down to open the notification panel, and then tap **Settings** .

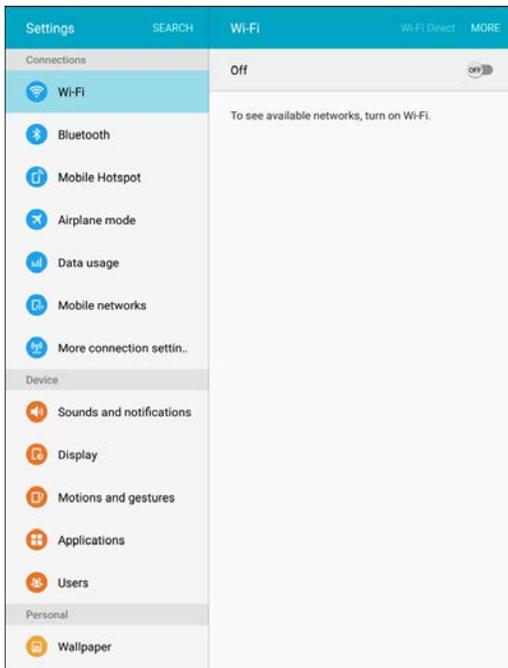


❖ The settings menu opens.

Wi-Fi Settings Menu


The Wi-Fi settings menu lets you turn Wi-Fi on or off, set up and connect to available Wi-Fi networks, and configure advanced Wi-Fi options.

For more information about using Wi-Fi, see [Wi-Fi](#).

1. From home, tap **Apps**  > **Settings**  > **Wi-Fi** .

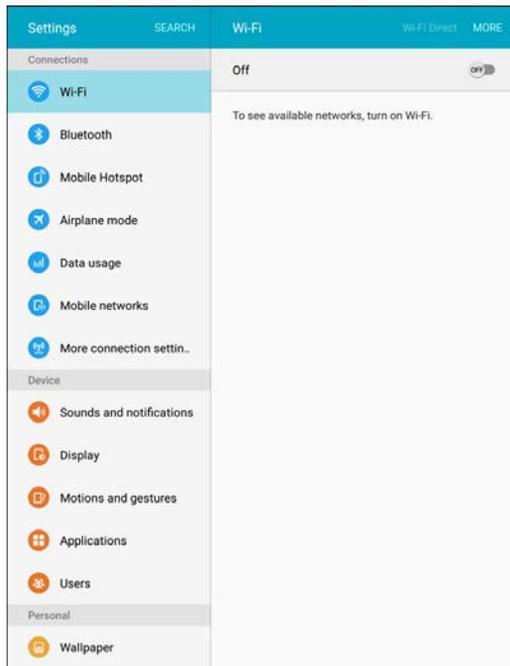


2. Tap **ON/OFF** to turn Wi-Fi on.

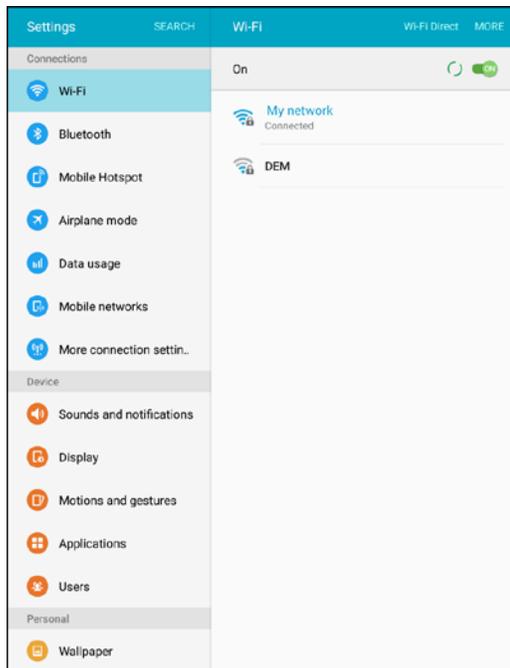

- ❖ Wi-Fi is enabled. You will see the names and security settings of in-range Wi-Fi networks.
 - To disable Wi-Fi, tap **ON/OFF** again.

3. Tap a Wi-Fi network, enter the password, and tap **Connect**.

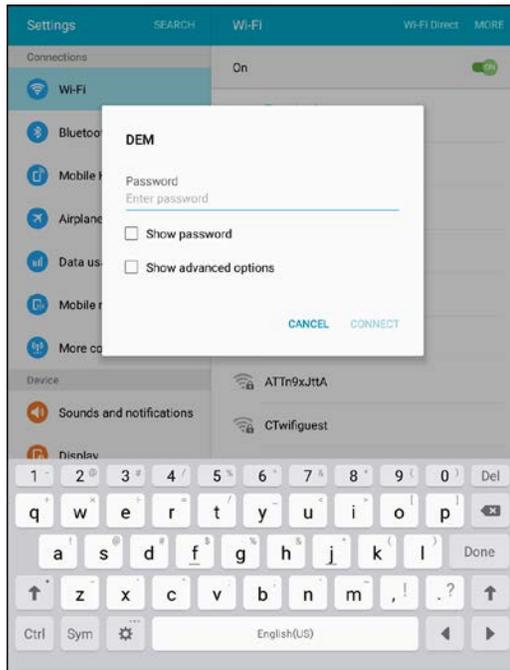

- ❖ Your tablet is connected to the selected Wi-Fi network.
 - The password, for a household wireless LAN router, is sometimes found on a sticker on the router (WEP, WPA, KEY, etc.). Contact the router manufacturer for information. For password for a public wireless LAN, check with user's service provider.
 - Entering a password is not required if an access point is not security protected.

Connect to a Wi-Fi Network via WPS

Wi-Fi Protected Setup (WPS) is a network security standard that allows you to easily secure a wireless network connection between your tablet and a router.

To connect using a WPS button:

1. From Wi-Fi settings, tap **More > WPS push button**.
2. Tap the WPS button on your router.
3. Follow the prompts to complete the connection.

To connect using a Personal Identification Number (PIN):

1. From Wi-Fi settings, tap **More > WPS PIN entry**.
2. Enter the PIN displayed on your router.
3. Follow the prompts to complete the connection.

Smart Network Switch

Smart network switch lets your tablet automatically switch to the wireless network data connection when the current Wi-Fi connection is unstable.

1. From the Wi-Fi settings menu, tap **More > Smart network switch**.
2. Tap **On** to enable the feature.

Advanced Wi-Fi Settings


The advanced Wi-Fi settings menu lets you set up and manage wireless access points.

- **Enable Notification When Open Networks Are Available:** From Wi-Fi settings, tap **More > Advanced > Network notification**.
 - The setting is available when Wi-Fi is turned on.
 - Tap **Network notification** to turn the option on or off.
- **Set Timing for Pausing a Connection:** From Wi-Fi settings, tap **More > Advanced > Keep Wi-Fi on during sleep** and then select a setting.
- **Allow Background Scanning for Wi-Fi Networks (Even When Wi-Fi Is Turned Off):** From Wi-Fi settings, tap **More > Advanced > Always allow scanning** to turn the option on or off.
- **Install Network Security Certificates:** From Wi-Fi settings, tap **More > Advanced > Install network certificates** and select a certificate.
- **Check MAC Address:** From Wi-Fi settings, tap **More > Advanced**.
 - MAC Address appears below “MAC Address.”
- **Check IP Address:** From Wi-Fi settings, tap **More > Advanced**.
 - IP Address appears below “IP Address.”


Bluetooth Settings

Your tablet's Bluetooth capabilities let you use wireless headsets, send and receive pictures and files, and more. For details on your tablet's Bluetooth usage, see [Bluetooth](#).

1. From home, tap **Apps**  > **Settings** .

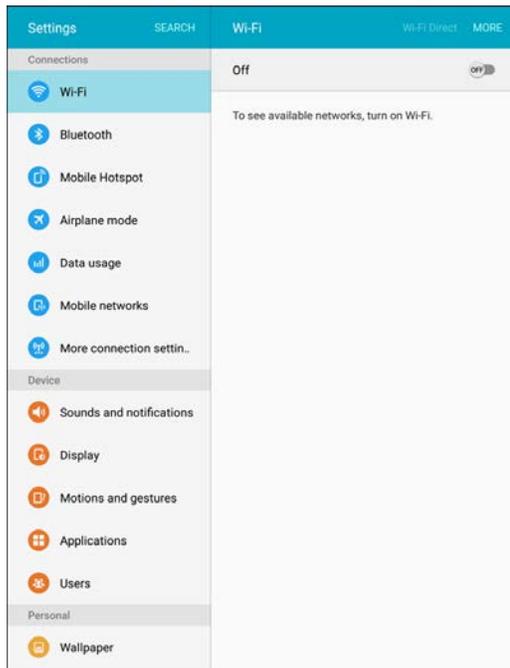

2. Tap **Bluetooth** .

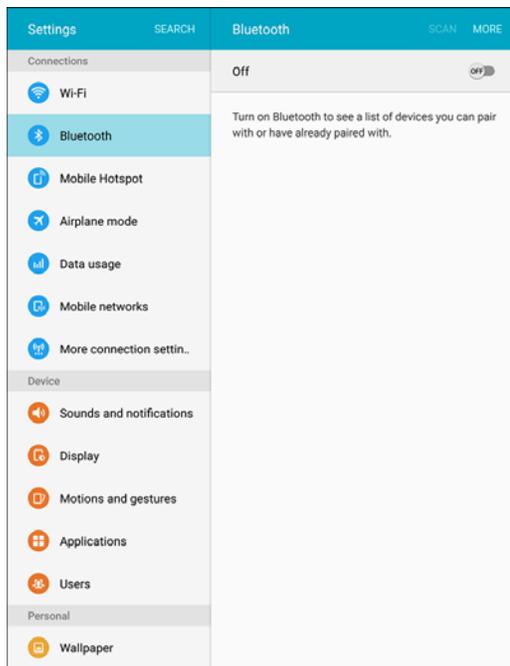

- ❖ The Bluetooth settings open.

Bluetooth Settings Operations

- **Enable Bluetooth:** In Bluetooth settings, tap **ON/OFF** to enable.

- When enabled, confirmation appears for your tablet to be discoverable by other devices. Follow the onscreen instructions.
- **Pairing Bluetooth Devices:** Make sure the other devices are set to be discovered. From Bluetooth settings, tap the device name in “Available devices” and follow the onscreen instructions.
 - Depending on the device, you may be required to enter or accept a passkey.
 - If the target device does not appear, tap **Scan** to search again.
 - This setting is available when Bluetooth is enabled.
- **Change the Name of a Paired Device:** From Bluetooth settings, tap **Settings**  next to a paired device name, tap **Rename**, enter a new name, and tap **Rename**.
 - Emoji cannot be used in a device name.
 - This setting is available when Bluetooth is enabled.
- **Cancelling Pairing:** From Bluetooth settings, tap **Settings**  next to a paired device name, and then tap **Unpair**.
 - This setting is available when Bluetooth is enabled.
- **Enable Service from Paired Device:** From Bluetooth settings, tap **Settings**  next to a paired device name, and then tap the listing under **Use for**.
 - If a confirmation prompt appears, follow the onscreen instructions.
 - This setting is available when Bluetooth is enabled.
 - This setting is available when the paired device is providing a service.
 - Tap **ON/OFF** to turn the option on.
- **Search for Other Devices:** From Bluetooth settings, tap **Scan**.
 - This setting is available when Bluetooth is enabled.
- **Check Files Received via Bluetooth Transfer:** From Bluetooth settings, tap **More > Received files**, and follow the onscreen instructions.

Hotspot Settings


Use the Hotspot feature to share your tablet’s data connection with other devices via Wi-Fi.

Note: Using the Hotspot feature consumes battery power and uses data services.


Turn Hotspot On or Off

To conserve battery life, turn Hotspot on when you need it and turn it off when you are finished. You can control Hotspot from Settings.

1. From home, tap **Apps**  > **Settings** .

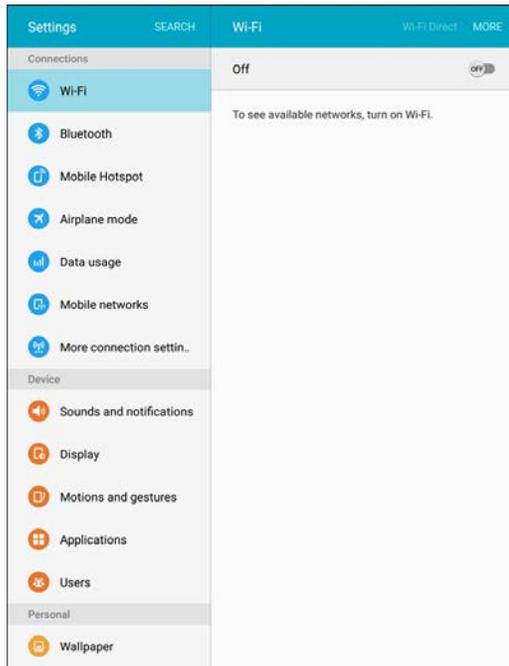

2. Tap **Mobile Hotspot** .

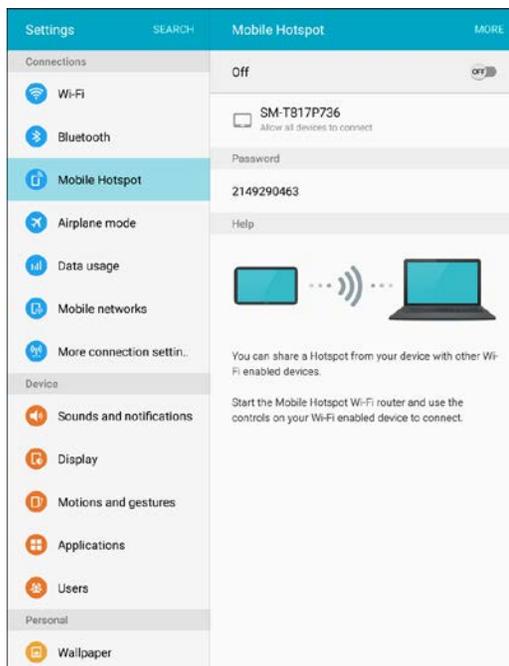

❖ The Hotspot settings open.


3. Tap **ON/OFF** to turn Hotspot on or off.

Note: Turning on Hotspot will turn off Wi-Fi.


Configure Hotspot

Set up Hotspot to your preferences.

1. From home, tap **Apps**  > **Settings** .

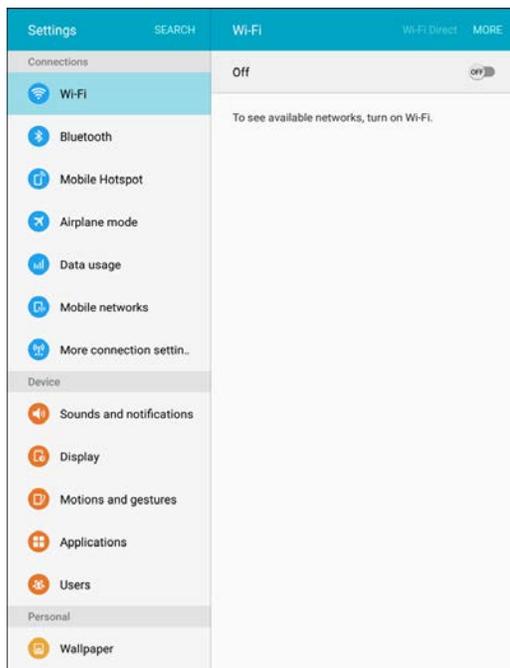

2. Tap **Mobile Hotspot** .

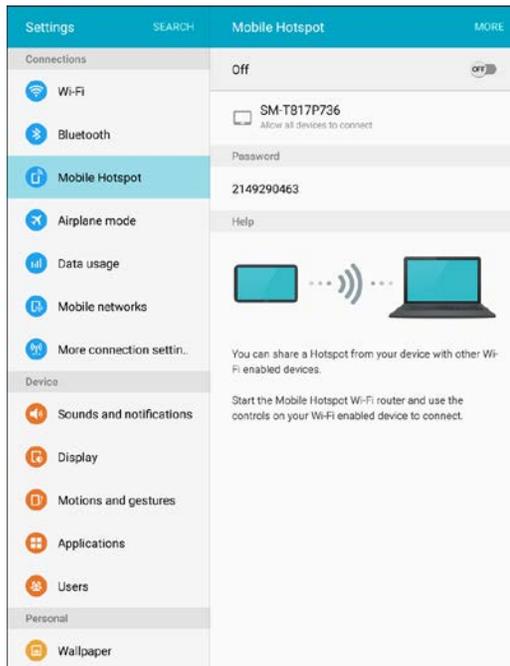

3. Tap **More** to set these options:

- **Configure Hotspot:**
 - **Network name:** View and change the name of your mobile hotspot.
 - **Hide my device:** When enabled, your mobile hotspot is not visible to other Wi-Fi devices during a scan. Other devices can still connect to your mobile hotspot, but will have to set up the connection manually with your Network SSID and Password.
 - **Security:** Choose the security level for your Mobile Hotspot.
 - **Password:** If you choose a security level that uses a password, set a password.
 - **Show password:** When enabled, the contents of the Password field are visible.
 - **Show advanced options:** When enabled, you can access advanced options, including Broadcast channel, to specify the channel your device uses for Hotspot, and you can set the maximum number of connections to your Hotspot.
- **Timeout settings:** Choose a time period, after which Hotspot will automatically turn off if there is no activity.
- **LAN settings:** View and configure settings related to using your Hotspot as a Local Area Network.
 - **IP address:** View the default IP address, or tap to enter a valid IPv4 address.
 - **Subnet mask:** View the default subnet mask, or tap to enter a subnet mask.


- **DHCP:** Tap to enable or disable DHCP. When DHCP is enabled, your tablet assigns IP addresses to devices that connect to Hotspot.
- **Starting IP:** When DHCP is enabled, view the default starting IP address for assigning IP addresses to connecting devices, or enter a valid IPv4 address. When other devices connect to your device using DHCP, the IP address your tablet assigns will be between the Starting IP and Ending IP.
- **Ending IP:** When DHCP is enabled, view the default ending IP address for assigning IP addresses to connecting devices, or enter a valid IPv4 address. When other devices connect to your device using DHCP, the IP address your tablet assigns will be between the Starting IP and Ending IP.
- **Lease time:** When DHCP is enabled, set a length of time a connected device may use an assigned IP address.
- **Maximum DHCP users:** When DHCP is enabled, set the maximum number of devices allowed to connect to your Hotspot.

Allowed Devices


Control whether devices can connect to your Mobile Hotspot with the Allowed devices list. After you add devices to the list, they can scan for your tablet and connect using your tablet's Hotspot name and password.

Note: Using the Hotspot feature consumes battery power and uses data services.

1. From home, tap **Apps**  > **Settings** .

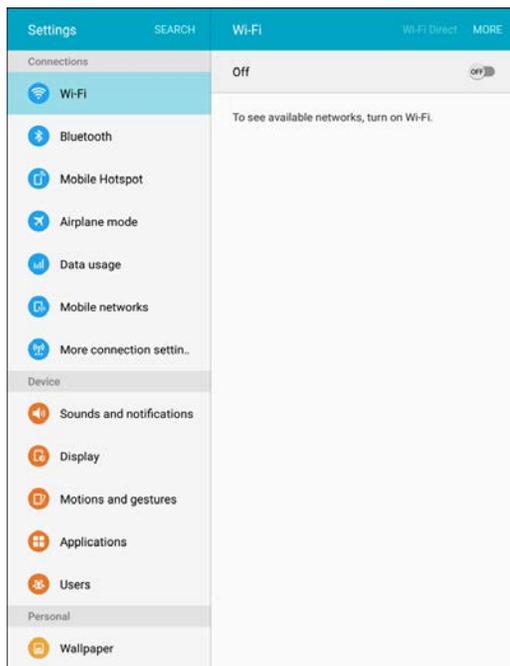

2. Tap **Mobile Hotspot** .

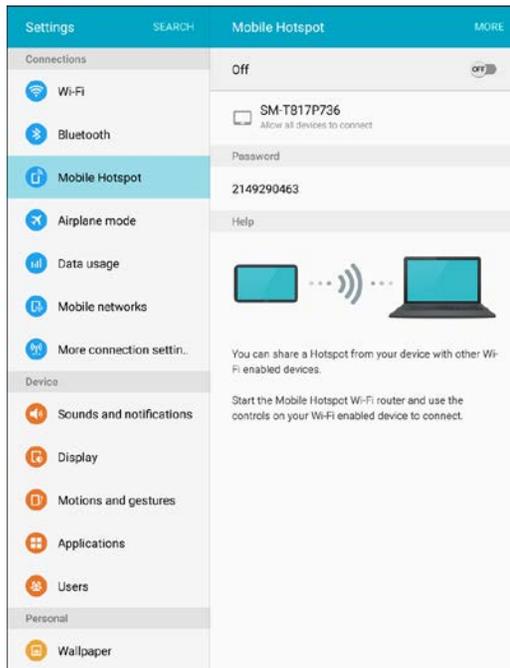

3. Tap **More > Allowed Devices**.
4. Tap **Add**, and then enter the other device's **Device name** and **MAC address**. Consult the other device's settings to find these details.
5. Tap **OK** to add the device to the Allowed devices list.


Airplane Mode

When you enable Airplane mode, your tablet disconnects from all networks, meaning you cannot use make calls, send or receive messages, or access the Internet. It also turns off other connectivity features, such as Wi-Fi and Bluetooth.


While in airplane mode, you can use other features of your tablet, such as playing music, watching videos, or other applications.

To use Wi-Fi and Bluetooth after enabling Airplane mode, turn them on either in Settings or on the notification panel.

1. From home, tap **Apps**  > **Settings** .

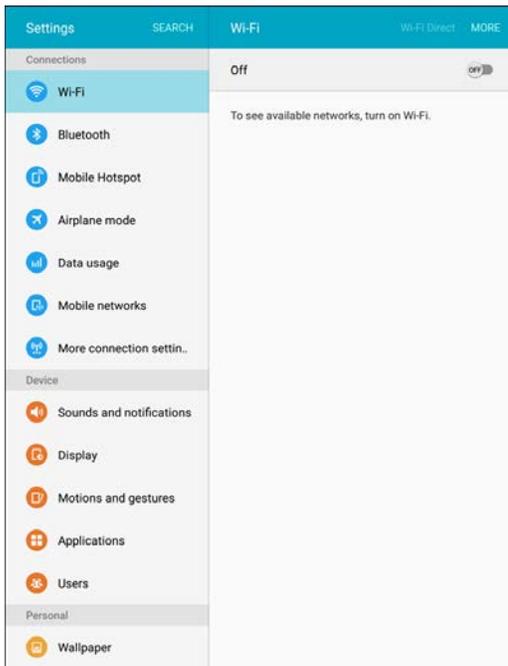

2. Tap **Airplane mode** .

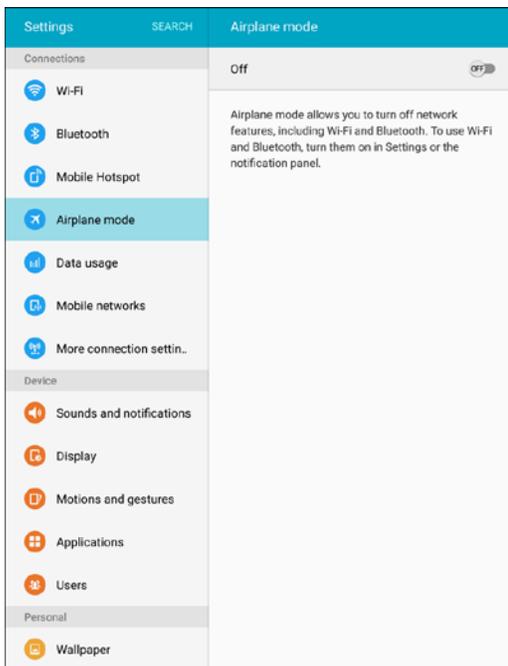


3. Tap **ON/OFF** to enable Airplane mode.

Note: You can also enable or disable Airplane Mode through the notification panel quick settings (drag down the status bar and tap **Airplane mode**), or through the Power/Lock key (press and hold the **Power/Lock** key and then tap **Airplane mode**).


Data Usage Settings

The Data usage menu lets you view your tablet's mobile and Wi-Fi data usage, set data limits, restrict hotspot usage, and more.

1. From home, tap **Apps**  > **Settings** .

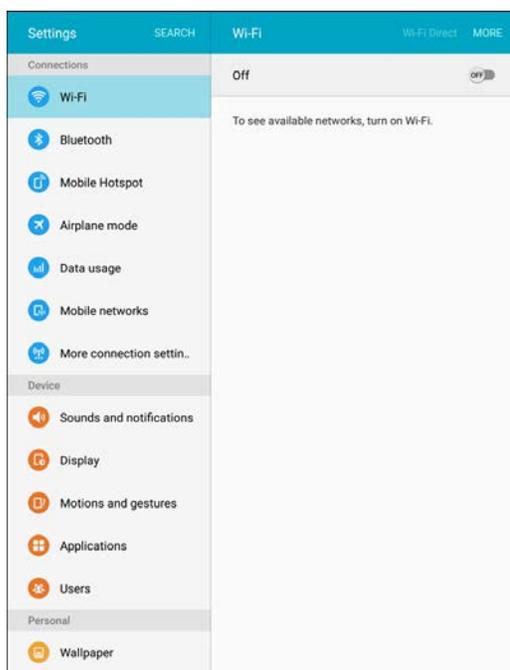

2. Tap **Data usage** .

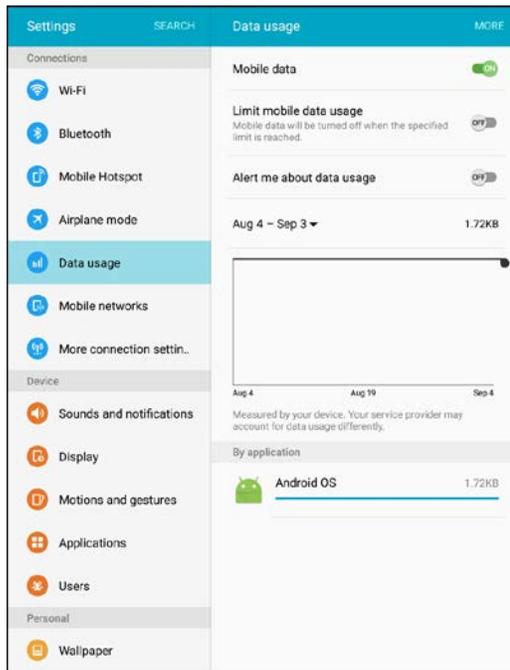

- ❖ The data usage window opens.

Data Usage Settings Operations

- **Enable Mobile Data:** Tap **ON/OFF** next to **Mobile data**.
- **Enable Restrictions on Mobile Data Usage:** Tap **ON/OFF** next to **Limit mobile data usage**, and then drag the horizontal limit slider up or down to set the data usage limit.
 - This setting is available when Mobile data is enabled.
- **Set Amount for Alert When Data Usage Increases:** Tap **ON/OFF** next to **Alert me about data usage**, and then drag the horizontal warning slider up and down to set an amount.
 - Data usage amounts are approximate. Actual amounts may differ.
 - This setting is available when Mobile data is enabled.
- **Set Dates for Resetting Data Usage:** Tap the date range to set the data usage measuring cycle.
 - This setting is available when Mobile data is enabled.
- **Check Data Usage for Each Application:** Tap an app name to see its usage for the period.
- **Enable Restriction on Mobile Data in Background:** Tap **More > Restrict background data > OK**.
 - The availability of roaming services is dependent on your service plan. Check with your carrier and service plan for details.


- This setting stops some apps and services from working unless your tablet is connected to a Wi-Fi network.
- This setting is available when Limit mobile data usage is on.
- **View Both Mobile Data and Wi-Fi Usage:** Tap **More** > **Show Wi-Fi usage**.
 - When Show Wi-Fi usage is enabled, you will see a Wi-Fi tab at the top of the Data usage window. Tap the tab to view your tablet's Wi-Fi data usage.
- **Restrict networks:** Tap **More** > **Restrict networks**.
 - Restrict background apps from using selected Mobile Hotspots. You can also set apps to warn you before using these networks for large downloads.

Mobile Networks Settings


The Mobile networks settings menu allows you to configure your mobile network connections.

Set options for network selection and data service.

1. From home, tap **Apps**  > **Settings** .

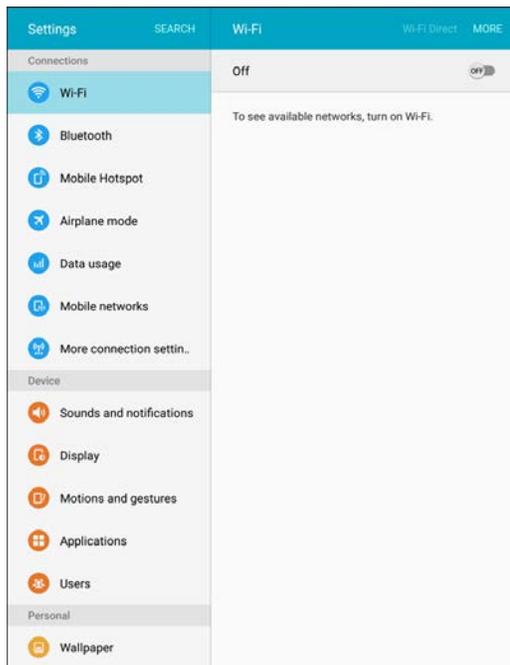

2. Tap **Mobile networks** .

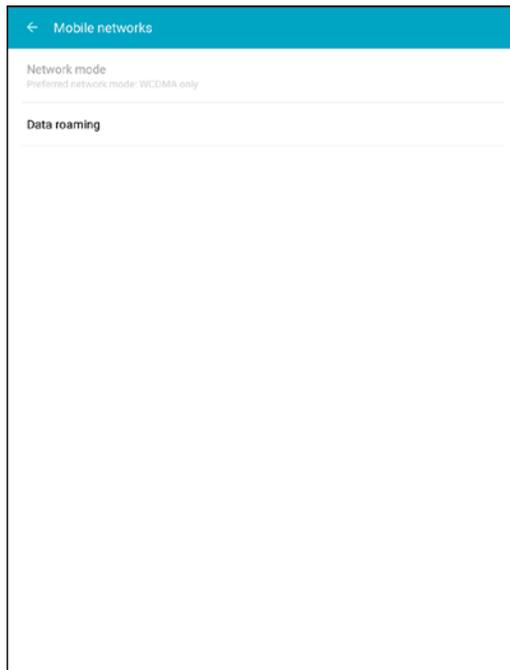

3. Configure options:

- **Network mode:** Choose a preferred network mode. Available options depend on your tablet's features.
- **Data roaming:** When you are outside your home network area, your tablet can still connect to other networks that your provider supports via roaming. There may be additional costs for accessing networks while roaming, so you may want to control your tablet's roaming behavior with Roaming settings.
 - **Roaming network:** Select a roaming default. Choose Home only, to only connect to the Sprint network, or Automatic to allow connections to Sprint's partner networks, when available.
 - **Roaming guard:** Choose options for displaying an onscreen roaming notice for certain functions. Enable or disable roaming notices for Voice and Data for Domestic CDMA, Voice, Data and Outgoing text message for International CDMA networks, and Voice, Data and Outgoing text message for GSM networks (if supported by your tablet).

More Connection Settings


The More connection settings menu provides access to additional network options, such as default messaging app, VPN, mobile networks, and printers (if available).

More Connection Settings Options


Setting	Description
Tethering	Share your device's mobile data connection via USB or Bluetooth.
Printing	Set up printers to print from your tablet.
VPN	Add a Virtual Private Network (VPN).
Ethernet	Manage your Ethernet connections.

Access More Connection Options

1. From home, tap **Apps**  > **Settings** .

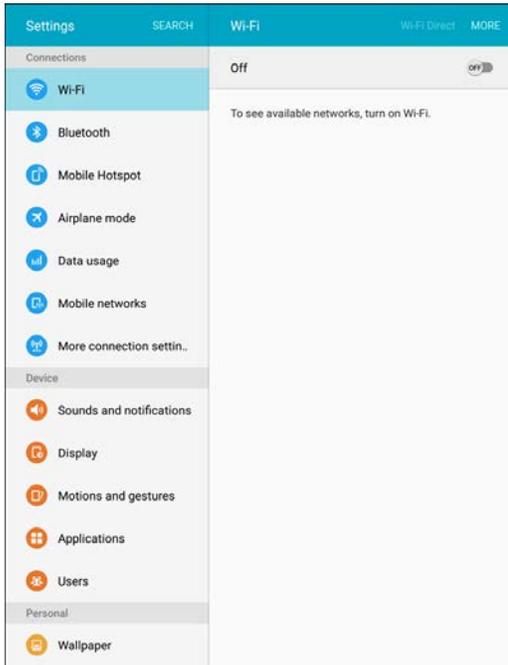

2. Tap **More connection settings** .

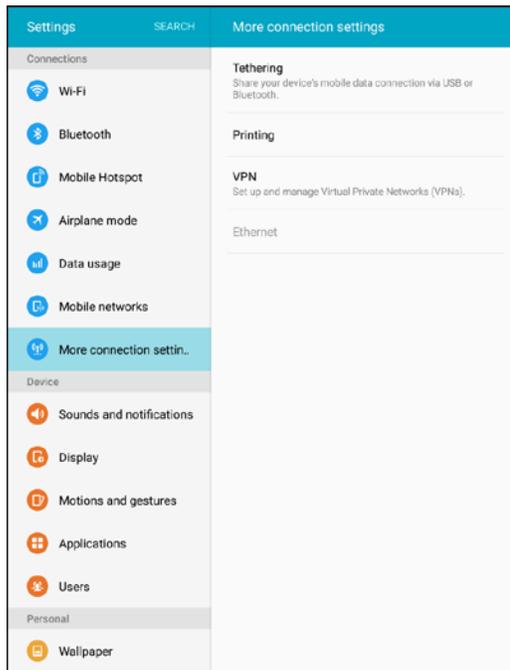

3. Set items.


- ❖ Your settings are saved and implemented.

Tethering Settings


Use Tethering to share your device's Internet connection with a computer that connects to your device via USB cable or by Bluetooth.

Note: Using the tethering feature consumes battery power and uses data services.

1. From home, tap **Apps**  > **Settings**  > **More connection settings** .

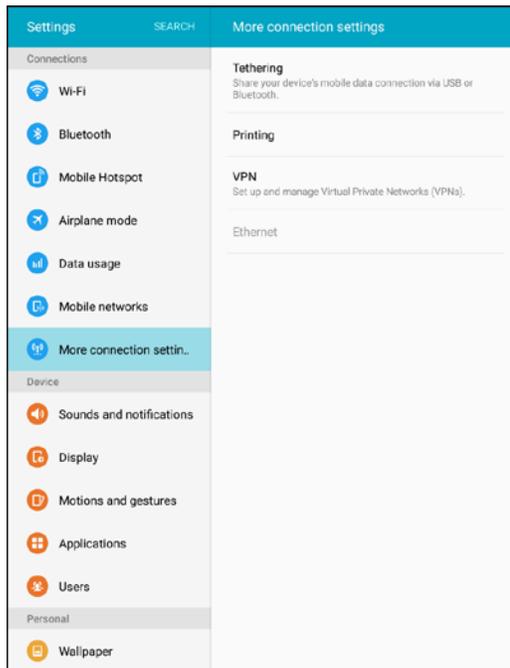

2. Tap **Tethering** and choose an option:

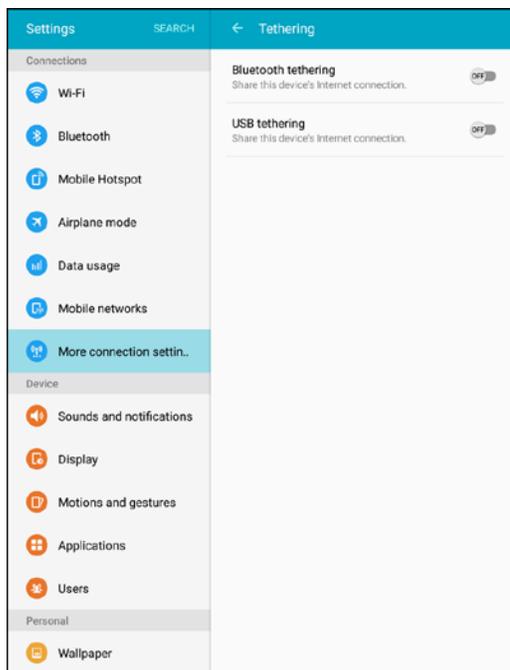

- **Bluetooth tethering:** Pair your device with the computer via Bluetooth. Consult the computer's documentation for more information about configuring your computer to pair via Bluetooth. Tap Bluetooth tethering to turn tethering on.

- **USB tethering:** Connect the computer to your tablet via USB cable, and then tap USB tethering to turn tethering on.


Printing

You can print from your tablet, via Wi-Fi, to an optional compatible printer (not included). Your tablet and the optional printer must be connected to the same Wi-Fi network.


Add a Printer

Before you can print to a printer, you must add and set it up on your tablet. You will need to know the IP address of the printer; consult the printer's documentation for this information.

1. From home, tap **Apps**  > **Settings**  > **More connection settings** .

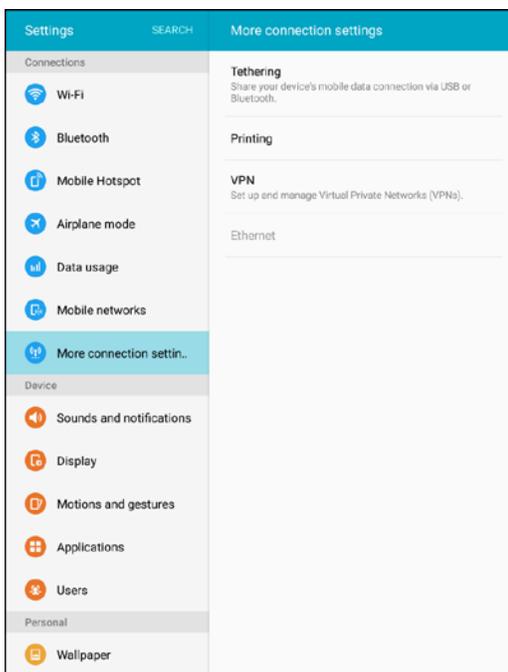

2. Tap **Printing**.

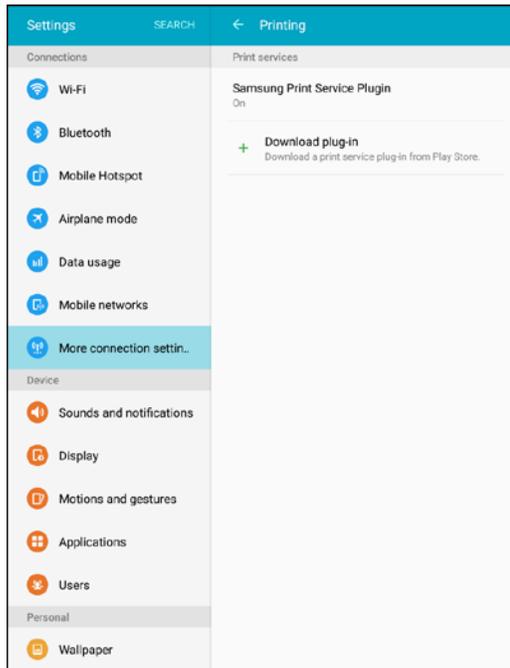

❖ The Printing settings screen displays.

3. From the Printing settings screen, tap **+** **Download plug-in**.
4. Follow the prompts to download and install a print driver from the Google Play store.
5. Choose a print service from the list, and then tap **ON/OFF** to turn the service on or off. The service must be on to add a printer.
6. Tap **More > Add printer > Add printer** (or **+**, depending on the plug-in), enter a name and the IP address of the printer, and then tap **OK**.

Set Up a Printer

Add a printer to a print service and configure settings.

Note: Below settings are examples only. Available settings will differ depending on the type of print service and printer you are using.

1. From the Printing settings screen, select a print service from the list
2. Tap **ON/OFF** to turn the service on. The service must be on to add a printer.
3. Tap **More > Add printer** and follow the prompts to add a printer.
4. Tap **More > Printer settings** to configure printer options. Available options may vary depending on the type of printer, and not all printers support all options.

Virtual Private Networks (VPN)

From your tablet, you can add, set up, and manage virtual private networks (VPNs) that allow you to connect and access resources inside a secured local network, such as your corporate network.

Prepare Your Tablet for VPN Connection


Depending on the type of VPN you are using at work, you may be required to enter your login credentials or install security certificates before you can connect to your company's local network. You can get this information from your network administrator.

Before you can initiate a VPN connection, your tablet must first establish a Wi-Fi or data connection. For information about setting up and using these connections on your tablet, see [Browser](#) and [Turn Wi-Fi On and Connect to a Wireless Network](#).


Set Up Secure Credential Storage

If your network administrator instructs you to download and install security certificates, you must first set up the tablet's secure credential storage.

1. From home, tap **Apps**  > **Settings**  > **Lock screen and security** .

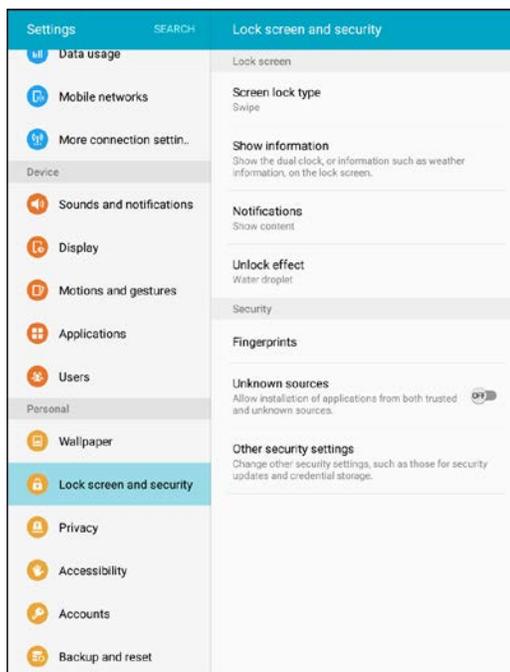


2. Tap **Screen lock type > Password**.

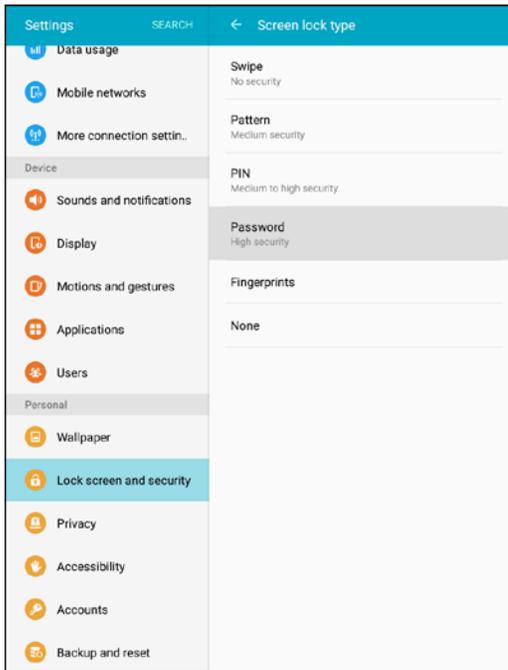

Note: For credential storage, you can also use Pattern, PIN, or Fingerprints screen lock types. See [Screen Lock](#).


3. Enter a new password (at least four characters long, including at least one letter) for the credential storage, tap **Continue**, confirm the password, and then tap **OK**.

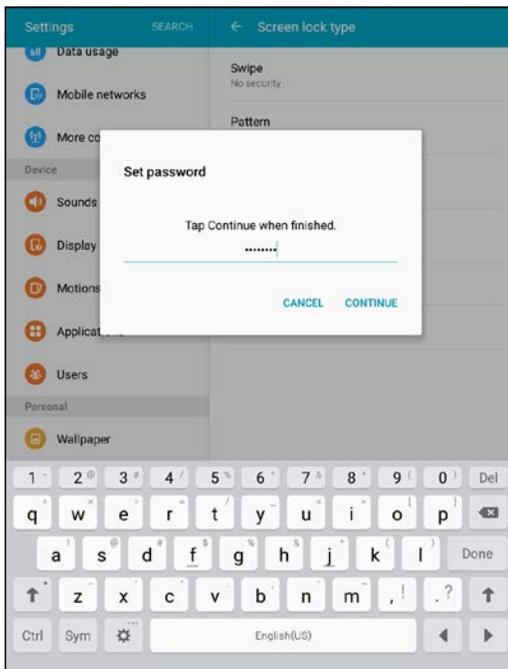


4. Select your display option for notifications on the lock screen, and then tap **Done**.

❖ The password is set, allowing secure credential storage.

5. On the Lock screen and security window, tap **Other security settings**.

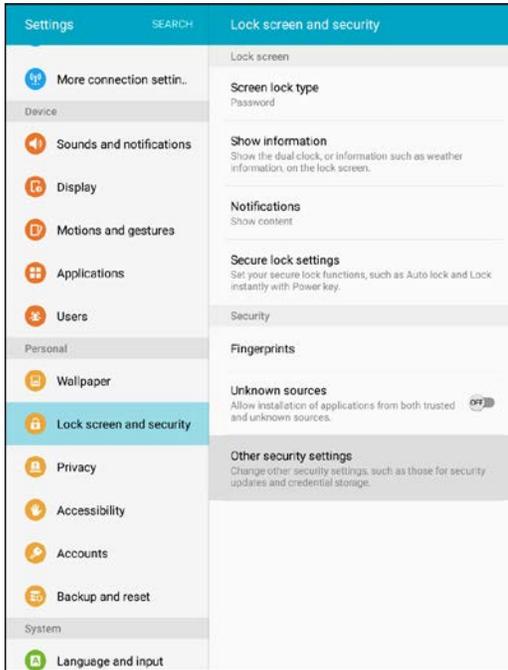

6. Tap **Trust agents**, and then tap your preferred system and user credentials.

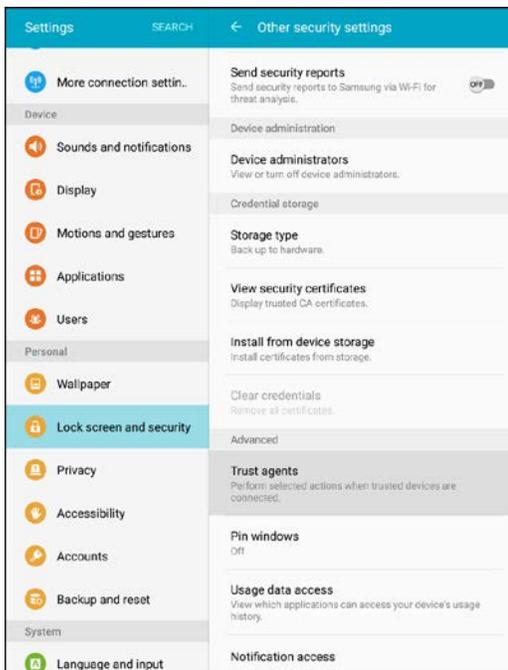


❖ Your secure credentials storage is set.

You can then download and install the certificates needed to access your local network. Your network administrator can tell you how to do this.


Add a VPN Connection

Use the More networks settings menu to add a VPN connection to your tablet.

1. From home, tap **Apps**  > **Settings** .

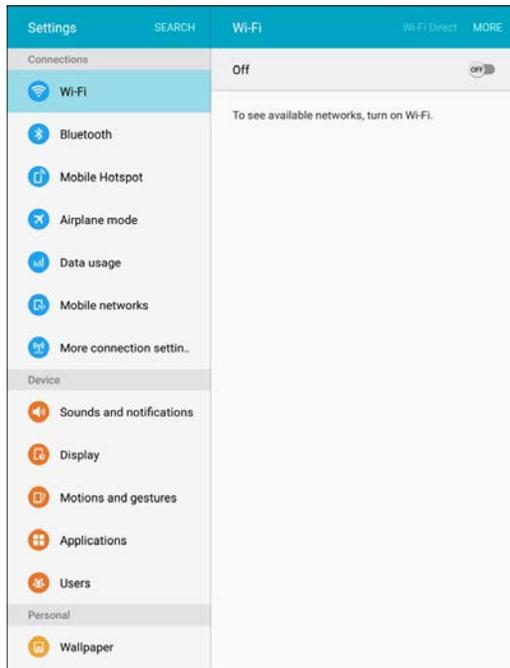


2. Tap **More connection settings**  > **VPN**.

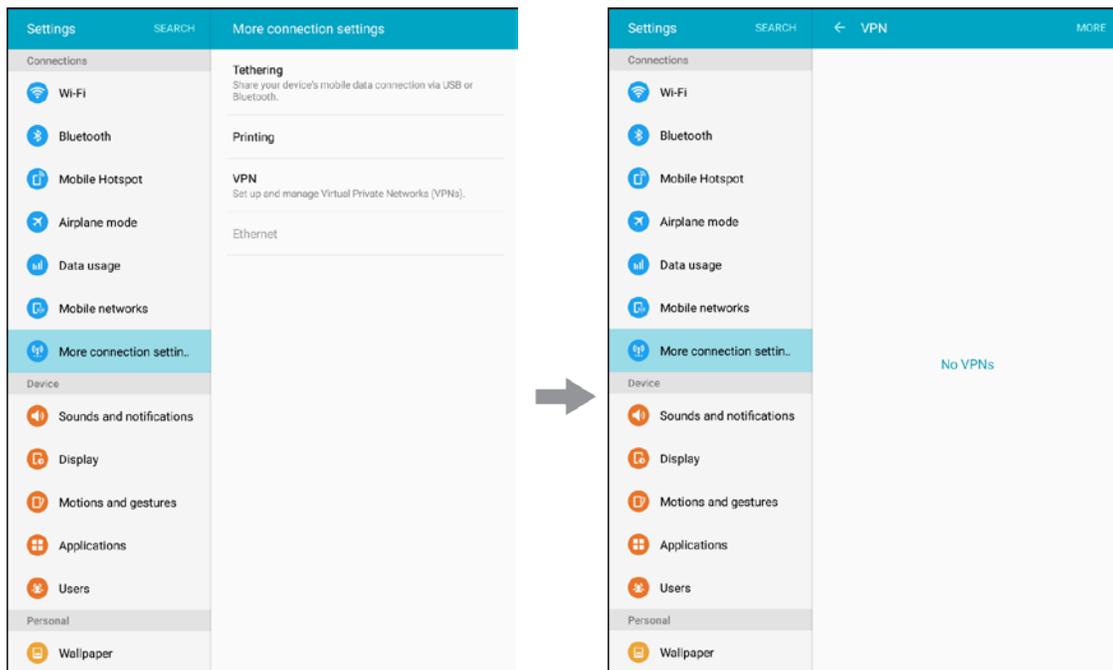

❖ The VPN settings window appears.

3. Tap **More** > **Add VPN**, and then enter the information for the VPN you want to add.

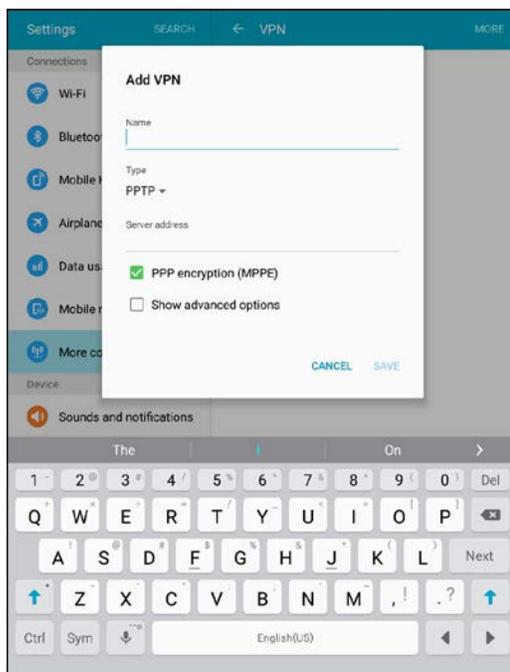

- Information may include Name, Type, Server address, PPP encryption (MPPE), and advanced options.


- Set up all options according to the security details you have obtained from your network administrator.

4. Tap **Save**.


- ❖ Your VPN is added to the VPNs section of the VPN settings window.

Access the VPN Settings Window

1. From home, tap **Apps**  > **Settings** .

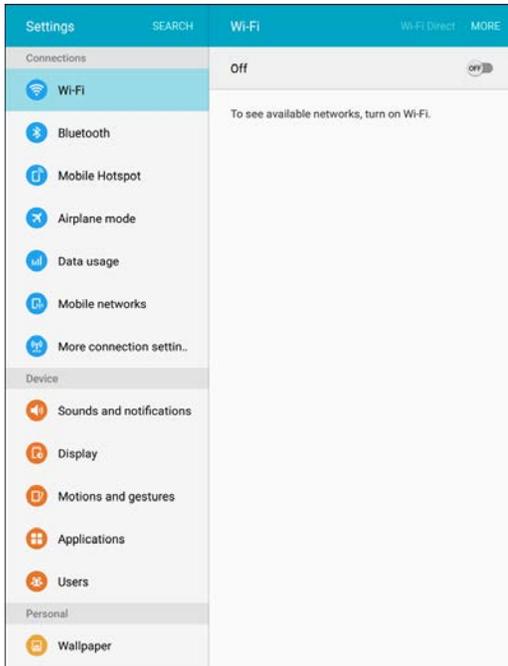


2. Tap **More connection settings**  > **VPN**.

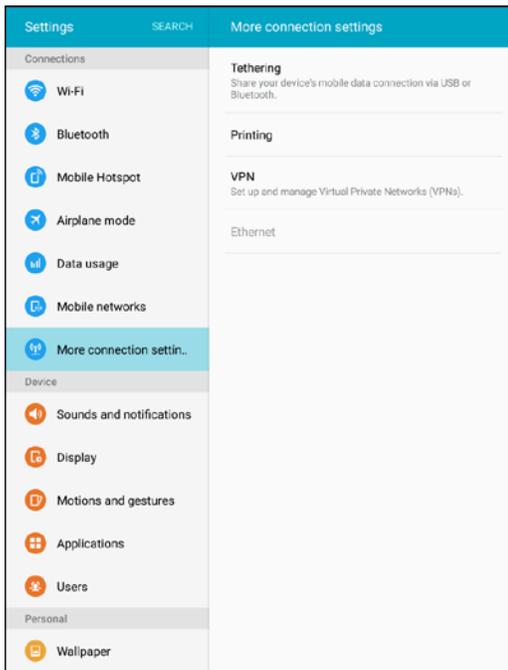


- ❖ The VPN settings window appears.

Connect to a VPN

1. From the VPNs section of the VPN setting window, tap the VPN that you want to connect to.

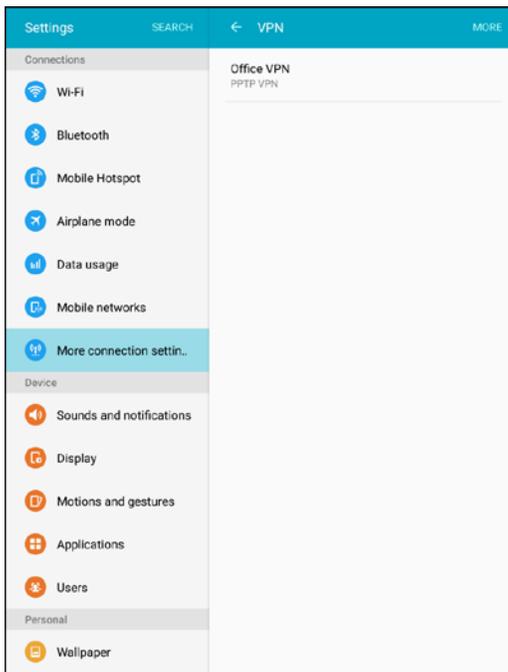


2. When prompted, enter your login credentials, and then tap **Connect**.

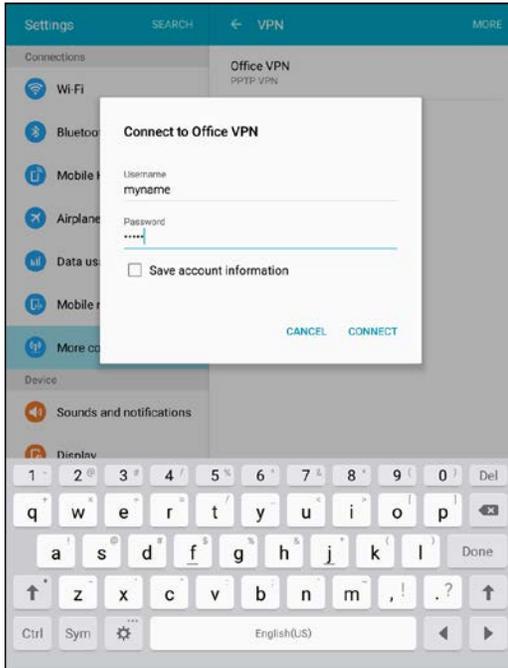


- ❖ You will connect to the selected VPN.
 - When you are connected, a VPN connected icon appears in the notification area.
3. Open the Web browser to access resources such as intranet sites on your corporate network.

Disconnect from a VPN


1. Drag the status bar down to open the notification panel.

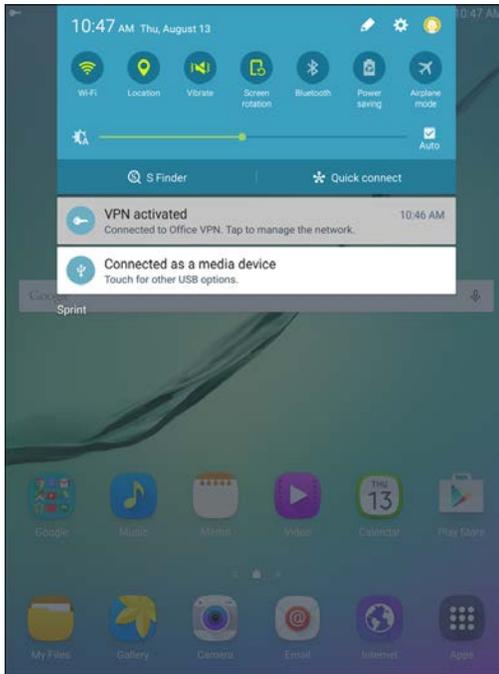

2. Tap the VPN connection to display the VPN connection window.

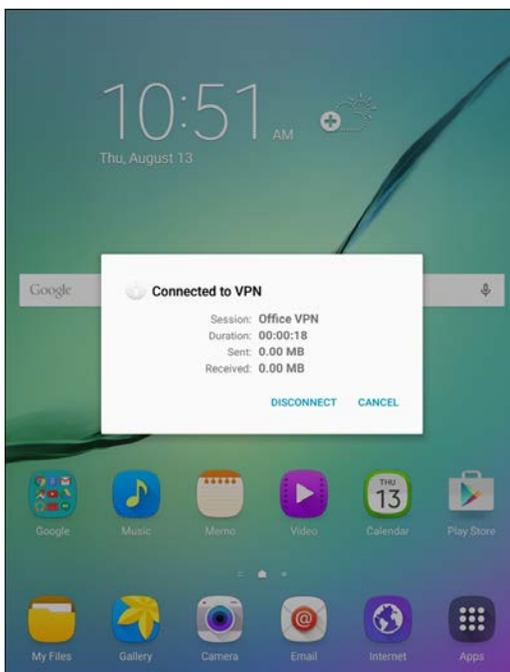

3. Tap **Disconnect** to disconnect from the VPN.

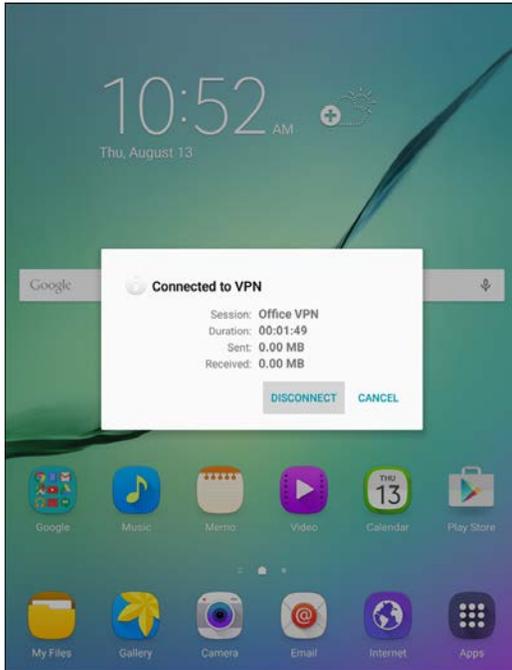

- ❖ Your tablet disconnects from the VPN.
 - When your tablet has disconnected from the VPN, you will see a VPN disconnected icon in the notification area of the status bar.

Sounds and Notifications Settings

The Sounds and notifications settings menu lets you control your tablet's audio, from alerts to tap tones and notifications.

Sounds and Notifications Settings Overview

The sounds and notifications settings menu allows you to configure the following options:

Sound Setting	Description
Sound mode	Set the sound mode for the tablet (Sound, Vibrate, or Mute).
Volume	Set volume for media, system features, etc.
Sounds	Set your notification sounds for your tablet, apps, keypad, and other features.
Vibrations	Configure vibration pattern, feedback, and other settings.
Sound quality and effects	Set sound quality and sound effects for your tablet.


Sound Setting	Description
Do not disturb	Configure the Do not disturb feature to mute calls and alerts at will or on a schedule, as well as set exceptions.
App notifications	Configure notifications for apps installed on your tablet.

Sound Mode

You can switch between sound modes, while preserving the individual sound settings you have made.

Note: Sound modes are also available from the Device options menu. Press and hold the **Power/Lock** key, and then choose **Mute**, **Vibrate**, or **Sound** from the Device options.

1. From home, tap **Apps**  > **Settings**  > **Sounds and notifications** .

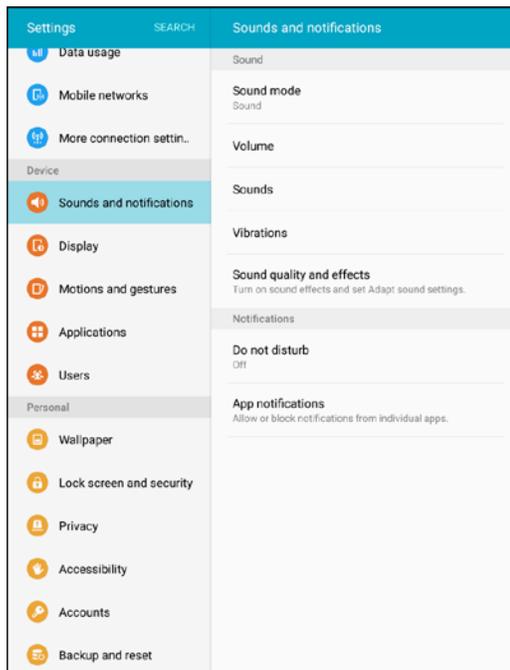


2. Tap **Sound mode**, and then choose a mode:
 - **Sound:** Your tablet uses the sounds, vibrations, and volume levels you have chosen in Sound settings for notifications and alerts.
 - **Vibrate:** Your tablet vibrates for notifications and alerts. This uses the Vibration intensity you choose in Sound settings.
 - **Mute:** Your tablet plays no sounds or vibrations. Onscreen reminders will still occur.

Volume


Set the system volume level, and set default volume for notifications and other media.

Note: You can also set System volume from the home screen by pressing the **Volume** key.

1. From home, tap **Apps**  > **Settings**  > **Sounds and notifications** .

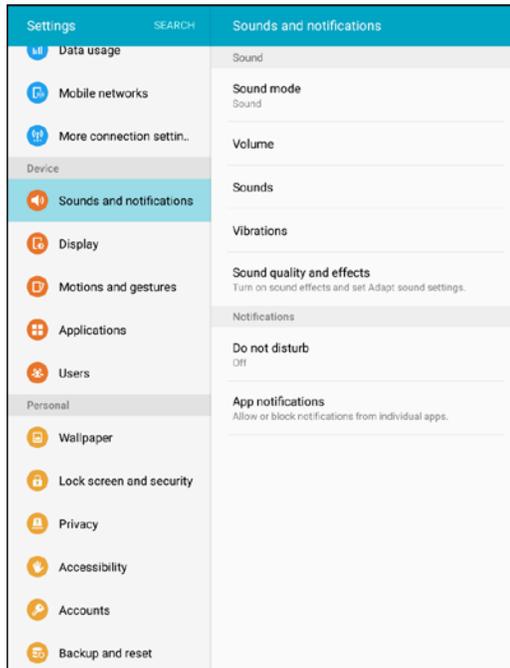

2. Tap **Volume** and then drag the sliders to set the default volume for:

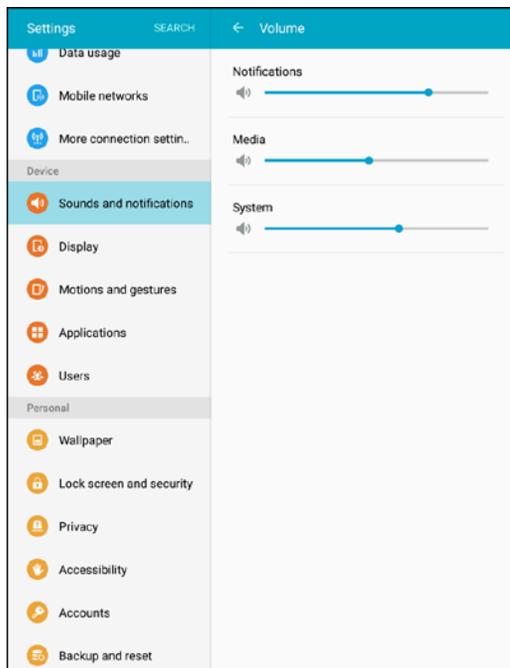


- Media
- Notifications
- System


Sounds

Choose a system sounds and tones.

1. From home, tap **Apps**  > **Settings**  > **Sounds and notifications** .

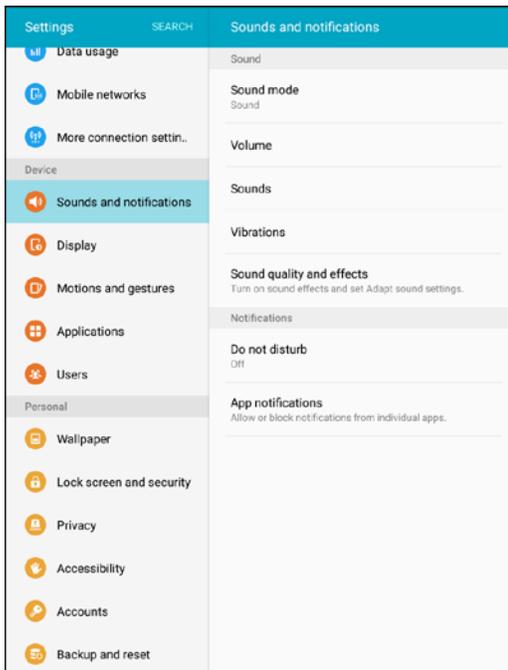

2. Tap **Sounds** for options:

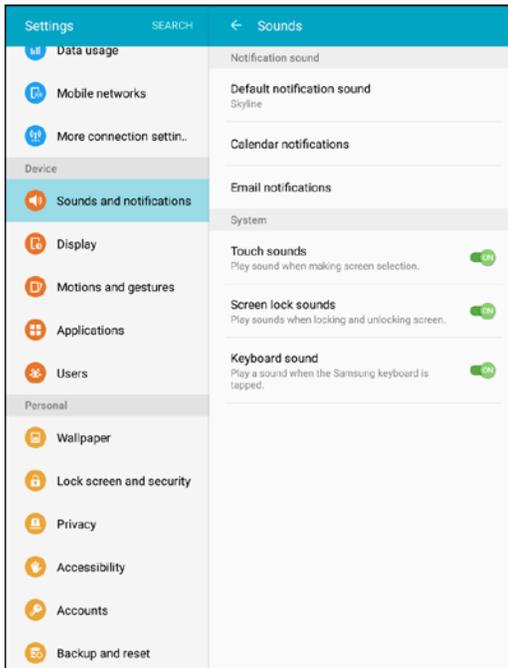


- **Default notification sound:** Choose a default sound for notifications.
- **Calendar notifications:** Tones play and/or the tablet vibrates to remind you of events.
- **Email notifications:** Tones play and/or the tablet vibrates when new emails arrive.
- **Touch sounds:** Tones play when you tap the screen to make selections.
- **Screen lock sounds:** Tones play when you tap the screen to lock or unlock it.
- **Keyboard sound:** Tones play when you tap the keyboard.


Vibrations

Choose vibrations to play for notifications, such as for incoming calls, new messages, and event reminders.

1. From home, tap **Apps**  > **Settings**  > **Sounds and notifications** .

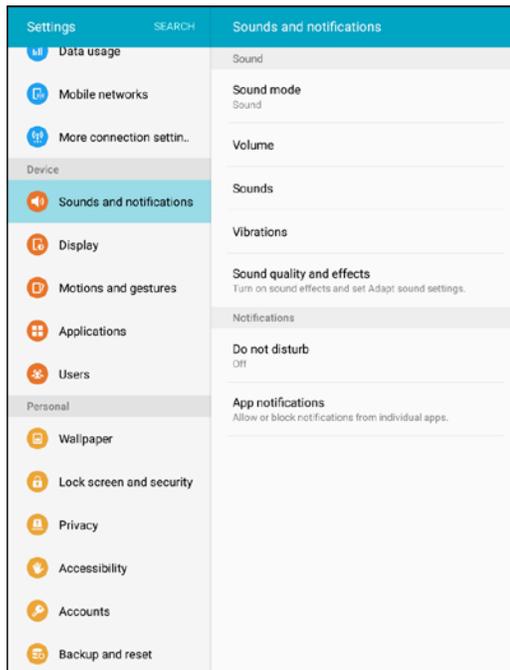

2. Tap **Vibrations** for options:

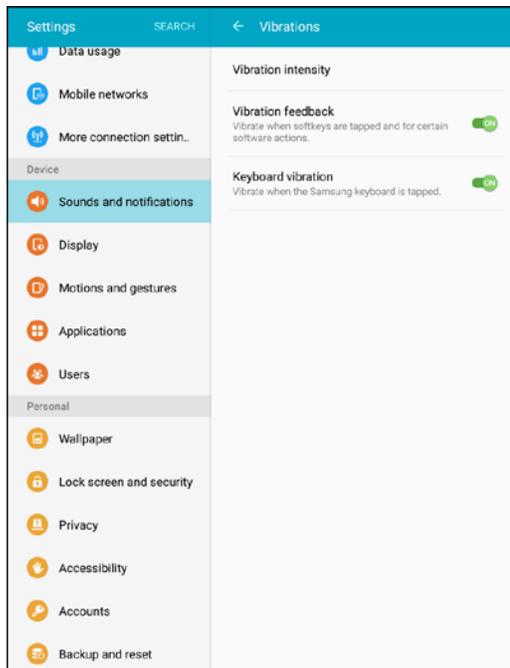

- **Vibration intensity:** Choose the intensity of vibrations.
- **Vibration feedback:** The tablet vibrates when soft keys are tapped and for certain software actions.


- **Keyboard vibration:** The tablet vibrates when you tap the keyboard.

Sound Quality and Effects

Select options for sound quality while headphones or compatible Bluetooth headsets or speakers are connected.

Note: Sound effects are only available when a set of headphones or a compatible Bluetooth headset is connected.

1. From home, tap **Apps**  > **Settings**  > **Sounds and notifications** .

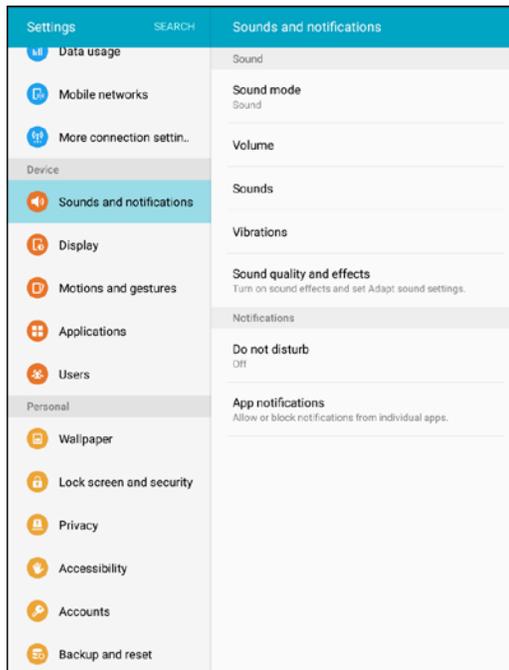


2. Tap **Sound quality and effects** for options:
 - **Adapt Sound:** Find the best sound quality for you and use it during calls and while playing music or videos.
 - **SoundAlive+:** Recreate the effect of rich surround sound.
 - **Tube Amp:** Simulate the soft timbre of a tube amplifier.

Notifications

Choose a sound for notifications, such as for new messages and event reminders.

1. From home, tap **Apps**  > **Settings**  > **Sounds and notifications** .

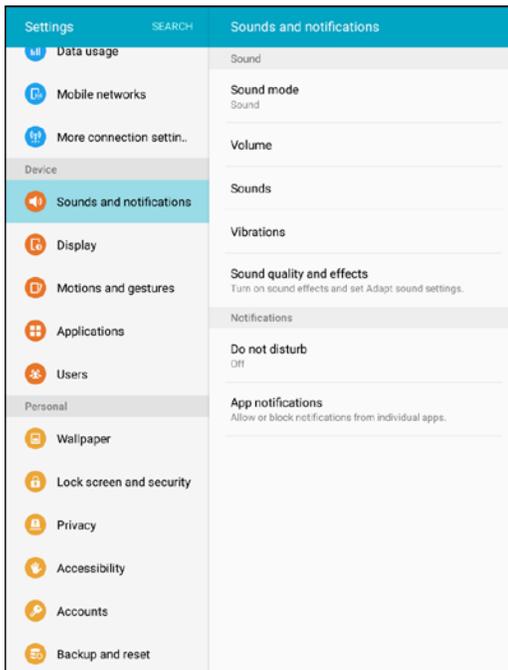

2. Set notification sound options:

- **Do not disturb:** Silence all calls and alerts during scheduled times. You can allow exceptions.
- **App notifications:** Allow or block notifications from individual apps.

Display Settings

Adjusting your tablet's display and wallpaper settings not only helps you see what you want, it can also help increase battery life.

Display Settings Overview


The display settings menu allows you to configure the following options:

Display Setting	Description
Brightness	Set the display brightness.
Font	Set a default font and font size.
Screen timeout	Set a screen timeout duration. Note: Longer durations discharge the battery more quickly


Display Setting	Description
Smart stay	Set the tablet display to stay on for as long as you are looking at it.
Screen mode	Select a screen display mode to optimize it for the content being displayed.
Touch key light duration	Set the length of time the Recent Apps key  and Back key  remain lit after you touch them.
Daydream	Select a screensaver to be displayed when the device is charging.

Access Display Settings

1. From home, tap **Apps**  > **Settings** .

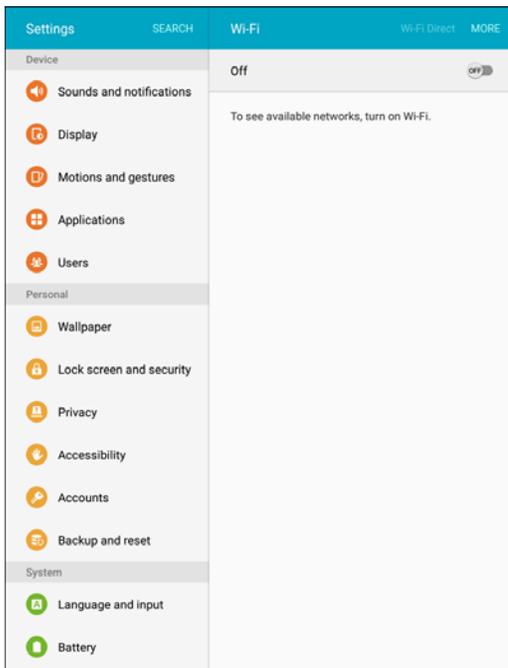

2. Tap **Display** .

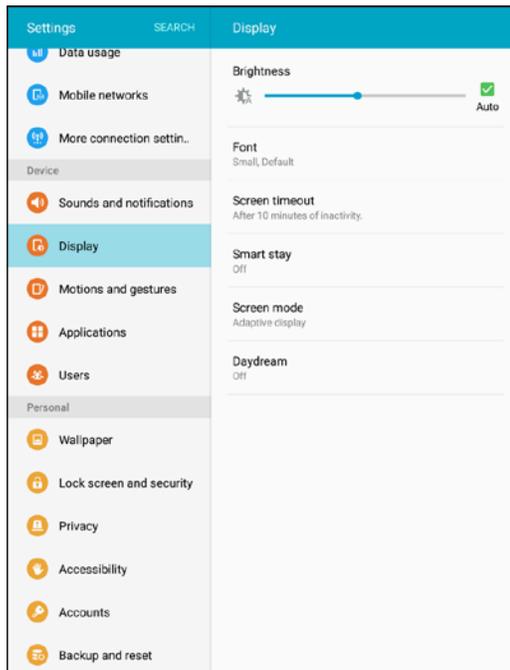

3. Set your display options:


- **Brightness:** Set the screen brightness, or set the brightness level to Auto.
- **Font:** Choose the default font.
- **Screen timeout:** Turn the screen off after a set amount of time.
- **Smart stay:** Keep the screen on while you are looking at it.
- **Screen mode:** Adjust the screen display according to what is being displayed.
- **Touch key light duration:** Set the length of time the **Recent Apps** key  and **Back** key  remain lit after you touch them.
- **Daydream:** Choose options for when the tablet is docked and/or sleeping.

Motions and Gestures


Enable or disable motions and gestures, which provide tablet controls by moving the tablet or by gesturing.

Access Motions and Gestures Settings

1. From home, tap **Apps**  > **Settings** .

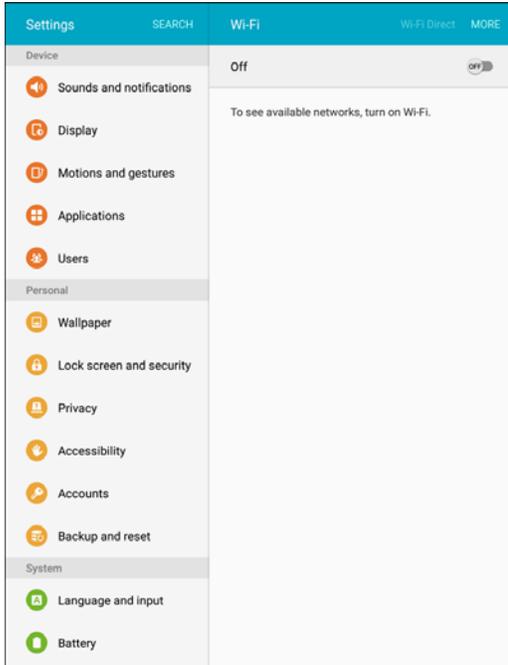

2. Tap **Motions and gestures** . You can swipe through the screens at the top to read about each motion and gesture.

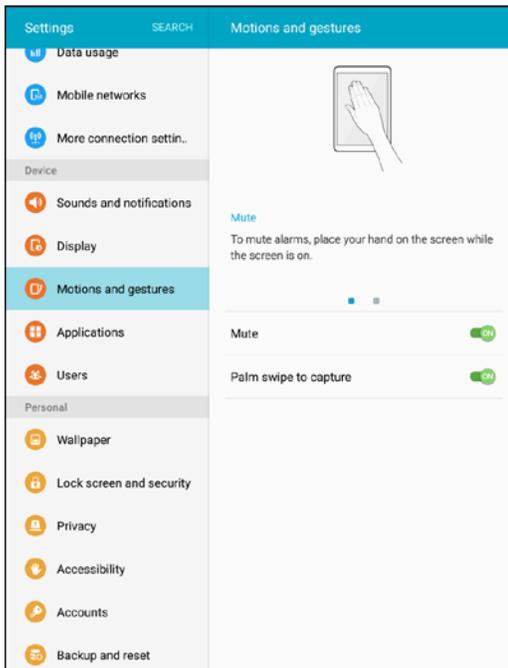


3. Tap **ON/OFF** to turn a feature on. When a feature is on, tap the feature name to configure options:
 - **Mute:** Mute incoming calls and alarms by placing your hand on the screen or turning the tablet over.
 - **Palm swipe to capture:** Capture the screen by swiping the edge of your hand across the screen, from side to side, keeping in contact with the screen.

Applications Settings


View information and configure settings for all apps on your tablet. The Application manager and Default applications menus are located here.

Access Applications Settings

1. From home, tap **Apps**  > **Settings** .

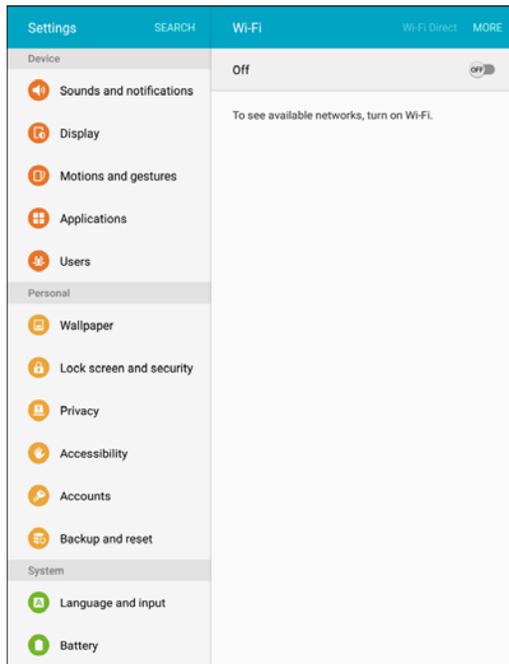

2. Tap **Applications** .

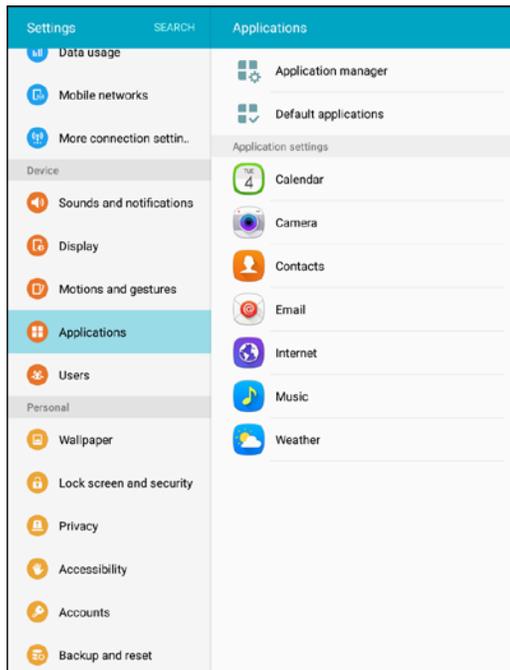

3. Scroll down to **Application settings** to see all of the pre-loaded apps. Tap on an app to view and configure its settings.


Application Manager

Check installed applications and running applications. Items that can be checked in the Application manager are as follows.


Apps Setting	Description
Downloaded	Check downloaded apps.
SD card	Check apps that are saved to the SD card.
Running	Check running apps.
All	Check all apps.
Disabled	Check disabled apps. This page only appears if apps have been disabled.

Access the Application Manager

1. From home, tap **Apps**  > **Settings**  > **Applications** .

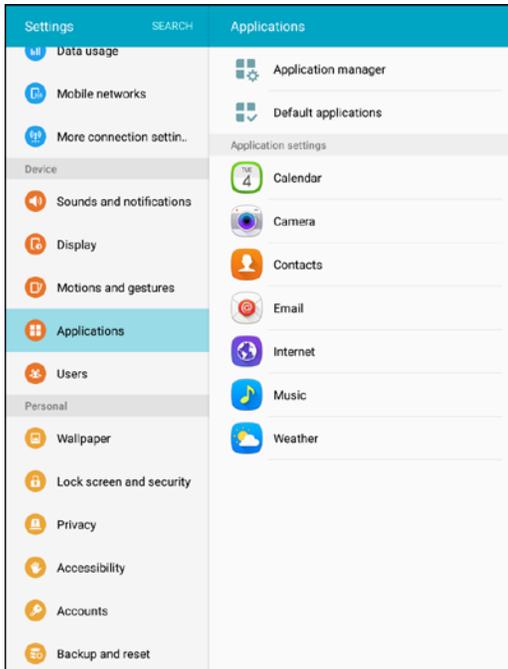

2. Tap **Application manager**.

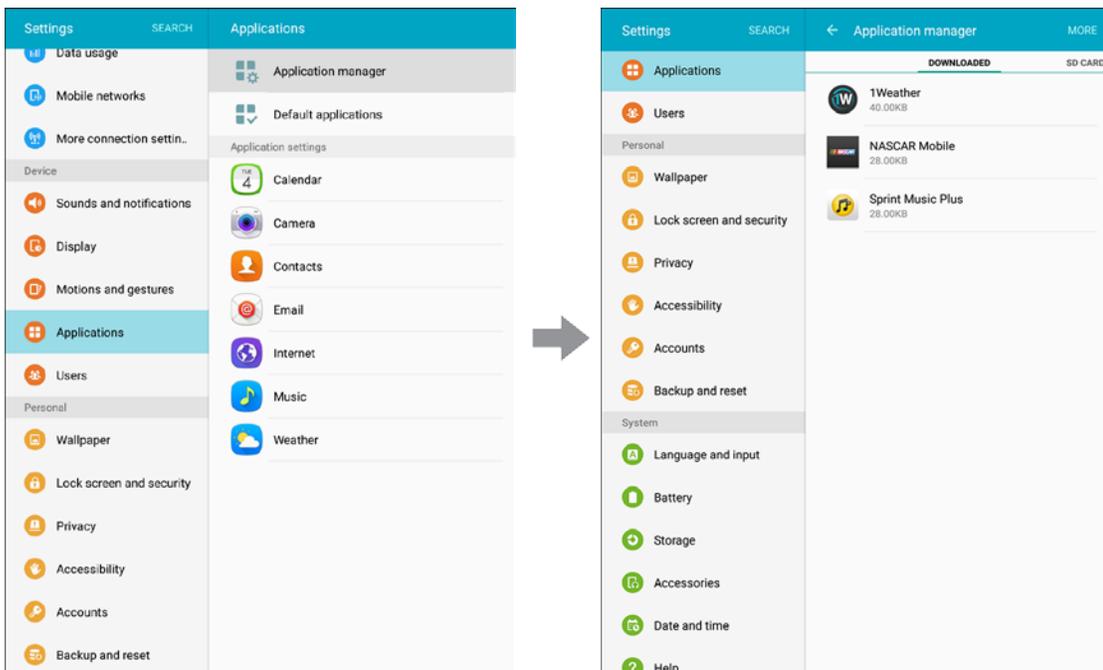

3. Tap items to view details.


- ❖ Check your application settings condition and access additional options.

Note: Depending on the app and its location, you may be able to force the app closed, uninstall or disable the app, clear cache and data, and more.


Default Applications

Set or clear default applications for certain built-in features of the tablet.

1. From home, tap **Apps**  > **Settings**  > **Applications** .

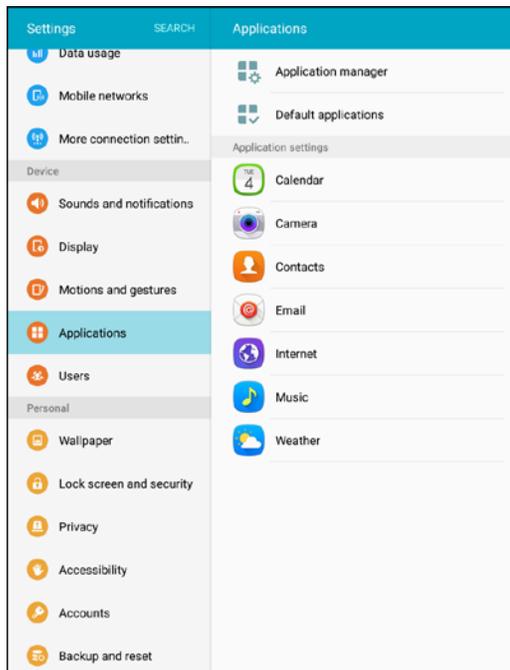

2. Tap **Default applications**.

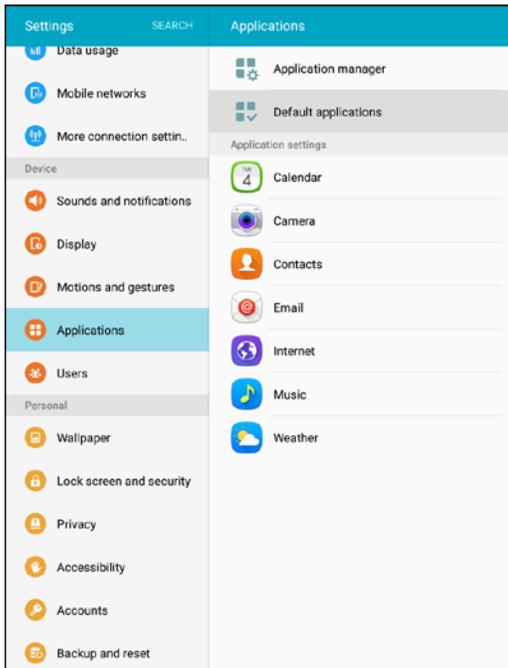


3. Tap each default setting to see what services or applications are available to set as the default.

- **Home:** Choose a default home screen mode.
- **Clear defaults:** Tap **Clear** to clear defaults.


Calendar Settings

Configure settings for your tablet's Calendar app.

1. From home, tap **Apps**  > **Settings**  > **Applications** .

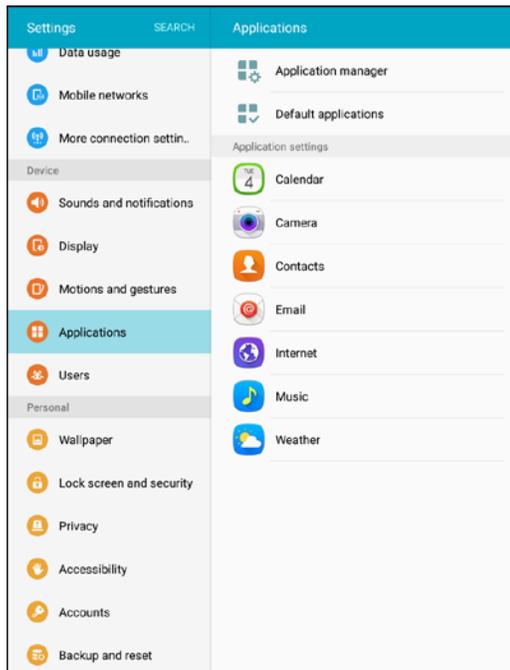

2. Tap **Calendar** to configure these options:

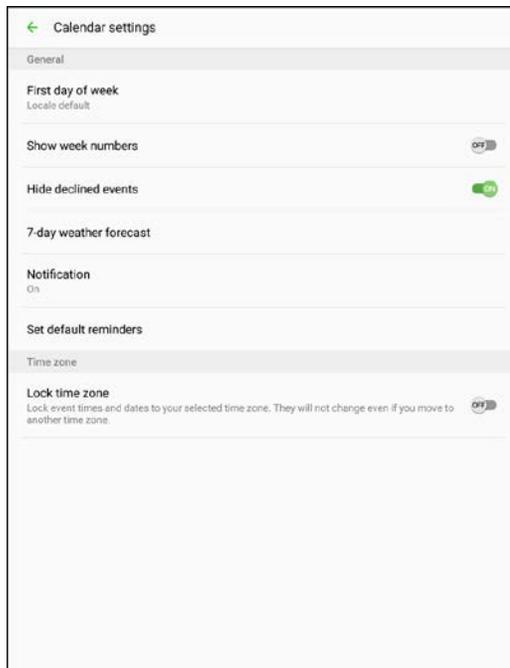


- **First day of week:** Choose a day to start each calendar week.
- **Show week numbers:** Enable or disable display of week numbers on the calendar.

- **Hide declined events:** When enabled, events for which you declined the invitation are not shown on the calendar.
- **7-day weather forecast:** When enabled, weather information from AccuWeather.com displays on the calendar.
- **Notification:**
 - **Notification sound:** Choose a sound for calendar event notifications.
 - **Vibration:** Enable or disable vibration, to play for calendar event notifications.
- **Set default reminders:** Set default reminders for Events and All-day events.
- **Lock time zone:** When enabled, event times will be locked to the time zone you select. Times and dates will not change, even if you travel to another time zone.


Camera Settings

Configure settings for your tablet's Camera app.

1. From home, tap **Apps**  > **Settings**  > **Applications** .

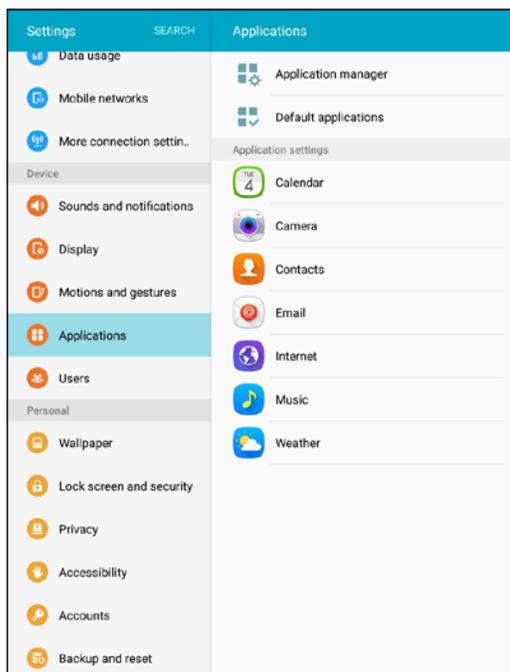

2. Tap **Camera** to configure these options:

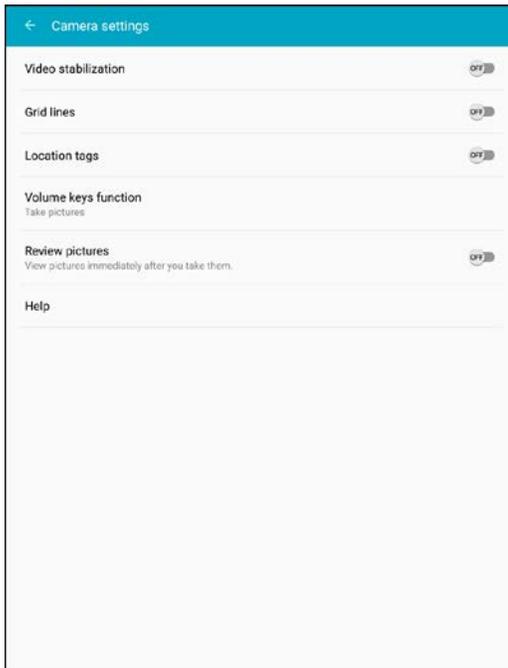

- **Video stabilization:** Activate anti-shake. Anti-shake helps to keep the focus steady when the camera is moving (rear camera only).
- **Grid lines:** Display viewfinder grid lines to help composition when selecting subjects.
- **Location tags:** Attach a GPS location tag to the photo.
- **Volume keys function:** Use the Volume key to take pictures, record video, or as a zoom key.
- **Review pictures:** Show photos immediately after taking them.
- **Help:** View help topics for using the Camera.


Note: Additional Camera settings options are available within the Camera app. See [Camera Options and Settings](#).

Contacts Settings


Configure options for contacts stored on your tablet.

Tip: You can also access Contacts Settings from the Contacts app. From home, tap **Contacts**  **> More > Settings**.

1. From home, tap **Apps**  > **Settings**  > **Applications** .

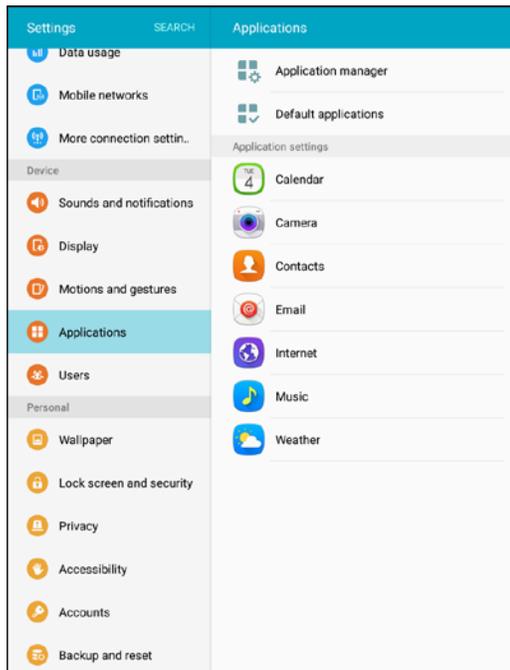

2. Tap **Contacts** to configure options:

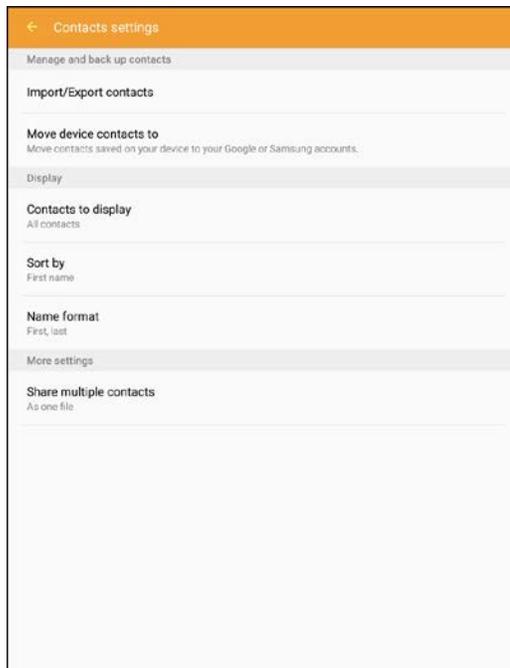

- **Import/Export contacts:** Import contacts from your tablet's internal memory and export contacts to your tablet's internal memory.
- **Move device contacts to:** Move contacts saved on your device to your Google or Samsung accounts.

- **Contacts to display:** Choose contacts to display in Contacts. You can choose only contacts from your tablet's memory, or from an account, or choose other sources. You can also create a customized list of contacts to display.
- **Sort by:** Choose how contacts are sorted, by first or last name.
- **Name format:** Choose how contacts are displayed, by first or last name.
- **Share multiple contacts:** You can choose how to transfer contacts, when sharing them with other devices, such as via Bluetooth.
 - **As one file:** Multiple contacts are sent together. This method can be faster, but depends on whether the target device can accept multiple name cards. If not, only one contact will be sent.
 - **Individually:** Name cards are sent individually. This method may take longer, because the other device must accept each name card individually, but it helps ensure that no name cards are missed.


Email Settings

Configure options for email accounts you set up on your tablet.


Tip: You can also access Email settings from the Email app. From home, tap **Apps**  > **Email**  > **More** > **Settings**.

General Email Preferences

1. From home, tap **Apps**  > **Settings**  > **Applications** .

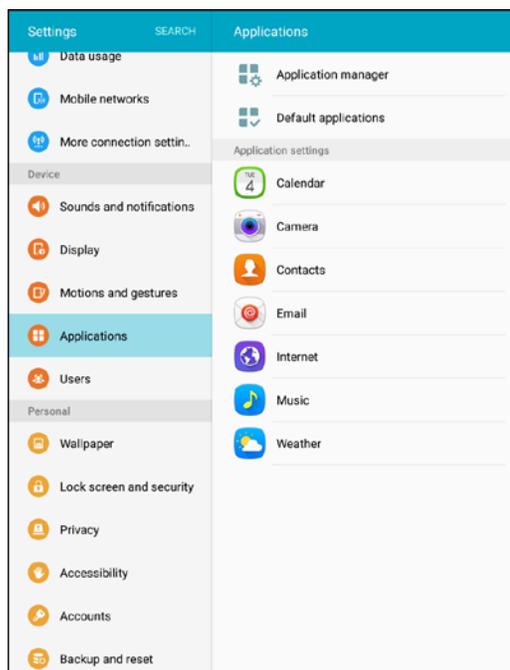

2. Tap **Email** to configure options. General email settings, which affect all email accounts, include:

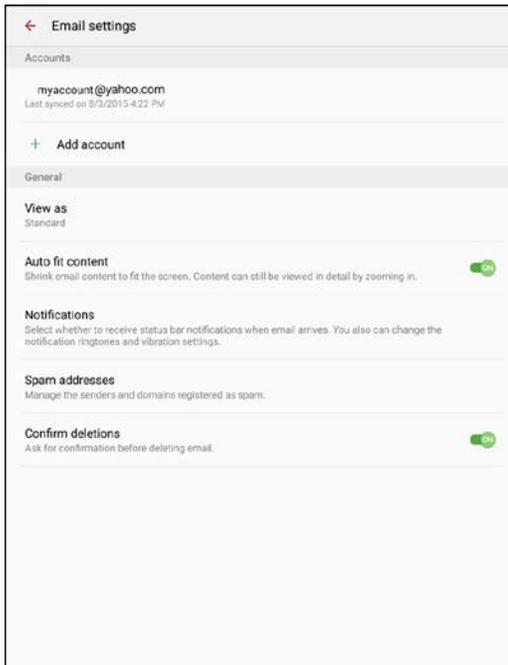


- **Manage accounts:** Configure options for specific accounts. Available settings depend on the type of account.
- **Add account:** Add additional email accounts.
- **View as:** View emails in Standard format, or as Conversations.
- **Auto fit content:** Shrink email content to fit the screen. Content can still be viewed in detail by zooming in.
- **Notifications:** Notifications for new emails display in the status bar. When disabled, you can control notifications for each of your email accounts individually in the account's settings.
- **Spam addresses:** Create and maintain a list of email addresses and domains to automatically block emails from those senders.
- **Confirm deletions:** Ask for confirmation before deleting email.

Manage Email Account Settings

You can edit settings for your individual email accounts, such as email address and password, name display and signature, frequency of retrieval, and more.

Note: Available settings depend on the type of email account.

1. From home, tap **Apps**  > **Settings**  > **Applications** .

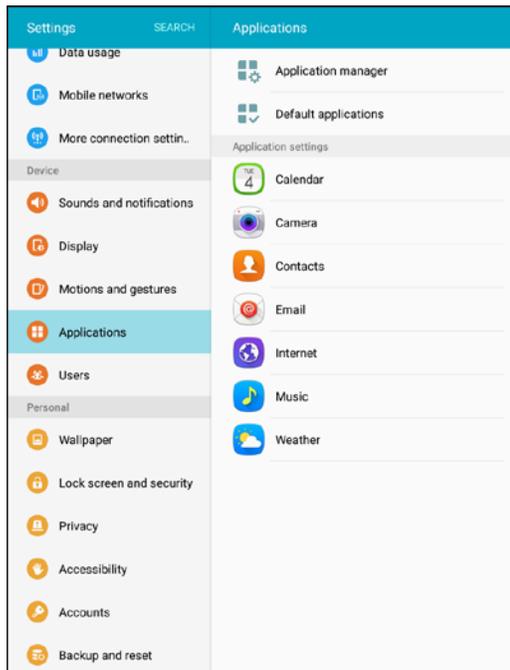

2. Tap **Email**, and then tap an account to set its options. Individual email account settings may vary; see your service provider for details. Common settings include:
 - **Sync account:** Configure options for synchronizing your tablet with your account:
 - **Account name:** Enter a name to identify this email account.
 - **Always Cc/Bcc myself:** Choose options for sending a copy of emails you send to yourself, as a copy (Cc) or blind copy (Bcc).
 - **Signature:** A text signature is automatically added to emails you send.
 - **Show images:** Choose whether to automatically display embedded images in the body of an email.
 - **Auto download attachments:** Choose whether the tablet automatically downloads email attachments when you are connected to Wi-Fi. You might use this option to control how and whether you use your plan's data services to download attachments.
 - **Sync schedule:** Choose folders to synchronize between your tablet and account.
 - **Period to sync Email:** Choose the period for synchronizing email between your tablet and account.
 - **Limit retrieval size:** Choose the number of emails to retrieve at one time.
 - **Limit retrieval size while roaming:** Choose the number of emails to retrieve at one time while roaming.


- **Out of office settings:** Configure options for automatically sending replies when you are out of the office.
- **Folder sync settings:** Choose which folders to sync.
- **Period to sync Calendar:** Choose the period for synchronizing calendar events between your tablet and account.
- **Empty server trash:** Delete the contents of the trash folder on the account server.
- **In case of sync conflict:** Choose whether information from the server or tablet has priority when there is a conflict.
- **Sync Contacts:** Choose whether contacts are synchronized between your tablet and the account.
- **Sync Calendar:** Choose whether calendar events are synchronized between your tablet and the account.
- **Sync Task:** Choose whether emails are synchronized between your tablet and the account.
- **Sync Messages:** Choose whether messages are synchronized between your tablet and the account.
- **Security options:** Manage encryption and signature options for outgoing mail.
- **Exchange server settings:** Configure the Domain\user name, Password, and other Exchange server settings.

Internet Settings


Configure Internet settings, to customize the browser to your preferences.

Tip: You can also access Internet settings from the Internet app. From home, tap **Internet**  **> More > Settings.**

1. From home, tap **Apps**  > **Settings**  > **Applications** .

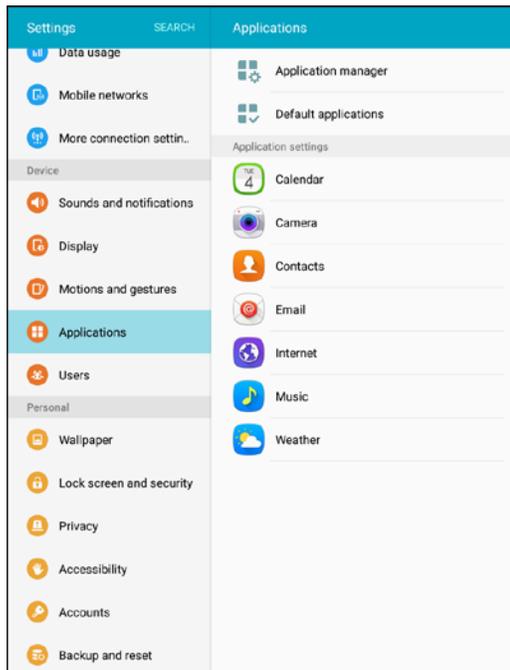

2. Tap **Internet** to configure options:

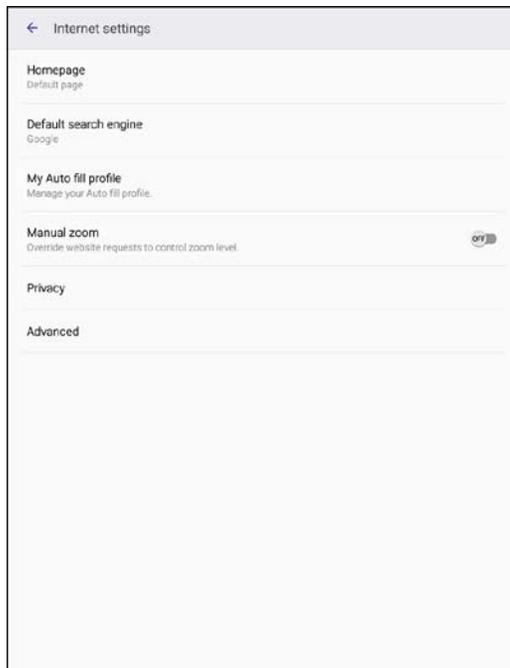

- **Homepage:** Choose a homepage to display when you launch Internet.
- **Default search engine:** Choose a default search engine.
- **My Auto fill profile:** Manage your Auto fill profile.


- **Manual zoom:** Override website requests to control zoom level.
- **Privacy:** Choose options related to privacy.
- **Advanced:** Choose settings to control how the browser treats content.

Music Settings


Set options for the Music application.

Tip: You can also access Music settings from the Music app. From home, tap **Apps**  > **Music**  > **Settings**.

1. From home, tap **Apps**  > **Settings**  > **Applications** .

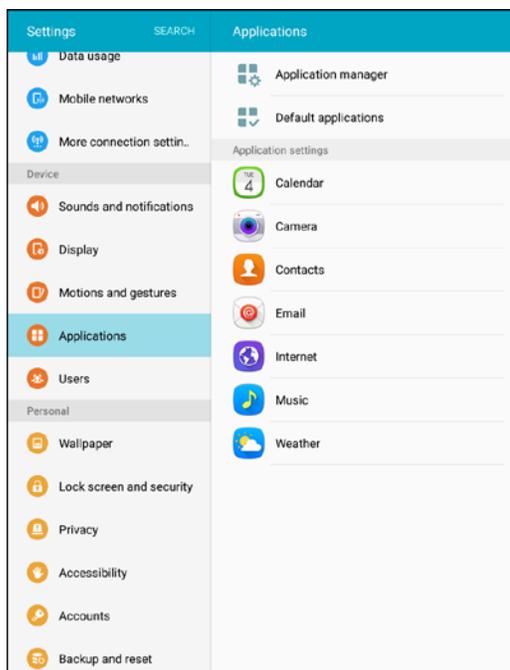

2. Tap **Music** to configure settings:

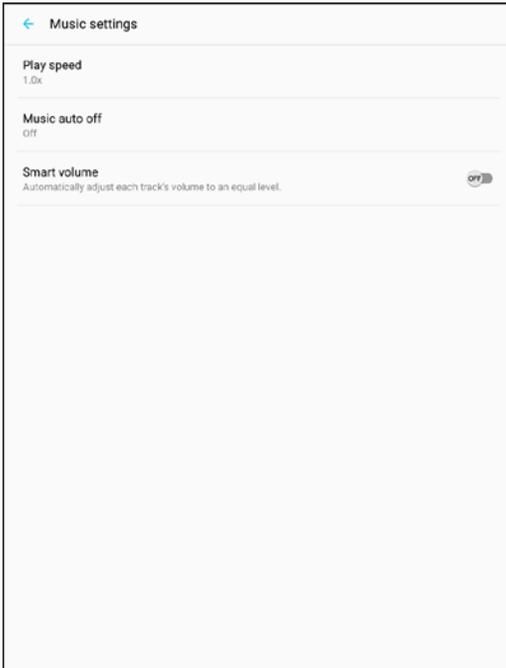


- **Play speed:** Touch and drag the slider to set the default speed for music playback.
- **Music auto off:** Choose a time period for music to play, after which Music will close.
- **Smart volume:** Automatically adjust the volume of all songs to an equal level.


Weather Settings

Configure weather settings for use with the Lock screen and the Calendar app.

1. From home, tap **Apps**  > **Settings**  > **Applications** .

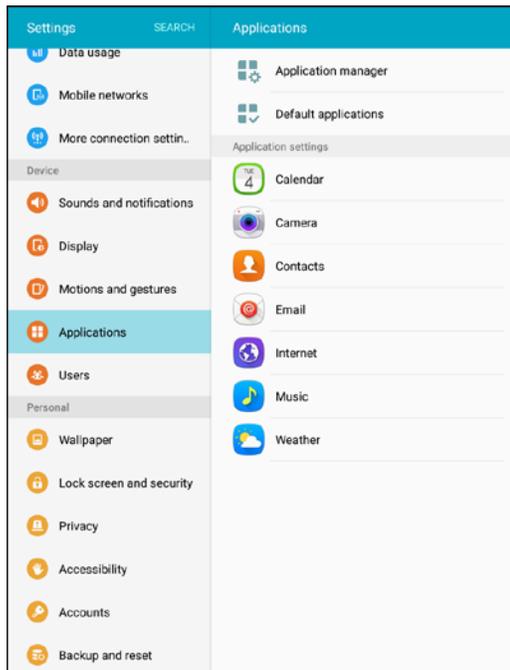

2. Tap **Weather** to configure options:

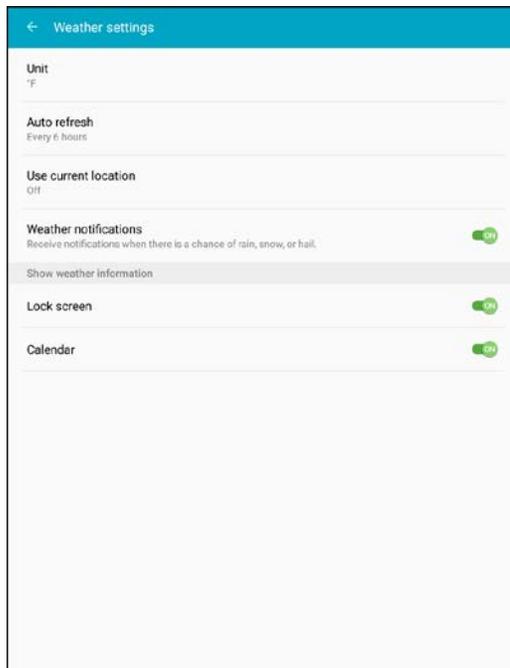

- **Unit:** Select **Celsius** or **Fahrenheit**.
- **Auto refresh:** Choose how often weather information is updated.
- **Use current location:** Use your tablet's current location to get local weather information.

- **Weather notifications:** Receive notifications when there is a chance of rain, snow, or hail.
- **Lock screen:** Show weather information on the Lock screen.
- **Calendar:** Show weather information in the Calendar app.

Users

You can share this tablet with multiple people by creating user accounts. Users have their own space, which they can customize with their own apps, wallpaper, and so on. Users can also adjust tablet settings such as Wi-Fi that affect everyone.

- To use the device with a user profile, select a profile at the top of the locked screen.

There are two types of user accounts:

- **Users:** Allow the user to access their own apps and content.
- **Restricted profile:** Allow the user limited access to apps and content.

Add a New User

1. From home, tap  **Apps** >  **Settings** > **Users**.
2. Tap  **Add user or profile**, and then choose **User** or **User (restricted profile)**.
 - If the new user is able to set up their space now, tap **Set up now**. (Tapping **Not now** will create an empty user account that can be modified later.)
 - Follow the prompts to set up the tablet with the new user's preferences.
 - The photo and name each user uses in their personal Contact entry (listed under ME at the top of their Contacts list) is used as their User ID and name.
 - To change their ID photo and name, each user must edit their personal Contact entry. For more information, see [Edit a Contact](#).

Delete a User

Only the device owner can delete other user accounts.

1. From home, tap  **Apps** >  **Settings** > **Users**.
2. Tap  next to the user account to delete.
3. Tap **Delete**.

Wallpaper

You can change the wallpaper for the Home and Lock screens.

Change the Wallpaper

1. From home, tap **Apps**  > **Settings**  > **Wallpaper** .
2. Tap the screens for which you want to change the wallpaper.



3. Tap a wallpaper to preview it.
 4. Tap **Set as wallpaper** to set the selected wallpaper for the screen or screens. If you have selected an image from Gallery, tap **Done** to apply it as wallpaper.
- ❖ Your wallpaper is changed.

Lock Screen and Security Settings

The Lock screen settings let you set your method for unlocking your tablet, customize Lock screen options, determine whether to show tips for unlocking the tablet, and enter your owner information to be displayed on the Lock screen.

The Security settings let you set encryption options, password visibility, administrator settings, and credential storage options.

Lock Screen and Security Overview


The following options are available in the Lock screen and security menu (options vary depending on the screen lock selected):

Setting	Description
---------	-------------

Setting	Description
Screen lock type	Set your screen lock.
Show information	Select items to show on the Lock screen, like a Dual clock, the Weather, and Owner information.
Notifications	Show content and notifications on the Lock screen.
Unlock effect	Set the effect shown when the Lock screen wakes up. Available only with the Swipe lock.
Secure lock settings	Configure secure lock functions, such as Auto lock and Lock instantly with Power key. Available only with Pattern, PIN, Password, and Fingerprint locks.
Fingerprints	Register your fingerprint on your tablet.
Unknown sources	Allow or deny installation of apps from sources other than the Google Play store app.
Other security settings	Configure settings for encryption, password visibility, security updates, credentials, and other security features.

Access Lock Screen and Security Options

- From home, tap **Apps**  > **Settings**  > **Lock screen and security** .

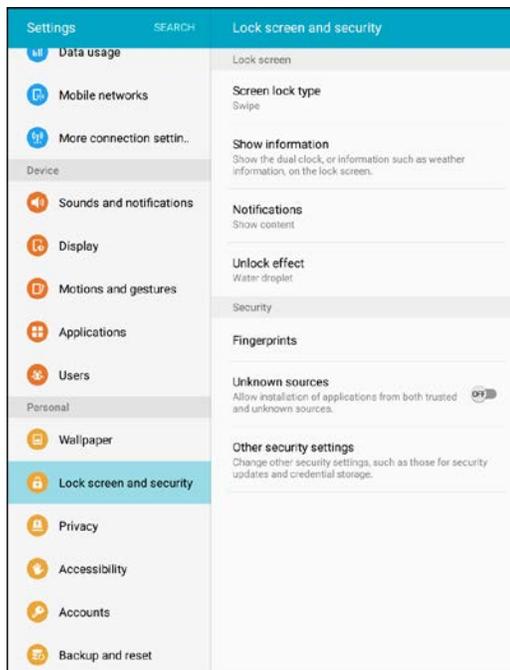

- ❖ The Lock screen and security settings window displays.

Screen Lock

You can increase the security of your tablet by creating a screen lock. When enabled, you have to draw the correct unlock pattern on the screen, enter the correct PIN, enter the correct password, or scan your fingerprint to unlock the tablet's control keys, buttons, and touchscreen.


In order from least secure to most secure, the available screen lock options are:

- None
- Swipe
- Pattern
- PIN
- Password
- Fingerprints

Important: To protect your tablet and data from unauthorized access, it is recommended that you use the highest security level available (Password protection). It is also recommended you frequently change your password to ensure the safety of your tablet and personal data.


Access Screen Lock Settings

1. From home, tap **Apps**  > **Settings**  > **Lock screen and security** .

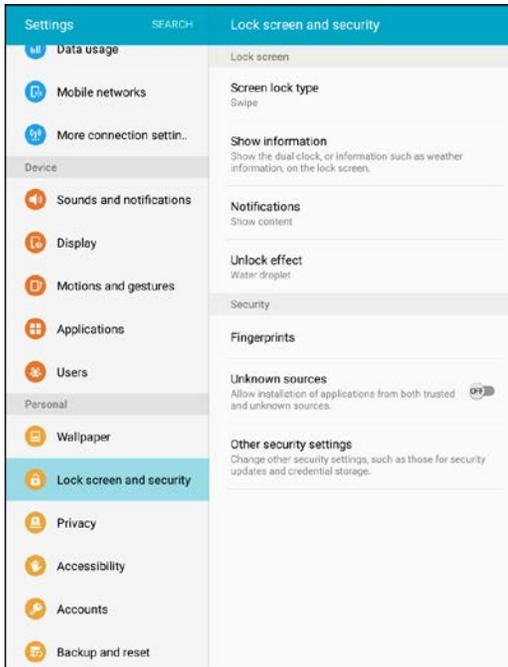

- ❖ The Lock screen and security settings window displays.


2. Tap **Screen lock type**.

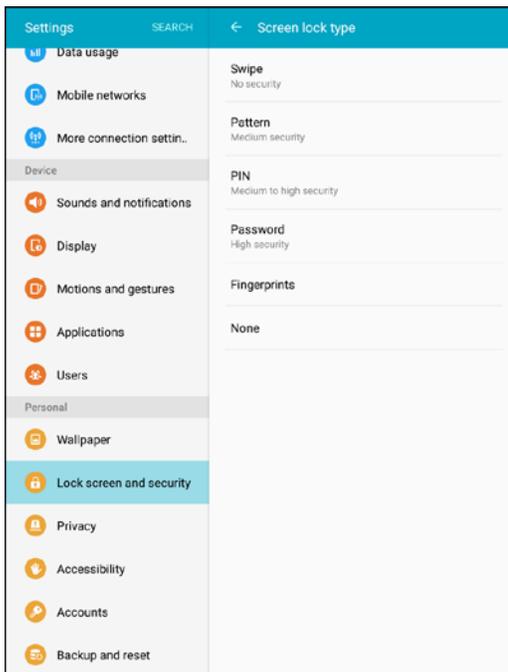

- ❖ The Screen lock type settings window displays.

Use Swipe to Unlock the Screen


- From the Screen lock type menu, tap **Swipe** to save the setting.

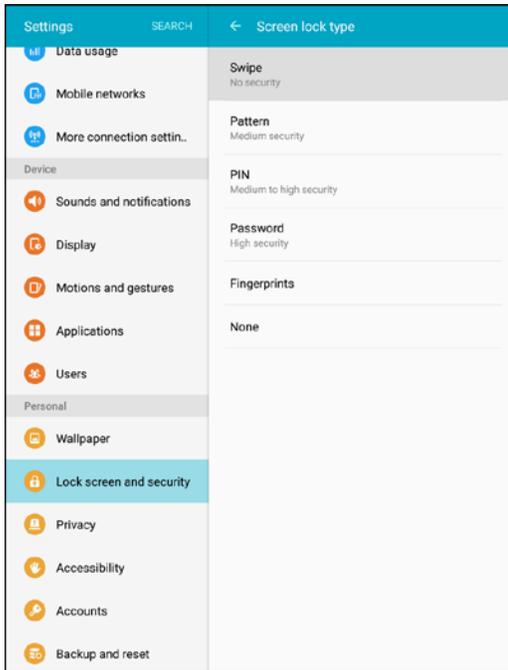


- ❖ The screen lock is set.

Use a Screen Unlock Pattern

1. From the Screen lock type menu, tap **Pattern**.

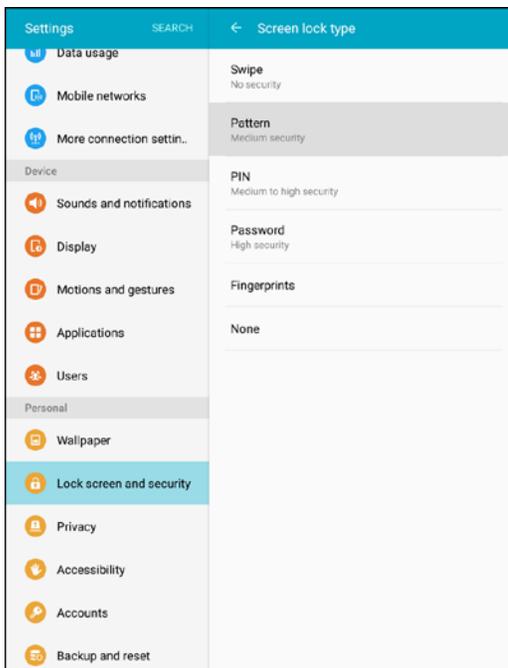


2. Draw the screen unlock pattern by connecting at least four dots in a vertical, horizontal, or diagonal direction. Lift your finger from the screen when finished.

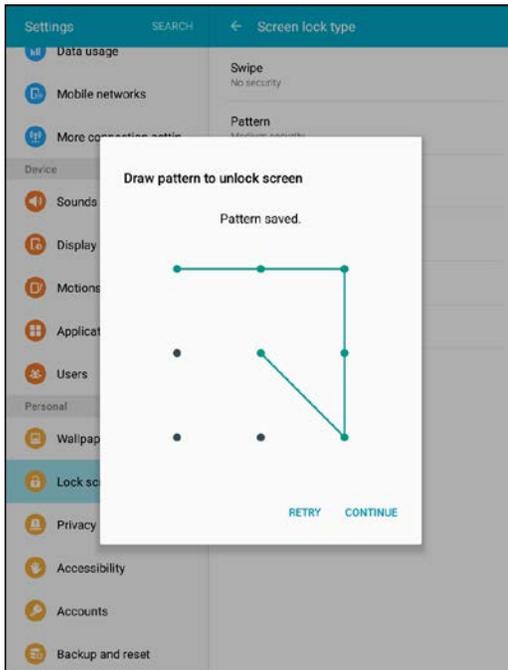


❖ The tablet records the pattern.

3. Tap **Continue**.
4. When prompted, draw the screen unlock pattern again, and then tap **Confirm**.

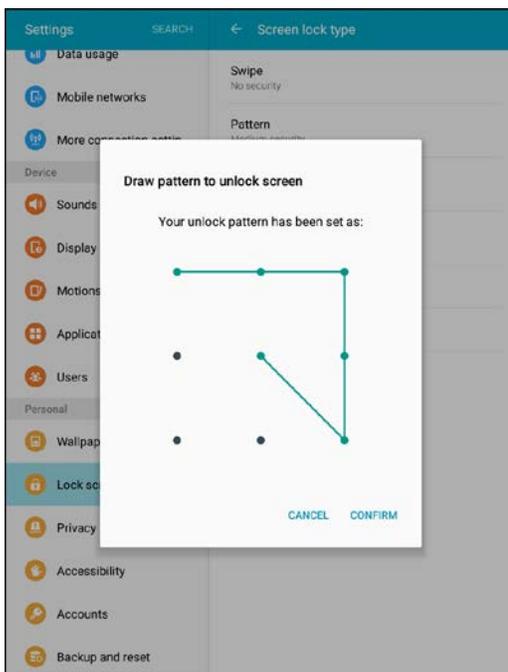

- ❖ The screen unlock pattern is saved.
5. Enter a backup PIN, tap **Continue**, re-enter the PIN, and tap **OK** to save your screen unlock pattern.

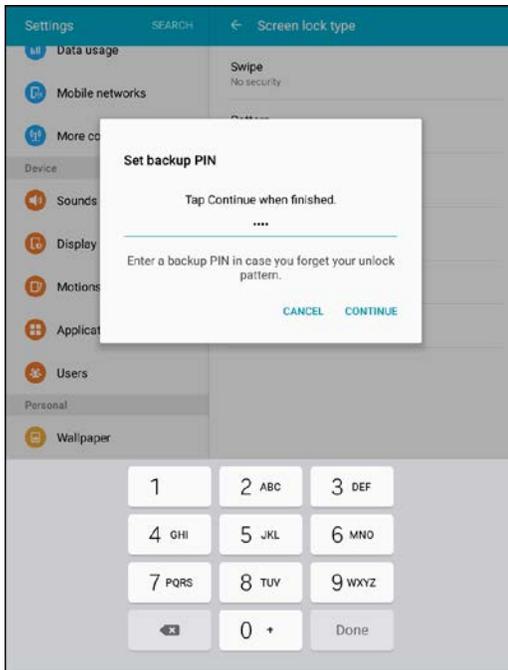


- ❖ The screen lock is set.
 - If you fail to draw the correct unlock pattern on the screen after five attempts, you will be prompted to wait for 30 seconds before you can try again.

Note: Clear the **Make pattern visible** check box if you do not want the unlock pattern to display on the screen when you unlock it.

Note: To change your unlock screen pattern, from home, tap **Apps**  > **Settings**  > **Lock Screen and Security**  > **Screen lock type**.

Use a Screen Unlock PIN

1. From the Screen lock type menu, tap **PIN**.

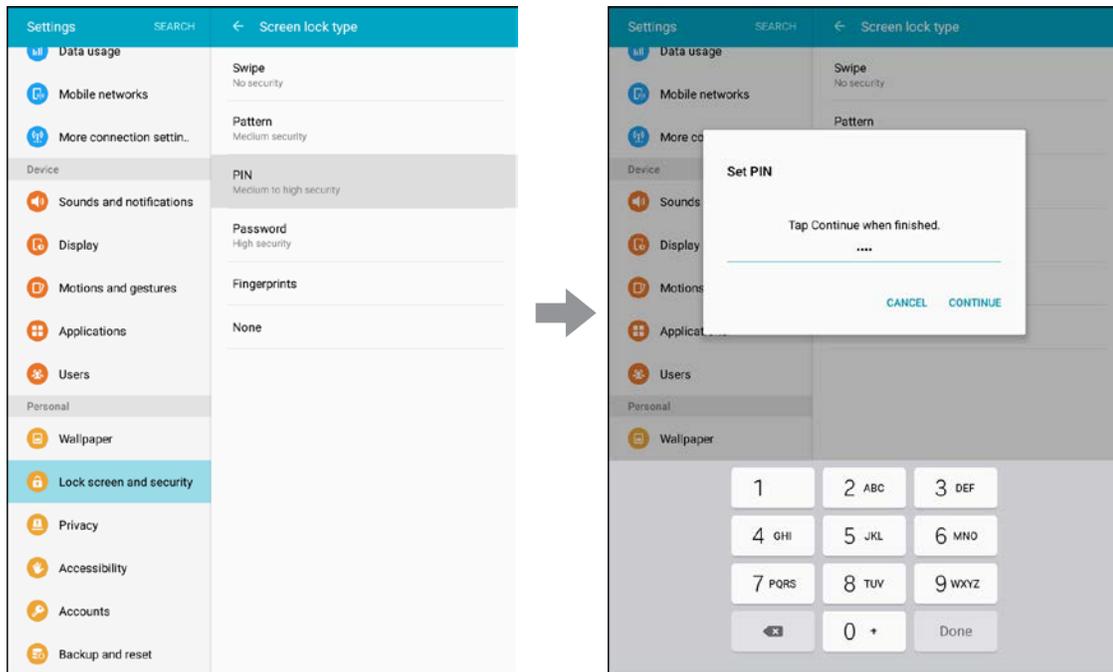


2. Enter a PIN, tap **Continue**, re-enter your PIN, and tap **OK** to save the setting.

❖ The screen lock is set

- If you fail to enter the correct PIN after five attempts, you will be prompted to wait for 30 seconds before you can try again.

Use a Screen Unlock Password

1. From the Screen lock type menu, tap **Password**.

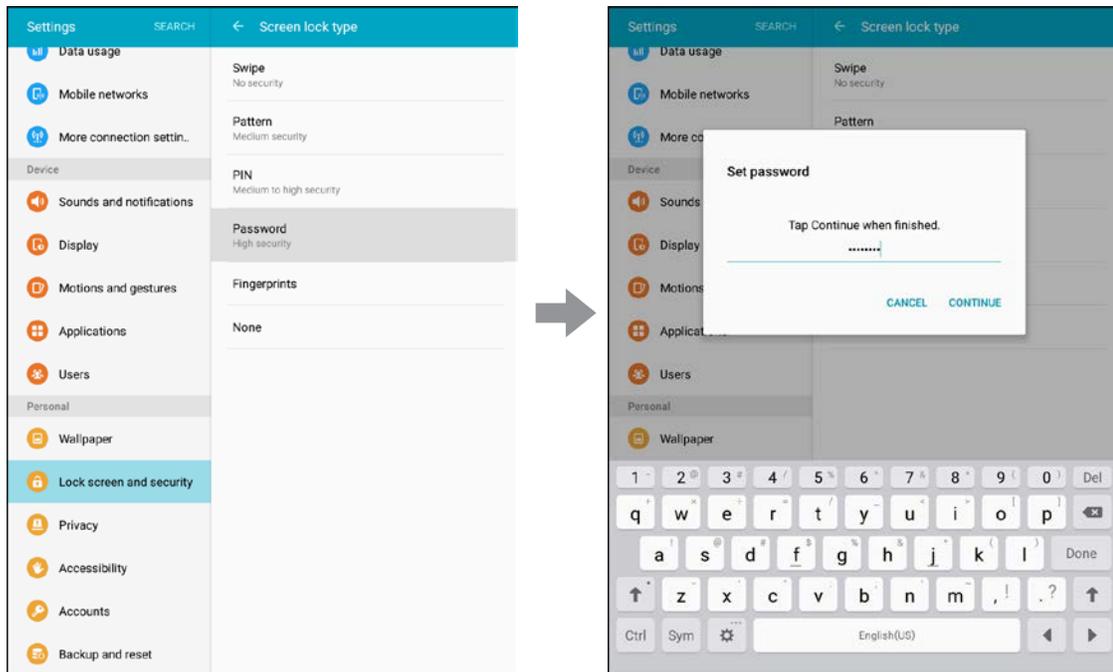

2. Enter a password, tap **Continue**, enter your password again to confirm it, and then tap **OK**.

❖ The screen lock is set.

- If you fail to enter the correct password after five attempts, you will be prompted to wait for 30 seconds before you can try again.


Important: To protect your tablet and data from unauthorized access, it is recommended that you use the screen unlock password (highest security). It is also recommended that you frequently change your password to ensure the safety of your tablet and personal data.

Use a Fingerprint Screen Lock

With a Fingerprint screen lock, swipe your finger over the Home key.

Note: Before using the Fingerprint screen lock option, you will need to register your fingerprint on your tablet.

1. From the Screen lock type menu, tap **Fingerprints**.

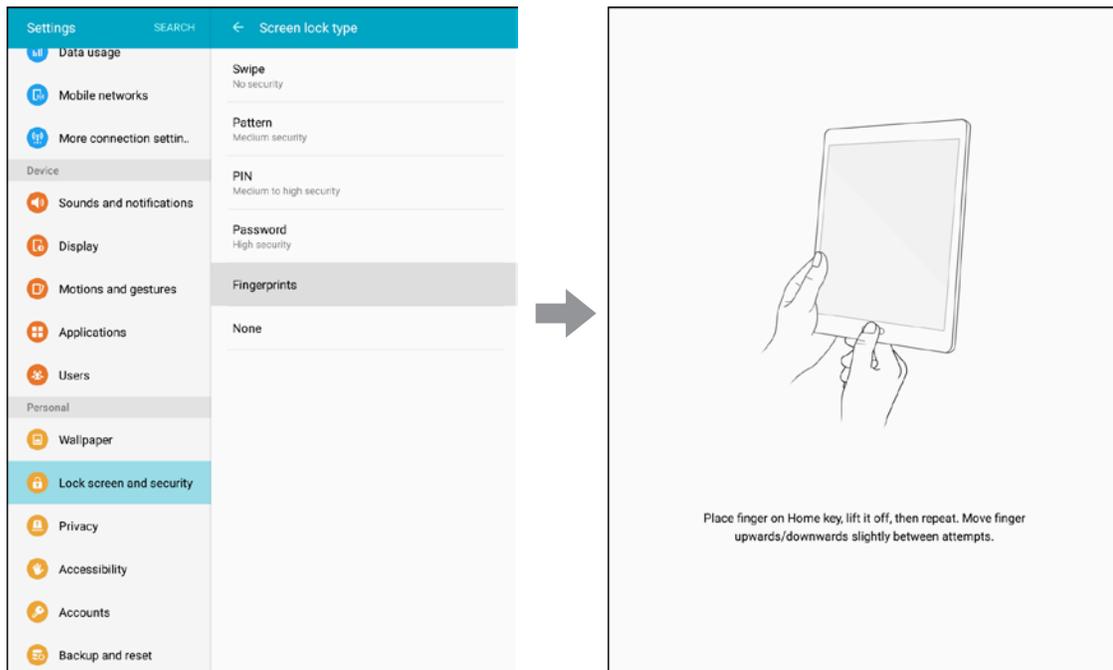


2. Follow the prompts to set up your fingerprints.

Note: Fingerprint recognition uses the unique characteristics of each fingerprint to enhance the security of your device. The likelihood of the fingerprint sensor confusing even small areas of two different fingerprints is very low. But in rare cases, the sensor may recognize a fingerprint that is similar to a registered fingerprint.

Disable the Screen Lock


Follow the instructions below to turn off your current screen lock.

1. From home, tap **Apps**  > **Settings**  > **Lock screen and security** .

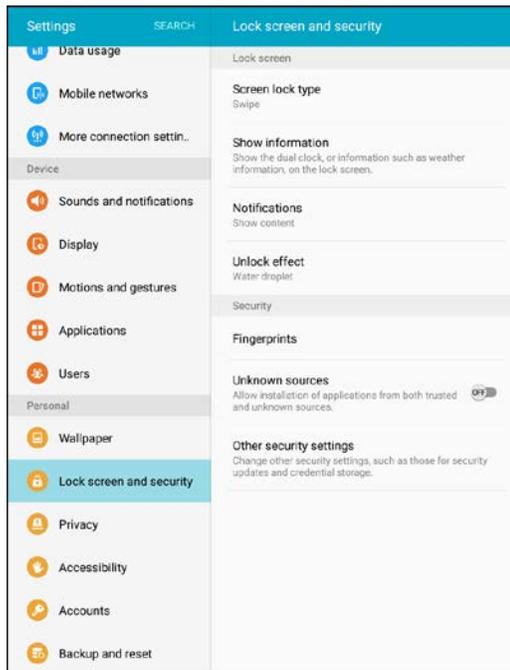

- ❖ The Lock screen and security settings window displays.
2. Tap **Screen lock type**.
 - ❖ The Screen lock settings menu opens.
 3. Draw your unlock screen pattern, enter your PIN or password, or scan your fingerprint.

4. Tap **None**.

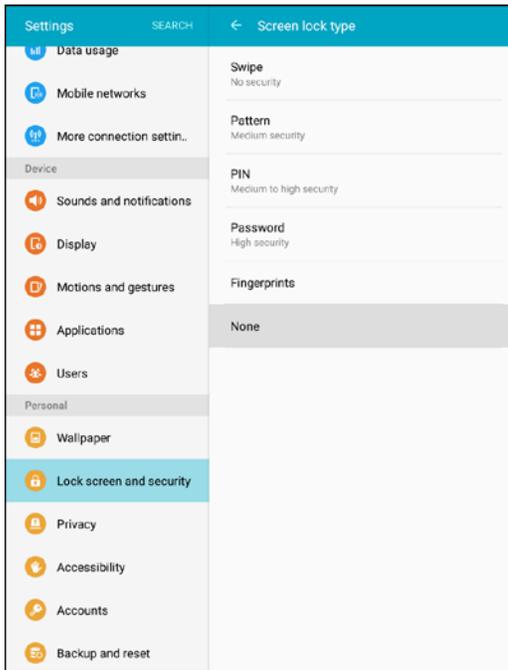


❖ The screen lock is disabled.

Device Security

Configure security for your tablet.

1. From home, tap **Apps**  > **Settings**  > **Lock screen and security** .

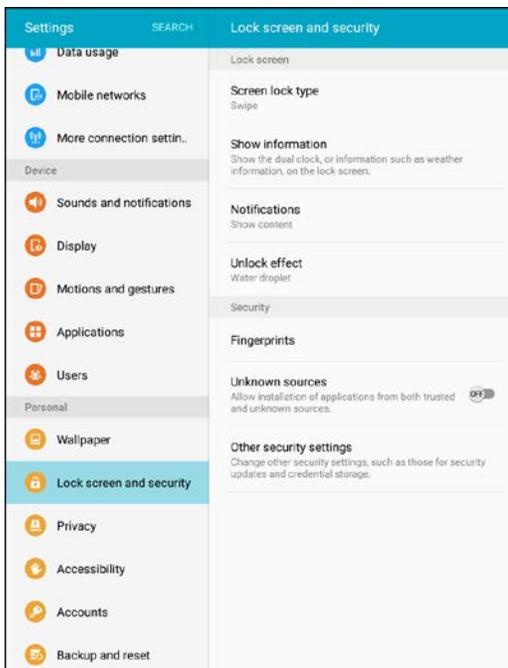


❖ The Lock screen and security settings window displays.

2. Tap **ON/OFF** next to Unknown sources to enable installation of non

-Google Play applic

Warning: Enabling installation of third-party applications can cause your device and personal data to be more vulnerable to attacks by unknown sources.

3. Tap **Other security settings**.

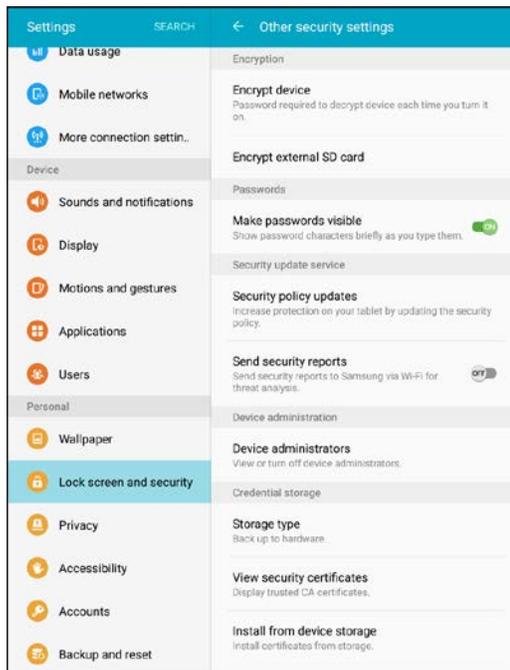

❖ The Other security settings menu opens.

4. Configure the following options:

- **Encrypt device:** Encrypt device and follow the prompts to encrypt all data on your device.
- **Encrypt external SD card:** Encrypt data on an optional SD card (not included).
- **Make passwords visible:** Display password characters briefly as you type them.
- **Security policy updates:** Automatically or manually check for security policy updates.
- **Send security reports:** Send security reports to Samsung via Wi-Fi for threat analysis.
- **Device administrators:** Manage your device administrators and application installation privileges.
- **Storage type:** Select a storage location for credential contents.
- **View security certificates:** Display certificates in your device's ROM and other certificates you have installed.
- **Install from device storage:** Install a new certificate from storage.

- **Clear credentials:** Erase the credential contents from the device and reset the password.
- **Trust agents:** Perform selected actions when trusted devices are connected. Available only with Pattern, PIN, Password, and Fingerprint locks.
- **Pin windows:** Pin an app on your device screen, preventing access to other features of your tablet.
- **Usage data access:** View the applications that can access your device's usage history.
- **Notification access:** View the applications that can access notifications you receive on your tablet.

Note: To view Trust agents, set up a screen lock (Password, PIN, Pattern, or Fingerprint). For more information, see [Screen Lock](#).


Privacy

The following privacy settings are available.

Privacy and Safety Setting	Description
Location	Select the method used to estimate your location. You can also view the apps that have requested your location and review their history logs.
Private mode	Private mode allows you to hide and protect content you want to keep private. You must configure a security lock to use Private mode.
Report diagnostic info	You can choose to enable reporting of diagnostic info when your tablet experiences technical problems.

Access Privacy Settings

- From home, tap **Apps**  > **Settings**  > **Privacy** .

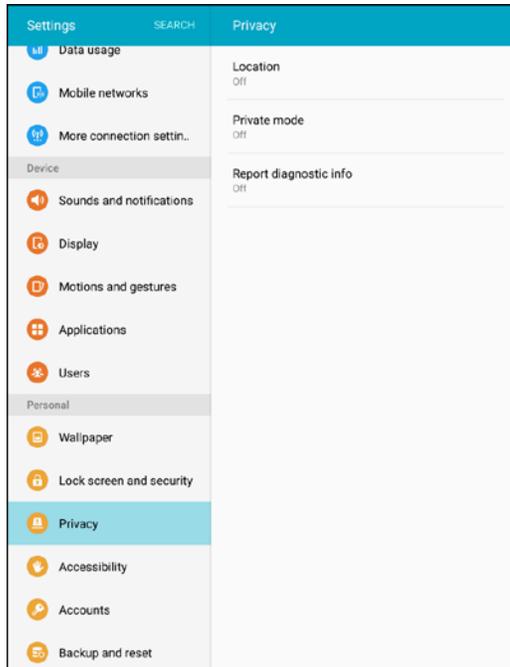

- ❖ The Privacy settings window displays.


Location Settings

Your Location services settings menu lets you select how your tablet determines its location (using the wireless networks, GPS satellites, both, or neither).


Enable Location Services

Before using any features that require location assistance, you must enable your tablet's location services.

1. From home, tap **Apps**  > **Settings**  > **Privacy** .

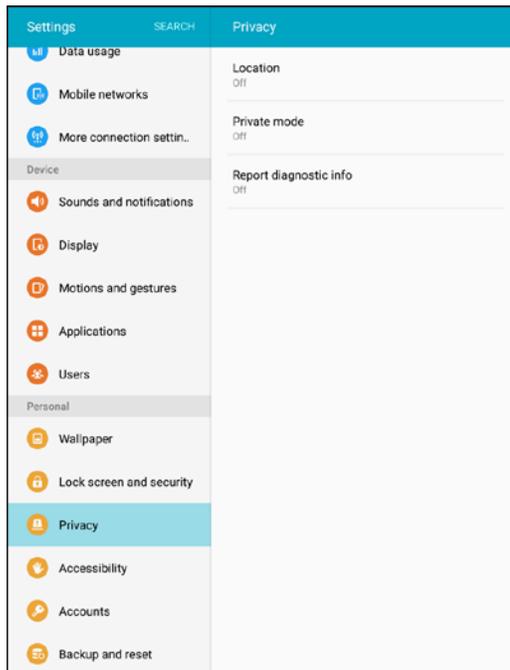

2. Tap **Location**.
3. Tap **ON/OFF** to enable Location services.

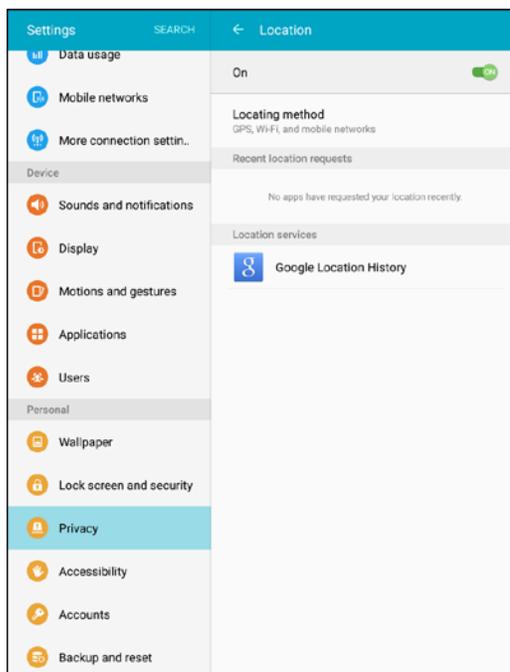


- ❖ Your tablet's location services are enabled.
 - If you see a confirmation, follow the onscreen instructions to connect.

Changing Location Method

You can change the methods used for determining your location.


Note: Location must be turned on to change locating method.

1. From home, tap **Apps**  > **Settings**  > **Privacy** .

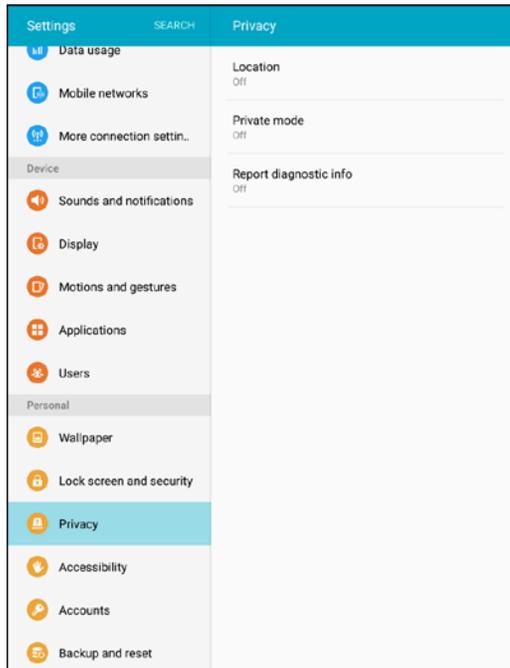

2. Tap **Location**.

3. Tap **Locating method**.

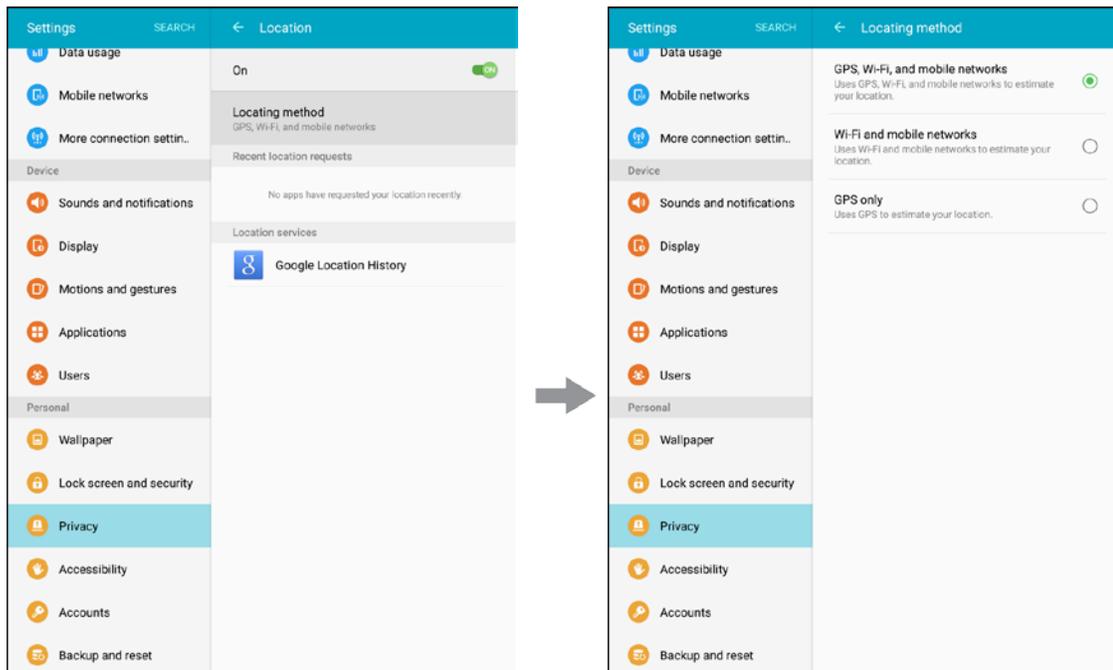


4. Select a locating method. Each mode has a description of which method or methods are used to estimate your location.

❖ Your tablet's locating method is set.

Location Services

Google uses Location Reporting to store and use your device's most recent location data. Google apps, such as Google Maps, can use this data to improve your search results based on places that you have visited.

1. From home, tap **Apps**  > **Settings**  > **Privacy** .

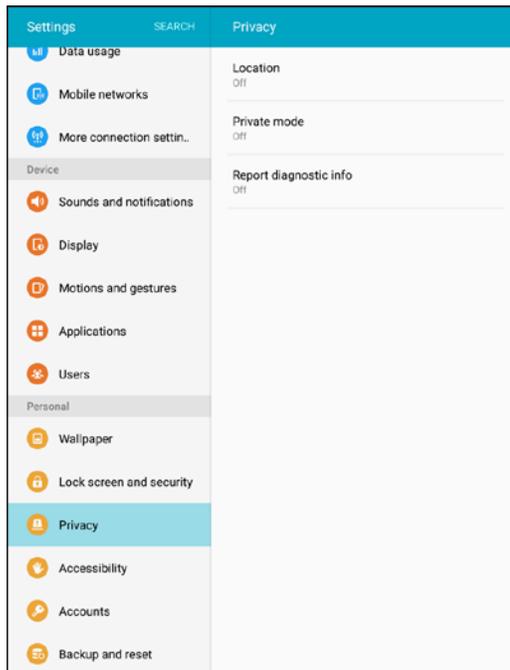


2. Tap **Location**.
3. Tap **Google Location History** and sign in to your Google Account for more options.

Private Mode

Private mode allows you to hide and protect content you want to keep private using supported apps. You must configure a security lock to use Private mode.

Activate Private Mode

1. From home, tap **Apps**  > **Settings**  > **Privacy**  > **Private mode**.

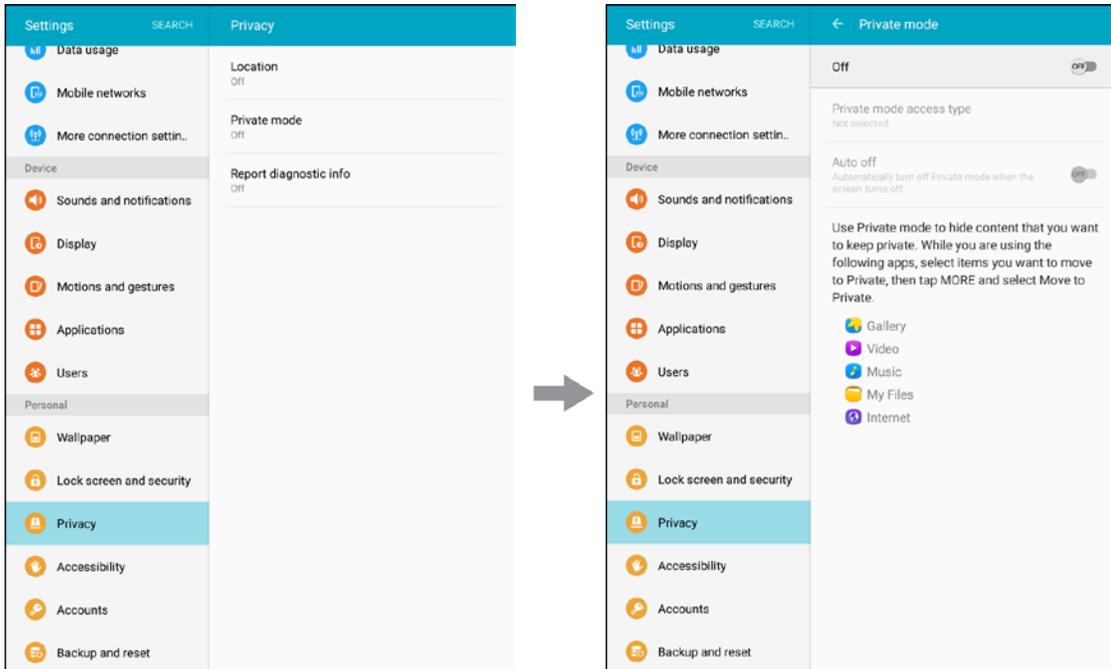


2. Tap **ON/OFF** to turn on Private mode.
3. Follow the prompts to set security for Private mode.

Report Diagnostic Info

You can choose to enable reporting of diagnostic info when your tablet experiences technical problems.

Enable Report Diagnostic Info

1. From home, tap **Apps**  > **Settings**  > **Privacy**  > **Report diagnostic info**.

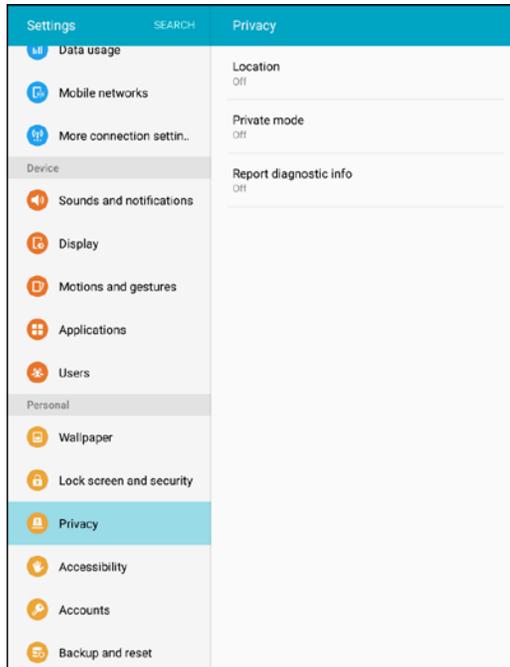

2. Read the consent information and tap **Yes** to enable.

Accessibility Settings

The Accessibility menu lets you enable and manage accessibility-related applications.

Accessibility Settings Overview


The following Accessibility options may be configured:

Accessibility Option	Description
Vision	Configure accessibility features for vision.
Hearing	Configure accessibility features for hearing and sounds.
Dexterity and interaction	Configure accessibility features for handling and interactions with the tablet.
Direction lock	Unlock the screen by swiping in a series of directions.
Direct access	Open your accessibility settings by pressing the Home Key three times in quick succession.

Accessibility Option	Description
Notification reminder	Set the tablet to beep or vibrate at set intervals to remind you of any unread notifications from selected applications.
Single tap mode	Dismiss or snooze alarms, calendar events, and timer alerts, and answer or reject incoming calls with a single tap.
Manage accessibility	Import and export your accessibility settings, or share them with other devices.
Services	Configure other accessibility services, if installed.

Access Accessibility Options

1. From home, tap **Apps**  > **Settings**  > **Accessibility** .

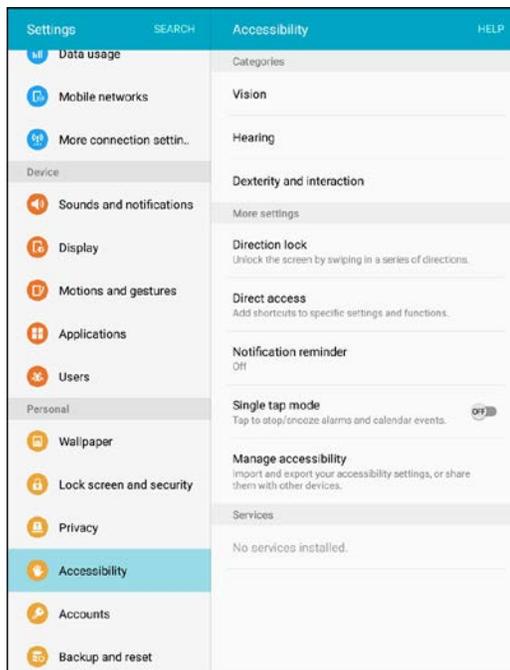


2. Set available accessibility options.
 - ❖ Your accessibility settings are applied and saved.


Vision Accessibility Settings

Your tablet offers many features to assist users who are blind or low-vision.

1. From home, tap **Apps**  > **Settings**  > **Accessibility** .

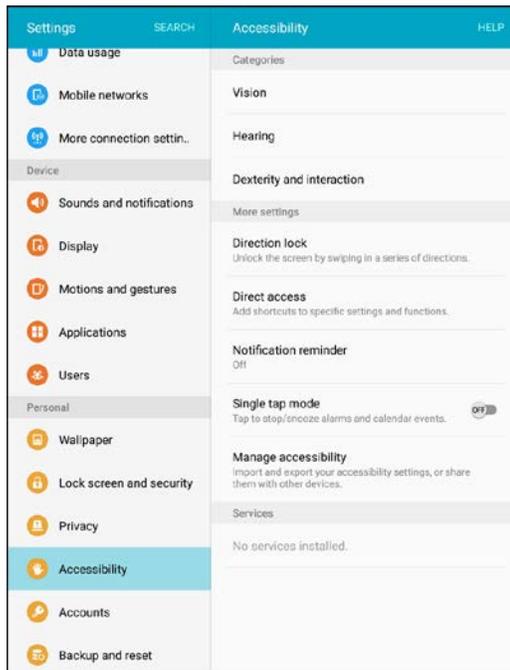

2. Tap **Vision** to configure options:

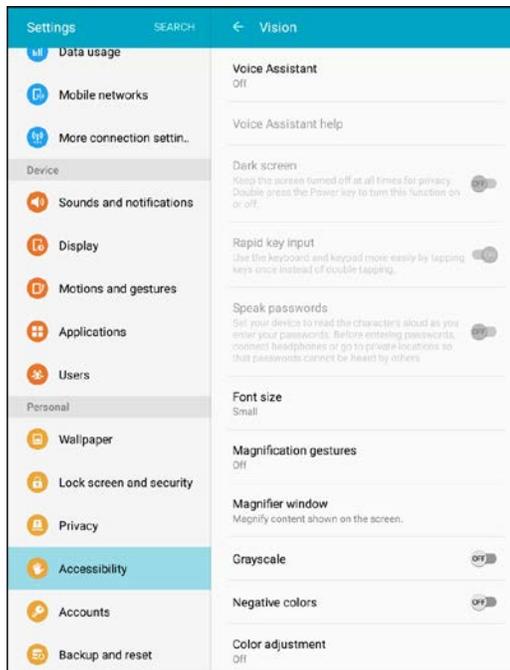


- **Voice Assistant:** Enable the Voice Assistant feature and configure options. When Voice Assistant is on, your tablet speaks descriptions of items you tap or activate on your tablet, to help blind and low-vision users. When Voice Assistant is turned on, you may need to use a double-tap to select items, because a single tap is used to trigger Voice Assistant.

- **Voice Assistant help:** View tutorials on using Voice Assistant.
- **Dark screen:** Keeps your tablet's screen turned off at all times. When Dark screen is enabled, double-press the Power/Lock key to turn it on or off while using your tablet.
- **Rapid key input:** Release your finger to enter a selection, instead of double-tapping it. By default, when you have Voice Assistant turned on, you must double-tap items on the screen to select them. If you turn on Rapid key input, you can tap and release your finger to select an item instead of double-tapping.
- **Speak passwords:** The tablet reads out characters entered in password fields. Use caution with this feature, because others near you will be able to hear your passwords.
- **Font size:** Choose the size of text for your tablet's screens.
- **Magnification gestures:** Use exaggerated gestures such as triple-tapping, double pinching, and dragging two fingers across the screen.
- **Magnifier window:** Magnify content shown on the screen.
- **Grayscale:** Display screens in grayscale instead of color.
- **Negative colors:** Screen colors are reversed.
- **Color adjustment:** Adjusts the color of the screen if you have difficulty reading the screen because of the color. Follow the prompts to fine-tune screen colors.
- **Accessibility shortcut:** Quickly turns on accessibility features by pressing and holding the **Power/Lock** key until you hear a sound or feel a vibration, and then pressing and holding with two fingers until you hear an audio confirmation.
- **Text-to-speech options:** Configure options for converting text to speech.


Hearing Accessibility Settings

Your tablet offers many features to assist users who are deaf or hearing-impaired.

1. From home, tap **Apps**  > **Settings**  > **Accessibility** .

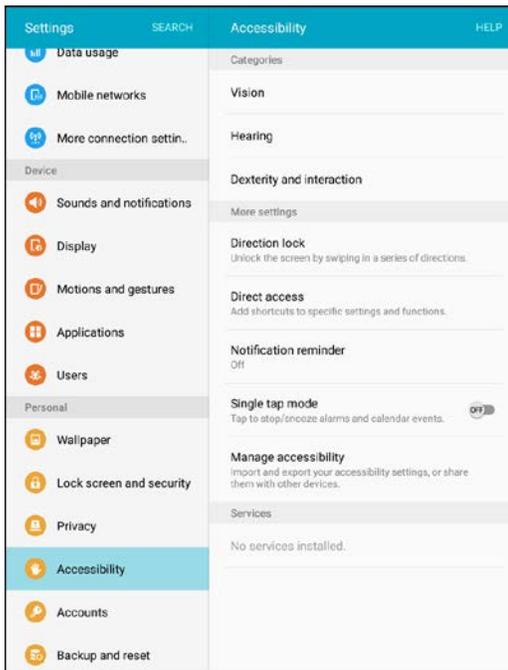

2. Tap **Hearing** to configure options:

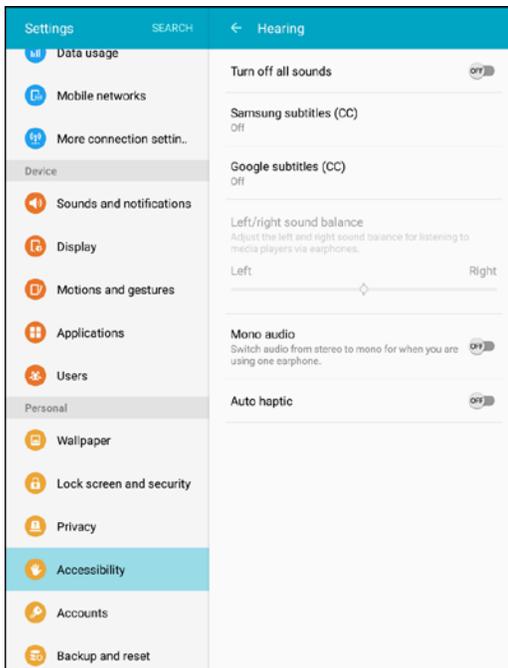


- **Turn off all sounds:** Sounds made by the tablet during taps, selections, notifications, etc. is muted.
- **Samsung subtitles (CC):** Displays Samsung subtitles where available. Tap **ON/OFF** to turn the option on or off, and then tap **Samsung subtitles** to configure options.

- **Google subtitles (CC):** Displays Google subtitles where available. Tap **ON/OFF** to turn the option on or off, and then tap **Google subtitles** to configure options like Language, Text size, and Caption style.
- **Left/right sound balance:** Adjust the sound sent to the left and right when using earphones.
- **Mono audio:** Enable or disable the compression of stereo audio into a single mono audio stream for use with a single earphone.
- **Auto haptic:** Automatically vibrates in response to the sounds of downloadable apps, such as games. Not all apps support this feature.


Dexterity and Interaction Settings

Your tablet offers many features to improve accessibility related to the way you interact with touch and movement.

1. From home, tap **Apps**  > **Settings**  > **Accessibility** .

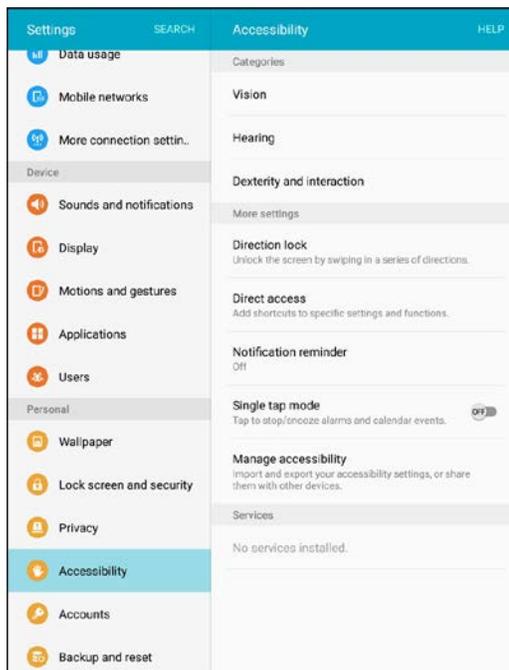

2. Tap **Dexterity and interaction** to configure options:

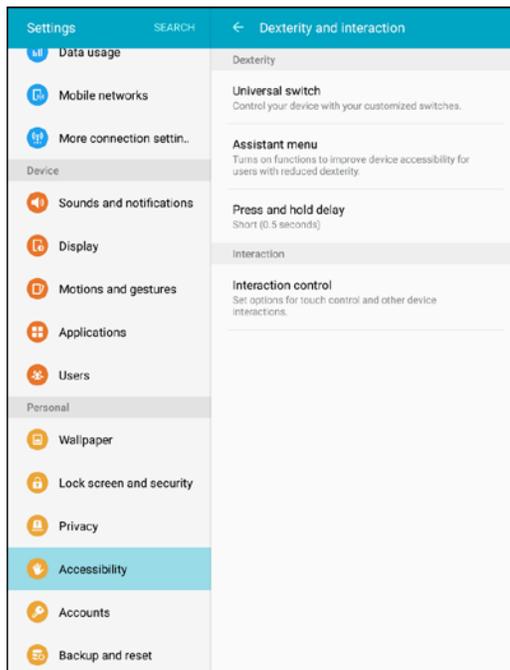


- **Universal switch:** Use customizable switches to interact with your tablet and to select items on the screen. Set your personal interaction method by connecting external accessories, tapping the screen, or using the front camera to detect the rotation of your head, the opening of your mouth, and the blinking of your eyes.
- **Assistant menu:** Assistant menu can improve tablet accessibility by providing quick access to important functions. A shortcut  appears on all screens to give you access to the Assistant menu. Tap **Assistant menu** to configure options:
 - Tap **ON/OFF** to turn the feature on or off. When you turn on Assistant menu, Single tap mode is also enabled.
 - **Dominant hand:** Choose whether the Assistant menu displays on the left or right side of the screen
 - **Edit:** Re-order or remove items from the Assistant menu.
 - **Assistant plus:** When turned on, Assistant plus displays contextual menu options for some apps in Assistant menu. Not all apps support this option. Tap **Assistant plus**, and then tap **ON/OFF** to turn the option on or off. After you turn on Assistant plus, enable or disable apps to use with Assistant plus.
 - **Touchpad size:** Choose a size for touchpads for use in your tablet's screens.
 - **Cursor size:** Choose the size of cursors, to display on the screen.
 - **Cursor speed:** Choose a speed for cursor blinks.
 - **Zoom percentage:** Set the percentage of zooming in when using Assistant menu.

- **Magnifier size:** set the size of magnification when using Assistant Menu.
- **Press and hold delay:** Choose how long your tablet waits during a tap and hold gesture on the screen, before continuing with the tap and hold action.
- **Interaction control:** Control how your tablet interprets motions and screen touches. To turn Interaction control on or off at any time, press and hold the **Home** key and the **Volume Down** key at the same time. When Interaction control is on, you can use motions to control your tablet, and screen timeout is turned on. You can also block areas of the screen from touch interaction. Automatic screen rotation and hard-key functions (Power/Lock key, Volume key, etc.) will be turned off, and app notifications will only be shown in the notification panel and status bar.

Configure Other Accessibility Settings

Your tablet offers many features to improve tablet accessibility.

1. From home, tap **Apps**  > **Settings**  > **Accessibility** .

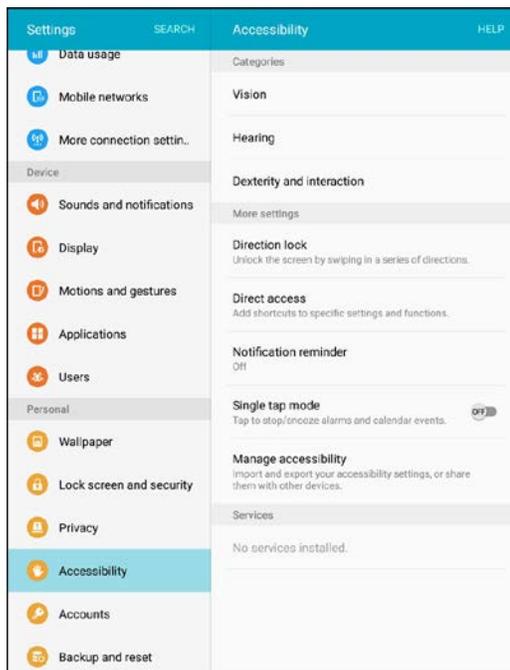

2. Configure additional accessibility options:
 - **Direction lock:** Unlock the screen by swiping in a series of directions.
 - **Direct access:** Access common accessibility settings from any screen by pressing the Home Key rapidly 3 times in a row.
 - **Notification reminder:** Tablet beeps at set intervals to remind you of unread notifications.
 - **Single tap mode:** When enabled, you can use a single tap to dismiss or snooze alarms, notifications and alerts, and answer or reject calls.

- **Manage accessibility:** Choose settings for exporting, updating, and sharing the accessibility settings as a file.


Note: Additional accessibility services you have installed are displayed under the **Services** heading.

Account Settings


The Accounts settings menu lets you add and manage all your email, social networking, and picture and video sharing accounts.

Set Up a New Account

1. From home, tap **Apps**  > **Settings**  > **Accounts** .

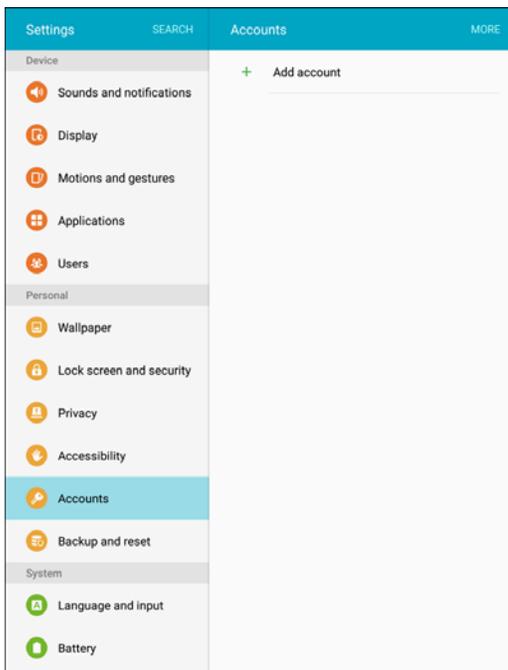

2. Tap **Add account**.

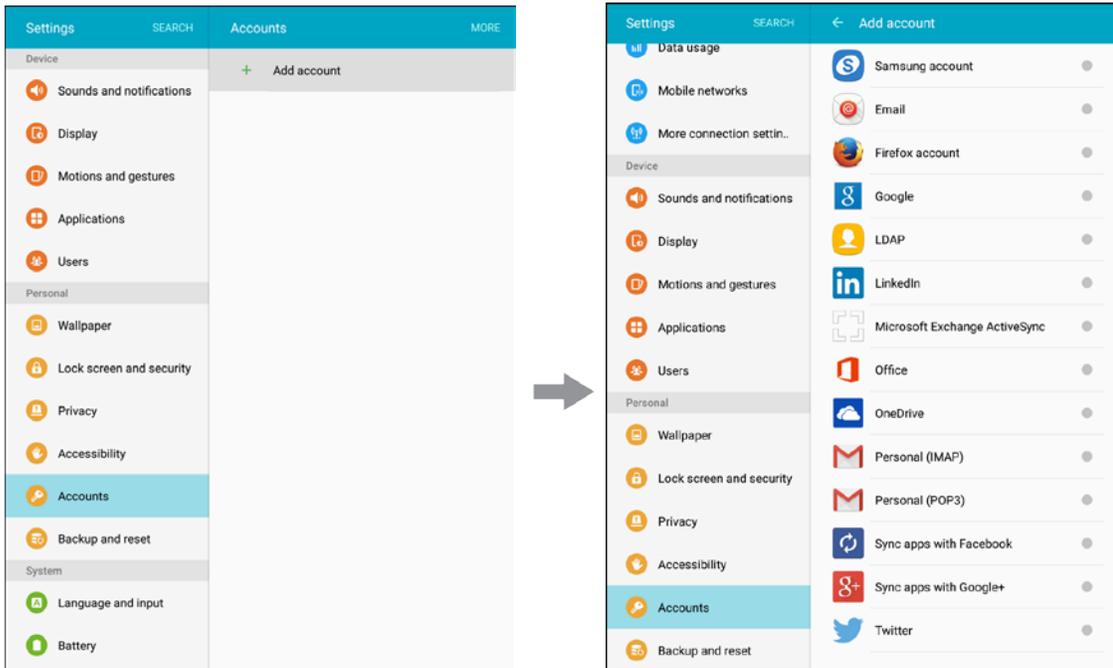


❖ An Add account window appears.

3. Tap an account type and then follow the onscreen instructions to add the required account information.


❖ The account is added to the accounts list.

Manage Existing Accounts

1. From home, tap **Apps**  > **Settings**  > **Accounts** .

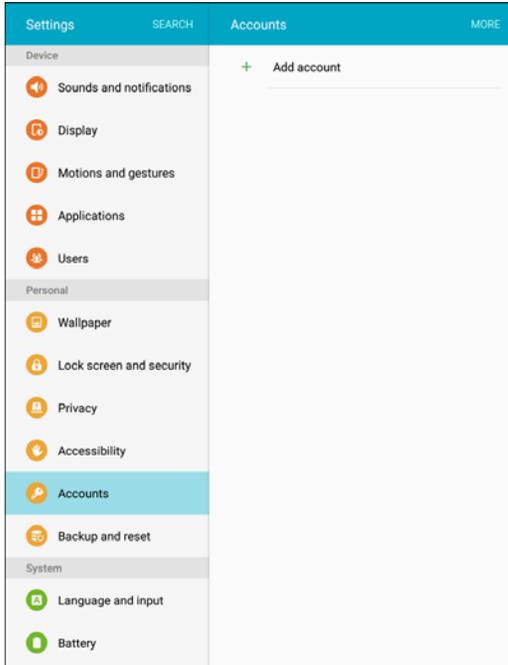

2. Tap the account type to see the existing accounts.

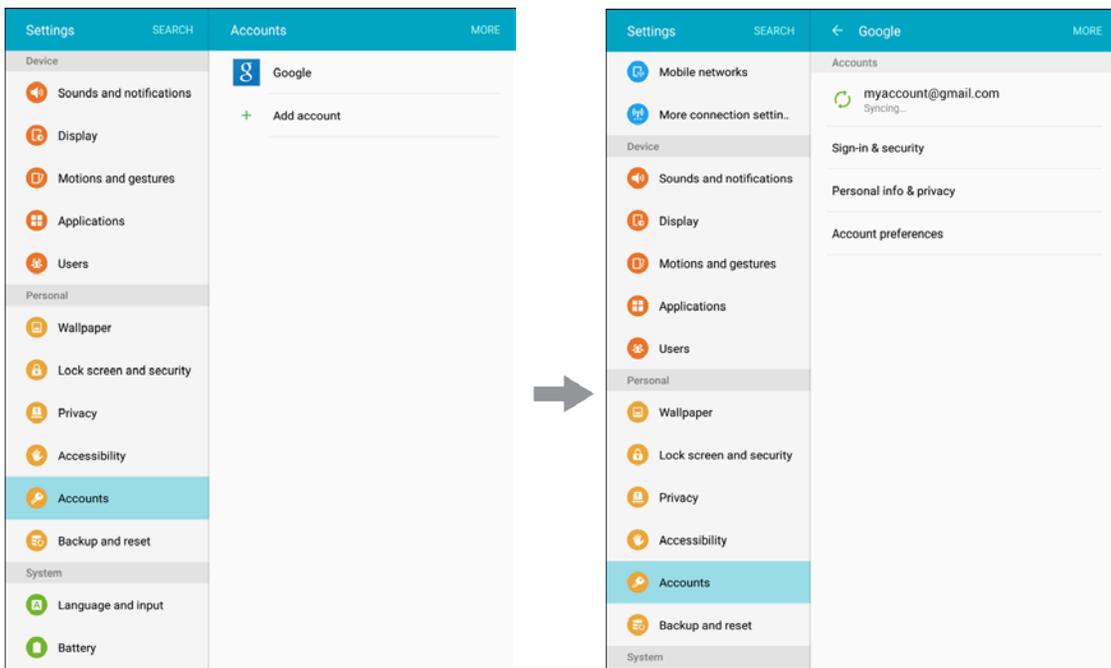

- ❖ The account settings menu appears.

3. View and configure your account settings as desired.

- ❖ The account options are updated.

Backup and Reset

Your tablet's **Backup and reset** menu lets you back up your tablet's data and settings to Google servers before resetting your tablet to the original factory settings. The Factory data reset erases all data from the tablet's application storage, including:

- Your Samsung account
- Your Google account
- All other email and social networking accounts
- System and application data and settings
- Downloaded applications

Backup and Reset Overview


The following options are available in the Back up and reset menu:

Backup and Reset Option	Description
Back up my data	Enable backup for application data, Wi-Fi passwords, and other settings to your Samsung account.
Restore	When reinstalling an application, backed up settings and data will be restored from your Samsung account.
Backup account	Select the Google account used to back up data.
Back up my data	Enable backup for application data, Wi-Fi passwords, and other settings to your Google account.
Automatic restore	When reinstalling an application, backed up settings and data will be restored from your Google account.
Factory data reset	Reset all settings and delete all data on tablet.


- Performing a factory data reset erases all data on the tablet. It is recommended that you back up important data before performing a factory data reset.
- Erased information cannot be restored. Only erase data after you are sure you have saved everything you need.

Access Backup and Reset Options

1. From home, tap **Apps**  > **Settings** .

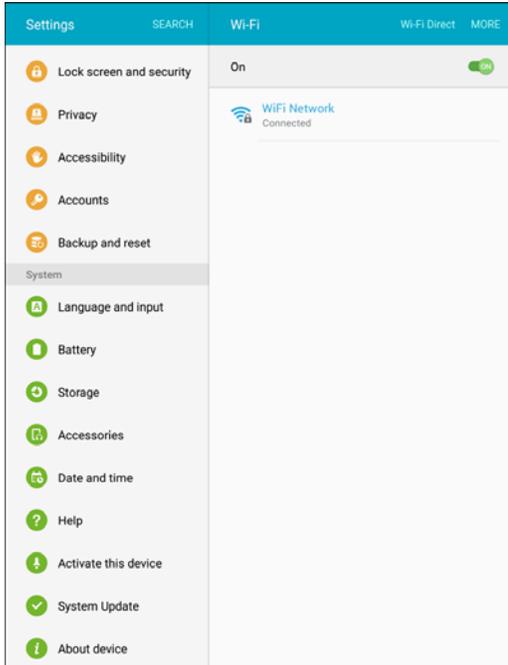

2. Tap **Backup and reset** .

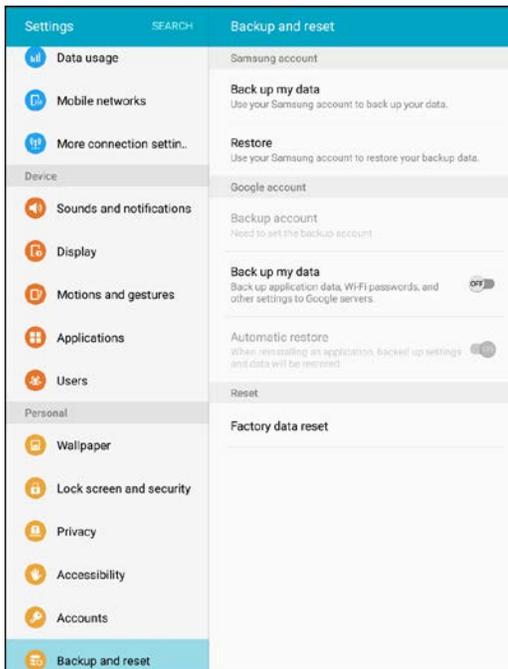

- ❖ The Backup and reset settings window displays.


3. Set options.

- ❖ The backup and reset settings are applied and saved.
 - If you are performing a Factory data reset, follow the prompts to confirm the data removal. The tablet will erase all data and reboot.


Factory Data Reset

Caution: If you reset your device to factory settings with the FRP (Factory Reset Protocol) turned on, you must enter the user name and password for the last registered Google Account to regain access to the device. You will not be able to access the device without the correct credentials. This Google Account verification prevents unauthorized users from accessing or using your device if it has been reset to factory settings without your permission (for example, if your device is lost or stolen). You should remove your Google Account before shipping your device to Samsung or any other service provider for service and before resetting the device to factory settings.


1. From the Backup and reset menu, tap **Factory data reset**.

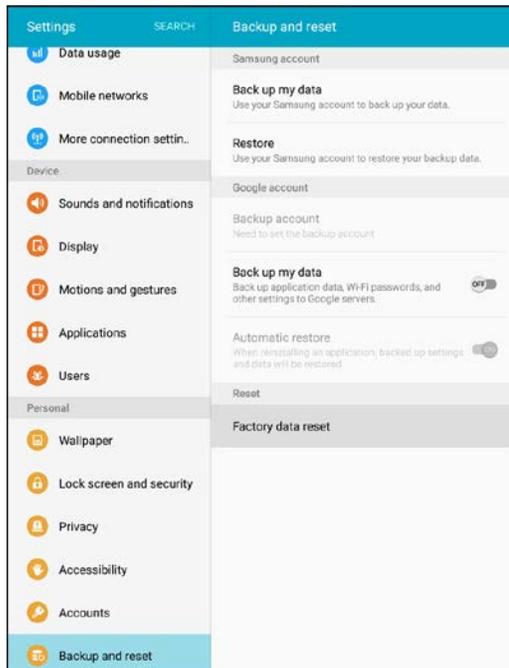

2. Read the factory data reset information page and tap **Reset device**.

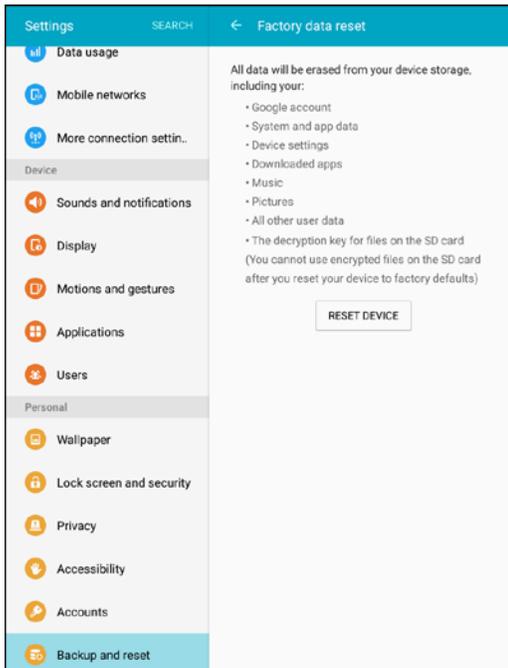

3. Tap **Delete all**.

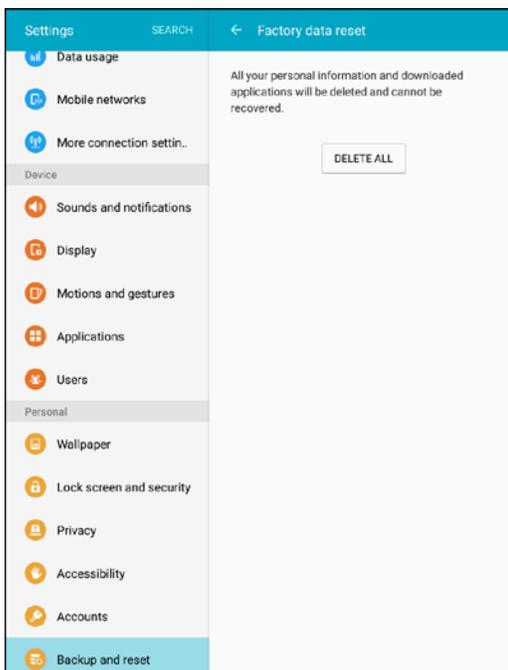

- ❖ Your tablet will power down and reset itself, which may take up to 10 minutes.
 - Once the tablet has reset, it will run through the Hands Free Activation and update processes again. When finished, you will see the Welcome screen and Setup application. See [Complete the Setup Screens](#) to start over.

Language and Input Settings

Your tablet's language and input settings let you select a language for the tablet's menus and keyboards, select and configure keyboard settings, configure speech input settings, and set your tablet's mouse/trackpad options.


Language and Input Settings Overview

You can set the following options in the Language and input settings menu:


Language and Input Setting	Description
Language	Set the language for your display and menus.
Default keyboard	Set the default method for entering text.
Samsung keyboard	Set Samsung keyboard options.
Google voice typing	Set options for Google Voice text entry.
Voice input	Set your voice search options.
Text-to-speech options	Set Text-to-speech options.
Pointer speed	Set the speed of the pointer for a mouse/trackpad.

Access Language and Input Setting Options

1. From home, tap **Apps**  > **Settings** .

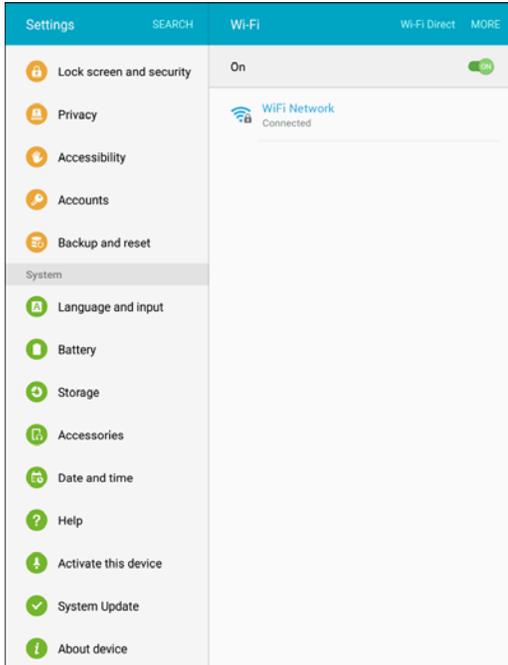

2. Tap **Language and input** .

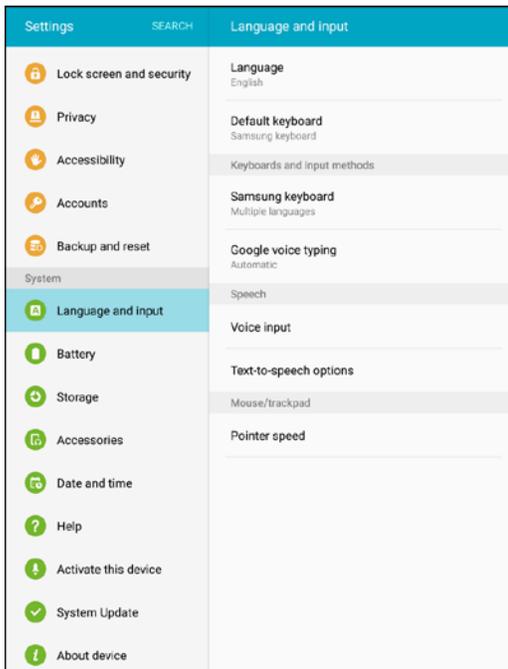

- ❖ The Language and input settings window displays.

3. Set options.

❖ The language and input settings are applied and saved.

Select the Default Language for Your Tablet

1. From home, tap **Apps**  > **Settings**  > **Language and input**  > **Language**.
2. Tap an available language.

Language and Input Options


Some of the language and input options are detailed below.

1. From home, tap **Apps**  > **Settings**  > **Language and input** .
2. Set options:
 - **Language:** Set the display language. Tap a language to assign it.
 - **Default keyboard:** Set the keyboard to use for input.
 - **Samsung keyboard:** Tap to configure options for the Samsung keyboard.
 - **Google voice typing:** Tap to configure options for Google voice typing, including language detection.
 - **Voice input:** Tap to configure voice input services. Tap a settings option and follow the prompts.
 - **Text -to-speech:** Tap a settings option and follow the prompts to configure Text-to-speech options.
 - **Pointer speed:** Tap to configure the mouse/trackpad pointer speed. Drag the bar to adjust the speed, and then tap **OK**.


Battery Settings

Monitor your tablet's battery usage through this settings menu. View which functions are consuming your battery's charge and at what percentage. You can also display the battery charge remaining as a percentage on the status bar.

1. From home, tap **Apps**  > **Settings** .

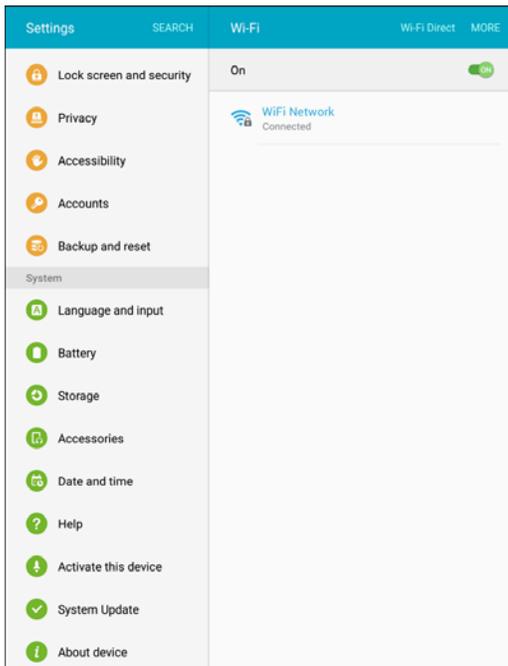

2. Tap **Battery** .

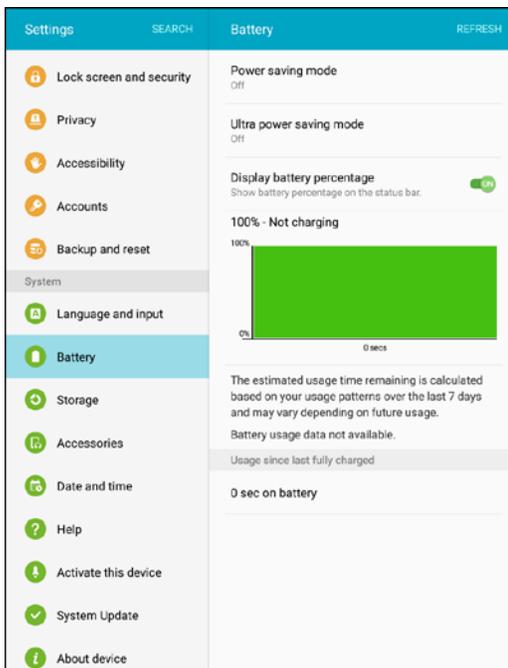

3. Tap **Display battery percentage** to show the percentage of battery charge remaining on the status bar.
4. Tap items to view details.


- ❖ Check your battery condition and access additional options.

Power Saving Mode


Save battery power by activating Power saving mode, which reduces or turns off certain features to decrease battery consumption.

Turn On Power Saving Mode

1. From home, tap **Apps**  > **Settings**  > **Battery** .

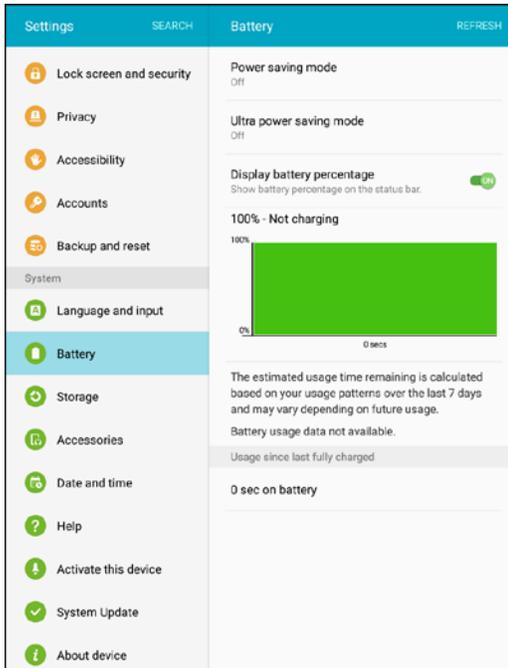

2. Tap **Power saving mode**.

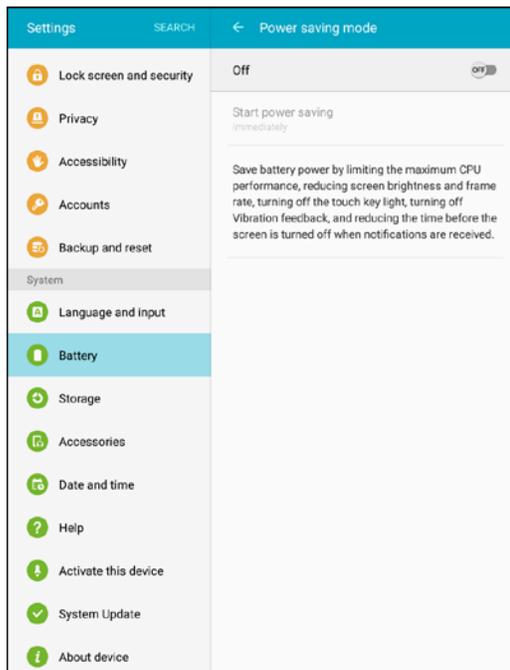


3. Tap **ON/OFF** to enable Power saving mode.
 - ❖ Power saving mode is activated.
4. Tap **Start power saving** to enable Power saving mode immediately, or at a selected percentage of battery power.

Ultra Power Saving Mode


Conserve power and extend your tablet's battery life by using a minimal home screen layout, limiting the number of usable apps, turning off mobile data when the screen is off, and turning off connectivity features such as Wi-Fi and Bluetooth.

Turn On Ultra Power Saving Mode

1. From home, tap **Apps**  > **Settings**  > **Battery** .

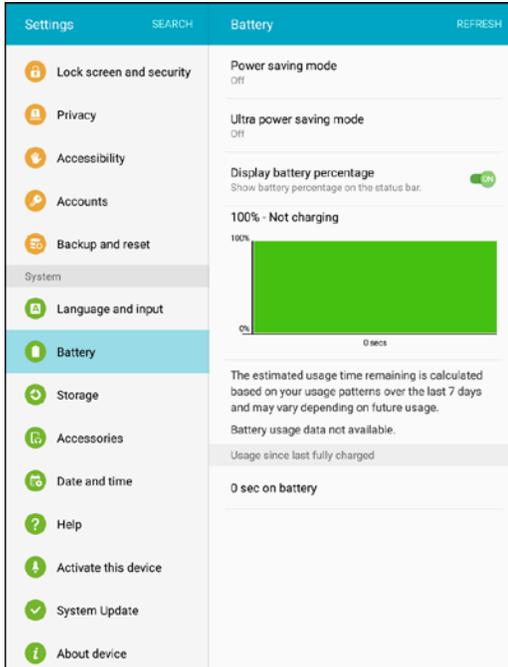

2. Tap **Ultra power saving mode**.

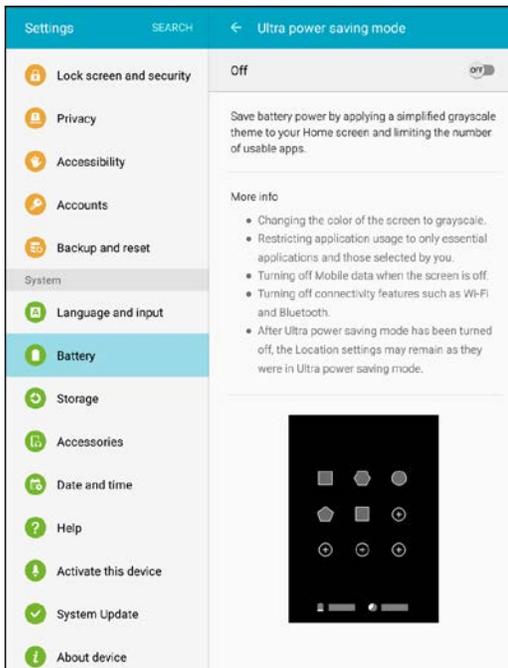

3. Tap **ON/OFF** to enable Ultra power saving mode.

- ❖ Ultra power saving mode is activated.

Turn Off Ultra Power Saving Mode

- From home, tap **More > Turn off Ultra power saving mode**.
- ❖ The tablet returns to normal power mode.

Storage Settings

The Storage settings menu lets you manage internal storage on your tablet.


Storage Settings Overview

The storage settings menu allows you to configure the following options:

Storage Device	Description
Device memory	<ul style="list-style-type: none">● Total space: View the total space/free space in your tablet's memory.● Available space: The amount of storage space currently available.● System memory: The minimum amount of storage space required to run the system.● Used space: The amount of storage space currently being used.● Cached data: The amount of data currently cached.● Miscellaneous files: The amount of memory used to store miscellaneous files.

Access Storage Settings

1. From home, tap **Apps**  > **Settings**  > **Storage** .

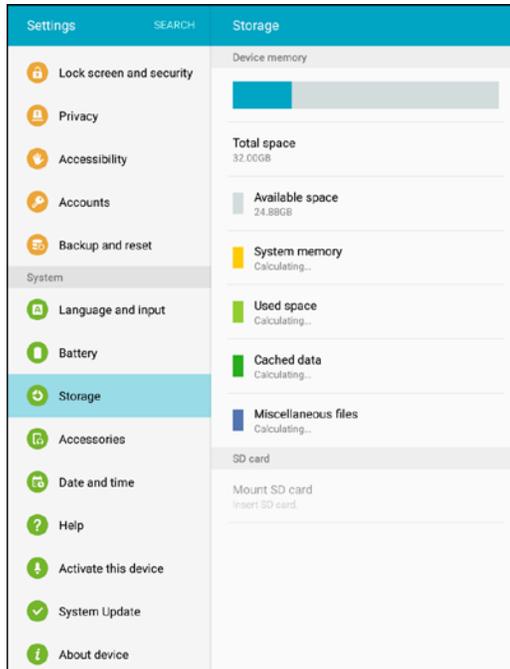

2. View memory usage for the different types of information stored in your tablet's memory. Tap an item for more information.

Accessories

Configure your tablet's behavior when it is connected to optional accessories (not included).

- From home, tap **Apps**  > **Settings**  > **Accessories** for options:
 - **Automatic unlock:** Flip the book cover (not included) open to unlock the screen when secured lock is turned off.

Date and Time Settings

Use the Date and Time settings menu either to automatically use the network-provided date and time or manually set these values, as well as select time and date format options.

Date and Time Overview


The following Date and time options may be configured:

Date and Time Option	Description
Automatic date and time	Set the date and time automatically via the connected wireless network.


Date and Time Option	Description
Automatic time zone	Set the time zone automatically via the connected wireless network.
Set date	Set the date manually (only available when Automatic date and time option is disabled).
Set time	Set the time manually (only available when Automatic date and time option is disabled).
Select time zone	Set the time zone manually (only when Automatic time zone is disabled).
Use 24-hour format	Enable or disable 24-hour format.

Access Date and Time Options

1. From home, tap **Apps**  > **Settings** .

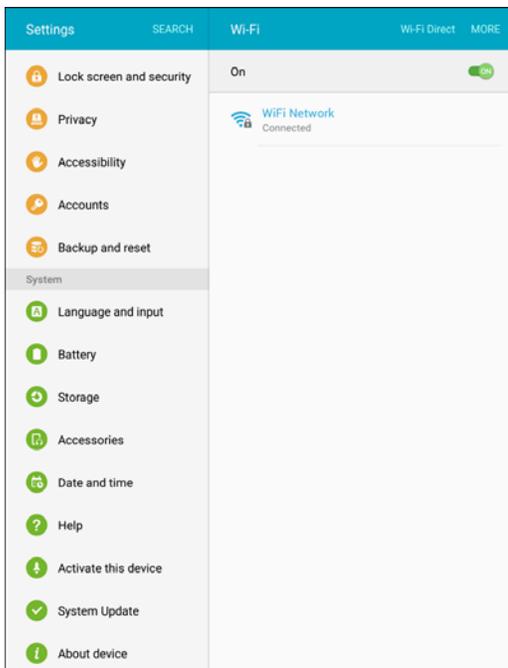

2. Tap **Date and time** .

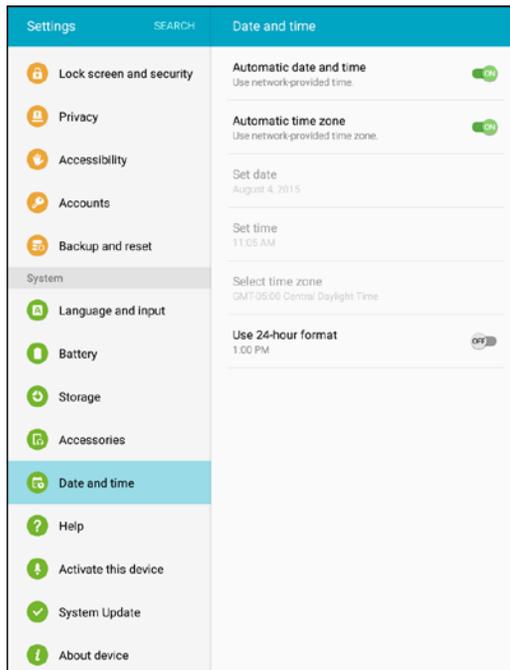

3. Set available date and time options.


- ❖ Your date and time settings are applied and saved.

Help

The Help menu provides tips and guidelines to help you use your tablet.

Access Help

1. From home, tap **Apps**  > **Settings**  > **Help** .

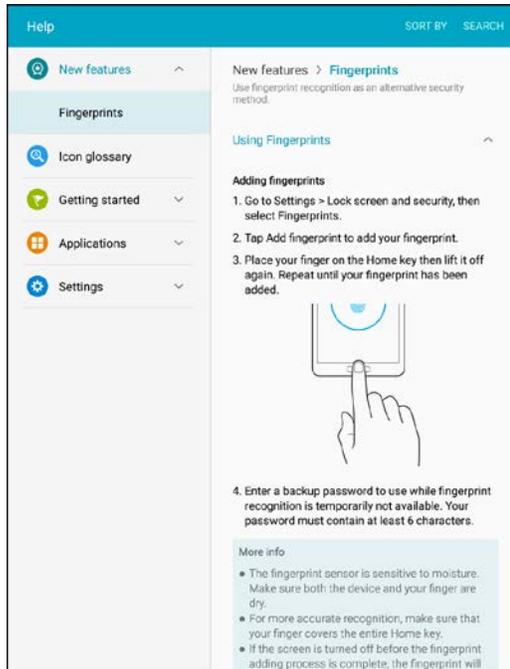


- ❖ The Help menu and topics appear.
2. Tap on a topic to view its contents.
 3. Tap **Search** to search for a topic.

Activate This Device

The Activate this device menu lets you activate a new tablet or use additional self-service options such as checking the status of an in-service tablet.

1. From home, tap **Apps**  > **Settings** .

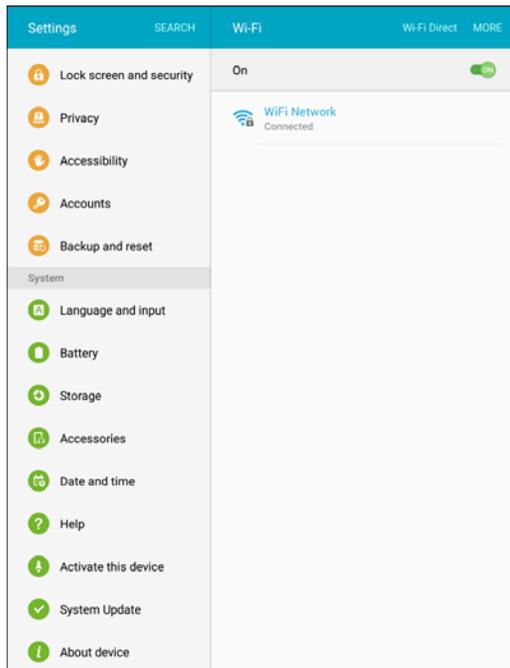


2. Tap **Activate this device** .
3. Follow the prompts to activate your tablet or review your summary.
 - ❖ Your tablet activates. If already activated on an account, you will see a usage and plan summary.

System Update

The System Update menu provides settings for keeping your tablet up-to-date with the latest software.

Access System Update

- From home, tap **Apps**  > **Settings**  > **System Update** .

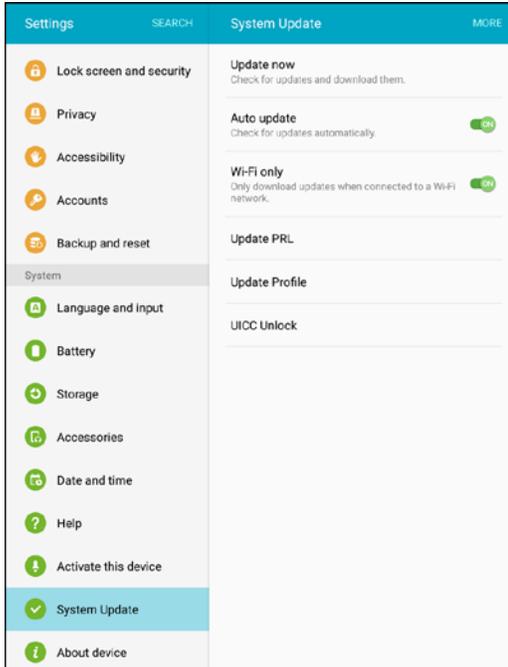

- ❖ The System Update menu appears.

For details about updating your tablet, see [Update Your Tablet](#).

About Device

The About device menu lets you access important tablet information, search for and apply updates, and view legal and safety information.

About Device Overview


The following About device items may be reviewed or set:

About Device Item	Description
Software version	Check your current software version.
Hardware version	Check your current hardware version.
Status	Check your tablet's status. Status information includes helpful information about battery status and level, SIM card status, network information, service, roaming, addresses for IP, MAC, and Bluetooth, and more. It also includes the phone number and username assigned to your tablet.


About Device Item	Description
Legal information	Check copyright information, terms of use, etc.
Device name	Change the name of your device (other devices see this name when using Mobile hotspot or Bluetooth).
Model number	Check the tablet's model number.
Android version	Check the Android version number.
Baseband version	Check the tablet's baseband version.
Kernel version	Check the tablet's kernel version.
Build number	Check the current tablet build number.
SE for Android status	Check the tablet's SE for Android status.
Security software version	Check the tablet's security software version.
KNOX version	Check the current KNOX version.
FCC certification	Check the tablet's FCC certification.
RATED	Check the tablet's power rating.
Battery capacity	Check the tablet's battery capacity.

Access About Device Options

1. From home, tap **Apps**  > **Settings** .

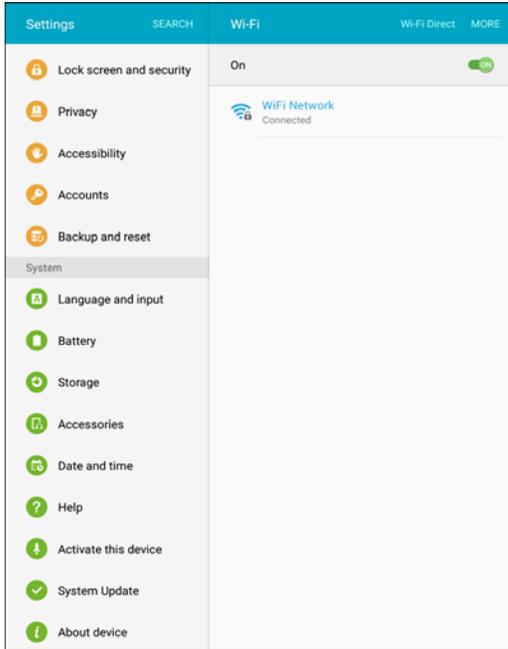

2. Tap **About device** .

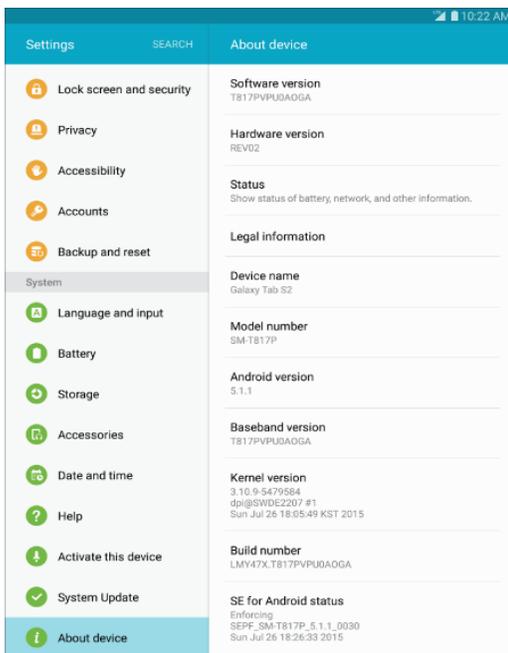

3. Select or view available options.
 - ❖ Your tablet information is displayed.

For Assistance

The following topics address areas of support for your tablet, including troubleshooting, specifications, account information, warranty information, and customer service contact information.

Sprint Account Information and Help

Find out about account passwords and information about managing your account and finding help.

Sprint Account Passwords

You will need to create passwords to protect access to your personal account information, your voicemail account, and your data services account. As a Sprint customer, you enjoy unlimited access to all your information.

Account User Name and Password

If you are the account owner, you will create an account user name and password when you sign on to sprint.com/mysprint. (Click **Register** and follow the prompts to get started.) If you are not the account owner (if someone else receives the bill for your Sprint service), you can get a sub-account password at sprint.com/mysprint.

Data Services Password

With your Sprint tablet, you may elect to set up an optional data services password to control access and authorize purchases.

For more information, or to change your passwords, sign on to sprint.com/mysprint.

Manage Your Account

Manage your Sprint account from your computer, your Sprint tablet, or any other tablet.

Online: sprint.com/mysprint

- Access your account information.
- Check your minutes used (depending on your Sprint service plan).
- View and pay your bill.
- Enroll in Sprint online billing and automatic payment.
- Purchase accessories.
- Shop for the latest Sprint tablets.
- View available Sprint service plans and options.

- Learn more about data services and other products like games, ringtones, screen savers, and more.

Sprint Support Services

Sprint 411 and Sprint Operator Services let you easily access information and calling assistance from a Sprint phone.

Sprint 411

Sprint 411 gives you access to a variety of services and information, including residential, business, and government listings; movie listings or show times; driving directions, restaurant reservations, and major local event information. You can get up to three pieces of information per call, and the operator can automatically connect your call at no additional charge.

There is a per-call charge to use Sprint 411, and you will be billed for airtime.

Sprint Operator Services

Sprint Operator Services provides assistance when you place collect calls or when you place calls billed to a local telephone calling card or third party.

For more information or to see the latest in products and services, visit us online at sprint.com/mysprint.

Copyright Information

©2015 Sprint. Sprint and the logo are trademarks of Sprint. Other marks are trademarks of their respective owners.

©2015 Samsung. Samsung, Galaxy, and S Voice are trademarks of Samsung Electronics Co., Ltd.

Android, Chrome, Gmail, Google Maps, Play Music, Play Movies & TV, Drive, YouTube, Photos, Hangouts, Google Mobile Services, and Google Play are trademarks of Google, Inc.

Other marks are property of their respective owners.

Screen images are simulated.

Appearance of device may vary.

The actual available capacity of the internal memory is less than the specified capacity because the operating system and default applications occupy part of the memory. The available capacity may change when you upgrade the device.

This device and related software are not intended for use in the diagnosis of disease or other conditions, or in the cure, mitigation, treatment, or prevention of disease.

Index

- 1Weather, 183
- 4G, 110
- About Device, 314
- Accessibility Settings, 286
- Accessory Port, 4
- Accounts
 - Add new, 294
 - Manage, 296
- Activation, 312
- Airplane Mode, 217
- Alarm, 159
- Application Manager, 249
- Applications, 17
 - List, 17
- Applications Settings, 248
- Apps
 - Find and install, 38
 - Request refunds, 39
 - Uninstall, 42
 - Update, 39
- Back Key, 3
- Backup and Reset, 297
- Battery
 - Charge, 4
 - Power saving mode, 306
 - Settings, 303
- Bluetooth, 194
 - Connect, 200
 - Pair, 197
 - Receive information, 203
 - Send information, 201
 - Settings, 210
 - Share pictures and videos, 138
 - Turn on or off, 195
 - Unpair, 199
- Bookmark, 113
- Brightness, 244
- Browser
 - Bookmark, 113
 - History, 115
 - Launch connection, 113
 - Settings, 117
 - Windows, 117
- Calculator, 148
- Calendar, 148
 - Add event, 149
 - Settings, 252, 254
 - Sync, 155
 - Sync Exchange ActiveSync calendar, 157
 - View events, 151
- Camera, 120
 - Settings, 144
 - Shooting modes, 124
 - Take a picture, 122
 - Viewfinder, 120
- Car Kit
 - Connect, 200
- Charge the Battery, 4
- Charger/Accessory Port, 4
- Chrome, 117
- Clock, 157
 - Alarm, 159
 - Stopwatch, 160
 - Timer, 161
 - World Clock, 160
- Contacts, 65
 - Add contact, 65
 - Delete, 70
 - Edit, 69
 - Settings, 255
 - Share, 72
- Data Services, 109
 - Password, 317
 - Status indicators, 112
 - User name, 110
- Data Usage Settings, 219
- Date Settings, 309
- Default Applications, 251
- Dexterity and Interaction Settings, 291
- Display Settings, 244
- Dock, 309
- Drag, 9
- Editing Text, 26
- Email
 - Add account, 93
 - Add Exchange ActiveSync account, 97
 - Compose and send, 99
 - Delete account, 103

- Manage inbox, 105
- Send Gmail, 77
- Settings, 257
- Setup, 93
- Share pictures, 137
- View and reply, 102
- Enter Text, 24
- Excel, 162
- Exchange ActiveSync
 - Add account, 97
 - Features, 107
- Extended Home Screen, 52
- Factory Data Reset, 299
- Files
 - Transfer between phone and computer, 185
- Finger Scanner
 - Fingerprint Screen Lock, 274
- Flick, 10
- Folders, 63
- Galaxy Apps, 162
- Gallery, 125, 162
- Gmail, 77
 - Archive threads, 82
 - Create account, 27
 - Delete threads, 85
 - Labels, 81
 - Mute threads, 83
 - New messages, 79
 - Read and reply, 79
 - Read messages, 80
 - Report phishing, 88
 - Report spam, 88
 - Search, 86
 - Send message, 77
 - Share pictures, 137
 - Switch accounts, 91
- Google
 - Chrome, 117
 - Create account, 27
 - Hangouts, 164
 - Sign in, 33
 - Voice search, 173
 - YouTube, 180
- Google Maps, 166
- Google Play
 - Find and install apps, 38
 - Help, 43
 - Store, 38
- Google Play Movies & TV, 168
- Google Play Music, 168
- Google Search, 171
- Google Voice Typing, 25
 - Configuring, 26
 - Using, 25
- GPS Satellites, 280
- Hangouts, 164
- Headset
 - Connect, 200
- Headset Jack, 3
- Hearing Accessibility, 289
- Help, 311
- Home Screen, 51
 - Add Folders, 63
 - Add Shortcuts, 61
 - Add Widgets, 62
 - Customize, 60
 - Extended, 52
- Hotspot Settings, 212
- Input Settings, 301
- Instagram, 173
- Internet, 77
 - Settings, 260
- Keyboard
 - Samsung, 24
- Language Settings, 301
- Location
 - GPS satellites, 280
 - Wireless networks, 280
- Location Services, 280
- Lock Screen
 - Settings, 266
- Lookout, 184
- Maps, 166
- Memory, 308
- Messages
 - Settings, 262
- Messaging, 77
- Messenger, 174
- Milk, 174
- Mobile Networks Settings, 221
- More Networks Settings, 222
- Motions and Gestures, 246
- Music
 - Google Play Music, 168
 - Music (App), 174
- Music (App), 174
 - Play music, 175
- My Files, 178

- NASCAR Mobile, 184
- Notification Icons, 55
- Notification Panel, 54
- Notification Settings, 237
- Notifications, 55, 243
- OneDrive, 178
- OneNote, 179
- Pages Manager, 184
- Phone Layout (illustration), 3
- Phone Number, 21
- Phone Status, 314
- Phone Update
 - PRL, 49
 - Profile, 49
 - Software, 45
- Pictures
 - Crop, 130
 - Rotate, 129
 - Share via Bluetooth, 138
 - Share via email, 137
 - Take with camera, 122
- Pinch, 11
- Play Movies & TV, 168
- Play Music, 168
- Play Store, 38
 - Find and install apps, 38
- Power Key, 4
- Power Off, 7
- Power On, 6
- Power Saving Mode, 305, 306
- PowerPoint, 179
- Printing, 226
- Privacy and Safety, 279
- Private Mode, 284
- PRL Update, 49
- Report Diagnostic Info, 285
- Ringtone, 237
- Ringtones
 - Settings, 240
- Rotate, 10
- S Voice
 - Settings, 263
- Samsung Keyboard, 24
- Samsung+, 184
- Screen Lock, 268
- Screen Timeout, 244
- Screen Unlock
 - Motion, 270
 - Swipe, 270
- Screen Unlock Password, 274
- Screen Unlock Pattern, 270
- Screen Unlock PIN, 273
- Search
 - Google, 171
- Secure Credential Storage, 228
- Security Settings, 266
- Settings, 205
 - Accessories, 309
 - Dock, 309
 - Overview, 205
 - Users, 265
- Setup Screens, 12
- Share
 - Contacts, 72
- SideSync, 179
- Slide, 9
- Sound Settings, 237
- Speaker, 4
- Spread, 11
- Sprint 411, 318
- Sprint Account
 - Management, 317
 - Passwords, 317
- Sprint Operator Services, 318
- Status Bar, 54
- Status Icons, 54
- Stopwatch, 160
- Storage
 - Settings, 308
- Swipe, 9
- System Update, 313
- Tap, 7
- Tethering Settings, 224
- Text Editing, 26
- Text Entry, 24
- Time Settings, 309
- Timer, 161
- Touch, 7
- Touch and Hold, 8
- Touchscreen
 - Turn off, 43
 - Turn on, 44
- Turn Device Off, 7
- Turn Device On, 6
- Typing, 24
- Uber, 183
- Ultra Power Saving Mode, 306
- Users

- Settings, 265
- Vibration, 241
- Video (App), 179
- Video Camera
 - Record video, 123
- Videos
 - Record, 123
 - Share via Bluetooth, 138
 - Share via YouTube, 142
- Virtual Private Networks (VPN), 228
 - Add connection, 231
 - Secure credential storage, 228
- Vision Accessibility, 287
- Voice Search, 173
- Voice Typing, 25
 - Configuring, 26
- Using, 25
- Volume, 237, 239
 - Key, 4
- Wallpaper, 60
- Web
 - Launch connection, 113
- Widgets, 62
- Wi-Fi, 186
 - Settings, 207
 - Turn on and connect, 187
- Word, 180
- World Clock, 160
- YouTube, 180
 - Share videos, 142
- Zoom, 11