

 


Tru-Form™ 3500
Wireless Ergonomic Trackball Keyboard



QuickGuide
English
www.adesso.com

CONTENTS

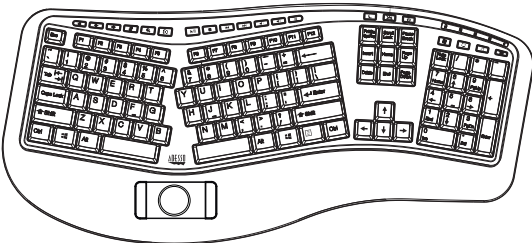

A
Wireless Keyboard



C
AAA Batteries (2)

 


B
Wireless Receiver



D
Quick Start Guide

2. Turn ON your computer and let Windows load completely.

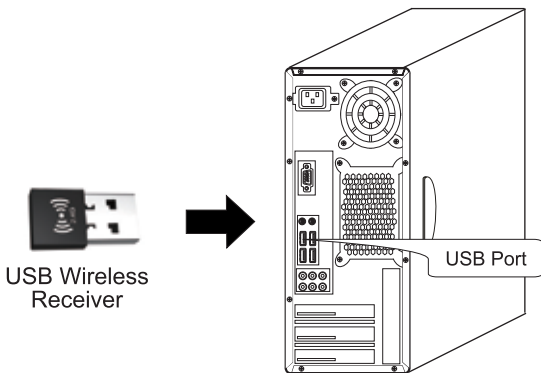

3. Plug the USB Wireless Receiver into the USB port of your computer

NOTE:

Windows will detect the driver automatically. No driver required.

LIMITED WARRANTY

Adesso provides a one year limited warranty for all of its products against defects in material and workmanship.

During this period, Adesso will repair or replace any product which proves to be defective. However, Adesso will not warranty any product which has been subject to improper freight handling, shipping abuse, neglect, improper installation or unauthorized repair. The warranty will not cover products installed with components not approved by Adesso and products where the sealed assembly trace has been broken.

If you discover a defect, Adesso will, at its option, repair or replace the product at no charge to you provided you return it during the warranty period with freight charges pre-paid to Adesso. Before returning any product, you must obtain a Return Merchandise Authorization number (RMA). This RMA # must be clearly marked on the outside of the package you are returning for warranty service. Be certain to also include your name, shipping address (no PO Boxes), telephone number, and a copy of the invoice showing proof of purchase in the package.

 
SUPPORT

We have listed most of our FAQ's (Frequently Asked Questions) at: <http://www.adesso.com/faqs.asp>. Please visit our FAQ Service & Support pages before you contact our E-mail or Telephone Support.

Email Support: If our FAQ's do not help you resolve your issues, please email support@adesso.com

Telephone Support:
Toll Free: (800) 795-6788
9:00AM to 5:00PM PST Monday - Friday

KEYBOARD DESCRIPTION

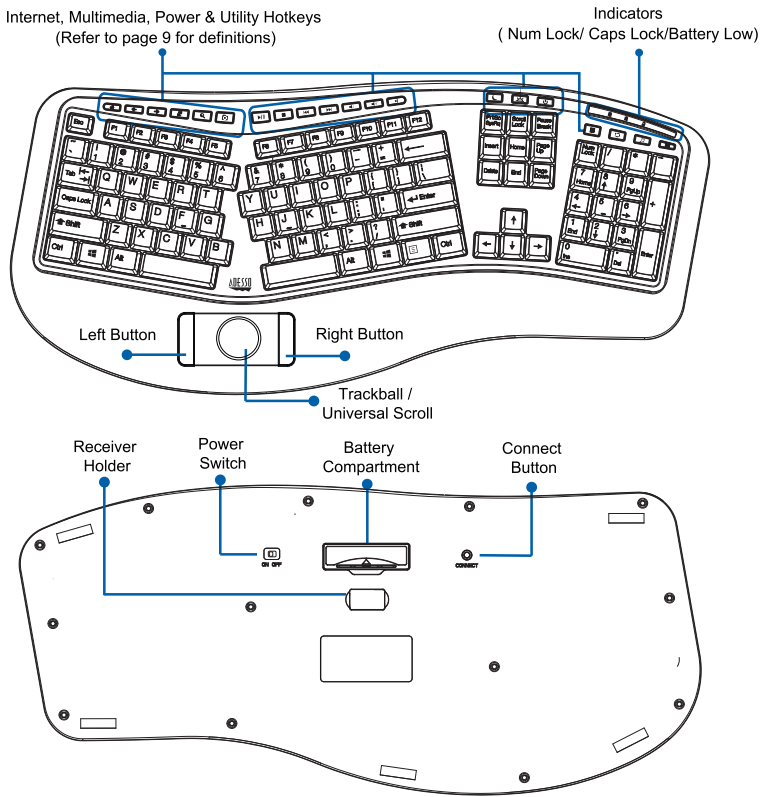

HOTKEY DEFINITIONS

Key	Action	Description
Home	Home	Accesses Homepage
Back	Back	Back to the previously viewed webpage
Forward	Forward	Go to the next viewed webpage
Refresh	Refresh	Refreshes Internet browser webpage
Search	Search	Launches Search Bar
Favorites	Favorites	Launches saved favorite list in default Internet browser
Play/Pause	Play/Pause	Play or pauses track in multimedia software
Stop	Stop	Stops track from playing in multimedia software
Previous Track	Previous Track	Takes you to previous track in multimedia software
Next Track	Next Track	Takes you to next track in multimedia software
Volume Down	Volume Down	Decreases computer main volume
Volume Up	Volume Up	Increases computer main volume
Mute	Mute	Mutes computer main volume
Sleep	Sleep	Sets computer to sleep mode
Wake Up	Wake Up	Wakes computer up
Power Off	Power Off	Shuts down computer
Calculator	Calculator	Launches Calculator
My Computer	My Computer	Launches My Computer menu
Music	Music	Launches default media player application
Email	Email	Launches default email application

INTRODUCTION

The Adesso 2.4GHz Wireless Ergonomic Trackball Keyboard offers you an advanced input device with ergonomic design, multifunctional features and a wireless range of up to 30 feet. The design of this keyboard with splitted key zones and gently sloped encourages natural position of hands, wrists, and forearm in maximum comfort for long use. The keyboard also features an integrated trackball which can take the place of your mouse, making it easier to control the movement of the cursor in your personal computer.

SPECIFICATIONS

 
- Connectivity: 2.4GHz RF Wireless Technology
- Wireless Working Range: Up to 30 feet (10 m)
- Battery Type: (2) AAA Batteries
- Keyboard Layout: 105-Key US
- Key Type: Membrane
- Hotkeys: 20 Hotkeys (Windows, Internet and Multimedia)
- Indicators: Battery Low, Num Lock & Caps Lock
- Trackball : Yes
- Dimensions: 20.5" x 9.3" x 1.5" (521 x 236 x 41 mm)
- Weight: 1.87 lbs (845 g)

REQUIREMENTS

- Operating System: Windows® 8/ 7/ Vista/ XP / 2000
- Connectivity: USB for Wireless Receiver

INSTALLATION

1. Remove battery cover from keyboard battery compartment and insert (2) AAA batteries into keyboard. Then close the battery compartment cover and turn the power switch to ON.

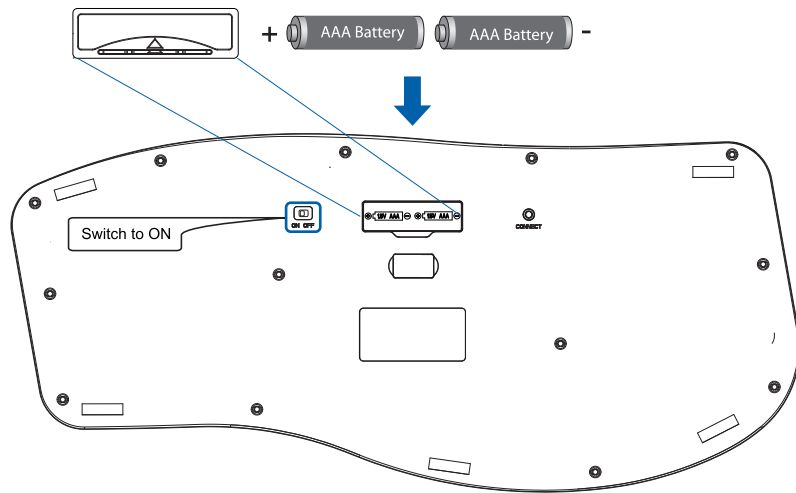

TIPS:

- When the Battery Low LED is ON, it means that the device requires to change the batteries.
- We suggest to turn “OFF” the keyboard when leaving your desk for more than an hour to save battery life for longer lasting use.

TROUBLESHOOTING

If wireless keyboard cannot be operated, please try the following:

- Make sure you have inserted two AAA batteries inside the battery compartment correctly. Switch keyboard to ON.
- Make sure you have connected the USB receiver correctly to the computer's USB ports. Move the keyboard 1 foot away from the receiver in order to avoid interference while pairing connection.
- Press CONNECT once on the bottom of keyboard within 15 seconds after plugging USB receiver to computer.

Note: Wireless phone, routers and other devices that uses 2.4GHz frequency, might cause interference with wireless keyboard. Please relocate such wireless appliances away from your keyboard.