



User's Manual SDV-G857-VP

Contents

| | |
|---------------------------------|----|
| Precautions | 3 |
| Product Overview..... | 4 |
| Preparing for Use..... | 5 |
| Charging the Battery..... | 5 |
| Installing the Memory Card..... | 5 |
| Mounting the Camera..... | 6 |
| Cleaning Instructions..... | 6 |
| Using the Camera..... | 7 |
| Taking Pictures..... | 7 |
| Recording Videos..... | 8 |
| Connections..... | 9 |
| Remote Control Connection..... | 9 |
| Computer Connection..... | 11 |
| Smartphone Connection | 12 |
| “Poki Cam” APP Features..... | 13 |
| Product Specifications..... | 14 |


Precautions

Thank you for purchasing this camera. Please read these operating instructions carefully in order to use the camera correctly. Then store it in a safe place for future reference

Before using the camera, please ensure that you read and understand the safety precautions described below.

- Do not try to open the case of the camera or attempt to modify this camera in any way. Maintenance and repair should be carried out only by authorized service providers.
- Keep the camera away from water and other liquids. Do not use the camera with wet hands. Never use the camera in the rain or snow. Moisture creates the danger of electric shock.
- Use only the recommended power accessories. Use of power sources not expressly recommended for this equipment may lead to overheating, distortion of the equipment, fire, electrical shock or other hazards.

Product Overview

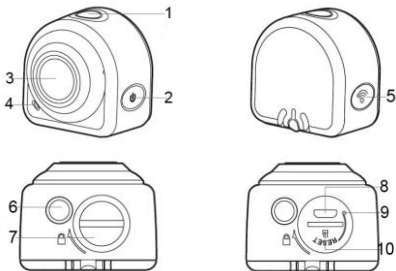

| | |
|-------------------------------------|-----------------------|
| 1. Shutter Button | 6. Tripod Mount |
| 2. Power Button | 7. Cover/Capping |
| 3. Lens | 8. USB Port |
| 4. Charging/Working Indicator Light | 9. Reset |
| 5. Wi-Fi Button | 10. microSD Card Slot |

Preparing for Use

Charging the Battery

Connect the camera to a computer through the provided USB cable.

Red charging indicator will light up.

Once camera is fully charged, the indicator light will turn off.

NOTE: Camera will automatically power on when it's charging. You may manually power it off by pressing power button for 3 seconds.

Installing the Memory Card

A microSD card memory card is required for operation; microSD card not supplied. Twist open the cover from the bottom of the camera with a coin and then insert a memory card in the microSD slot.



Mounting the Camera

Reversible suction pad and magnetic mount allows you to attach the camera onto many different materials and surfaces. Such as wood, glass, wall, plastic and metal surfaces. Remove camera from surfaces by lifting the camera from bottom up.



Suction Pad



Magnetic Mount

Cleaning Instructions

To clean and reuse, rinse the suction pad part with water when it is not sticky enough. Air-dry completely before mounting.

WARNING: DO NOT WET CAMERA BODY. DO NOT IMMERSE IN WATER.

Using the Camera

Power On: Press and hold the power button. The power light will flash and then remains stable light.

Power Off: Press and hold the power button

NOTE:

1. When the camera is idle for 3 minutes, it will turn off automatically.
2. During operation if the camera turns off automatically after the working indicator light continuously flashes for 1 minute, it indicates the power of battery is insufficient. Please charge the camera when battery is low.

Taking Pictures

1. Turn on the camera
2. Press the shutter button once to take a picture; the working indicator light will flash once and you will hear a sound once image is captured.

Recording Videos

There are two different Video recording modes:

1. Camcorder mode
2. Vehicle Mode (Dash cam)


| Camcorder Mode | Vehicle mode |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <ol style="list-style-type: none">1. Turn on Camera2. Press and hold shutter button for 3 seconds and then release to hear a beep sound and see the working indicator light start flashing to start/enable video recording3. Press the shutter button once to stop recording | <ol style="list-style-type: none">1. Connect camera to a cigarette lighter USB port (not supplied). The camera will turn on automatically2. The camera will record 3-minute interval files continuously3. The camera will turn off automatically once vehicle is turned off |
| Loop recording: OFF; disabled in camcorder mode | Loop recording: ON; enabled in vehicle mode |

Connections

Remote Control Connection

Remote control is connected automatically once camera is powered on.

 NOTE: The remote is disabled if camera's Wi-Fi® feature is enabled. Turn off Wi-Fi® mode on camera to use Remote control.



Capture/Recording Button

Video Protected Button

Capture/Recording button

Still Image Capture: Press the button once to take a photo. The working indicator light will flash once.

Video Recording: Press and hold the button for 3 seconds until you hear and see the working indicator light start flashing to enable video recording. To stop recording, press and hold the button for 3 seconds again. Working indicator light will stop flashing and will turn off.

Video Protected Button

Protect your files in case of an emergency or save your files from being looped-over. Protected files will be saved in a separate “**EVENT**” folder inside the memory card for easy access.

| Camera mode | Press Video Protected button to... |
|-------------------|----------------------------------------------------|
| In standby mode | Start a 3-minute video recording under protection. |
| In recording mode | Start recording a new 3-minute video |
| In vehicle mode | Lock and protect current video recording |

Loop recording: Lock and protect the video files from being deleted or looped-over if your memory card is full. Camera’s loop recording feature automatically replaced the oldest files by over-writing the file. Press the Video Protected Button to prevent file over-writing.

Computer Connection

There are two ways to download files from the memory card to a computer

1. Insert the memory card into a card reader
2. Connect the camera to a computer through the provided USB cable.

| Using a Card Reader | Camera to PC with USB cable |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <ol style="list-style-type: none">1. Take out memory card from camera, then insert into a card reader connected to your computer.2. Open [My Computer] or [Windows Explorer]. Access the "Remove Disk" representing the memory card3. Copy the files to your computer | <ol style="list-style-type: none">1. Connect camera to a computer through the provided USB cable, then turn on the camera.2. Open [My Computer] or [Windows Explorer]. Access "Removable Disk" representing the memory card.3. Copy the files to your computer. |

Smartphone Connection

Connect camera to your smartphone or smart devices to view, control, save, and share your photos and videos.

1. Download Free “Poki Cam” APP



Search “**Poki Cam**” APP from Apple App StoreSM or on Google PlayTM or scan QR code below to download and install APP to your smart device.



Google PlayTM



App StoreSM

2. Enable camera's Wi-Fi® feature.

Press Wi-Fi® button on the camera. The light will start flashing.

NOTE: When button beeps and flashes, this means there is insufficient power to for wireless connection. Please charge camera.

3. Connect smart device to camera

Enable Wi-Fi® on your smartphone and search for “Poki Cam” from the list of found devices. Input password, “**1234567890**” to connect.

4. Connection Successful

Camera's Wi-Fi® light will stop flashing and remains stable when connection is successfully paired. Open **"Poki Cam"** APP to operate and control the camera from your smart device.

5. Exit Wi-Fi® mode

Press the Wi-Fi® button once to disable Wi-Fi® function. The light will flash several times before turning off.

NOTE: Remote Controller can not operate when Wi-Fi® feature is turned on.

"Poki Cam" APP Features



Stick. Shoot. Share. "Poki Cam" APP allow you to capture, view, save and control the camera using your smartphone or smart devices. With APP, you can adjust and set the settings for your camera.

- Set video/photo resolution
- Capture photos
- Start/stop video recordings
- View photos and videos
- Set Self-Timer
- Shoot Time-lapses
- Capture continuous shots
- Record slow motion
- Adjust white balance
- Rotate camera view
- Adjust video frequency
- Format camera
- Share/Post to social media
- View battery indicator

Product Specification

| | |
|------------------------|-------------------------------------------------------------------------------------------------------------|
| Image Sensor | 8MP CMOS Sensor |
| Still Image Resolution | 20/16/12/8/4 MP (*12-20MP interpolated) |
| Video Resolution | 1080P: 1920x1080 @30fps 720P: 1280x720 @60fps 720P: 1280x720 @30fps |
| Wide Angle Lens | 120 Degrees |
| File Format | JPEG, MOV |
| microSD card | Supports up to 32GB (required for use, not supplied) |
| Interface | High-speed USB 2.0 |
| Battery | Built-in 800mah Lithium Battery |
| Speaker/Microphone | Built-in |
| Wireless | Wi-Fi® module support |
| Remote Controller | 2.4G |
| Dimensions (LxWxH) | Approx. 1.7"x1.7"x1.3" |
| System Support | Windows® XP, Windows® Vista™, Windows® 7, Windows® 8, Windows®10 and above Works with Mac 10.8 and above |
| Poki Cam APP | Supports IOS 7.0 and above, Android OS 4.1 and above |

FCC (Federal Communications Commission)

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- | | |
|-----|---------------------------------------------------------------------------------------------------------------|
| (1) | This device may not cause harmful interference, and |
| (2) | This device must accept any interference received, including interference that may cause undesired operation. |

Shielded cables must be used with this unit to ensure compliance with the Class B FCC limits.



SDV-G857-VP_Manual_15-1117