




## Super Loud LED Alarm Clock

MODEL 30240

### OPERATING MANUAL

#### CONTROL LOCATION

- ① HI/LOW Alarm Sound
- ② Snooze Button
- ③ Alarm ON/OFF
- ④ Alarm Button
- ⑤ Time Button
- ⑥ Minute Button (MIN)
- ⑦ Hour Button
- ⑧ PM Indicator
- ⑨ Alarm Indicator

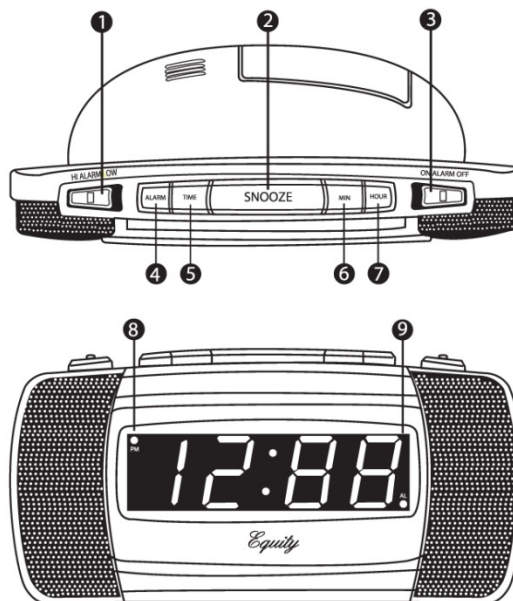

**Operation:** When the clock plugged in, the display will blink on and off meaning the correct time needs to be set.

**Auto Dimmer:** The display brightness is automatically adjusted according to the amount of light in the room. The display brightness will automatically dim when the room darkens. The light sensor is located under the front grill.

#### **Setting the Time:**

1. Press and hold the Time Button
2. Press the Hour Button until the correct hour is displayed. Remember to set the correct AM/PM (PM indicator will light up for the PM time)
3. Press the Minute Button until the correct minute is displayed
4. Release the Time Button once the time has been set.

#### **Setting and Operating the Alarm:**

1. Press and hold the Alarm Button
2. Press the Hour Button and then the Minute Button (MIN) to set the desired wake up time. Remember to set the correct AM/PM (PM indicator will light up for the PM time)
3. Release the Alarm Button once the alarm time has been set
4. Slide the Alarm ON/OFF switch to ON to activate the alarm (Alarm Indicator will light up on the display)

5. Slide the HI/LOW Alarm Sound switch to set the alarm volume.
6. The alarm will sound at the wake up time specified. You can check the alarm time by pressing the Alarm Button at any time.

**Snooze Repeat Alarm Operation:** When the alarm sounds, simply press the Snooze Button to silence the alarm for approximately 9 minutes. The snooze will be repeated again and again. To shut the alarm off, slide the Alarm ON/OFF switch to OFF position.

**Battery Backup:** Open the battery compartment and install a 9V battery (not included) to backup the correct time during any power interruption. The display will not remain lit but the alarm operation will remain. The correct time in the clock can be kept for several hours. When the power is restored, the display will be resumed and all the previous settings will remain. If the backup battery is not installed, all the settings will need to be reset.

**Two Year Warranty (U.S.A.)**

Equity products are warranted for two years from the date of consumer purchase against defects in material and workmanship. During this period such defects will be repaired, or the product will be replaced at Equity's option. This warranty does not cover damage caused by misuse or negligence. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OR FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO A PERIOD ENDING TWO YEARS FROM DATE OF PURCHASE. Some states do not allow limitations on how long an implied warranty lasts so the above limitation may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from State to State.



Please help in preservation of the environment and return used batteries to an authorized depot. Remove the battery from the clock if you do not intend to use for an extended period of time.

**If your product is not working properly, please send:**

- The Product
- a letter explaining the problem
- and \$5.00 for postage and handling to:

Equity Warranty Dept.  
2817 Losey Blvd. S  
La Crosse, WI 54601

For Customer Support, visit:  
[www.equitybylacrosse.com/support](http://www.equitybylacrosse.com/support)

*Equity*® by La Crosse™

**2 Year Limited Warranty**

La Crosse, WI 54601

[www.equitybylacrosse.com](http://www.equitybylacrosse.com)