



SL1015

CD Boombox with Bluetooth™



Thank you for choosing the **SL1015 CD Boombox with  Bluetooth™** from *Amplivox Portable Sound Systems*.

We are excited in introducing this truly unique boombox. Please refer to this user guide as you enjoy the unique capabilities of another quality product from Amplivox Portable Sound Systems.

We encourage you to visit our website www.ampli.com to register your product for its warranty coverage, sign up to receive our newsletter, download our catalog, and learn more about the complete line of Amplivox audio visual products, including portable PA systems, and lecterns.

Table of Contents	Page
Safety Instructions	2
Specifications	3
Controls Identification	4
Function Operations	5, 6
Warranty	7

“The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Amplivox Portable Sound Systems is under license. Other trademarks and trade names are those of their respective owners.

IMPORTANT SAFETY INSTRUCTIONS

Before using this product, read the instruction manual for important safety information. Please retain this manual for future reference and warranty information.

Troubleshooting & Servicing

Do not attempt to service or repair the device yourself. Refer all servicing to qualified service personnel. Do not attempt to modify the device in anyway. Doing so could invalidate your warranty.

Moisture and heat sources

Do not use this apparatus near water (for example, sinks, baths, pools) or expose it to rain, moisture, dripping or splashing liquids. Do not expose the unit to high temperatures, high humidity or direct sunlight.

Cleaning

When cleaning the device, please use a soft, dry cloth. Never use benzene, paint-thinner, or other chemicals on the device.

Location

Place the device in stable location, so it will not fall causing damage to the device or bodily harm.

Intended use

The product may only be used with the original parts intended for it. The intended use includes adherence to the specified installation instructions. The manufacturer accepts no liability for damage arising due to improper use.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

IMPORTANT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The unit's circuitry may cause interference to nearby radios. To prevent interference, either switch the unit off or move away from the affected radio.

NOTE: This equipment has been tested and found to comply within the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

NOTE: Shielded cables may be required to be used with this unit to insure compliance with the Class B FCC limits.

SPECIFICATIONS

Power Supply:	AC: 120V / 60 Hz
Batteries:	Requires "C" Size - (6) NOT INCLUDED
Battery Life:	Approx. 6 hours
Output Power:	1 W + 1 W
Speakers:	2 - Full Range, cone type, 2" Stereo, 8 ohm
CD Player:	CD, CD-R / RW, Programmable Tracks, Repeat
Radio:	FM: 88 - 108 MHz AM: 530 - 1710 KHz
Bluetooth:	Supports v2.0 Range: 30 feet
Speaker Phone:	Built-in Microphone
Antenna:	FM: Telescopic AM: Built-in
Inputs:	Headphone: 3.5 mm (1/8") Aux In: 3.5mm (1/8")
Dimensions:	8.5" W x 4.5" H x 8" D
Weight:	2.6 lb. (NO BATTERIES)

AC OPERATION

Unravel the AC Line Cord, insert the female plug into the **AC INPUT JACK** (19) on the back of the boombox and the male plug on other end into a standard AC outlet.

 
 
 
Power Indicator will light up when **FUNCTION** (15) is selected.

BATTERY OPERATION

IMPORTANT: Disconnect the power cord from the AC outlet.

Open and remove the **BATTERY COMPARTMENT DOOR**, located on bottom of boombox, and insert six (6) "C" (not included) batteries, making sure that the indicated battery polarity is observed. Once batteries are installed, lock door back into the slots.

CONTROLS IDENTIFICATION

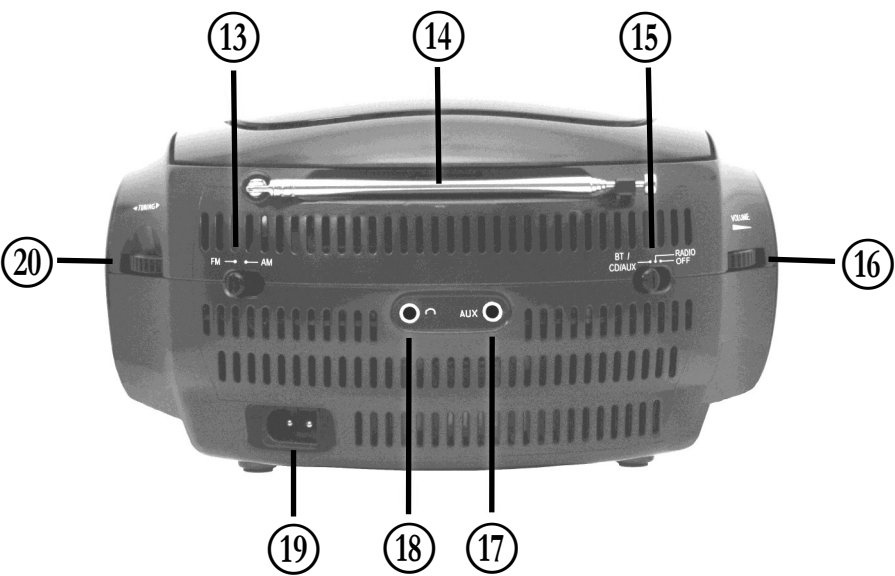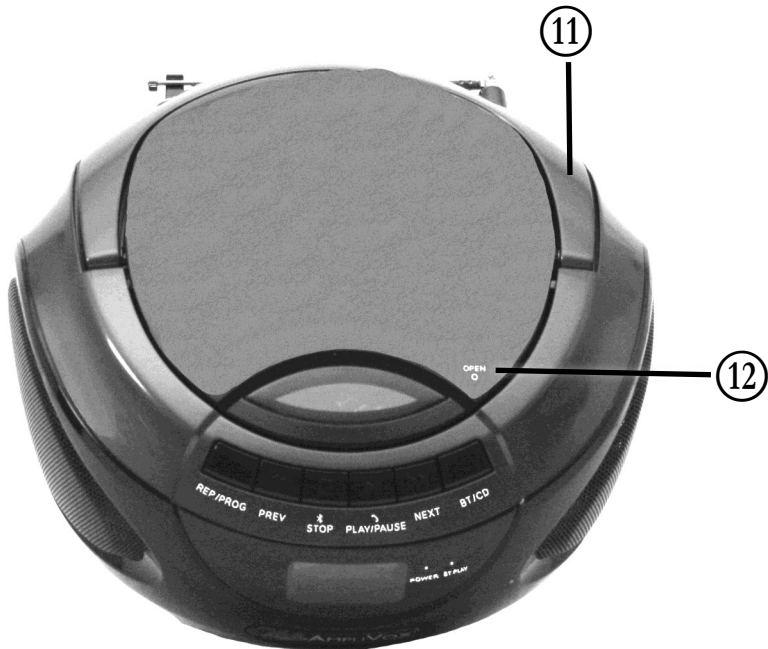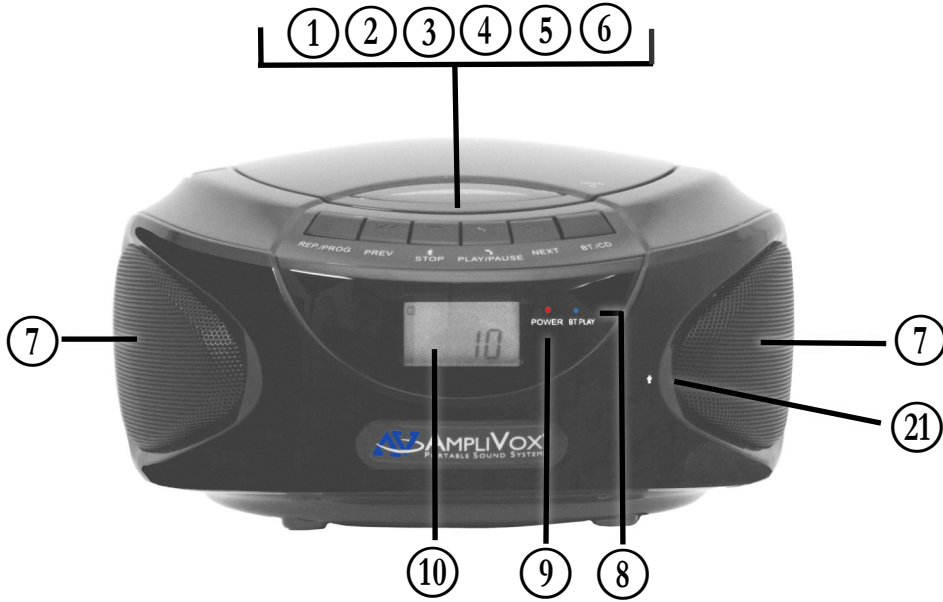

- ① REPEAT / PROGRAM
- ② PREVIOUS
- ③ STOP / BLUETOOTH CANCEL
- ④ PLAY / PAUSE / HANDSFREE
- ⑤ NEXT
- ⑥ BLUETOOTH / CD
- ⑦ SPEAKER
- ⑧ BLUETOOTH INDICATOR
- ⑨ POWER INDICATOR
- ⑩ LCD DISPLAY
- ⑪ HANDLE
- ⑫ CD DOOR - OPEN / CLOSE
- ⑬ AM / FM SWITCH
- ⑭ ANTENNA
- ⑮ FUNCTION SWITCH
- ⑯ VOLUME KNOB
- ⑰ AUDIO INPUT CONNECTOR
- ⑱ HEADPHONE CONNECTOR
- ⑲ AC CONNECTION
- ⑳ RADIO TUNING KNOB
- ㉑ MICROPHONE

FUNCTION OPERATIONS

CD PLAYER

- Slide the function switch (15) to the **BT / CD / Aux** position.
- Press the **CD Door** (12) to open, insert CD disc facing upward and close the CD door. Press **Play / Pause** button, the player will play the first song and the **LCD** (10) will display the number of the track.
- Adjust the volume with the **Volume Knob** (16) .
- Press the **Play / Pause** button (4) to temporarily pause the playback, press again to resume the playback.
- During playback, press the **Prev** button (2) to play the previous song or press the **Next** button (5) to play the next song.
- Press the **Stop** button (3) to stop playback.
- While CD is playing, to program **Repeat** playback, press the **Repeat / Program** button (1) once to repeat current track. Press the button a second time to repeat the whole disc. Press the button a third time to exit **Repeat / program** function, it will then play tracks at random. Press the button a fourth time it will resume normal play.
- To program track sequence playback, press the **Repeat / Program** button to enter program status, the **LCD** display (10) will flash. Press **Prev** (2) or **Next** (5) button to program the track you want to play first. Press **Repeat / Program** button again to accept track and advance to next track you want to listen to. You can program up to 10 tracks. When you are done press the play button. To cancel, press the **Stop** (3) button twice.

Bluetooth / CONFERENCE PHONE

- Slide the function switch (15) to the **BT / CD / Aux** position.
- Press the **BT / CD** (6) button. The **Bluetooth Light** (8) will start flashing. In your Bluetooth device settings choose **Ematic Boombox** to pair with the boombox. When your device and the boombox are paired the **Bluetooth Light** (8) will stop flashing.
- You can now play music from your device to the boombox.
- During playback you can use the **PLAY / PAUSE** (4), **NEXT** (5) and **PREVIOUS** (2) buttons on the boombox to control the song playing on your Bluetooth Device.
- You can also use the boombox as a **Conference Phone**. When paired with a Bluetooth Phone press the **PLAY / PAUSE** button twice to activate, place phone call on your phone. There is a built-in microphone (21) on the face of the boombox. When your call connects you will be hearing conversation through the boombox. When speaking, speak toward the front of the boombox.

RADIO

- Slide the function switch (15) to the **RADIO** position.
- Slide the **AM / FM** (13) switch to the band you want to listen to.
- Turn the **TUNING KNOB** (20) to select station .
- For better AM reception you may need to adjust the direction of boombox. For FM, pull up the **FM ANTENNA** (14) and adjust for best reception.

FUNCTION OPERATIONS

HEADPHONE CONNECTION

- Locate the green color 3.5mm **HEADPHONE** ⑱ connection on back of boombox. Plug in **HEADPHONE** or **Amplivox HEADPHONE JACK BOX (SL1004)** here.
- Radio speakers will be automatically turned off.

AUX IN

- You can connect any sound source to the Boombox using the appropriate cord for your device. One end must have a 3.5mm plug on one end that plugs into the **AUX IN JACK** ⑰.
- Slide the function switch ⑮ to the **BT / CD / Aux** position.
- Locate the black color 3.5mm **AUX IN** ⑰ connection on back of boombox. Use this connection to plug-in any device that has an audio output connection like your Cell Phone or a tape player.

WARRANTY

Limited One (1) -Year Warranty

AmpliVox warrants this product to be free from defects in materials and workmanship (subject to the terms set forth below) for a period of one (1) year from the date of purchase ("Warranty Period").

During the Warranty Period, AmpliVox will repair or replace (at AmpliVox's discretion) this product or any defective parts ("Warranty Service").

Repair or replacement under the terms of this warranty does not give right to any extension or a new beginning of the period of warranty.

CLAIMS UNDER THE WARRANTY

To obtain Warranty Service, contact AmpliVox (800-267-5486) to be assigned a Return Authorization number (RA#). After receiving a RA#, the defective unit is to be returned to AmpliVox in either its original packaging or packaging affording an equal degree of protection. **You will bear the cost of shipping the product to AmpliVox.** If the product is covered by the warranty, AmpliVox will bear the cost of shipping product back to you after the completion of service under this warranty.

Return shipping will be charged to you for products not covered by the warranty or requiring no warranty repair.

The following information must be presented to obtain Warranty Service: (a) the RA# must be clearly and legibility marked on the outside of shipping carton, (b) proof of purchase, which clearly indicates the name and address of the seller, the date of purchase and the product type, which is evidence that this product is within the Warranty Period. Please further include (c) your return address, (d) daytime telephone number, and (e) reason for return.

LIMITATION OF WARRANTY

This warranty is only valid for the original purchaser and will automatically terminate prior to expiration if this product is sold or otherwise transferred to another party. The warranty provided by AmpliVox in this statement applies only to products purchased for use, and not for resale. It does not apply to open box purchases, which are sold "as is" and without any warranty. This Warranty does not cover cosmetic damage or damage due to misuse, abuse, negligence, Acts of Nature, accident, disassembling or modification of, or to any part of, the product. This Warranty does not cover damage due to improper operation, maintenance or installation, or attempted repair by anyone other than AmpliVox. Any unauthorized repairs will void this warranty.

REPAIRS OR REPLACEMENTS AS PROVIDED UNDER THIS WARRANTY ARE THE EXCLUSIVE REMEDY OF THE CONSUMER. AMPLIVOX SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY LAW, THIS WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESS AND IMPLIED WARRANTIES WHAT SO EVER, INCLUDING BUT NOT LIMITED TO THE WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PRACTICAL PURPOSE.

NOTE! This warranty gives you specific legal rights. You may have other rights which vary from location to location. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or implied warranties, so the above exclusions may not apply to you. This warranty does not affect your legal (statutory) rights under your applicable national or local laws.

**AmpliVox - 650 Anthony Trail, Suite D, Northbrook, IL 60062 - Phone: (800)267-5486 Fax: (800)267-5489
www.ampli.com**

