

1-Port VGA Rackmount LCD Console | 17 in | 1080p | 1U

Product Design


Actual product may vary from photos

Front View



- | | |
|---------------------------------|------------------------|
| 1 Handle | 4 Keyboard LEDs |
| 2 Rails | 5 Display Menu Buttons |
| 3 Mounting Brackets (Installed) | 6 Release Switch |

Rear View

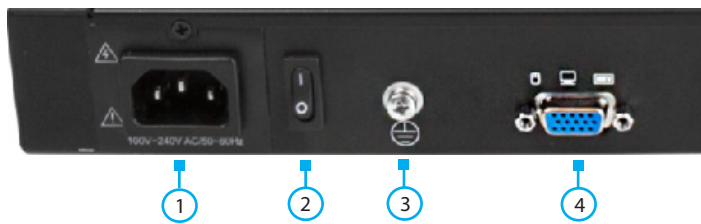

- | | |
|-------------------------|---------------------------|
| 1 Power Connection Port | 3 Ground Connection Screw |
| 2 Power Switch | 4 Host Port |

Package Contents

- LCD Rack Console x 1
- KVM Cables x 1
- M5 Cage Nuts x 8
- M5 Screws x 8
- Regional Power Cords (NA, JP, EU, UK, ANZ) x 5
- Mounting rails x 2
- Quick-Start Guide x 1

Requirements

- 1U of Rack Space
- Grounding Wire
- Power Source
- Computer, Server or KVM
- Phillips Type Screwdriver

Requirements are subject to change. For the latest requirements, please visit www.startech.com/RKCONS17HD.

Installation

- **Caution!** Double pole / neutral fuse. Disconnect mains before servicing.
- Always ground the unit before connecting/disconnecting the **Power Cord**.

Mounting the LCD Rackmount Console

Note: It's easier to install the **LCD Rackmount Console** if another person helps you with the installation.

Warning: Use caution and proper lifting techniques when installing the **LCD Rackmount Console**.

1. Based on the mounting depth of the server rack that you are using, select the appropriate length of **Mounting Rails**.
2. Decide where in the server rack you want to install the **LCD Rackmount Console**.
3. Insert the **M5 Cage Nuts** (two per **Mounting Post**) into the square **Mounting Holes** on the **Mounting Posts**.
4. Align the rear **Mounting Bracket Rails** with the **M5 Cage Nuts** on the corresponding **Mounting Post**.
5. Insert a **M5 Screw** (two per **Mounting Post**) through the rear **Mounting Bracket Rail** and into the **M5 Cage Nut**. Do not tighten the **M5 Screws**.
6. With assistance, slide the **LCD Rackmount Console** into the server rack guiding the rear **Mounting Bracket Rails** into the **Rail Assembly**.
7. Insert an **M5 Screw** (two per **Mounting Post**) through the front **Mounting Bracket Rail** into the **M5 Cage Nut**.
8. Use a **Phillips Type Screwdriver** to tighten the **M5 Screws**.
9. Ensure that the rear **Rails** are properly aligned.
10. Use a **Phillips Type Screwdriver** to tighten the **M5 Screws**.

Grounding the LCD Console

Notes: Grounding wires are typically green or green with a yellow stripe, and should be at least 18 AWG.

Grounding is recommended in all environments and essential in environments with high levels of electromagnetic interference (EMI), or frequent electrical surges.

1. Using a **Phillips Head Screwdriver**, loosen the **Grounding Connection Screw**.
2. Attach the **Grounding Wire** to the shaft of the **Grounding Connection Screw**.
3. Tighten the **Grounding Connection Screw**, making sure not to over-tighten.
4. Attach the other end of the **Grounding Wire** (not connected to the **LCD Rackmount Console**) to a proper earth-ground connection.

Connect the Console

Important Considerations

- If you're installing the device in a closed or multi-unit rack assembly, ensure that the environmental conditions are within the unit's maximum and minimum specifications.
- Installing this unit in a rack or cabinet may reduce airflow. Consider your airflow requirement when selecting a location for installation.
- The device should be installed with an even mechanical load.
- It's recommended that the device be connected to a power source with overcurrent protection and supply wiring. Appropriate consideration of equipment nameplate ratings should be used when addressing this concern.
- The device should be grounded appropriately.

1. Connect a **Grounding Wire** to the **Ground Connection Screw** on the **LCD Rackmount Console** and to the earth-ground connection.
2. Connect the **KVM Cable** to a **Computer, Server or KVM** and to the host ports on the console.
3. Connect the appropriate **Power Cord** for your region to the **Power Connection Port** on the **LCD Rackmount Console** and to a **Power Source**.
4. Use the **Power Switch** to turn on the **LCD Rackmount Console**.
5. Open the **LCD Rackmount Console**. For more information about how to do this, see the "Open the console" section.
6. Power on the connected **Computer, Server or KVM**.

Disconnect the Console

1. Power off the connected **Computer, Server or KVM**.
2. Close the **LCD Rackmount Console**. For more information about how to do this, see the "Close the console" section.

Safety Measures

- Wiring terminations should not be made with the product and/or electric lines under power.
- Product installation and/or mounting should be completed by a certified professional.
- Please note that the included power cables are for use with this product only and cannot be used with other electrical devices.

Mesures de sécurité

- Les terminaisons de câblage ne doivent pas être effectuées lorsque le produit et/ou les câbles électriques sont sous tension.
- L'installation et/ou le montage du produit doit être réalisé par un professionnel certifié et dans le respect des normes locales et du code de construction local.
- Veuillez noter que les câbles d'alimentation inclus sont destinés à être utilisés avec ce produit uniquement et ne peuvent pas être utilisés avec d'autres appareils électriques.

安全対策

- 電源が入っている状態の製品または電線の終端処理を行わないでください。
- 製品の設置やマウントは、使用地域の安全ガイドラインおよび建築基準に従い、有資格の専門業者が行うようにしてください。
- 本製品に付属しております電源ケーブルは、本製品にのみ使用が可能で他の電気機器には使用できませんのでご注意ください。

Misure di sicurezza

- I terminali dei fili elettrici non devono essere realizzate con il prodotto e/o le linee elettriche sotto tensione.
- L'installazione e/o il montaggio dei prodotti devono essere eseguiti da un tecnico professionale certificato che conosca le linee guida locali sulle norme edilizie e sulla sicurezza.
- Si prega di notare che i cavi di alimentazione inclusi sono da utilizzare solo con questo prodotto e non possono essere usati con altri dispositivi elettrici.

Säkerhetsåtgärder

- Montering av kabelavslutningar får inte göras när produkten och/eller elledningarna är strömförda.
- Installation och/eller montering får endast göras av behöriga yrkespersoner och enligt gällande lokala förordningar för säkerhet och byggnormer.
- Observera att de medföljande strömkablarna endast är avsedda för den här produkten och inte kan användas med andra elektriska apparater.

FCC Compliance Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and

on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

3. Use the **Power Switch** to turn off the **LCD Rackmount Console**.
4. Disconnect the **Power Cord** from the **Power Connection Port** on the **LCD Rackmount Console**.

Note: Always disconnect the **Power Cord** before disconnecting the **Grounding Wire**.

5. Disconnect the **KVM Cable** connected to a **Computer, Server or KVM**.
6. (Optional) Disconnect the **Grounding Wire** connected to the **Ground Connection Screw** on the **LCD Rackmount Console**.

Operation

Open the Console

1. Move the **Release Switch** to the unlocked position.
2. Use the **Handle** to pull the **LCD Rackmount Console** out towards you until you hear the **LCD Rackmount Console** click into place.
3. Pull the **Display** up and position it at the desired angle.

Close the Console

1. Lower the **Display** until it's flush against the **Keyboard**.
2. Slide the switches located on the sides of the console forward and push the **LCD Rackmount Console** in towards the rear of the rack.
3. Release the switches and continue pushing the **LCD Rackmount Console** the rest of the way into the rack.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by StarTech.com could void the user's authority to operate the equipment.

Industry Canada Statement

This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe [B] est conforme à la norme NMB-003 du Canada. CAN ICES-3 (B)/NMB-3(B)

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

(1) This device may not cause interference, and (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Use of Trademarks, Registered Trademarks, and other Protected Names and Symbols

This manual may make reference to trademarks, registered trademarks, and other protected names and/or symbols of third-party companies not related in any way to StarTech.com. Where they occur these references are for illustrative purposes only and do not represent an endorsement of a product or service by StarTech.com, or an endorsement of the product(s) to which this manual applies by the third-party company in question. StarTech.com hereby acknowledges that all trademarks, registered trademarks, service marks, and other protected names and/or symbols contained in this manual and related documents are the property of their respective holders.

Warranty Information

This product is backed by a two-year warranty. StarTech.com warrants its products against defects in materials and workmanship for the periods noted, following the initial date of purchase. During this period, the products may be returned for repair, or replacement with equivalent products at our discretion. The warranty covers parts and labor costs only. StarTech.com does not warrant its products from defects or damages arising from misuse, abuse, alteration, or normal wear and tear.

Limitation of Liability

In no event shall the liability of StarTech.com Ltd. and StarTech.com USA LLP (or their officers, directors, employees or agents) for any damages (whether direct or indirect, special, punitive, incidental, consequential, or otherwise), loss of profits, loss of business, or any pecuniary loss, arising out of or related to the use of the product exceed the actual price paid for the product. Some states do not allow the exclusion or limitation of incidental or consequential damages. If such laws apply, the limitations or exclusions contained in this statement may not apply to you.

StarTech.com Ltd.

45 Artisans Crescent
London, Ontario
N5V 5E9
Canada

FR: startech.com/fr
DE: startech.com/de
ES: startech.com/es
NL: startech.com/nl
IT: startech.com/it
JP: startech.com/jp

StarTech.com LLP

4490 South Hamilton
Road
Groveport, Ohio
43125
U.S.A.

StarTech.com Ltd.

Unit B, Pinnacle 15
Gowerton Road
Brackmills,
Northampton
NN4 7BW
United Kingdom

StarTech.com Ltd.

Siriusdreef 17-27
2132 WT
Hoofddorp
The Netherlands