



SERVER CHASSIS

RSV-L4000B

User Manual



Table of Contents

Product Overview	02
Accessory Kit	02
Introduction Guide	03
Open the Unit	03
Install the Power Supply	03
Install the Motherboard	04
Install the Add-on Card	04
Install a 3.5" or 2.5" Drive	06
Care	06
Options	07
Specifications Table	08

Thank you for purchasing a **Rosewill** Server Chassis.
Please read the instruction manual before using and
retain it for your future reference.

Product Overview



Accessory Kit

Part Name	Item	Qty	Function/ Component
Screw-A	6*6HWM	20	VGA Card & PSU
Screw-B	3*5PWM	16	Motherboard & SSD
Screw-C	6#32*6	4	HDD
Screw-D	4.8*10KB	50	Fans
Standoff		9	Motherboard

Installation Guide


1. Open the Unit

- 1-1. Remove the screws from each side of the chassis (two on each side). (Figure 1).
- 1-2. Once the screws are removed, push the top cover to remove from the chassis.




2. Install the Power Supply

- 2-1. Seat the power supply unit (PSU) back of the case and secure with Screw-A (Figure 2).

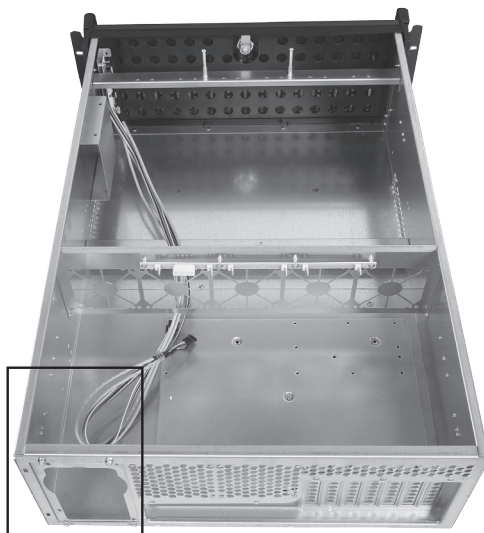

3. Install the Motherboard


3-1. Install standoffs in the chassis. Secure the motherboard down with Screw-B (Figure 3).

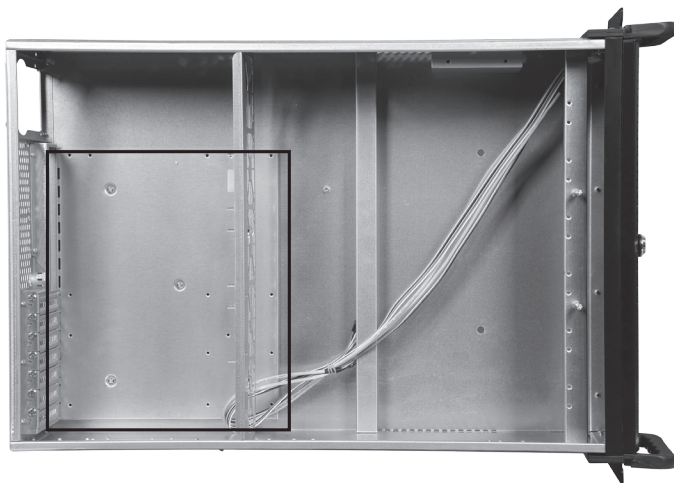


4. Install Add-on Card


Install optional add-on cards and secure with the Screw-A (Figure 4).

The following pictures of Step 4 are installed demonstrations, optional components are not included in the package.

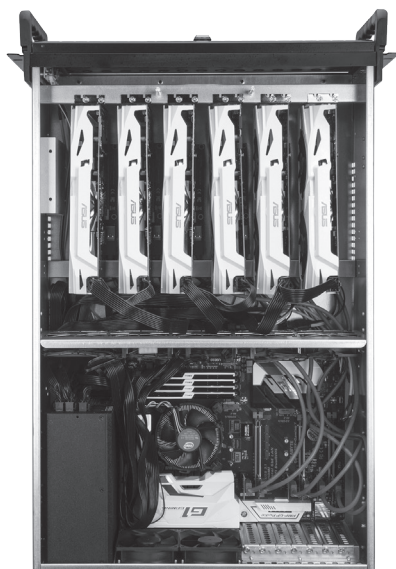


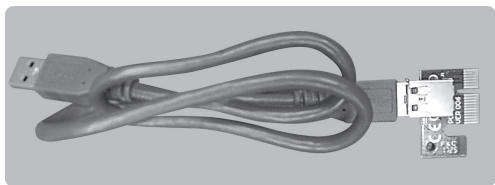

4-1. Connect USB cable with riser card.

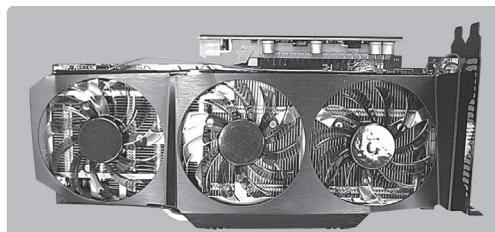


4-2. Insert the adapter card to VGA card

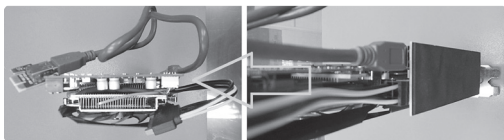


4-3. Connect the USB & power cable to the adapter card



4-4. Connect power cable to SATA connect on PSU unit

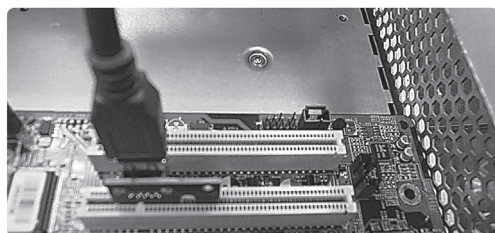


4-5. Insert riser card to motherboard.

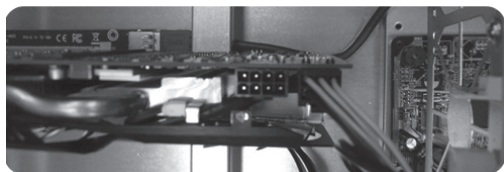

4-6. Connect VGA card with 6 pins or 8 pins on PSU unit

5. Install a 3.5" or 2.5" Drive


5-1 Screw down the SSD/HDD on the chassis (Figure 5).

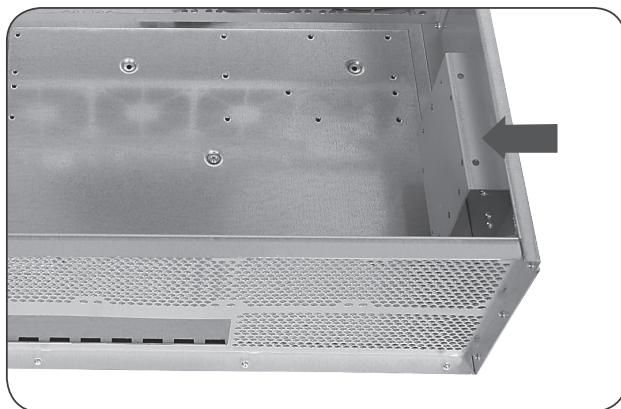

6. Care

6-1. To prevent damage, keep all panels closed and secured (Figure 6a).


6-2. Put the top cover back into place and secure with 4 screws (Figure 6b).

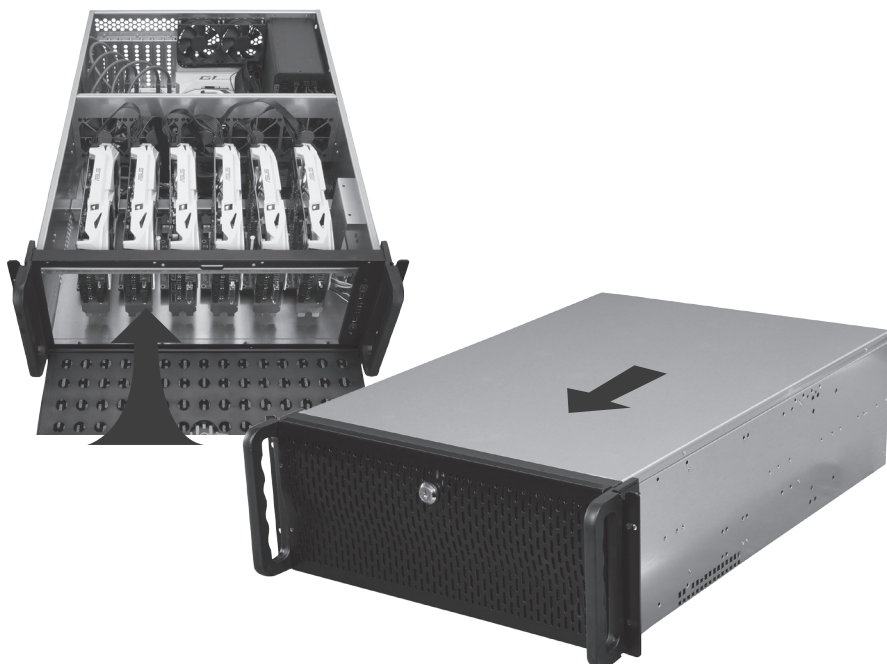

7. Options

7-1 Cooling Fan Installation

Rosewill RSV-L4000B provides options of installing five 80 mm fans (3 pins) in the middle, and two 80 mm fans (4 pins) at the rear: (Figure 7).

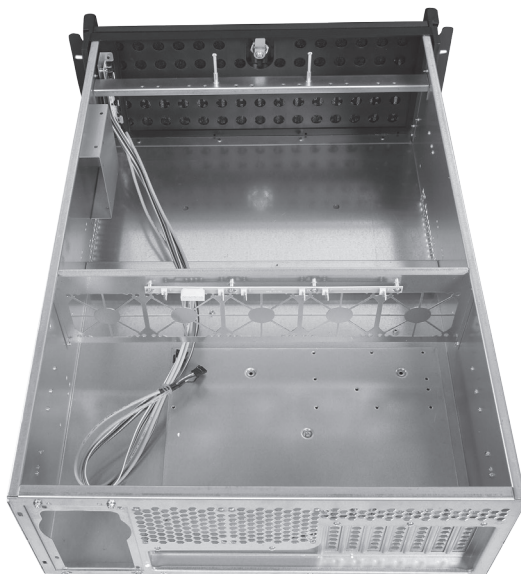

8. Specifications Table

Model	
Model Name	RSV-L4000B
Features	
Type	4U Mining Chassis
Color	Black and silver
Case Material	Steel SGCC
Motherboard Compatibility	12" x 9.6" / 12" x 10.5" ATX and below
Expansion	
Internal 3.5" or 2.5" Drive Bays	1
Expansion Slots	Support 6 VGA Cards
Front Ports	
Front Ports	Power On/Off Switch
Cooling System Options	
80 mm Fan	5 x Middle (optional) ; 2 x Rear (optional)
Physical Specifications	
Dimensions	7.00" x 16.80" x 25.00" (H x W x D)
Weight	22.27 lb



***Rosewill*® Technical Support Information**
techsupport@rosewill.com 1-800-575-9885

*Thank you for purchasing a quality Rosewill product.
Please register your product at: www.rosewill.com
for complete warranty information and support for your product.*