

REMINGTON®

HAIRCUT KIT



**USE & CARE
MANUAL**

PLEASE READ
PRIOR TO USE

To register your product go to
www.remington-products.com.au

2 YEAR WARRANTY

HC1090 Series

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following.

KEEP AWAY FROM WATER

- Always unplug it immediately after using.
- Do not place or store the appliance where it can fall or be pulled into a bath or sink.
- Do not use while bathing.
- Do not place or drop into water or other liquid.
- Remington strongly recommends that an approved Safety Switch (residual current device) be fitted to protect all bathroom power outlets. Ask an electrical contractor for advice.

WARNING - TO REDUCE THE RISK OF BURNS, ELECTROCUTION AND FIRE OR INJURY TO PERSONS:

- Do not reach for an appliance that has fallen into water. Unplug it immediately.
- Do not use while bathing or in the shower.
- Do not place or drop into water or other liquid.
- Do not place or store this appliance where it can fall or be pulled into a bath or sink.
- Always unplug this appliance from the electrical outlet immediately after using.
- Unplug this appliance before cleaning it.
- This appliance is for household use only.
- Do not leave the appliance unattended when it is plugged in.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Use this appliance only for its intended use as described in this manual.
- Do not use attachments not recommended by Remington.
- Keep the cord away from heated surfaces.

- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water. The supply cord cannot be replaced. If the cord is damaged the appliance should be scrapped.
- Never drop or insert any object into any of the appliance's openings.
- Do not use outdoors or operate where aerosol (spray) products are being used, or where oxygen is being administered.
- Make sure the cord is disconnected from the electrical outlet while storing this appliance in a moisture-free area. Do not store it in temperatures exceeding 60°C (140°F).
- Do not use this appliance with a damaged or broken cutter unit, as injury may occur. Always make sure blades are aligned properly.
- To disconnect, turn all controls to OFF, then remove the cord from the electrical outlet.
- Do not use an extension cord or a voltage converter with this appliance.
- Do not wrap the cord around the appliance.

WARNING: KEEP THE APPLIANCE DRY.

SAVE THESE INSTRUCTIONS

HC1090 SERIES REMINGTON 24 PIECE HAIRCUT KIT USE & CARE INSTRUCTION MANUAL

Thank you for purchasing your new Remington® Haircut Kit. Your hair clipper is designed to help you maintain a range of hairstyles for years to come. For best cutting performance we recommend you read these instructions thoroughly and keep them in a safe place.



KEY PARTS

1. Taper Lever
2. On/Off Switch
3. Trimming Guides
4. 4 Sectioning clips
5. Blade guard
6. Scissors
7. Neck Brush
8. Cleaning Brush
9. 2 Styling Combs
10. Cape
11. Storage pouch

HC1090 SERIES SPECIFICATIONS

Power System	Corded
Voltage Type	Single (240V)

BEFORE CUTTING HAIR

The blades of this clipper are designed to remain permanently lubricated. They do not need oiling unless the blades are rinsed under water. We have aligned the blades on your hair clipper prior to shipment. It is possible the blades may be bumped out of alignment whilst in transit. Correct blade alignment is essential for effective cutting. If the blades are out of alignment they can be easily adjusted.

1. The end of the top blade should be closer to the body of the hair clipper than the bottom blade. This is important so that the clipper doesn't cut too close or allow the moving (top) blade to touch the skin.
2. The bottom blade should be as closely aligned as possible to the center of the top blade.
3. If the blades are not correctly aligned, turn the clipper on for a few moments, turn off and unplug. Loosen the two screws slightly and manually adjust the bottom blade until it is aligned. Re-tighten the screws.
4. Ensure the hair clipper is running smoothly, with a slight vibration, before attempting to cut any hair.

GETTING STARTED

1. Make sure your clipper is operating correctly.
2. Place a towel around the neck of the person whose hair is being trimmed or cut. This person should be seated so that the top of their head is at your eye level.
3. Comb the hair as it is normally styled, be sure to comb out all knots and tangles.
4. Hold the hair clipper in the palm of one hand and with your thumb resting firmly on the top of the hair clipper. This grip proves comfortable cutting control. Although the hair clipper may be used left or right handed, using it right handed allows you to access the taper lever more easily.
5. Ensure the hair is dry. Hair clippers perform best with dry hair, making it easier to see how much hair is being cut.

TO ATTACH & REMOVE THE TRIMMING GUIDES

Select an appropriate length trimming guide to match the desired length of hair to remain after the cut. The trimming guides are numbered and marked with 3mm, 6mm, 9mm, 12mm, 16mm, 18mm, 22mm, 25mm, Left Ear and Right Ear. Hold comb with teeth up, slide the attachment firmly onto the bottom clipper blade.

To remove the attachment, use the latch at the back of the comb to lever it away from the back of the hair clipper. DO NOT grasp the comb from the front as this may cause the guides to bend or break.

TIPS FOR CUTTING HAIR

- Allow the clipper to cut through the hair without forcing it at a faster rate, as this may create a pulling sensation.
- Use short strokes when cutting and initially use a long trimming guide. You can always use a closer trimming guide later if you want a closer cut.
- Start at the back and around the ears to define the length of the head and work your way up to the crown of the head in layers.
- To cut the top of the head, hold the hair between your fingers and cut a small amount at a time with scissors, or with a long trimming guide on the hair clipper. Cut from the front to the back.
- Remove trimming guides from the clipper and use the clipper to carefully trim around the ears and short hairs at the nape of the neck. Angle the clipper around each ear and be careful not to touch the ears or press too hard.
- Use the taper lever to adjust the closeness of the cut without the trimming guides, or to blend between hair layers with the trimming guides attached.

STORAGE

When not in use, unplug the appliance and store out of reach of children in a safe, dry location. Never wrap the cord around the appliance as this will cause the cord to wear prematurely and break. Handle the cord carefully for long life, and avoid jerking, twisting or straining especially at plug connections.

The Hair Clipper conforms to radio frequency interference requirements.

Spectrum Brands Australia Pty Ltd and Spectrum Brands New Zealand Limited
WARRANTY AGAINST DEFECTS

In this warranty:

Australian Consumer Law means the Australian consumer law set out in Schedule 2 to the Competition and Consumer Act 2010;

CGA means the New Zealand Consumer Guarantees Act 1993;

Goods means the product or equipment which was accompanied by this warranty and purchased in Australia or New Zealand, as the case may be;

Manufacturer, We or us means:

1. for Goods purchased in Australia, Spectrum Brands Australia Pty Ltd ACN, 007 070 573; or
2. for Goods purchased in New Zealand, Spectrum Brands New Zealand Limited, as the case may be, contact details as set out at the end of this warranty;

Supplier means the authorised distributor or retailer of the Goods that sold you the Goods in Australia or in New Zealand; and

You means you, the original end-user purchaser of the Goods.

1. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law, or the CGA. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
2. The benefits provided by this Warranty are in addition to all other rights and remedies in respect of the Goods which the consumer has under either the Australian Consumer Law or the CGA. The original purchaser of the Goods is provided with the following Warranty subject to the Warranty Conditions:
3. We warrant the Goods for all parts defective in workmanship or materials for the period of two (2) years from the date of purchase (Warranty Period). If the Goods prove defective within the Warranty Period by reason of improper workmanship or material, we may, at our own discretion, repair or replace the Goods without charge.

Warranty Conditions

4. The Goods must be used in accordance with the manufacturer's instructions. This Warranty does not apply should the defect in or failure of the Goods be attributable to misuse, abuse, accident or non-observance of manufacturer's instructions on the part of the user. As far as the law permits, the manufacturer does not accept liability for any direct or consequential loss, damage or other expense caused by or arising out of any failure to use the Goods in accordance with the manufacturer's instructions.
5. Exhaustible components (such as shaver heads, cutters and foils) of the Goods are included under this Warranty only where there is a defect in workmanship or materials used.
6. The warranty granted under clause 3 is limited to repair or replacement only.
7. Any parts of the Goods replaced during repairs or any product replaced remain the property of the manufacturer. In the event of the Goods being replaced during the Warranty Period, the warranty on the replacement Goods will expire on the same date as for the Warranty Period on the original Goods which are replaced.

8. In order to claim under the warranty granted under clause 3 you must:
 - (a) Retain this warranty with your receipt/proof of purchase; and
 - (b) Return the Goods to us at the relevant address below or to the Supplier by prepaid freight within the Warranty Period accompanied with (i) the legible and unmodified original proof of purchase, which clearly indicates the name and address of the Supplier, the date and place of purchase, the product name or other product serial number and (ii) this warranty.
9. This warranty is immediately void if:
 - (a) Any serial number or appliance plate is removed or defaced;
 - (b) The Goods have been serviced or otherwise repaired by a person not authorised to do so by us or where non approved replaced parts are used.
10. The Goods are designed for domestic use only. A limited 90-day Warranty applies to any industrial or commercial use of the Goods. The Goods must be connected to the electrical voltage requirements as specified in the ratings label located on the Goods.
11. This warranty does not cover the cost of claiming under the warranty or transport of the Goods to and from the Supplier or us.
12. This warranty is only valid and enforceable in Australia against Spectrum Brands Australia Pty Ltd and in New Zealand against Spectrum Brands New Zealand Limited.

Contact us or the Supplier for further details.

Spectrum Brands Australia Pty Ltd

Chifley Business Park

1 Chifley Drive

Mentone, VIC 3194 Australia

Customer service in Australia: 1800 623 118

E-mail: consumer.enquiry@remington-products.com.au

Spectrum Brands New Zealand Limited

Level 1,

8 Hugo Johnston Drive,

Penrose, Auckland 1061 New Zealand

Customer service in New Zealand: 0800 736 776

E-mail: info@remington.co.nz

Website: www.remington-products.com.au

REMINGTON®

REMINGTON SERVICE HOTLINE

① Australia 1800 623 118 (toll free)

① New Zealand 0800 736 776 (toll free)

AUTHORISED REPAIR CENTRES

Visit www.remington-products.com.au for Authorised repair centre details.

® Registered Trade Mark of Spectrum Brands Inc.(SBI), or one of its subsidiaries

Made in China to the specifications of Spectrum Brands, Inc.

© 2015 Spectrum Brands Inc.

Rev. 01/15

Part No. T22-0002976