



Instruction Manual

Please read carefully before use and keep for future reference.

Thank You

We know you have many choices when it comes to technology; thank you for choosing us here at Naxa Electronics. Established in 2001 in Los Angeles, CA, we are dedicated to delivering products that entertain and delight.



We trust that you will be happy with your purchase. Please read this manual carefully and save it for reference. You may also find the latest FAQ documentation, and other product material at our website. Come visit us on the web at www.naxa.com and see all that we have to offer!

In the Box

Please take a moment to make sure that you have everything in the list below. Although we make every effort to ensure that each Naxa device is securely packed and sealed, we know a lot can happen in between us and you. If anything is missing, check back with your local retailer to get immediate assistance. If they cannot help you, please contact our Naxa Support Team at www.naxa.com/supportcenter.

- NCV-6000
- Mount
- USB Cable
- Car Charger
- Instruction Manual

Warnings and Precautions

	CAUTION	
WARNING: SHOCK HAZARD. DO NOT OPEN. AVIS: RISQUE DE CHOC ELECTRIQUE. NE PAS OUVRIR		
CAUTION: TO REDUCE THE RISK OF FIRE AND ELECTRIC SHOCK, DO NOT REMOVE THE COVER (OR BACK) OF THE UNIT. REFER SERVICING ONLY TO QUALIFIED SERVICE PERSONNEL.		



The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of significant magnitude to constitute risk of electric shock



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operation and servicing instructions in the literature accompanying the appliance.

CAUTION

- Do not block the ventilation openings or holes.
- Do not place any naked flames (such as lighted candles) on the apparatus.
- When discarding batteries, follow all local rules and laws governing the disposal of batteries. Consider the environmental impact of your actions!
- To prevent fire or shock hazard, do not expose this appliance to rain or moisture.

Important Safety Information

1. **Read Instructions:** All the safety and operating instructions should be read before the product is operated.
2. **Retain Instructions:** The safety and operating instruction should be retained for future reference.
3. **Heed Warnings:** All warnings on the product and in the operating instructions should be adhered to.
4. **Follow Instructions:** All operating and usage instructions should be followed.
5. **Cleaning:** Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
6. **Attachments:** Use only attachments recommended by the manufacturer. Use of other attachments may be hazardous.
7. **Water and Moisture:** Do not use this product near water (e.g., near a bathtub, washbowl, kitchen sink, laundry tub, in wet basements, or near a swimming pool and the like).
8. **Accessories:** Do not place this product on an unstable cart, stand, tripod, bracket, or table. Use only with carts, stands, tripods, brackets, or tables recommended by the manufacturer or sold with the product. Any mounting of the product should follow the manufacturer's instructions and should use a mounting accessory recommended by the manufacturer. A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.




9. **Ventilation:** Slots and openings in the cabinet are provided for ventilation to ensure reliable operation of the product and to protect it from overheating. These openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer instructions have been adhered to.
10. **Power Sources:** This product should be operated only from the type of power source indicated on the rating label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power or other sources, refer to the operating instructions.
11. **Grounding or Polarization:** This product may be equipped with a polarized alternating-current line plug that has one blade wider than the other. This plug will only fit into the power outlet in one direction. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the direction of the plug. If the plug should still fail to fit, contact an electrician to replace the obsolete outlet. Do not defeat the safety purpose of the polarized plug.
12. **Power-Cord Protection:** Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and at the point which they exit from the product.
13. **Protective Attachment Plug:** The product may be equipped with an attachment plug with overload protection. This is a safety feature. See the operating instructions for replacement or directions to reset the protective device. If replacement of the plug is required, be sure the service technician has used a replacement plug that has the same overload protection as the original plug as specified by the manufacturer.
14. **Lightning:** For added protection for this product, unplug it from the wall outlet during a lightning storm or when it is left unattended and unused for long periods of time. This will prevent damage to the product due to lightning or power-line surges.
15. **Overloading:** Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
16. **Object and Liquid Entry:** Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
17. **Servicing:** Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
18. **Damage Requiring Service:** Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions: a) when the power-supply or plug is damaged; b) if liquid has been spilled or if objects have fallen into the product; c) if the product has been exposed to rain or water; d) if the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation; e) if the product has been dropped or damaged in any way; f) when the product exhibits a distinct change in performance—this indicates a need for service.
19. **Replacement Parts:** When replacement parts are required, be sure that your service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.

20. **Safety Check:** Upon completion of any service or repairs to this product,ask the service technician to perform safety checks to ensure that the product is in proper operating condition.
21. **Wall or Ceiling Mounting:** The product should be mounted to a wall or ceiling only as recommended by the manufacturer.
22. **Heat:** The product should be situated away from heat sources such as radiators,heat registers, stoves, or other products (including amplifiers) that produce heat.

WARNING:

This product contains lead, a chemical known to the State of California to cause cancer and birth defects or other reproductive harmWash hands after handling.

At A Glance

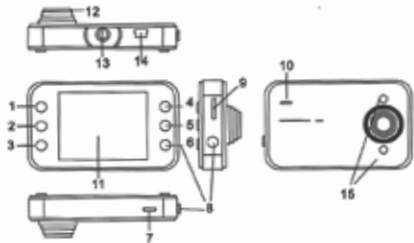

1. Scroll UP Button
2. Menu Button
3. Scroll Down Button
4. "OK" Button
5. MODE Button
6. Lock Button
7. Reset Button/MIC
8. Power Button
9. Memory Card Slot
10. Speaker
11. Display
12. Lens
13. Bracket Interface
14. USB
15. IR LED

Operating Instructions

The Naxa HD Dash Cam can record video, take photos, preview, and be utilized as a PC camera.

Select the function you would like to use and please remember to insert a Memory card before using.

Record Mode

Turn ON the unit by pressing the Power Button or plugging in the car charger. The unit will automatically enter Record Mode and start recording. During this the blue indicator light will be flashing. While the dash cam is recording, press the OK button to Stop recording as the blue indicator will remain on solid.

Camera Mode

After turning the unit on, press the MODE button and select Camera Mode. Press the OK button to snap a photo.

Preview Mode

After turning the unit on, press the MODE button and select Preview Mode. Press the UP/DOWN buttons to select video or photo files. Press the OK button to play

or pause playback. Press the MODE button to exit Preview Mode.

Motion Detection Function

Set the "Motion Detection" function to ON in the Video Mode setting. When a moving object is detected, the unit will record video for up to 1 minute and save. If the object is still moving after 1 minute, it will save another 1 minute video clip and continue until the object stops moving. Exit the Motion Detection and it will automatically turn off the Motion Detection function.

Screen Saver

In the System Settings Menu, select ScreenSaver to enable the screensaver and set the screensaver time.

Charging

With the unit connected to the charger, a Red light indicates the unit is charging. The light will turn off when the unit is fully charged.

Connect to a PC

Make sure that the USB options in the System Menu are set to "disk drive." Connect the supplied USB cable from the unit to a USB port of a PC. You will see a removeable disk appear on the PC and can transfer video and photo files to your PC. You can also remove the Memory card from the unit and insert in a card reader (not supplied) to your PC to transfer files aswell. To use the dash cam as a PC camera, simply go to the USB settings in the System Menu and change the USB settings to PC Camera. Connect the supplied usb cable and are now able to use the unit as a PC camera.

Date & Time Settings

Select Date & Time settings in the System Menu and press OK to enter the current date and time. Press OK to select the year, month, date, hour and minute. Use the UP/DOWN buttons to adjust . Press the OK button to confirm and exit.

Menu Function Settings

Turn on the unit and press the Menu button to enter Settings. Select the settings item by using the UP/DOWN buttons, now press the OK button to enter the next sub-menu and select a specific function item and press OK to confirm. Press the Menu button to exit. While in System Settings, press the Menu button twice to exit.

Video Mode Sub-Menu			
Items	Sub-Menu	Description	Function
1	Size	720p/1080p/VGA	1920x1080,1280 x 720 (Default),VGA 640 x 480
2	Time Stamp	ON/OFF	Display time and date in the video files
3	Motion Detection	ON/OFF	Video in motion detection ON and OFF
4	Loop Recording	OFF/1 min./3 min. (default)/5 min.	A single video file segment time length
5	Voice Record	ON/OFF	Voice Record ON/OFF
Camera Mode Sub-Menu			
1	Size	3M/2M/1.3M/VGA	Select output size of the photo
Replay Mode Sub-Menu			
1	Delete	Cancel / Execute	Select Deleted file
2	Thumbnail	Cancel / Execute	Thumbnail view
3	Volume	0/1/2/3/4/5 (default)/6	Adjust volume of built-in speaker
System Setting Menu			
1	Format		
2	Languages	English/Traditional Chinese/ Simplified Chinese/Japanese/ French/German/ Korean/Italian/Portuguese/Russian/ Spanish/Arabic	Displays the selected language
3	Auto Power OFF	OFF/1 Min. / 3 Min. / 5 Min.	Set auto shutdown time when idle
4	Screen Saver	1 Min. / 3 Min. / 5 Min. / OFF	Set screen saver time / OFF
5	System Reset	Cancel / Execute	Restore Default Settings
6	Light Frequency	50 Hz	Common European Power Frequency
		60 Hz	Common USA Power Frequency
7	USB	PC Camera	Connect to PC with USB cable
		Disk Drive	Connect to PC with USB cable to read data

NOTE: Current Settings will be saved when the unit is turned off.

System Reset

If the unit locks up or is not responding, press the Reset button and the unit will automatically reset.

Specifications

Sensor	CMOS Sensor
Image Resolution	720p (1280 x 720) - 1080p (1920 x 1080) - VGA (640 x 480)
Visual angle	Wide - angle
LCD	2.4" TFT HD Display Screen
Video Format	AVI
Photo Format	JPEG
Memory Card	Memory Card 1GB - 32GB
USB Interface	USB 2.0
Operating System	Windows XP/7/8/10; MAC OS; Linux
Battery Capacity	200 mAh
Charge Time	About 2 Hours
Storage Consumption	VGA --about 45mb/minute - 720p--about 105mb/minute
Operating Temperature	14°F ~140°F
Storage Temperature	-4°F ~158°F
Weight	48g (unit) - Net / 205g (unit with package) - Gross
Dimensions	90mm x 53mm x 26mm (unit)

Support

If you have problems with your device, please consult the instructions in this manual. Please also visit us on the web at www.naxa.com to get up to the minute news, alerts, and documentation for your device. For additional assistance, please contact Naxa Technical Support

NAXA Technical Support

2320 East 49th St.

Vernon, CA 90058

866-411-6292

<http://www.naxa.com/supportcenter/>

MADE IN CHINA

