# iHome

Model: iW18

Bedside/Office Clock with Dual Charging



Quick Start Guide

QUESTIONS? visit www.ihome.com or call 1-800-288-2792

FEATURES & FUNCTIONS BACK DANEL

USB Charging Port (5V/1A)

I FET DANEI

TOP PANEL

Alarm

Wireless

DIGHT DANEL



BOTTOM PANEL





Battery Backu

# GETTING STARTED

#### Step One Connecting the Unit

Before use, remove the battery pull tab from the bottom of the unit. Connect the included AC adapter to the DC jack located on the back of the unit and connect the other end to a working wall outlet.

### Step Two

Setting Your Clock · Press and hold the Time Set Button until the display flashes. · Press the - or + Buttons to adjust selections and press Time Set to

1000

- confirm · Do this for time, year, month and
- date.
- All done!

#### Davlight Savings Time (DST) Switch:

By default, the DST Switch is set to Auto and will automatically adjust the time each March and November.





To adjust the brightness of the display, press the Time Set Button repeatedly to cycle through brightness settings, including OFF. 2

# SETTING THE ALARM

Note: Each step must be completed while display is flashing or setting will time-out with any changes saved

- 1. Bross and hold the Alarm Putton for 2 seconds until the alarm time display and alarm icon flash
- 2 Press the or + Buttons to adjust the alarm time to the desired time (hold for rapid setting). Make sure you set the correct AM/PM alarm time. The PM indicator appears to the left of the display.
- 3. Press the Alarm Button to confirm the alarm time setting. The alarm schedule will flash: 7 (every day), 5 (weekdays) or 2 (weekend only). Press the - or + Buttons to select the desired alarm schedule.
- 4 Press the Alarm Button to confirm the alarm schedule 2 beens will confirm alarm setting is complete. The alarm icon will remain on the display, indicating the alarm is armed.
- 5. To turn off a sounding alarm and reset it to come on the next day at the same time, press the Alarm Button to reset alarm.

#### PREVIEWING THE ALARM

Press and release the desired Alarm Button as needed to preview the alarm and to toggle the alarm ON (indicated by the alarm icon) or OFF (no alarm icon)

## PROGRAMMABLE SNOOZE

1. To program Snooze, press down on the front of the unit for 2 seconds during normal operation (when no alarm is sounding).



Model: iW18

FCC ID: EMOIW18 IC: 986B-IW18

- 2. Press the or + Buttons to select a snooze time (between 01 and 29 minutes)
- 3. Press down and release the front of the unit to confirm setting. While the alarm is sounding, press down on the front of the unit to temporarily silence the alarm (9 minutes is the default). Snooze can be used several times during the one hour alarm cycle.

3

# WIRELESS CHARGING

#### Supports

 Qi compatible phones (also works with plastic cases up to 3mm thick) AirPods with wireless charging case

Place Qi compatible device face up on the charging rest as pictured below.



Check the lightning icon 7 on the iW18 display for charging status:

Slow blinking **icon**: Device is charging properly.

Solid J icon: Device is charged

Rapid blinking 1 icon: Device is not charging properly. Reposition device

Note: The lightning icon may continue to blink slowly when iOS devices are fully charged.

#### CAUTION

Remove metal protective or magnetic case from phone before charging. When charging phone, do not place magnetic-striped or other metal objects on the charger. Doing so could damage the object or this unit. Qi compatible phones with metallic looking finishes will charge normally.

m a a

#### USB CHARGING

Connect the standard size end of a USB cable (not included) to the USB port on the back of the unit and connect the other end to the charging port on your device.

(Make sure the unit is plugged into a working outlet in order to charge devices.)



The unit comes with a CR-2450 back-up battery installed to provide continuous alarm operation and clock settings in the event of a temporary power failure. Remove the battery pull tab before use. When the battery icon on the clock display is flashing, it is time to replace the back-up battery. The battery compartment is located on the bottom of the unit

1 Make sure the AC adapter is connected, or you will lose your time and alarm settings during battery

replacement 2. Use a Phillips screwdriver to open the battery compartment door.

3. Remove the exhausted battery from

the compartment and insert 1 CR-2450 battery, checking that the

+ side is facing you. Replace the compartment door Do not overtighten

WARNING: Lithium batteries can explode or cause burns if disassembled, shorted, recharged, exposed to water, fire, or high temperatures. Do not place loose batteries in a pocket, purse, or other container containing metal objects, mix with used or other battery types, or store with hazardous or combustible materials. Store in cool, dry ventilated area. Follow applicable laws and regulations for transport and disposal

# $\Delta$

4

- Do not ingest the battery. Chemical Burn Hazard. This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death
- · Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.
- · Attention should be drawn to the environmental aspects of battery disposal

5

13

1 a

A

#### IMPORTANT SAFETY INSTRUCTIONS

When used in the directed manner, this unit has been designed and manufactured to ensure your personal safety. However, improper use can result in potential electrical shock or fire hazards. Please need and follow all safety and operating instructions carefully before installation and use, and keep these instructions handy for future reference. Take special note of all wernings listed in these instructions and on the unit.

- Water and Mointum The unit should not be used near water For example near a hatblub
- Water and Moisture The unit should not be used near water. For example: near a bathhub, weahbowl, kitchen sink, laundy tub, swimming pool or in a wet basement. Ventilation The unit should be situated so that its location or position does not interfere with its proper ventilation. For example, it should not be situated on a bed\_soft. we also that the state of the situated on a bed\_soft. Installation, user a a bodicase or cointer, which may impede the flow of ar through the substate. Heat - The unit should be situated away from heat sources such as radiators, heat registers.
- Final of the other appliances (including employed by the produce has been used and the produce has been used and the produce has a source of the produce has a source of the other sources. The unit should be connected to a power supply only of the type described in the coording instructions or as marked on the appliance. Only use the AC adapter that came and the coordinate instructions or as marked on the appliance. Only use the AC adapter that came and the coordinate instructions or as marked on the applications. Only use the AC adapter that came and the coordinate instructions or as marked on the applications. Only use the AC adapter that came and the coordinate instructions of a marked on the applications. Only use the AC adapter that came and the coordinate instructions of a marked on the applications. Only use the AC adapter that came and the coordinate instructions of a marked on the applications. Only use the AC adapter that came and the coordinate instructions of the coordinate instructions of the adapter that came and the coordinate instructions of the coordinate instructins of the coordinate instructions of the coordi
- with the unit. Power-Cable Protection Power supply cables should be moded to their they are not likely to power-Cable Protection Power supply cables should be moded as their they are not area from where the cable exists the unit to where it is plugged into an AC societ. Ceaning Clean only with dry cloat. Objects and Liquid Entry Care should be taken to that objects do not fail and liquids are not split in the any approxymation of the taken to that objects do not fail and liquids are taken to the society of the taken to the society of the norther mode the taken to the norther mode in the model.
- sprea into any openings or versi located on the product. Attachments Do not use attachments not recommended by the product manufacturer. Lightning and Power Surge Protection Unplug the unit from the wall socket and disconnect the antenna or cable system during a lighting storm or when it is left unattended and unused for long periods of time. This will prevent damage to the product due to lightning and ver-line surges
- power-ine surges. Overloading Do not overload well sockets, extension cords, or integral convenience receptacles as this can essalt in a risk of fire or electric shock. Damage Requiring Service The unit should be serviced by qualified service personnel when: A the power supply cable or plug has been shell and the endosure.
- C, the unit has been exposed to rain. D, the unit has been dropped or the enclosure damaged. E the unit exhibits a marked change in performance or does not operate normally. Periods of Noruse If the unit is to be left unused for an extended period of time, such as a
- month or longer, remove batteries before storage
- month or longer, remove batteries before storage Servicina The user should not attering to service the unit beyond those methods described in the user menual. Service methods not covered in the operating instructions should be Magnetic Interference. This products subjective subjective could cause interference or damage to sensitive equipment such as hard drives, CRI televisions and monotors as well a medical. UserAll, can devagational down. Keen this unit away from these roducts at all times. Inly use attachments/accessories specified by the manufacturer. This product is suitable for
- use in tropical and/or moderate climates. The unit should be serviced by qualified service personnel when the enclosure damaged or
- does not operate normally.
- No naked filmer sources, such as lighted candles, should be placed on the apparatus. WARNING: To reduce the risk of fire or electric should do not expose this product to rain or moisture CAUTION Danger of explosion if battery is incorrectly replaced. Replace only with the same
- Charlos Danjer of explosion in datasy is incorrectly replaced replace only will be same or equivalent type.
  Do not dispose of batteries in the household trash or fire 21. The mans plug of power adaptor is used as the disconnect device, it shall remain readily

6

FCC INFORMATION

This device once the second se

For product support information and warranty please visit:

© 2019 SDI Technologies, Inc. All rights received

Questions? Visit www.ihome.com or call 1-800-288-2792 Toll Free

#### IC Statement

WARRANTY

www.ihome.com/support