

© 2022 Speech Processing Solutions GmbH. All rights reserved.

This product has been manufactured for and is sold under the responsibility of Speech Processing Solutions GmbH, and Speech Processing Solutions GmbH is the warrantor in relation to this product. Specifications are subject to change without notice. Philips and the Philips shield emblem are registered trademarks of Koninklijke Philips N.V. and are used under license.

PHILIPS

SmartMeeting

HD Audio and Video Conferencing Solution

with Sembly Meeting Assistant

PSE0550

User manual



For more support visit
www.dictation.philips.com/pse0550help



i

1. V- Volume down	7. Status LED
2. Power	8. Speaker
3. Microphones	9. Reset
4. V+ Volume up	10. Power socket
5. Mute	11. Battery status LED
6. Camera	12. USB Type-C port

1. Power
2. Mute
3. Recall saved camera positions
4. Change camera position
5. Activate speaker recognition
6. V- Volume down
7. V+ Volume up
8. Save camera position
9. Zoom out
10. Zoom in

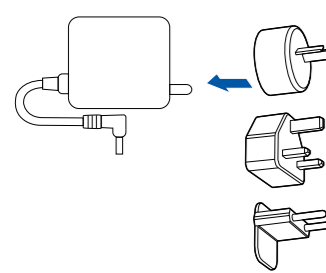
SEMBLY^{AI}

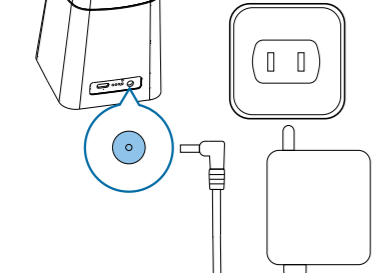
Get your smart AI meeting assistant

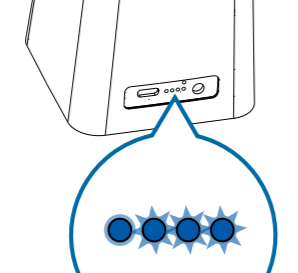
Start your free trial now!

- Go to <https://smartmeeting.sembly.ai>
- Sign up
- Enter the serial number of your device (you can find it on the packaging or the device itself)
- Use the code "SM2022D1" to activate your Team Plus plan (unlimited number of meetings in the first month, then up to 4 meetings per month)

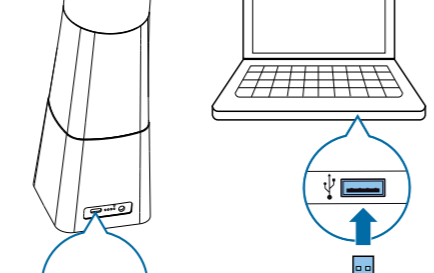


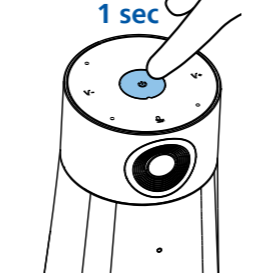

①  Connect the correct plug to the AC adapter


②  Connect the AC adapter to the device and a power socket

③  The LEDs on the back indicate the battery status and stop blinking after the device is fully charged

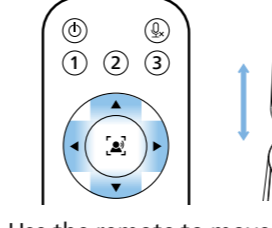


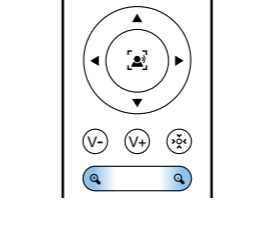
 

①  Connect the device to a computer. Note: The device can only be charged via the AC adapter

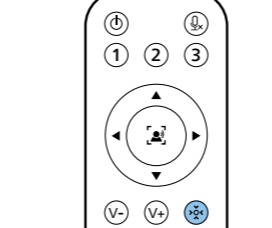

②  Press  to turn the device on

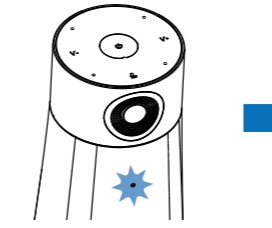
③  You can now use the device with various meeting software, by selecting "PSE0550"

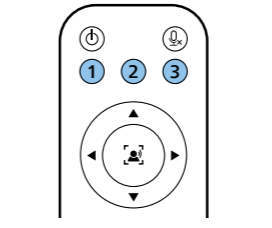


 Use the remote to move the camera up and down as well as horizontally

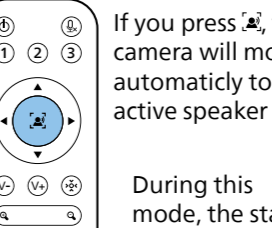

 Press  or  to zoom in or out

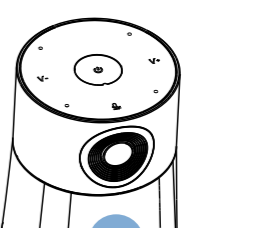

 To save a camera position press 

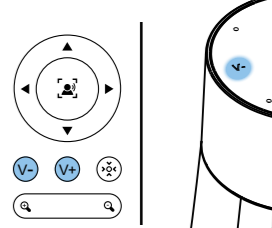
 The status LED of the device blinks blue


 Press one of the three number buttons to save the preset

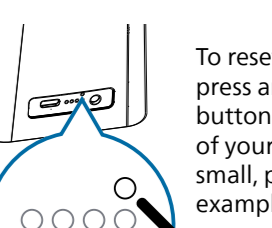


 Press  to mute yourself

 If you press , the camera will move automatically to the active speaker

 Press V+ or V- to change the volume of the speaker

 During this mode, the status LED lights up blue

 To reset the device, press and hold the reset button on the back side of your device by using a small, pointed object, for example, a paper clip