

This article applies to:

 Products

Industries

 Roles

 Device models

September 14, 2024 | 27061 view(s) | 215 people thought this was helpful

Subscribe

---

# Get Started with the Cisco Headset 500 Series

 Feedback?

The Cisco Headset 500 Series is a line of wired and wireless headsets optimized for Cisco IP Phones, Jabber, and Cisco Webex.



The Cisco Headset 500 Series is a series of headsets offering a range of optimized integrations with Cisco IP Phones, Webex, Webex Devices, and other calling solutions.

The Cisco Headset 520 and 530 Series are a set of wired headsets with an integrated in-line USB controller. The 530 Series is also available with an RJ-9 connector for integration with Cisco IP Phones.

The Cisco Headset 560 Series is a pair of wireless headsets that utilize DECT technology for a secure wireless connection.

## Cisco Headset 520 Series

Cisco Headset 521 and 522 are wired headsets that have been developed for use on Cisco IP phones and devices. The Cisco Headset 521 features a single earpiece for extended wear and comfort while the Cisco Headset 522 features two earpieces for use in a noisy workplace.

Both headsets feature a 3.5 mm connector for use on personal computers and mobile devices. With the 3.5 mm connector, the headset works like other headsets that plug into audio jacks.


The headsets also come with an inline USB controller that provides easy access to call control capabilities, including answer, end call, reject call, hold and resume, mute, and volume control. The inline controller is also available with a USB-C connector.

If you have headset firmware release 2.3(1) or later, you can maintain call control through your Cisco Headset 520 Series when you switch between soft clients. For example, you can mute a call on the Webex app (version 41.8 or later) and answer an incoming Cisco Jabber call (version 14.1 or later) through the Jabber UI. Once the Jabber call is complete, you can resume your Webex call and retain call control through your headset.

For more information on multi-app control, see [Cisco Headset Multi-app Feature](#).

See the [Cisco Headset Compatibility Guide](#) for complete information on compatibility with other Cisco devices and call clients.

Your controller buttons are used for basic call features.

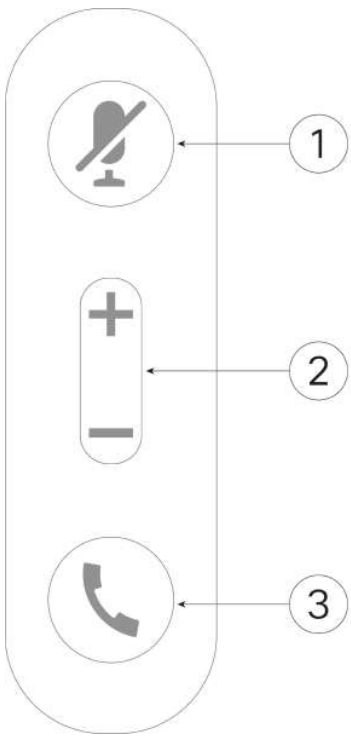


***Cisco Headset 520 Series Controller***


**Cisco Headset 520 Series Controller Buttons**

Number	Name	Description
1	Mute button	Toggle the microphone on and off.
2	Volume button	Adjust the volume on your headset.

Number	Name	Description
3	Call	<p>Manage calls:</p> <ul style="list-style-type: none"> <li>• Press once to place a call (Cisco IP phone only)</li> <li>• Press once to answer an incoming call.</li> <li>• Press and hold to end a call.</li> <li>• Press twice to reject an incoming call.</li> <li>• Press once to put an active call on hold. Press again to retrieve a call from hold.</li> </ul>

### Place a Call on Hold and Resume a Held Call

- ① Press **Call**  on the inline controller.
- ② Select the call you want to resume.
- ③ Press **Call**.

- ① Press **Call**  on the inline controller.
- ② Select the call you want to resume.
- ③ Press **Call**.

---

## Put a Call on Hold and Answer an Incoming Call

---



Press  once.

Press  once.

---

## End a Call and Resume a Held Call

---

- ① Hold **Call**  until you hear a tone.
  - ② On your phone, select the call that you want to resume.
  - ③ Press **Call** once.
- 
- ① Hold **Call**  until you hear a tone.
  - ② On your phone, select the call that you want to resume.
  - ③ Press **Call** once.

---

## End a Call and Answer an Incoming Call

---

① Hold **Call**  until you hear a tone.

② Press **Call** once.

① Hold **Call**  until you hear a tone.

② Press **Call** once.

---

### 530 Series

---

## Cisco Headset 530 Series

The Cisco Headset 531 and 532 are two wired headsets developed for use on Cisco IP phones and other call devices. The Cisco Headset 531 features a single earpiece for extended wear and comfort. The Cisco Headset 532 features two earpieces for use in a noisy workplace.

Both headsets feature an RJ9 connector for use on most Cisco IP phones. With the RJ9 connector, you get simple, high-quality, two-way audio.



Features such as call control, in-headset ringtones, and audio settings are unavailable through the RJ9 port.

An inline USB adapter is also available with a built-in controller that provides easy access to call control capabilities, including answer, end call, reject call, hold and resume, mute, and volume control. You can use the quick disconnect on the USB controller cable to move your headset from one device to another.

The inline controller is also available with a USB-C connector.


You can connect a second headset to the Cisco Headset 530 Series with the Cisco Headset 530 Series Y-trainer Cable. See [Connect and Use the Cisco Headset 530 Series Y Trainer Cable](#) for more information.

If you have headset firmware release 2.3(1) or later, you can maintain call control through your Cisco Headset 530 Series when you switch between soft clients. For example, you can mute a call on the Webex app (version 41.8 or later) and answer an incoming Cisco Jabber call (version 14.1 or later) through the Jabber UI. Once the Jabber call is complete, you can resume your Webex call and retain call control through your headset.

For more information on multi-app control, see [Cisco Headset Multi-app Feature](#).

See the [Cisco Headset Compatibility Guide](#) for complete information on compatibility with other Cisco devices and call clients.

Your adapter is used for basic call features.

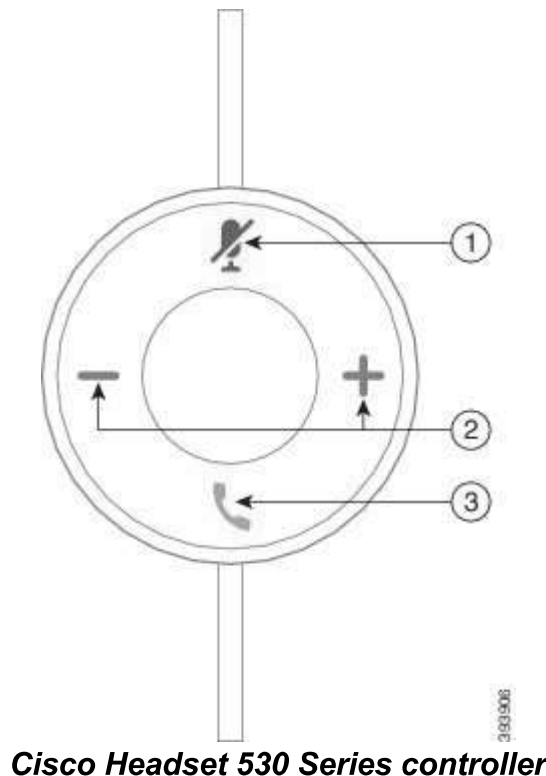





## Cisco USB adapter buttons

Number	Name	Description
1	Mute button	Toggle the microphone on and off.
2	Volume button	Adjust the volume on your headset.
3	Call button	<p>Place, answer, and manage your calls:</p> <ul style="list-style-type: none"><li>• Press once to place a call. (Cisco IP phone only)</li><li>• Press once to answer an incoming call.</li><li>• Press twice to reject an incoming call.</li><li>• Press once to put an active call on hold.</li><li>• Press and hold to end a call.</li></ul>

### Place a Call on Hold and Resume a Held Call

- ① Press **Call**  on the inline controller.
- ② Select the call you want to resume.
- ③ Press **Call**.

- ① Press **Call**  on the inline controller.
- ② Select the call you want to resume.

- ③ Press **Call**.

---

### Put a Call on Hold and Answer an Incoming Call

---


Press  once.


Press  once.

---

### End a Call and Resume a Held Call

---

- ① Hold **Call**  until you hear a tone.
- ② On your phone, select the call that you want to resume.
- ③ Press **Call** once.

- ① Hold **Call**  until you hear a tone.
- ② On your phone, select the call that you want to resume.
- ③ Press **Call** once.

---

## End a Call and Answer an Incoming Call

---

① Hold **Call**  until you hear a tone.

② Press **Call** once.

① Hold **Call**  until you hear a tone.

② Press **Call** once.

### 560 Series

---

## Cisco Headset 560 Series

The Cisco Headset 560 Series includes two wireless headset models designed for use in a modern office space. The Cisco Headset 561 features a single earpiece for lightweight comfort and support. The Cisco Headset 562 offers dual ear cups for rich sound and comfort in a noisy office space. To use this series, you need either the standard base or the multibase. The bases plug into the call device and facilitate communication with the headset.

Each headset base has a default range of approximately 145 feet (45 meters) unless there are physical barriers such as walls and doors or outside interference from other DECT radio sources. Your administrator can increase your headset range up to approximately 330 feet (100 meters). A headset will unpair from its base if it's taken too far away. The base light turns solid white when it's paired to the headset, and flashes when it isn't.



As of firmware release 2.1(1), your headset powers down if it is unpaired to a base for more than 20 minutes. This feature conserves the headset battery.


Your Cisco Headset 560 Series can hold its charge for up to 10 hours of continuous use. Seat your headset in the base when the battery is low. It takes 3 hours for a battery to complete a full charge.

If you have headset firmware release 2.1(1) or later, you can maintain call control through your Cisco Headset 560 Series when you switch between soft clients. For example, you can mute a call on the Webex app and still maintain call control in Cisco Jabber.

For more information on multi-app control, see [Cisco Headset Multi-app Feature](#).




See the [Cisco Headset Compatibility Guide](#) for complete information on compatibility with other Cisco devices and call clients.

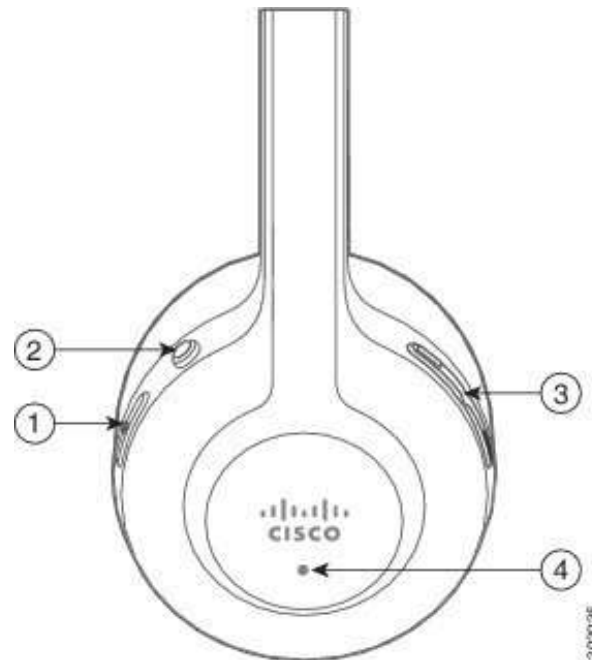Your headset buttons are used for basic call features.



***Cisco Headset 560 Series Buttons***
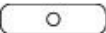
## Cisco Headset 560 Series Buttons

Number	Button	Name	Description
1		Power and Call button	<p>Use to power the headset on and off.</p> <p>Press and hold for 4 seconds to power the headset off and on.</p> <p>Incoming and active call management depends upon if you have one call or multiple calls.</p> <p>One call:</p> <ul style="list-style-type: none"> <li>• Press once to answer incoming calls.</li> <li>• Press once to put an active call on hold. Press again to retrieve a call from hold.</li> <li>• Press twice to reject an incoming call.</li> <li>• Press and hold to end a call.</li> </ul> <p>Multiple calls:</p> <ul style="list-style-type: none"> <li>• Press once to put an active call on hold, and to answer a second incoming call.</li> <li>• Press once to put a call on hold. Press again to resume a call, or press and hold until you hear a tone to end the current call and to resume a held call.</li> <li>• Press and hold until you hear a tone to end an active call, and to answer another incoming call.</li> <li>• Press twice to stay on a current call, and to reject a second incoming call.</li> </ul>
2		Mute button	Toggle the microphone on and off.
3		Volume buttons	Adjust the volume on your headset.

Number	Button	Name	Description
4	N/A	LED	<p>Shows the headset status:</p> <ul style="list-style-type: none"><li>• Blinking red—Incoming call.</li><li>• Steady red—Active call.</li><li>• Blinking white—Firmware upgrade is in process or the headset is pairing with the base station.</li><li>• Steady white—Headset is paired and properly seated on the base</li><li>• Steady pulse—Headset is paired, in an idle state, and is off the base.</li></ul>

---


## Standard base for Cisco Headset 560 Series

---

The standard base charges your headset and has LEDs that show your headset's battery level and call state. You can also answer and end calls when you lift or place your headset on the base.

The standard base comes with the following connector cables:

- USB to USB cable: for devices with USB connectivity
- USB Y-cable: for Cisco IP phones without a USB port
- USB-A to USB-C cable: available separately for PC or Mac devices

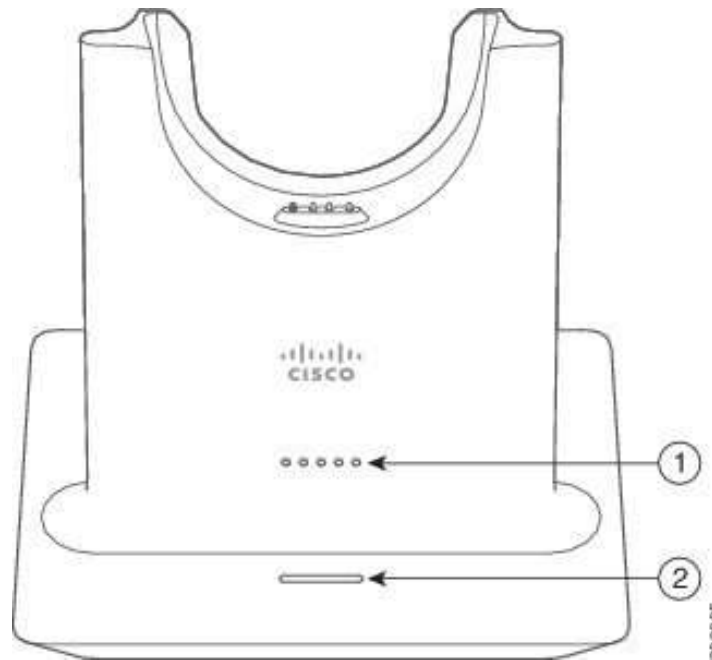

**Standard base LEDs**

### Standard base LEDs

Number	Name	Description
--------	------	-------------


Number	Name	Description
1	Battery status LED	<p>Indicates the headset battery charge and base status:</p> <ul style="list-style-type: none"> <li>Headset battery strength—LEDs blink and change to solid as the battery charges</li> <li>Headset update in progress—LEDs blink in sequence, left to right</li> <li>Headset and base not paired—All LEDs blink</li> <li>Power save mode—Middle LED shows solid</li> </ul> <p>The base enters power save mode when there is no call source connectivity after 10 minutes.</p>
2	Call status LED	<p>Alerts you to the call state:</p> <ul style="list-style-type: none"> <li>Incoming call—Blinking green</li> <li>Active call—Steady green</li> <li>Muted call—Steady red</li> </ul>

The standard base charges your headset and has LEDs that show your headset's battery level and call state. You can also answer and end calls when you lift or place your headset on the base.

The standard base comes with the following connector cables:

- USB to USB cable: for devices with USB connectivity
- USB Y-cable: for Cisco IP phones without a USB port
- USB-A to USB-C cable: available separately for PC or Mac devices



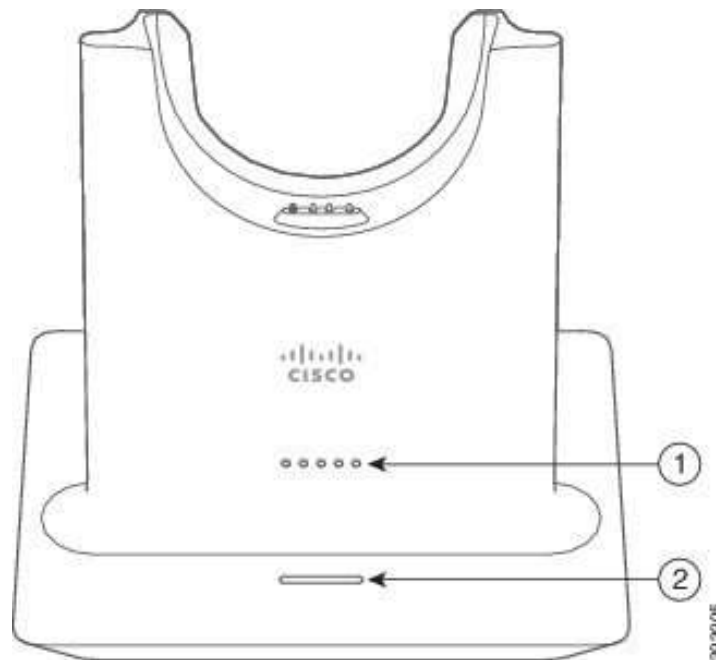

**Standard base LEDs**

#### Standard base LEDs

Number	Name	Description
1	Battery status LED	<p>Indicates the headset battery charge and base status:</p> <ul style="list-style-type: none"> <li>Headset battery strength—LEDs blink and change to solid as the battery charges</li> <li>Headset update in progress—LEDs blink in sequence, left to right</li> <li>Headset and base not paired—All LEDs blink</li> <li>Power save mode—Middle LED shows solid</li> </ul> <p>The base enters power save mode when there is no call source connectivity after 10 minutes.</p>

Number	Name	Description
2	Call status LED	<p>Alerts you to the call state:</p> <ul style="list-style-type: none"> <li>Incoming call—Blinking green</li> <li>Active call—Steady green</li> <li>Muted call—Steady red</li> </ul>

---

## Multibase for Cisco Headset 560 Series

---


The multibase can connect up to three call sources through Bluetooth®, the USB connector, or the Y-cable. The multibase can save up to four Bluetooth devices. You can switch between call sources using the buttons on the multibase. You use the call control buttons on the headset to answer and end calls. When your headset is in the base, you automatically answer the call when you remove the headset from the base. You can return the headset to the base to end the call.

The multibase comes with the following connector cables:

- USB to USB cable: for Cisco IP phones with USB connectivity
- USB Y-cable: for Cisco IP phones without a USB port
- Mini USB cable: for PC or Mac.
- Mini USB to USB-C cable: available separately for PC or Mac devices.



The multibase for the Cisco Headset 560 Series is incompatible with Cisco IP Phone 7800 Series phones using Power over Ethernet (PoE). Use the external power supply if you intend to connect the multibase.

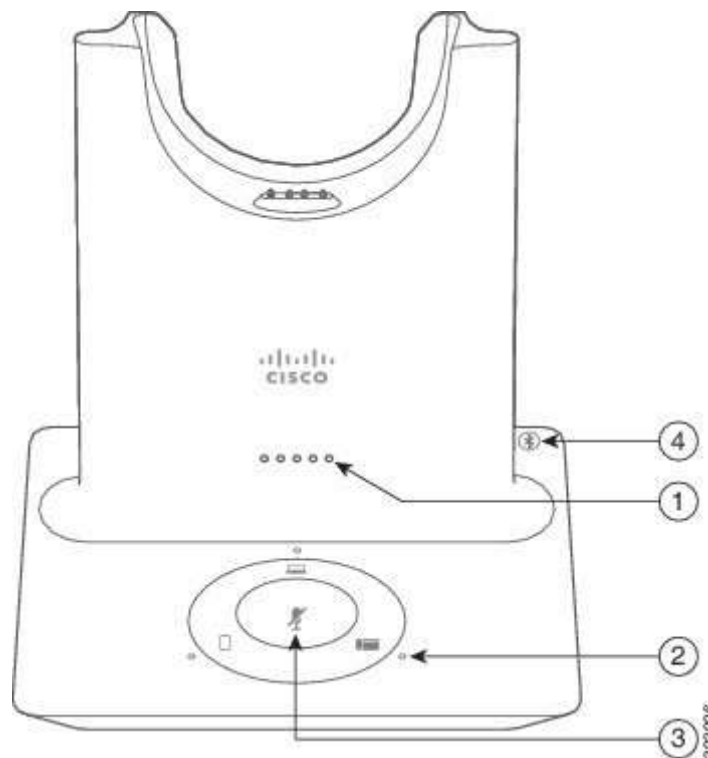

**Multibase LEDs**

### Multibase LEDs

Number	Name	Description
1	Battery status LED	<p>Indicates the headset battery charge and base status:</p> <ul style="list-style-type: none"> <li>Headset battery strength—LEDs blink and change to solid as the battery charges</li> <li>Headset update in progress—LEDs blink in sequence, left to right</li> <li>Headset and base not paired—All LEDs blink</li> <li>Power save mode—Middle LED shows solid</li> </ul> <p>The base enters power save mode when there is no call source connectivity after 10 minutes.</p>

Number	Name	Description
2	Call status LEDs	<p>Alerts you to the call state of each source:</p> <ul style="list-style-type: none"> <li>• Active Source—Steady white</li> <li>• Incoming call on a selected source—Blinks green</li> <li>• Incoming call on an unselected source—Blinks green</li> <li>• Active call—Steady green</li> <li>• Call on an inactive source—Pulses green</li> </ul>
3	Mute status LED	Alerts you when your headset is muted.
4	Bluetooth status LED	<p>Alerts you to the Bluetooth status:</p> <ul style="list-style-type: none"> <li>• Paired with a call source—Steady white</li> <li>• Pairing mode—Blinking white</li> <li>• Searching for a call source—Pulse white</li> <li>• Bluetooth is Off—LED is off</li> </ul>

You use the source control buttons on the base to control the active source. Each source button corresponds with a specific connection on the multibase.


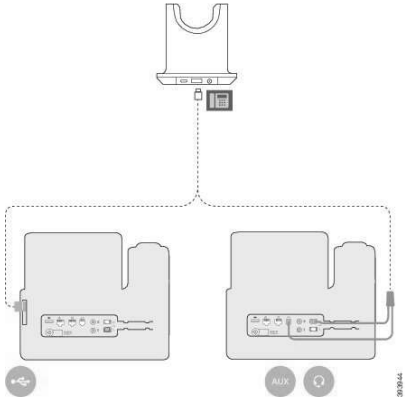

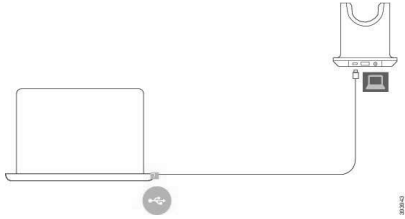
Even if you are connected to a source, the LED may not be lit. The source LED only lights when the source is selected or has an active call. For example, you may be properly connected to a Cisco IP phone, your PC, and your mobile phone through Bluetooth. However, the respective source LED is only lit when it is selected, has an active call, or has an incoming call. Press the source button to check if a source is properly connected. The source LED flashes three times if there is no connection.



You can alternate between active call sources.



Place an active call on hold before you change to a different call source. Calls on one call source aren't automatically put on hold when you switch to a different call source.

### Multibase source console

Source	Base icon	Connection
Desk phone		 <p>USB to USB cord or Y-cable</p> <p>The desk phone icon corresponds with the middle USB port at the back of the multibase. It is intended for connecting to Cisco IP phones but it will function properly with any compatible call device.</p>
Laptop		 <p>Micro-USB cord</p> <p>The laptop icon corresponds with the micro-USB port found on the back of the multibase. The micro-USB port is intended for connections with a laptop or desktop computer.</p>

Source	Base icon	Connection
Mobile		 <p>The mobile phone icon corresponds with the Bluetooth connection found at the back of the base. While the icon is of a mobile phone, the base will connect with any compatible Bluetooth call device.</p> <p>The multibase can save and remember up to four Bluetooth call devices.</p> <p>If you are listening to music through the Bluetooth source, the music pauses when you place the headset on the base.</p>


The multibase can connect up to three call sources through Bluetooth®, the USB connector, or the Y-cable. The multibase can save up to four Bluetooth devices. You can switch between call sources using the buttons on the multibase. You use the call control buttons on the headset to answer and end calls. When your headset is in the base, you automatically answer the call when you remove the headset from the base. You can return the headset to the base to end the call.

The multibase comes with the following connector cables:

- USB to USB cable: for Cisco IP phones with USB connectivity
- USB Y-cable: for Cisco IP phones without a USB port
- Mini USB cable: for PC or Mac.
- Mini USB to USB-C cable: available separately for PC or Mac devices.



The multibase for the Cisco Headset 560 Series is incompatible with Cisco IP Phone 7800 Series phones using Power over Ethernet (PoE). Use the external power supply if you intend to connect the multibase.

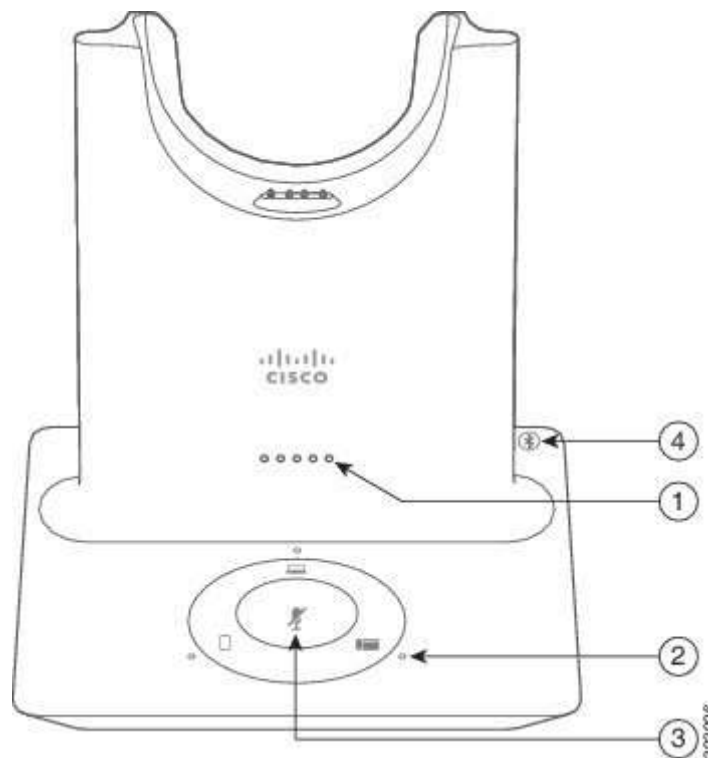

***Multibase LEDs***

### **Multibase LEDs**

Number	Name	Description
1	Battery status LED	<p>Indicates the headset battery charge and base status:</p> <ul style="list-style-type: none"> <li>Headset battery strength—LEDs blink and change to solid as the battery charges</li> <li>Headset update in progress—LEDs blink in sequence, left to right</li> <li>Headset and base not paired—All LEDs blink</li> <li>Power save mode—Middle LED shows solid</li> </ul> <p>The base enters power save mode when there is no call source connectivity after 10 minutes.</p>



Number	Name	Description
2	Call status LEDs	<p>Alerts you to the call state of each source:</p> <ul style="list-style-type: none"> <li>• Active Source—Steady white</li> <li>• Incoming call on a selected source—Blinks green</li> <li>• Incoming call on an unselected source—Blinks green</li> <li>• Active call—Steady green</li> <li>• Call on an inactive source—Pulses green</li> </ul>
3	Mute status LED	Alerts you when your headset is muted.
4	Bluetooth status LED	<p>Alerts you to the Bluetooth status:</p> <ul style="list-style-type: none"> <li>• Paired with a call source—Steady white</li> <li>• Pairing mode—Blinking white</li> <li>• Searching for a call source—Pulse white</li> <li>• Bluetooth is Off—LED is off</li> </ul>

You use the source control buttons on the base to control the active source. Each source button corresponds with a specific connection on the multibase.


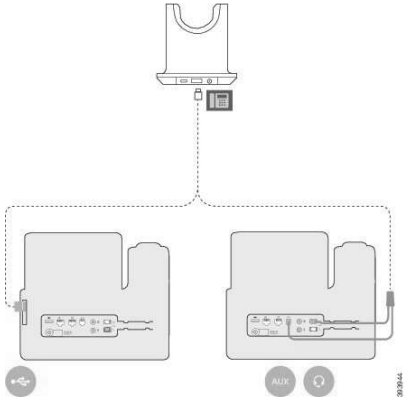

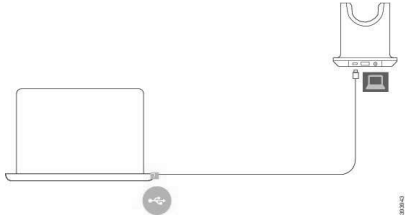
Even if you are connected to a source, the LED may not be lit. The source LED only lights when the source is selected or has an active call. For example, you may be properly connected to a Cisco IP phone, your PC, and your mobile phone through Bluetooth. However, the respective source LED is only lit when it is selected, has an active call, or has an incoming call. Press the source button to check if a source is properly connected. The source LED flashes three times if there is no connection.



You can alternate between active call sources.



Place an active call on hold before you change to a different call source. Calls on one call source aren't automatically put on hold when you switch to a different call source.

### Multibase source console


Source	Base icon	Connection
Desk phone		<div></div> <p>USB to USB cord or Y-cable</p> <p>The desk phone icon corresponds with the middle USB port at the back of the multibase. It is intended for connecting to Cisco IP phones but it will function properly with any compatible call device.</p>
Laptop		<div></div> <p>Micro-USB cord</p> <p>The laptop icon corresponds with the micro-USB port found on the back of the multibase. The micro-USB port is intended for connections with a laptop or desktop computer.</p>


Source	Base icon	Connection
Mobile		 <p>The mobile phone icon corresponds with the Bluetooth connection found at the back of the base. While the icon is of a mobile phone, the base will connect with any compatible Bluetooth call device.</p> <p>The multibase can save and remember up to four Bluetooth call devices.</p> <p>If you are listening to music through the Bluetooth source, the music pauses when you place the headset on the base.</p>

---

### Put a Call on Hold and Resume a Call

---

- ① Press **Call**  on your headset.
- ② Select the call that you want to resume.
- ③ Press **Call**.

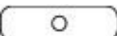- ① Press **Call**  on your headset.
- ② Select the call that you want to resume.
- ③ Press **Call**.

---

## Hold a Call and Answer an Incoming Call

---

Press  once.

 This call feature is unavailable to when connected to a Cisco IP Phone with Firmware 12.1(1).

Press  once.

 This call feature is unavailable to when connected to a Cisco IP Phone with Firmware 12.1(1).

---

## End a Call and Resume a Held Call

---

- ① Hold **Call**  on your headset until you hear a tone.
- ② Select the call that you want to resume.
- ③ Press **Call**.

- ① Hold **Call**  on your headset until you hear a tone.
- ② Select the call that you want to resume.

- ③ Press **Call**.

---

### End an Active Call and Answer an Incoming Call

---

① Hold **Call**  until you hear a tone.

② Press **Call**  once.

① Hold **Call**  until you hear a tone.

② Press **Call**  once.

---

Was this article helpful?

Yes, thank you!

Not really