

Nuscan 4500T

# **User Manual**

## Version Record

Version number	Version description	Version
SV1.0_ZS_HV1.0_PTY_MZ_P1_20190905_4.6.190823.250718	Speed up based on the first version, adaptation of optical structure	2019-9-5
SV1.1_ZS_HV1.0_PTY_P1_20191012_4.6.190823.250718	<ol style="list-style-type: none"> <li>1. Adapt new camera (long depth of field) based on the first version</li> <li>2. UPC narrow quiet zone</li> </ol>	2019-10-14
SV1.2_ZS_HV1.0_PTY_P1_20191021_4.6.190823.250718	<ol style="list-style-type: none"> <li>1. Website QR code filtering function</li> </ol>	2019-10-21
SV1.3_ZS_HV1.0_PTY_P2_20191022_4.6.191018.250718	<ol style="list-style-type: none"> <li>1. Modify volume</li> <li>2. Modify the duplicate code detection time</li> </ol>	2019-10-22
SV1.4_ZS_HV1.0_PTY_P2_20191023_4.6.191018.250718	<ol style="list-style-type: none"> <li>1. Website QR code filtering function</li> <li>2. Modify volume</li> <li>3. Modify the duplicate code detection time</li> </ol>	2019-10-23

SV1.5_ZS_HV1.0_PTY_P2_201 91028_4.6.191018.250718	1. Solve the problem of control transfer character and repeated code missing  2. Added the function of virtual	2019-10-28
SV1.6_ZS_HV1.0_PTY_P2_201 91028_4.6.191018.250718	1. Solve the problem that the “\n” appears in version number twice	2019-10-28
SV1.8_ZS_HV1.0_PTY_P2_201 91107_4.6.191018.250718	1. Add Portuguese (Portugal), Portuguese (Brazil) keyboard	2019-11-7
SV2.2_ZS_HV1.0_PTY_P4_HT _OLD_20191115_4.6.191018.25 0718	1. Solve the problem that the control escape character can not be returned.	2019-11-15
SV2.4_ZS_HV1.0_PTY_P5_HT _OLD_20191119_4.6.191115.25 0718	1. Version number printing too fast, abnormal.	2019-11-19
SV2.7_ZS_HV1.0_PTY_P7_HT _OLD_20191228_4.6.191115.2 50718	1. Added sleep mode 2. Add suffix before 3. Add data hiding of bar code 4. Add barcode category selection	2019-12-30

SV2.8_ZS_HV1.0_PTY_P7_HT _OLD_20191230_4.6.191115.2 50718	1. Modifying data hiding of barcode 2. Modify the disable one-dimensional code, will not output 128 code	2019-12-30
SV3.4_ZS_HV1.0_PTY_P9_HT _OLD_20200317.250718	1. UPC-A to EAN-13. 2. EAN-13 to ISSN 3. UPC-A/EAN/JAN Additional code	2020-3-24
SV3.5_ZS_HV1.0_PTY_P14_H T_OLD_20200422_4.7.20041 6.250718	It is applicable to the 14th batch of core boards	2020-4-23
SV3.7_ZS_HV1.0_PTY_P16_H T_OLD_20200511_4.7.200416 .250718	1. Solution suffix cannot be added 2. Solve the problem of losing digit when UPC-A transfers to EAN-13 3. Solve the problem that the conversion of EAN13 to ISSN does not work 4. Added barcode to get CPUID (for internal use only) 5. From mp6300y (2.7khz buzzer) to old camera before November 11,	2020-5-13

SV4.7_ZS_HV1.0_PTY_P20_H T_CHA1_20200817_4.7.20061 2.250718		2020-08-18
---	--	------------

---

## Table of content

Table of content.....	5
1. Product Introduction .....	11
1.1 Main feature .....	12
1.2 Unpacking.....	12
1.3 Communication port.....	12
1.4 Start-up, shutdown, standby and restart .....	13
1.5 Maintenance .....	13
1.6 Scanning Skill .....	13
Chapter2 System Setting .....	15
Introduction.....	15
<b>Programming Barcode</b> .....	15
<b>Use of Programming Code</b> .....	16
<b>Restore Factory Default</b> .....	17
<b>Inquiry Firmware Version</b> .....	17
<b>User Preference</b> .....	17
<b>Reread Timeout</b> .....	18
<b>Beeper</b> .....	19
Beeper Volume.....	19
Startup Beep .....	19
Beeper On/Off .....	20
Beeper Tone-Good Read .....	20

---

Beeper Duration - Good Read and Error.....	20
Beeper Tone-Error .....	21
<b>LED Illumination.....</b>	<b>21</b>
<b>Good Read LED.....</b>	<b>23</b>
<b>Firmware Upgrade.....</b>	<b>23</b>
<b>Chapter 3 Scan Mode.....</b>	<b>25</b>
Sense Mode (default) .....	25
Sense Mode.....	25
Decode Session Timeout .....	25
Set custom decode session timeout.....	27
Good Read Illumination LED Duration .....	27
Set Custom Good Read Illumination LED Duration .....	28
Continuous Mode.....	29
<b>Chapter Communication Interface .....</b>	<b>30</b>
<b>USB Interface.....</b>	<b>30</b>
USB HID (default) .....	30
USB HID Data Upload Method.....	30
Function Key Mapping .....	31
Function Key GS Replace .....	31
Virtual Keyboard .....	32
USB-Keyboard Transmit Speed .....	33
Set Custom Transmission Speed .....	33

---

---

Countries Keyboards .....	34
USB CDC .....	35
<b>RS232- 232 Interface</b> .....	35
RS485 (Not Enabled) .....	36
RS485 Device ID (Not Enabled) .....	36
Baud Rate .....	36
<b>Chapter 5 Data Format</b> .....	38
<b>Custom Prefix</b> .....	38
Enable/Disable Custom Prefix .....	38
Set Custom Prefix.....	39
<b>Custom Suffix</b> .....	39
Enable/Disable Custom Suffix .....	39
Set Custom Suffix.....	40
<b>CODE ID</b> .....	40
CODE ID Selection.....	41
Restore All CODE ID .....	41
Set Custom CODE ID.....	41
<b>AIM ID</b> .....	42
<b>Start Character</b> .....	42
<b>Terminating Character Suffix</b> .....	43
<b>Prefix/Suffix Sequence</b> .....	44
Prefix Sequence.....	44

---



---

Suffix Sequence.....	44
<b>Convert Case</b> .....	44
Data Formatter.....	45
Set Length Range for Start/End Filed.....	46
Chapter 6 Symbologies.....	47
<b>Introduction</b> .....	47
<b>Enable/Disable All Symbologies</b> .....	47
<b>Enable/Disable All 1D Symbologies</b> .....	47
<b>Enable/Disable All 2D Symbologies</b> .....	48
<b>Inverse BarCode</b> .....	48
<b>Codabar</b> .....	48
Enable/Disable Codabar .....	48
Codabar Start/Ending Character .....	49
Set Length Range for Codabar .....	49
<b>Code 39</b> .....	51
Enable/Disable Codo 39 .....	51
Code 39 Check Digit .....	51
Code 39 Full ASCII.....	51
Set Length Range for Code 39 .....	52
<b>Code 32</b> .....	53
Interleaved 2 of 5 (ITF5) .....	53
Enable/Disable Interleaved 2 of 5 (ITF5) .....	53

---

---

Interleaved 2 of 5 (ITF5) Check Digit .....	53
Set Fixed Length for Interleaved 2 of 5 (ITF5) .....	54
Set Length Range for Interleaved 2 of 5 .....	55
<b>Industrial 2 of 5</b> .....	56
Enable/Disable Industrial 2 of 5 .....	56
Set Length Range for Industrial 2 of 5.....	56
<b>Matrix 2 of 5</b> .....	57
Enable/Disable Matrix 2 of 5 .....	57
Set Length Range for Matrix 2 of 5.....	57
<b>Code 93</b> .....	58
Enable/DisableCode 93.....	58
Set Length for Code 93.....	58
<b>Code 11</b> .....	59
Enable/Disabl Code 11.....	59
Code 11 Check Digit Transmission.....	59
Code 11 Check Digit.....	60
<b>Code 128</b> .....	61
Enable/Disable Code 128 .....	61
Set Length Range for Code 128 .....	61
<b>GS1-128</b> .....	62
<b>ISBT 128 (Not Enabled)</b> .....	62
<b>UPC-A</b> .....	62

---

---

Enable/Disable UPC-A .....	62
UPC-A Check Digit .....	62
Convert UPC-A to EAN-13.....	63
<b>UPC-E</b> .....	63
Enable/Disable UPC-E.....	63
UPC-E Check Digit.....	63
Convert UPC-E to UPC-A .....	64
<b>EAN/JAN-8</b> .....	64
<b>EAN/JAN-13</b> .....	64
Enable/Disable EAN/JAN-13 .....	64
Convert EAN13 to ISBN.....	64
Convert EAN13 to ISSN .....	65
<b>UPC/EAN/JAN Supplemental</b> .....	65
<b>GS1 DataBar (RSS14) (Stacked)</b> .....	65
Enable/Disable GS1 DataBar .....	65
Enable/Disable GS1 DataBar Limited .....	66
Enable/Disable GS1 DataBar Expanded.....	66
GS1 DATABAR(RSS14) Preamble (Not Enabled) .....	66
GS1 DATABAR LIMITED Preamble (Not Enabled) .....	66
<b>PDF417</b> .....	67
Micro PDF417 .....	67
<b>QR</b> .....	67

---

---

QR Enable/Disable.....	67
QR with URL .....	67
<b>Micro QR</b> .....	68
<b>Data Matrix</b> .....	68
<b>Aztec</b> .....	68
<b>Standard 2 of 5 (Not Enabled)</b> .....	68
Plessey (Not Enabled) .....	68
<b>Msiplsey</b> .....	69
Msiplsey Check Digit.....	69
Set Length Range for Msiplsey.....	70
<b>Hanxi code</b> .....	70
<b>Appendix</b> .....	72
<b>Appendix1 Data and Digital Barcodes</b> .....	72
<b>Appendix2 Symbology Table</b> .....	75
<b>Appendix3 Command Format Description</b> .....	77
<b>Appendix4 ASCII Character and Keystroke Table</b> .....	79
<b>Appendix5 ASCII Table</b> .....	82

## 1. Product Introduction

This user guide applies to Nuscan 4500T, which identify 1D&2D barcodes by 2D image scanning pattern. The scanners above are of strong identification capability, and support automatic continuous scanning mode with fast and flexible scanning speed.

---

In this chapter, we will introduce the instruction of scanner with pictures, please compare to the scanner you bought when reading this user guide, which is good for your understanding. This chapter applies to regular users, maintenance personnel, and software developers.

### 1.1 Main feature

- \* Complete independent research and development, possessing the complete set of patent, plug and play without the need to install driver.

- \* Wide voltage design to avoid the data can't be transmitted due to voltage fluctuation.

- \* 32-bit master chip equipped with patented software, the scanner can smoothly decode reflective, wrinkled, blurred, and colorful barcode, and can also normally scan in light and dark environment.

- \* Adopt all tantalum capacitors and anti-oxidation optical technology, avoiding the problem of performance declining after long-term using.

### 1.2 Unpacking

Open the package and take out the products and accessories. Check whether all items are complete and whether there are damaged parts according to the packing list. If there are any damaged or missing parts, please keep the original packaging and contact your supplier for after-sales service.

 
### 1.3 Communication port

The scanner must be connected to a host to operate. Host can be a PC, POS machine, intelligent terminal with USB or RS-232 interface.

---

USB

USB interface on  
host



#### 1.4 Start-up, shutdown, standby and restart

Start-up: Connect host computer with scanner, which will automatically start-up and in working state.

Shutdown: Remove the data cable which is connected with scanner; remove the USB which is connected with host computer; remove the power adapter which is inserted into RS-232 serial port.

Standby: Scanner with automatic sleep standby function, if 30 minutes without work it will be in standby mode, but it will automatically start-up when barcode approach.

Restart: If the scanner crashes or doesn't respond, please switch it off and restart.

#### 1.5 Maintenance

\* The window must be kept clean, the supplier do not bear the guarantee responsibility due to the improper maintenance.

\* Avoid the window being wear and tear or scratched by hard object

\* Use the hairbrush to remove the stain on the window

\* Clean the window with a soft cloth, such as lens cleaning cloth

\* Spraying liquid onto the window is prohibited.

\* Prohibit any cleaning solvents, except for the cleaning water.

#### 1.6 Scanning Skill

---

If the barcode is small, it should be closer to the scanning window; if the barcode is large, it should be far away from the scanning window a little more, thus easier to be read correctly.

If the barcode is highly reflective (for example, the coated surface), you may need to tilt the barcode at an angle to successfully scan it.

Barcode scanning example:



## Chapter2 System Setting

### Introduction

The MP6300Y can be configured by scanning programming barcodes. All user programmable features/options are described along with their programming barcodes/commands in the following sections. This programming method is most straightforward. However, it requires manually scanning barcodes. As a result, errors are more likely to occur.

### Programming Barcode



The figure above is an example that shows you the programming barcode for the Enter Setup function:

1. The programming barcode.
2. The description of feature/function.



## Use of Programming Code

Scanning the Enter Setup barcode can enable the scanner to enter the setup mode.

Then you can scan a number of

programming barcodes to configure your scanner. To exit the setup mode, scan the

Exit Setup barcode or a non-programming

barcode, or reboot the scanner



Enter Setup (default)



Exit Setup

---

## Restore Factory Default



Restore Factory Default

 
## Inquiry Firmware Version



Inquiry Firmware Version

## User Preference

User can set up his/her preference of the scanner.



Save User Preference



Restore to User Preference Default

---


## Reread Timeout

 Reread Timeout can avoid undesired rereading of same barcode in a given period of time. This feature is only applicable to the Sense and Continuous modes.

It's programmable as 500ms, 750ms, 1s and 2s, 500ms is the default value.



500ms (default)



750ms



1s



2s

---

## Beeper

 
The scanner issues different beeps to indicate status: Good-Read Beep, Error Beep, Startup Beep and Programming Beep.

### Beeper Volume

For setting up Good Read Beep and Error Beep only.




High Volume (default)



Low Volume

### Startup Beep

 The scanner can be programmed to beep when it is powered on. Scan the Off barcode if you do not want a power on beep.



On (default)



Off

---

## Beeper On/Off

Setting for "Good Read-Beep" and Error Beep"

 


On (default)



Off

## Beeper Tone-Good Read



Low Tone (default)



Medium Tone



High Tone

## Beeper Duration - Good Read and Error

 


Long Duration (default)




Short Duration


Beeper Tone-Error



Low Tone (default)

 

Medium Tone

 

High Tone

## LED Illumination

Normal (default) : LED on scanner are turned on during image capture;

Always on: Illumination LED on the scanner keep on after the scanner is powered on.

Always off: Illumination LED on the scanner are off all the time



Normal (default)



Always on



Always off

---

## Good Read LED

The LED can be programmed to be On or Off to indicate good read.



On (default)



Off

## Firmware Upgrade

Please connect the scanner with a USB cable for firmware upgrade.



Firmware Upgrade

### Example

Steps to upgrade firmware :

- 1.Plug the scanner with a USB cable ;
2. Scan Firmware Upgrade barcode to enter USB driver mode and wait for USB driver showing up on the computer;
- 3.Copy the firmware file into the USB driver;
4. Eject the USB driver and replug the usb cable to restart up the scanner and the scanner will start the firmware upgrade procedure.
- 5.The scanner beeps after firmware upgrading.





If the upgrade is successful, the factory settings will be restored, and users can reset the scanner according to their needs.

If the upgrade fails, you need to re-power on and restart the scanner and perform the above upgrade steps again.

## Chapter 3 Scan Mode

### Sense Mode (default)

#### Sense Mode

 
The scanner activates a decode session every time it detects a barcode presented to it. The decode session continues until a barcode is decoded or the decode session timeout expires. Reread Timeout can avoid undesired rereading of same barcode in a given period of time.



Sense Mode

#### Decode Session Timeout

This parameter sets the maximum time decode session continues during a scan attempt. It is programmable from 3s to 10s. The default setting is 3s.




Short (default)



Medium



Long

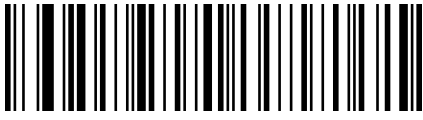

Custom Decode Session Timeout

---

## Set custom decode session timeout

It's programmable in 0.1s increments from 1 to 999. The default setting is 3s.



Set Custom Decode Session Timeout

### Example

Set the decode session timeout to 10s:

- 1、 Scan Set Custom Decode Session Timeout Barcode
- 2、 Scan the numeric barcodes: "1""0" from the "Digital barcodes" section in Appendix1.
- 3、 Scan the Save barocde in Appendix1

## Good Read Illumination LED Duration

This parameter sets the amount of time that the Good Read LED to remain on following a good read.

It's programmable as Short, Medium and Long, corresponding to 3s, 7s and 10s. The default setting is 0s.



Short



Medium



Long



Set up Custom Duration

## Set Custom Good Read Illumination LED Duration

This parameter sets the amount of custom time that the Good Read LED to remain on following a good read. It is programmable in 0.1s increments from 1 to 999.



Set Custom Good Read Illumination LED Duration

### Example

Set the custom duration as 10s:

- 1、 Scan Set Custom Good Read LED Duration Barcode.
- 2、 Scan numeric barcode "1" "0" from the "Digital Barcodes" section in Appendix1
- 3、 Scan Save barcode in Appendix 1

## Level Mode

A trigger pull activates a decode session. The decode session continues until a barcode is decoded or you release the trigger



Level Mode

---

## Continuous Mode

The scanner automatically starts one decode session after another. To suspend/resume barcode reading, simply press the trigger. Reread Timeout can avoid undesired rereading of same barcode in a given period of time.



Continuous Mode

# Chapter Communication Interface

## USB Interface

USB HID (default)

When the scanner is connected to the USB port on a host device, you can enable the USB HID Keyboard feature by scanning the barcode below. Then scanner's transmission will be simulated as USB keyboard input. The Host receives keystrokes on the virtual keyboard. It works on a Plug and Play basis and no driver is required.



USB HID

### USB HID Data Upload Method



Before turning on this function, make sure that "USB HID Mode" is turned on.



PC Software



USB-Keyboard (default)



Both PC Software and USB-Keyboard

---

## Function Key Mapping

This setting is aimed for USB-Keyboard Mode. Please Refer to Appendix 《ASCII Table》 .



Enable

 


Disable (default)

## Function Key GS Replace



Do not replace (default)



Replace as Ç



Replace as |



Replace as ^]



Replace as ]



Replace as <GS>



---

## Virtual Keyboard

Virtual keyboard Enable (mode one): The characters between 0x20 ~ 0xFF are output using the virtual keyboard which is not supported under the current keyboard layout, and the characters between 0x00 ~ 0x1F are output according to the definition of control characters.

Virtual keyboard Enable (mode two): All characters between 0x20 and 0xFF are output using virtual keyboard, and characters between 0x00 and 0x1F are output according to the definition of control characters.

Virtual keyboard Enable (mode three): All characters used between 0x00 and 0xFF are output using virtual keyboard.



Disable Virtual Keyboard (default)



Enable Virtual Keyboard (Mode 1)



Enable Virtual Keyboard (Mode 2)



Enable Virtual Keyboard (Mode 3)

---

 
## USB-Keybaord Transmit Speed



Low Speed



Medium Speed



High Speed (default)



Set Custom Speed

## Set Custom Transmission Speed

The transmission speed can be set up from 2ms to 50ms.



Set Custom Transmission Speed (default 10ms)

### Example

Set custom transmission speed to 10ms:

1. Scan Set Custom Transmission Speed barcode.
2. Scan numeric barcode "1" "0" from the "Digital Barcodes" section in appendix 1.
3. Scan Save barcode in appendix 1.

---

 
## Countries Keyboards



USA-English (default)



Italian



Spanish



Portuguese-Portugal



French-France



German-Austria



Turkish Q



Turkish F



English-UK

 


Japanese



German-Switzerland

USB CDC



USB CDC

## RS232- 232 Interface

Serial communication interface is usually used when connecting the scanner to a host device (like PC, POS). However, to ensure smooth communication and accuracy of data, you need to set communication parameters (including baud rate, parity check, data bit and stop bit) to match the host device



RS232

---

RS485 (Not Enabled)

RS485 Device ID (Not Enabled)

### Baud Rate

Baud rate is the number of bits of data transmitted per second. Set the baud rate to match the host requirements. Default is 9600bps.



Baud Rate4800



Baud Rate9600



Baud Rate19200



Baud Rate38400



Baud Rate57600



Baud

---

## Parity Check

Set the parity type to match the host requirements.

Odd Parity: If the data contains an odd number of 1 bits, the parity bit value is set to 0.

Even Parity: If the data contains an even number of 1 bits, the parity bit value is set to 0.

None: Select this option when no parity bit is required.

Stop Bit: The stop bit(s) at the end of each transmitted character marks the end of transmission of one character and prepares the receiving device for the next character in the serial data stream. Set the number of stop bits to match the host requirements.



Data Bit8, Stop Bit1, No Parity (default)



Data Bit8, Stop Bit1, Odd Parity



Data Bit8, Stop Bit1, Even Parity



Data Bit8, Stop Bit2, No Parity



Data Bit8, Stop Bit2, Odd Parity



 
Data Bit8, Stop Bit2, Even Parity

## Chapter 5 Data Format

### Custom Prefix

Enable/Disable Custom Prefix

If custom prefix is enabled, you are allowed to append to the data a user-defined prefix that cannot exceed 10 characters. For example, if the custom prefix is "AB" and the barcode data is "123", the Host will receive "AB123".



Enable Custom Prefix



Disable Custom Prefix (default)



Restore All Custom Prefix

---

## Set Custom Prefix

To set a custom prefix, scan the Set Custom Prefix barcode then the numeric barcodes corresponding to the hexadecimal value of a desired prefix then the Save barcode.



Set Custom Prefix

### Example

Set custom prefix "a" (Hex value is 0x61) to all symbologies( CODE ID value is 0x99)

- 1.. Scan Set Custom Prefix barcode.
- 2.. Scan numeric barcode "9" "9" "6" "1" from the "Digital Barcodes" section in Appendix 1
3. Scan Save barcode in Appendix 1
4. Scan Enable Custom Prefix barcode.

## Custom Suffix

### Enable/Disable Custom Suffix

If custom suffix is enabled, you are allowed to append to the data a user-defined suffix that cannot exceed 10 characters. For example, if the custom suffix is "AB" and the barcode data is "123", the Host will receive "123AB".



Enable Custom Suffix





 
Disable Custom Suffix (default)



Restore All Custom Suffix

## Set Custom Suffix

To set a custom prefix, scan the Set Custom Suffix barcode then the numeric barcodes corresponding to the hexadecimal value of a desired prefix then the Save barcode.



Set Custom Suffix

### Example

Set custom suffix "a" (Hex value is 0x61) to all symbologies( CODE ID value is 0x99)

- 1.. Scan Set Custom Suffix barcode.
- 2.. Scan numeric barcode "9" "9" "6" "1" from the "Digital Barcodes" section in Appendix 1
3. Scan Save barcode in Appendix 1
4. Scan Enable Custom Suffix barcode.

## CODE ID

Code ID can also be used to identify barcode type. Unlike AIM ID, Code ID is user programmable. Code ID can only consist of one letters.

---

## CODE ID Selection

CODE ID Prefix: CODE ID before barcode

CODE ID Suffix: CODE ID after barcode



Enable CODE ID (default)



CODE ID Prefix



 
CODE ID Suffix

## Restore All CODE ID



Restore All CODE ID

## Set Custom CODE ID



Set Custom CODE ID

### Example

Modify Codabar (CODE ID:0x61) CODE ID to be "Y" (Hex:  
0x59) :

1.Scan Set Custom CODE ID barcode

2.Scan numeric barcode "6" "1" "5" "9" from the "Digital Barcodes"

---

section in Appendix 1

3.Scan Save barcode in Appendix 1

## AIM ID

AIM (Automatic Identification Manufacturers) ID defines symbology identifier (For the details, see the “AIM ID Table” section in Appendix). If AIM ID prefix is enabled, the scanner will add the symbology identifier before or after the scanned data after decoding



AIM ID is not user programmable

Disable AIM ID (default) : Do Not output AIM ID.

AIM ID Prefix: AIM ID before scanned data.

AIM ID Suffix: AIM ID after scanned data.



Disable AIM ID (default)



Enable AIM ID Prefix



Enable AIM ID Suffix

## Start Character



No Start Character (default)



 
Set Start Character as STX

## Terminating Character Suffix

A terminating character such as carriage return (CR) or carriage return/line feed pair (CRLF) can only be used to mark the end of data, which means nothing can be added after it.



Set Terminating Character Suffix to CR  
(default)



Set Terminating Character Suffix to LF



Set Terminating Character Suffix to CRLF



Set Terminating Character Suffix to LAB



Set Terminating Character Suffix to ETX



Disable Terminating Character Suffix

---

## Prefix/Suffix Sequence

### Prefix Sequence



Start Character+CODE ID+AIM ID+Custom Prefix (default)



Start Character+Custom Prefix+CODE ID+AIM ID

### Suffix Sequence



Custom Suffix+CODE ID+AIM ID+Terminating Character (default)



CODE ID+AIM ID+Custom Suffix+Terminating Character

## Convert Case



No Convert Case (default)



Convert



Convert All to Lower Case



Convert All to Upper Case

---

## Data Formatter



Prefix or suffix will be outputted regularly.

Data output selection

Transmit Original data (default): The barcode data will not be modified.

Transmit Start-Field : Only transmit the start-Field data and the length will be set up by Set Length for Start Field barcode. If the set length is greater than the length of the read character string, the original data will be transmitted. For example: if the string "1234567890" is read and the length is set to 3, the final output data is "123".

Transmit Middle Field: Only transmit the Middle Field and the length will be set up by Set length for Start Field barcode and Set Length for End Field barcode. If the sum of the two length values is greater than the length of the read character string, the output is empty. For example: if the character string "1234567890" is read, and the start/end field lengths are set to 3 and 4 respectively, the final output data is "456".

Transmit End Filed: Only transmit the End-Field data and the length will be set up by Set Length for End Field barcode.. If the set length is greater than the length of the read character string, the original data will be output. For example: if the character string "1234567890" is read and the length is set to 3, the final output data is "890".

Transmit Start Field and end Field: The transmitted data is limited according to the data of "Set Length for Start-Filed" and "Set Length for End-Field". If the sum of the two length values is greater than the length of the read character string, the original data will be transmitted. For example: if the character string "1234567890" is read, and the start/end field lengths are set to 3 and 4 respectively, the final transmitted data is

---

"1237890".



Original Data(default)



Transmit Start-Field Data



Transmit Middle Field



Transmit End Filed



Transmit Start Field and End

## Set Length Range for Start/End Filed

Default value is 1, Range: 1~ 7900. When it is set up to be 0, this function will be invalid.

Example: Set Start Field Length as 12

1. Scan Set Length Range for Start Field barcode.
2. Scan numeric barcode "1"2" from the Digital Barcodes section in Appendix 1.
3. Scan Save barcode in Appendix 1.



Set Length Range for Start Field



Set Length Range for End

# Chapter 6 Symbologies

## Introduction

Every symbology (barcode type) has its own unique attributes. This chapter provides programming barcodes for configuring the scanner so that it can identify various symbologies. It is recommended to disable those that are rarely used to increase the efficiency of the scanner.

## Enable/Disable All Symbologies

If the Disable All Symbologies feature is enabled, the scanner will not be able to read any non-programming barcodes except the programming barcodes.



Enable All Symbologies



Disable All Symbologies

## Enable/Disable All 1D Symbologies



Enable All 1D Symbologies



Disable All 1D Symbologies



---

## Enable/Disable All 2D Symbologies



Enable All 2D Symbologies



Disable All 2D Symbologies

## Inverse BarCode



Only Decode Regular BarCodes (default)



Decode Regular and Inverse BarCodes Both



Only Decode Inverse Barcode (Not Enabled)

## Codabar

Enable/Disable Codabar



Enable (default)



Disable

---

## Codabar Start/Ending Character



Enable



Disable (default)

## Set Length Range for Codabar



Any 1D barcode length can not exceed 127 characters. If minimum length is set to be greater than maximum length, the scanner only decodes Codabar barcodes with either the minimum or maximum length. If minimum length is same as maximum length, only Codabar barcodes with that length are to be decoded.



Set the Minimum



Set the Maximum Length



Set the scanner to decode Codabar barcodes containing between 8 and 12 characters:

1. Scan the Set the Minimum Length barcode.
2. Scan the numeric barcode "8" from the "Digit Barcodes"

tion in Appendix.

---

3. Scan the Save barcode from the "Save/Cancel Barcodes" section in Appendix.

4. Scan the Set the Maximum Length barcode.

5. Scan the numeric barcodes "1" and "2" from the "Digit Barcodes" section in Appendix.

6. Scan the Save barcode from the "Save/Cancel Barcodes" section in Appendix.

 
---

## Code 39

Enable/Disable Code 39



Enable (default)



Disable

Code 39 Check Digit



Disable Check Digit (default)



Enable and do not transmit check digit



Enable and transmit check digit

Code 39 Full ASCII



Disable (default)



Enable

---

## Set Length Range for Code 39



Set the Minimum



Set the Maximum Length

### Example

Set the scanner to decode Code39 barcodes containing between 8 and 12 characters:

7. Scan the Set the Minimum Length barcode.
8. Scan the numeric barcode "8" from the "Digit Barcodes" section in Appendix.
9. Scan the Save barcode from the "Save/Cancel Barcodes" section in Appendix.
10. Scan the Set the Maximum Length barcode.
11. Scan the numeric barcodes "1" and "2" from the "Digit Barcodes" section in Appendix.
12. Scan the Save barcode from the "Save/Cancel Barcodes" section in Appendix.

---

## Code 32

To enable code32, code39 need to be enabled first.



Enable (default)



Disable

## Interleaved 2 of 5 (ITF5)

Enable/Disable Interleaved 2 of 5 (ITF5)



Enable (default)

 


Disable

Interleaved 2 of 5 (ITF5) Check Digit



Disable Check Digit (default)




Enable and do not transmit check digit



Enable and Transmit Check Digit

---

 Set Fixed Length for Interleaved 2 of 5 (ITF5)



Any Length (4-128 位) (default)



8 Characters



12 Characters



16 Characters



20 Characters



24 Characters



6 Characters



10 Characters



14 Characters



18 Characters



22 Characters



Set Custom Length for ITF5

## Set Length Range for Interleaved 2 of 5

Need to scan Set Custom Length for ITF5 barcode first



Set the Minimum Length (4~128)



Set the Maximum Length (4~128 )

### Example

Set the scanner to decode ITF25 barcodes containing between 8 and 12 characters:

- 1.Scan the Set the Minimum Length barcode.
- 2.Scan the numeric barcode "8" from the "Digit Barcodes" section in Appendix.
- 3.Scan the Save barcode from the "Save/Cancel Barcodes" section in Appendix.
- 4.Scan the Set the Maximum Length barcode.
- 5.Scan the numeric barcodes "1" and "2" from the "Digit Barcodes" section in Appendix.
- 6.Scan the Save barcode from the "Save/Cancel Barcodes" section in Appendix.



---

## Industrial 2 of 5

Enable/Disable Industrial 2 of 5



Enable (default)



Disable

Set Length Range for Industrial 2 of 5



Set the Minimum Length (4~128)



Set the Maximum Length (4~128 )

### Example

Set the scanner to decode Industrial 2 of 5 barcodes containing between 8 and 12 characters:

1. Scan the Set the Minimum Length barcode.
2. Scan the numeric barcode "8" from the "Digit Barcodes" section in Appendix.
3. Scan the Save barcode from the "Save/Cancel Barcodes" section in Appendix.

- 
4. Scan the Set the Maximum Length barcode.
  5. Scan the numeric barcodes "1" and "2" from the "Digit Barcodes" section in Appendix.
  6. Scan the Save barcode from the "Save/Cancel Barcodes" section in Appendix.

## Matrix 2 of 5

Enable/Disable Matrix 2 of 5



Enable (default)



Disable

Set Length Range for Matrix 2 of 5



Set the Minimum Length (4~128 )



Set the Maximum Length (4~128)

### Example

Set the scanner to decode Matrix 2 of 5 barcodes containing between 8 and 12 characters:

1. Scan the Set the Minimum Length barcode.
2. Scan the numeric barcode "8" from the "Digit Barcodes" section in Appendix.

---

3. Scan the Save barcode from the "Save/Cancel Barcodes" section in Appendix.

4. Scan the Set the Maximum Length barcode.

5. Scan the numeric barcodes "1" and "2" from the "Digit Barcodes" section in Appendix.

6. Scan the Save barcode from the "Save/Cancel Barcodes" section in Appendix.

## Code 93

Enable/Disable Code 93



Enable (default)



Disable

Set Length for Code 93



Set the Minimum Length (1~127 )



Set the Maximum Length (1~127)

### Example

Set the scanner to decode Code93 barcodes containing between 8 and 12 characters:

1. Scan the Set the Minimum Length barcode.

- 
2. Scan the numeric barcode "8" from the "Digit Barcodes" section in Appendix.
  3. Scan the Save barcode from the "Save/Cancel Barcodes" section in Appendix.
  4. Scan the Set the Maximum Length barcode.
  5. Scan the numeric barcodes "1" and "2" from the "Digit Barcodes" section in Appendix.
  6. Scan the Save barcode from the "Save/Cancel Barcodes" section in Appendix.

## Code 11

Enable/Disable Code 11



Enable

 


Disable (default)

Code 11 Check Digit Transmission



Transmit Code 11 Check Digit



Do not Transmit Code 11 Check Digit (default)

---

## Code 11 Check Digit



Disable Check Digit (default)



One Check Digit

 


Two Check Digit

## Set Length Range for Code 11



Set the Minimum Length (1~127)



Set the Maximum Length (1~127)

### Example

Set the scanner to decode Code 11 barcodes containing between 8 and 12 characters:

1. Scan the Set the Minimum Length barcode.
2. Scan the numeric barcode "8" from the "Digit Barcodes" section in Appendix.
3. Scan the Save barcode from the "Save/Cancel Barcodes" section in Appendix.
4. Scan the Set the Maximum Length barcode.
5. Scan the numeric barcodes "1" and "2" from the "Digit Barcodes" section in Appendix.

---

6. Scan the Save barcode from the "Save/Cancel Barcodes" section in Appendix.

## Code 128

Enable/Disable Code 128



Enable (default)



Disable

Set Length Range for Code 128



Set the Minimum Length (1~127)



Set the Maximum Length (1~127)

### Example

Set the scanner to decode Code 129 barcodes containing between 8 and 12 characters:

1. Scan the Set the Minimum Length barcode.
2. Scan the numeric barcode "8" from the "Digit Barcodes" section in Appendix.
3. Scan the Save barcode from the "Save/Cancel Barcodes" section in Appendix.
4. Scan the Set the Maximum Length barcode.

---

5. Scan the numeric barcodes "1" and "2" from the "Digit Barcodes" section in Appendix.

6. Scan the Save barcode from the "Save/Cancel Barcodes" section in Appendix.

## GS1-128



Enable (default)



Disable

## ISBT 128 (Not Enabled)

### UPC-A

Enable/Disable UPC-A



Enable (default)



Disable

UPC-A Check Digit



Transmit UPC-A Check Digit (default)



 
Do not Transmit UPC-A Check

Digit

Convert UPC-A to EAN-13



Covert UPC-A to EAN-13



Do Not Convert UPC-A to EAN-13(default)

## UPC-E

Enable/Disable UPC-E



Enable (default)



Disable

UPC-E Check Digit



Transmit Check Digit (default)



Do not Transmit Check Digit



---

Convert UPC-E to UPC-A



Convert UPC-E to UPC-A

 


Do not Convert UPC-E to UPC-A (default)

## **EAN/JAN-8**



Enable (default)



Disable

## **EAN/JAN-13**

Enable/Disable EAN/JAN-13



Enable (default)



Disable

Convert EAN13 to ISBN



Convert ISBN to ISBN



Do not Convert ISBN to ISBN (default)

---

Convert EAN13 to ISSN

 


Convert ISBN to ISSN



Do not Convert ISBN to ISBN (default)


## UPC/EAN/JAN Supplemental



Ignore UPC/EAN/JAN Supplemental (default)



 Decode UPC/EAN/JAN Supplemental



Autodiscriminate UPC/EAN/JAN with Supplemental

## GS1 DataBar (RSS14) (Stacked)

Enable/Disable GS1 DataBar



Enable (default)



Disable

---

Enable/Disable GS1 DataBar Limited

 


Enable (default)



Disable

Enable/Disable GS1 DataBar Expanded



Enable (default)



Disable

GS1 DATABAR(RSS14) Preamble (Not Enabled)

GS1 DATABAR LIMITED Preamble (Not Enabled)

---

## PDF417



Enable (default)



Disable

## Micro PDF417



Enable (default)



Disable

## QR

QR Enable/Disable



Enable (default)



Disable

QR with URL



Enable



Disable (default)

---

## Micro QR

 


Enable (default)



Disable

## Data Matrix



Enable (default)



Disable

## Aztec



Enable (default)



Disable

## Standard 2 of 5 (Not Enabled)

## Plessey (Not Enabled)

---

## Msiplessey

Enable/Disable msiplessey



Enable (default)



Disable

Msiplessey Check Digit



Disable Check Digit



One Check Digit MOD10 (default)



Two Check Digit MOD10/MOD10



Two Check Digit MOD10/MOD11

---

## Set Length Range for Msiplessey



Set the Minimum Length (1~127)



 
Set the Maximum Length (1~127)

### Example

Set the scanner to decode Msiplessey barcodes containing between 8 and 12 characters:

1. Scan the Set the Minimum Length barcode.
2. Scan the numeric barcode "8" from the "Digit Barcodes" section in Appendix.
3. Scan the Save barcode from the "Save/Cancel Barcodes" section in Appendix.
4. Scan the Set the Maximum Length barcode.
5. Scan the numeric barcodes "1" and "2" from the "Digit Barcodes" section in Appendix.
6. Scan the Save barcode from the "Save/Cancel Barcodes" section in Appendix.

## Hanxi code



Enable (default)











Disable

















# Appendix

## Appendix1 Data and Digital Barcodes

	
	0
	
1	
	
	2
	
3	
	
	4
	
5	
	
	6
	
7	

	
	8
	
9	
	
	A
	
B	
	
	C
	
D	
	
	E
	
F	
	
	Cancel Last String
	
Cancel Current Setting	

---

	
	Cancel Last Digit
	
Save	

## Appendix2 Symbology Table

Symbology	CODE ID		AIM ID
	HEX	Code ID	ID
All Symbology	0x99		
Codabar	0x61	a	]F0
Code 11	0x68	h	]H1
Code 128(Including GS1 128)、GS1-128	0x6A	j	]C0
ISBT 128	0x6A	j	]C0
Code 32	0x3C	<	]X0
Code 39	0x62	b	]A0
Code 93	0x69	i	]G0
EAN			
EAN-13(including ISBN)	0x64	d	]E0
EAN-8	0x44	D	]E4
GS1			
GS1 DataBar	0x79	y	]e0
GS1 DataBar Limited	0x7B	{	]e0
GS1 DataBar Expanded	0x7D	}	]e0
2 of 5			
Interleaved 2 of 5	0x65	e	]I0
Matrix 2 of 5	0x6D	m	]X0
Straight 2 of 5 Industrial	0x66	f	]S0

MSI	0x67	g	]M1
UPC			
UPC-A	0x63	c	]E0
UPC-E	0x45	E	]E0
Aztec Code	0x7A	z	]z0
Han Xin	0x48	H	]X0
Codablock F	0x6A	j	]C0
Data Matrix	0x77	w	]d1
PDF417、 Micro PDF417	0x72	r	]L0
QR、 Micro QR	0x73	s	]Q1

## Appendix3 Command Format Description

Head	DEV ID	CMD	Status	Package No.	Data Length	Data	CRC16	End
2byte	1 byte	3 byte	1 byte	2 byte	2 byte	N byte	2 byte	2 byte
0x0057								0x4150
Description	<p>1.For multi-byte data types, the low byte is before the high byte (little endian mode), (for example, the data length of 2 bytes is 0x0001, and the actual sending order is 01 00 instead of 00 01). The maximum length of the command is 64byte. If a command with a length greater than 64byte is sent, it will be sent in packets.</p>							
	<p>2.head: The Master is 0x57 0x00, and the Slave is 0x31 0x00.</p>							
	<p>3.DEV ID: The default value is 0x00, which is used to distinguish different devices in the 485 serial port multi-machine communication</p>							
	CMD	[23:16]	《二、菜单设置条码》“一级菜单”栏的最后一位数字，内容空则为 0。					
		[15:8]	《二、菜单设置条码》“二级菜单”栏的最后一位数字，内容空则为 0。					
		[7:0]	《二、菜单设置条码》“三级菜单”栏的最后一位数字，内容空则为 0。					
	CMD Status	[7:4]	When the value is 0x0, the Command is a Programming Command。					
			When the value is 0x1, the Command is a Inquiry Command。					
	:	[3:0]	When the value is 0x0, Command is normal.					
			When the value is 0x1, Command is abnormal.					
<p>6.Package No.: Initial value is 0x00, and it will increase with the number of packets sent during sub-packet transmission.</p>								

---

<p>7. Data length: the length of the data segment in the current command. If the total length of the last command is set to 64byte, the packet label needs to be increased by 1 and then a supplementary command with a data length of 0byte is used to determine that the communication has ended. . If the get status command gets 64bytes, the packet label number needs to be increased by 1 and then another get command is issued to determine whether the communication has ended.</p>
<p>8.Data: The data content is determined by the corresponding instruction number. When the data length is 0byte, there is no need to fill in the content of this section.</p>
<p>9.CRC16: CRC16 check is to perform CRC16 check on all data between the beginning of the packet header and before the CRC16 check. The verification is carried out in byte order starting from the packet header.</p> <p>Online calculation of CRC check: <a href="https://www.lammertbies.nl/comm/info/crc-calculation">https://www.lammertbies.nl/comm/info/crc-calculation</a>, check data type is Hex, parameter model select CRC-16/IBM</p>
<p>10.End of packet: 0x50 0x41, used to determine the end of the command transmission.</p>

## Appendix4 ASCII Character and Keystroke Table

Char	HEX	ASCII Character	Value	Keystroke
NUL (Null char.)	0x00	Null	0x00	Ctrl+2
SOH (Start of Header)	0x01	Keypad Enter	0x58	Ctrl+A
STX (Start of Text)	0x02	Caps Lock	0x39	Ctrl+B
ETX (End of Text)	0x03	Null	0x00	Ctrl+C
EOT (End of Transmission)	0x04	Null	0x00	Ctrl+D
ENQ (Enquiry)	0x05	Null	0x00	Ctrl+E
ACK (Acknowledgment)	0x06	Null	0x00	Ctrl+F
BEL (Bell)	0x07	Enter	0x28	Ctrl+G
BS (Backspace)	0x08	Left Arrow	0x50	Ctrl+H
HT (Horizontal Tab)	0x09	Horizontal Tab	0x2b	Ctrl+I
LF (Line Feed)	0x0a	Down Arrow	0x51	Ctrl+J
VT (Vertical Tab)	0x0b	Vertical Tab	0x2b	Ctrl+K
FF (Form Feed)	0x0c	Backspace	0x2a	Ctrl+L
CR (Carriage Return)	0x0d	Enter	0x28	Ctrl+M
SO (Shift Out)	0x0e	Insert	0x49	Ctrl+N
SI (Shift In)	0x0f	Esc	0x29	Ctrl+O
DLE (Data Link Escape)	0x10	F11	0x44	Ctrl+P
DC1 (XON) (Device Control 1)	0x11	Home	0x4a	Ctrl+Q



DC2 (Device Control 2)	0x12	Print Screen	0x46	Ctrl+R
DC3 (XOFF) (Device Control 3)	0x13	Delete	0x4c	Ctrl+S
DC4 (Device Control 4)	0x14	tab+shift	0x2b,0xe1	Ctrl+T
NAK (Negative Acknowledgement)	0x15	F12	0x45	Ctrl+U
SYN (Synchronous Idle)	0x16	F1	0x3a	Ctrl+V
ETB (End of Trans. Block)	0x17	F2	0x3b	Ctrl+W
CAN (Cancel)	0x18	F3	0x3c	Ctrl+X
EM (End of Medium)	0x19	F4	0x3d	Ctrl+Y
SUB (Substitute)	0x1a	F5	0x3e	Ctrl+Z
ESC (Escape)	0x1b	F6	0x3f	Ctrl+[
FS (File Separator)	0x1c	F7	0x40	Ctrl+\
GS (Group Separator)	0x1d	F8	0x41	Ctrl+]
RS (Request to Send)	0x1e	F9	0x42	Ctrl+6
US (Unit Separator)	0x1f	F10	0x43	Ctrl+-



---

## Appendix5 ASCII Table

(Character in yellow ground is Function Character; Character in white ground is Visible

Character)

Binary	Dec	Hex	Char
0	0	0	NUL (NULL)
1	1	1	SOH (Start Of Heading)
10	2	2	STX (Start Of Text)
11	3	3	ETX (End Of Text)
100	4	4	EOT (End Of Transmission)
101	5	5	ENQ (Enquiry)
110	6	6	ACK (Acknowledge)
111	7	7	BEL (Bell)
1000	8	8	BS (Backspace)
1001	9	9	HT (Horizontal Tab)
1010	10	0A	LF/NL(Line Feed/New Line)
1011	11	0B	VT (Vertical Tab)
1100	12	0C	FF/NP (Form Feed/New Page)
1101	13	0D	CR (Carriage Return)
1110	14	0E	SO (Shift Out)
1111	15	0F	SI (Shift In)
10000	16	10	DLE (Data Link Escape)

10001	17	11	DC1/XON
			(Device Control 1/Transmission On)
10010	18	12	DC2 (Device Control 2)
10011	19	13	DC3/XOFF
			(Device Control 3/Transmission Off)
10100	20	14	DC4 (Device Control 4)
10101	21	15	NAK (Negative Acknowledge)
10110	22	16	SYN (Synchronous Idle)
10111	23	17	ETB (End of Transmission Block)
11000	24	18	CAN (Cancel)
11001	25	19	EM (End of Medium)
11010	26	1A	SUB (Substitute)
11011	27	1B	ESC (Escape)
11100	28	1C	FS (File Separator)
11101	29	1D	GS (Group Separator)
11110	30	1E	RS (Record Separator)
11111	31	1F	US (Unit Separator)
100000	32	20	(Space)
100001	33	21	!
100010	34	22	"
100011	35	23	#

100100	36	24	\$
100101	37	25	%
100110	38	26	&
100111	39	27	'
101000	40	28	(
101001	41	29	)
101010	42	2A	*
101011	43	2B	+
101100	44	2C	,
101101	45	2D	-
101110	46	2E	.
101111	47	2F	/
110000	48	30	0
110001	49	31	1
110010	50	32	2
110011	51	33	3
110100	52	34	4
110101	53	35	5
110110	54	36	6
110111	55	37	7
111000	56	38	8
111001	57	39	9

---

111010	58	3A	:
111011	59	3B	;
111100	60	3C	<
111101	61	3D	=
111110	62	3E	>
111111	63	3F	?
1000000	64	40	@
1000001	65	41	A
1000010	66	42	B
1000011	67	43	C
1000100	68	44	D
1000101	69	45	E
1000110	70	46	F
1000111	71	47	G
1001000	72	48	H
1001001	73	49	I
1001010	74	4A	J
1001011	75	4B	K
1001100	76	4C	L
1001101	77	4D	M
1001110	78	4E	N
1001111	79	4F	O

---

---

1010000	80	50	P
1010001	81	51	Q
1010010	82	52	R
1010011	83	53	S
1010100	84	54	T
1010101	85	55	U
1010110	86	56	V
1010111	87	57	W
1011000	88	58	X
1011001	89	59	Y
1011010	90	5A	Z
1011011	91	5B	[
1011100	92	5C	\
1011101	93	5D	]
1011110	94	5E	^
1011111	95	5F	_
1100000	96	60	`
1100001	97	61	a
1100010	98	62	b
1100011	99	63	c
1100100	100	64	d
1100101	101	65	e

---

---

1100110	102	66	f
1100111	103	67	g
1101000	104	68	h
1101001	105	69	i
1101010	106	6A	j
1101011	107	6B	k
1101100	108	6C	l
1101101	109	6D	m
1101110	110	6E	n
1101111	111	6F	o
1110000	112	70	p
1110001	113	71	q
1110010	114	72	r
1110011	115	73	s
1110100	116	74	t
1110101	117	75	u
1110110	118	76	v
1110111	119	77	w
1111000	120	78	x
1111001	121	79	y
1111010	122	7A	z
1111011	123	7B	{

---



---

1111100	124	7C	
1111101	125	7D	}
1111110	126	7E	~
1111111	127	7F	DEL (Delete)

