



USER GUIDE

Gaming | Content Creation | Business & Productivity

USER GUIDE NOTEBOOK

Content

Copyright and Trademarks Notice	1-5
Revision History	1-5
FCC-B Radio Frequency Interference Statement	1-6
FCC Conditions	1-6
CE Conformity	1-7
Battery Regulations	1-7
WEEE Statement	1-7
RoHS Statement	
Japan JIS C 0950 Material Declaration	
India RoHS	
Turkey EEE regulation	
Ukraine restriction of hazardous substances	
Vietnam RoHS	
Upgrade and Warranty	
Acquisition of Replaceable Parts	
Safety Instructions	1-10
MSI Highlights	1-13
Introductions	2-1
Unpacking	2-2
Unpacking Product Overview	
Product Overview	2-3
Product Overview Top-open View	2-3 2-3
Product Overview Top-open View Front Side View	2-3 2-3 2-5
Product Overview Top-open View Front Side View Right Side View	
Product Overview Top-open View Front Side View Right Side View Left Side View	
Product Overview	2-3 2-3 2-5 2-6 2-6 2-7 2-9
Product Overview Top-open View Front Side View Right Side View Left Side View Rear Side View Bottom Side View	2-3 2-3 2-5 2-6 2-6 2-7 2-9 2-9 2-10
Product Overview	2-3 2-3 2-5 2-6 2-7 2-9 2-9 2-10 2-12
Product Overview	2-3 2-3 2-5 2-6 2-7 2-9 2-10 2-10 2-12 2-12
Product Overview	2-3 2-3 2-5 2-6 2-7 2-9 2-10 2-10 2-12 2-12 2-13
Product Overview	2-3 2-3 2-5 2-6 2-7 2-9 2-9 2-10 2-12 2-12 2-13 2-13
Product Overview	2-3 2-3 2-5 2-6 2-7 2-9 2-10 2-12 2-12 2-12 2-13 2-13 2-14
Product Overview	2-3 2-3 2-5 2-6 2-7 2-7 2-9 2-10 2-10 2-12 2-12 2-12 2-13 2-13 2-14 2-14
Product Overview	2-3 2-3 2-5 2-6 2-7 2-9 2-9 2-10 2-12 2-12 2-12 2-13 2-13 2-13 2-14 2-14 2-15
Product Overview	2-3 2-3 2-5 2-6 2-7 2-9 2-10 2-12 2-12 2-12 2-13 2-13 2-13 2-14 2-14 2-14 2-15 2-15
Product Overview	2-3 2-3 2-5 2-6 2-7 2-9 2-10 2-12 2-12 2-12 2-13 2-13 2-13 2-14 2-14 2-14 2-15 2-15 2-16

How to Get Started
Begin to Use the Notebook (option 1)
Begin to Use the Notebook (option 2)
How to Use the Notebook Comfortably
How to Manage Power Supply
AC/DC Adapter
Battery
How to Set Up a Power Plan in Windows OS
Choose or Customize a Power Plan
Create Your Own Power Plan
How to Set Up Windows Hello (optional)
Create an Account's Password
Setting up Windows Hello PIN
Setting up Windows Hello Fingerprint
Setting up Windows Hello Face
How to Use the Touchpad
About HDD and SSD
About M.2 SSD Slot
How to Connect the Internet in Windows OS
Wireless LAN
Wired LAN
How to Set Up Bluetooth Connection in Windows OS
Activating Bluetooth Connection
How to Connect External Devices
How to Use USB Power Share Function (optional)3-32
Video: How to Use RAID Function (optional)
Video: How to Use F3 Recovery on MSI notebook preloaded system (optional)3-34
Video: How to Use Backup and System Restore with "MSI Center Pro" (optional) 3-35

Copyright and Trademarks Notice

Copyright © Micro-Star Int'I Co., Ltd. All rights reserved. The MSI logo used is a registered trademark of Micro-Star Int'I Co., Ltd. All other marks and names mentioned may be trademarks of their respective owners. No warranty as to accuracy or completeness is expressed or implied. MSI reserves the right to make changes to this document without prior notice.

Revision History

- Version: 1.0
- Date: 12, 2022

FCC-B Radio Frequency Interference Statement

FC

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and radiates radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

NOTE

- The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- Shield interface cables and AC power cord, if any, must be used in order to comply with the emission limits.

FCC Conditions

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.

CE Conformity

CE

This device is in compliance with the essential safety requirements and other relevant provisions set out in the European Directive.

Battery Regulations



European Union: Batteries, battery packs, and accumulators should not be disposed of as unsorted household waste. Please use the public collection system to return, recycle, or treat them in compliance with the local regulations.



BSMI: For better environmental protection, waste batteries should be collected separately for recycling or special disposal.

California, USA: The button cell battery may contain perchlorate material and requires special handling when recycled or disposed of in California.

For further information please visit: http://www.dtsc.ca.gov/hazardouswaste/ perchlorate/

Safety Guideline for Using Lithium Battery

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the equipment manufacturer. Discard used batteries according to manufacturer's instructions.

WEEE Statement



European Union: Under the European Union ("EU") Directive on Waste Electrical and Electronic Equipment, Directive 2002/96/ EC, which takes effect on August 13, 2005, products of "electrical and electronic equipment" cannot be discarded as municipal waste anymore and manufacturers of covered electronic equipment will be obligated to take back such products at the end of their useful life.

RoHS Statement

Japan JIS C 0950 Material Declaration

A Japanese regulatory requirement, defined by specification JIS C 0950, mandates that manufacturers provide material declarations for certain categories of electronic products offered for sale after July 1, 2006.

https://csr.msi.com/global/Japan-JIS-C-0950-Material-Declarations https://csr.msi.com/tw/Japan-JIS-C-0950-Material-Declarations

India RoHS

This product complies with the "India E-waste (Management and Handling) Rule 2016" and prohibits use of lead, mercury, hexavalent chromium, polybrominated biphenyls or polybrominated diphenyl ethers in concentrations exceeding 0.1 weight % and 0.01 weight % for cadmium, except for the exemptions set in Schedule 2 of the Rule.

Turkey EEE regulation

Conforms to the EEE Regulations of the Republic Of Turkey.

Ukraine restriction of hazardous substances

The equipment complies with requirements of the Technical Regulation, approved by the Resolution of Cabinet of Ministry of Ukraine as of 10 March 2017, № 139, in terms of restrictions for the use of certain dangerous substances in electrical and electronic equipment.

Vietnam RoHS

As from December 1, 2012, all products manufactured by MSI comply with Circular 30/2011/TT-BCT temporarily regulating the permitted limits for a number of hazardous substances in electronic and electric products.

Upgrade and Warranty

Please note that certain components, such as memory modules, HDD, SSD, ODD, and Bluetooth/WiFi combo card, etc., preinstalled in the product may be upgradable or replaceable by user's request depending on the models users purchased.

For any further information on the product users purchased, please contact the local dealer. **Do not attempt to upgrade or replace any component of the product** if users do not understand the component location or how to assembly/disassembly, since it may cause the product to be damaged. It is recommended that you contact the authorized dealer or service center for product service information.

Acquisition of Replaceable Parts

Please be noticed that the acquisition of replaceable parts (or compatible ones) of the product users purchased in certain countries or territories may be fulfilled by the manufacturer within 5 years at most since the product has been discontinued, depending on the official regulations declared at the time. Please contact the manufacturer via http:// www.msi.com/support/ for the detailed information about the acquisition of spare parts.

Safety Instructions



Read the safety instructions carefully and thoroughly. All cautions and warnings on the equipment or user's manual should be noted.

Replacement of a battery with an incorrect type that can defeat a safeguard.



- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
 Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
- A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.
- Plug the power cord into an AC outlet that is easily accessible at all times.
- Disconnect power from the notebook by unplugging the power cord from the AC outlet.



- If a power cord with 3-prong plug came with the package, always plug the power cord into a grounded (earthed) AC outlet. Do not remove the grounding pin of the power cord, since it is an important safety feature.
- Always use the AC/DC adapter and power cord approved by MSI, or a compatible one purchased from MSI.
- Place the power cord in a way that people are unlikely to step on it. Do not place anything on top of the power cord.



- Always place the notebook on a stable, flat, hard surface before setting it up.
- Do not lay the notebook on an unstable surface while using it, such as your lap, bed, pillow, or sofa, etc...
- Do not cover the ventilators of the notebook to prevent the notebook from overheating.



WARNING: Do not ingest battery. If the coin / button cell battery is swallowed, it can cause severe internal burns and can lead to death. Keep new and used batteries away from children.



Keep the notebook away from humidity and high temperature.



Always keep the strong magnetic or electrical objects away from the notebook.



- Do not leave the notebook in an unconditioned environment with a storage temperature above 60°C (140°F) or below 0°C (32°F), which may damage the notebook.
- This notebook should be operated under maximum ambient temperature of 35°C (95°F).



- Never pour liquid into the opening that could damage the equipment or cause an electrical shock.
- Never use any chemical substance to wipe the surface of this equipment, such as keyboard, touchpad, and notebook case.

If any of the following situations arises, get the equipment checked by a service personnel:



- The power cord or plug is damaged.
- · Liquid has penetrated into the equipment.
- · The equipment has been exposed to moisture.
- The equipment has not worked well or you can not get it work according to User's Manual.
- · The equipment was dropped and damaged.
- The equipment has obvious signs of breakage.

Green Product Features

- · Reduced energy consumption during use and stand-by
- · Limited use of substances harmful to the environment and health
- · Easily dismantled and recycled
- · Reduced use of natural resources by encouraging recycling
- · Extended product lifetime through easy upgrades
- · Reduced solid waste production through take-back policy



Environmental Policy

- The product has been designed to enable proper reuse of parts and recycling and should not be thrown away at its end of life.
- Users should contact the local authorized point of collection for recycling and disposing of their end-of-life products.
- Visit the MSI website and locate a nearby distributor for further recycling information.
- Users may also reach us at gpcontdev@msi.com for information regarding proper disposal, take-back, recycling, and disassembly of MSI products.

MSI Highlights

Explore more exclusive features of MSI notebooks for all series, please visit: http://www.msi.com and https://www.youtube.com/user/MSI

Features and configurations may vary by models. It is recommended to consult with local retailers for detailed information.

Enhance Your Creativity with MSI Pen



MSI Pen features a customizable remote function for presentation and other application. Let the MSI Pen support your creative work in Microsoft Office or Adobe applications.



How to use SteelSeries Engine 3 on MSI notebooks



MSI collaborates with SteelSeries to develop an exclusive SteelSeries Engine 3 in gaming notebooks. SteelSeries Engine 3 is the Apps to combine frequently used functions for gamers in multiple devices management.



Color Your Life with True Color

MSI has partnered with Portrait Displays, Inc. in developing more accurate, high precision panel quality. MSI True Color Technology guarantees that each panel in a MSI notebook comes with the finest precision in color.



Tutorial: How to use Nahimic

Discover how to use Nahimic and its three features: Nahimic Audio Effects, Microphone Effects and HD Audio recorder.



Introductions

Introductions

Congratulations on becoming the owner of this notebook, the finely designed notebook. You will have a delightful and professional experience in using this exquisite notebook. We are proud to tell users that this notebook is thoroughly tested and certified by our reputation for unsurpassed dependability and customer satisfaction.

Unpacking


First, unpack the shipping carton and check all items carefully. If any item contained is damaged or missing, please contact your local dealer immediately. Also, keep the box and packing materials in case you need to ship the unit in the future. The package should contain the following items:

- Notebook
- Quick Start Guide
- PD adapter with Type-C connector and AC power cord (optional)
- AC/DC adapter and AC power cord (optional)
- Optional carry bag

Product Overview

This section provides the description of basic aspects of the notebook. It will help you to know more about the appearance of this notebook before using it. Please be aware that the figures shown here are for reference only.

Top-open View

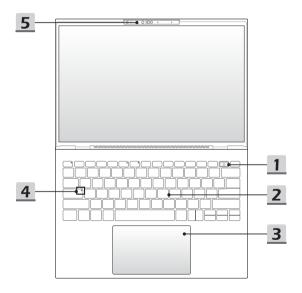

1. Power Key/ Battery Reset/ Fingerprint Sensor

Power Key

- · Press this key to turn the notebook power ON.
- While the notebook is turned on, press this key to force the computer into sleep state. Press again to wake up the system from sleep state.
- Long press this key and follow the on-screen instruction to turn the notebook power OFF.



Battery Reset

Whenever the system firmware (EC) is upgraded or the system hangs, please 1) remove the AC power; 2) long press this key for 20 secs and then the LED goes to blink, and after 5 more secs the LED would go off; 3) connect the AC power; 4) power on the notebook.

Fingerprint Sensor

Use the fingerprint sensor to set up user's fingerprints on the notebook, and use it to unlock the notebook.

2. Keyboard

The built-in keyboard provides all the functions of a notebook keyboard. Refer to **How** to **Use the Keyboard** for details.

3. Touchpad

This is the pointing device of the notebook.

4. Status LED



Caps Lock

Glows when the Caps Lock function is activated.

5. Webcam/ Webcam LED/ Internal Microphone

 
- This built-in webcam can be used for picture taking, video recording or conferencing, and so on.
- The built-in webcam may be optionally equipped with IR Camera module, which supports infrared facial recognition function.
- Webcam LED indicator, next to the webcam, blinks when webcam function is activated; LED goes out when this function is turned off.
- · Slide the camera shutter to hide the camera from view, if necessay.
- · The built-in microphone shares the same function with an external one.

Front Side View



Blank below

Right Side View



1. Card Reader

The built-in card reader supports various types of memory cards. Check the Specifications for details.


2. USB 3.2 Gen 1 Port

USB 3.2 Gen 1, the SuperSpeed USB, supports high-speed data transfer for the connected devices, such as storage devices, hard drives, or video cameras.

3. Kensington Lock

This notebook provides a Kensington lock slot, which allows users to secure the notebook in place.

 Left Side View



1. Power Connector

This connector is to connect the AC/DC adapter and supply power for the notebook.

2. Power/ Thunderbolt (Type-C) combo ports

- Always plug an authorized PD adapter with Type-C connector to supply power to the notebook and charge the battery pack.
- Thunderbolt[™] 4, optionally supports USB4, PCIe, HDMI[™], DisplayPort connection; 8K display monitor output; up to 40Gbps transfer rate.
- Supports Power Delivery function with variable up to 65~100W power input and maximum 5V/3A or 5V/1.5A power output when AC or DC power is connected.
- Supports using a power bank to supply power to the notebook and charge the battery pack. Make sure the charging power output of the power bank meets the minimum requirements of the notebook.
- To connect two power banks to the notebook, always use two separate cables to connect each port. To connect external devices to these ports, please connect one after another.

3. HDMI[™] Connector HDMI

HDMI[™] (High-Definition Multimedia Interface) technology is the industry-leading interface and de-facto standard connecting high-definition (HD) and ultra highdefinition (UHD) equipment.

4. Status LED

Power LED

- · Glowing white when the notebook power is turned on.
- · LED goes off when the notebook goes to the sleep state.
- · LED goes off when the notebook is turned off.

Battery Status

- · LED turns white when the battery is being charged.
- LED turns white and blinks when the battery is in fast charging.
- +
- LED turns amber while the battery is in low capacity status.
- LED turns amber and blinks if the battery fails. If the problem persists, please contact your local authorized retailer or service center.
- Battery LED goes out when the battery is fully charged or when the AC/DC adapter is disconnected.

5. Combo Audio Port


- A port for a headset, microphone, or headset with microphone.
- The Combo Audio Port supports 4-Pole 3.5mm headphone jack.

Rear Side View



Blank below

Bottom Side View

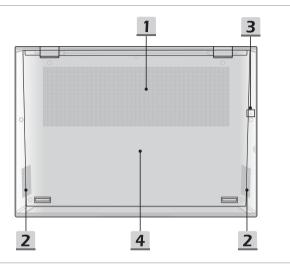

1. Ventilator

The ventilator is designed to cool the system. DO NOT block the ventilator for air circulation.

2. Stereo Speakers

This notebook may be equipped with built-in stereo speakers which deliver the high quality sound, and supports the HD audio technology.

3. Battery Reset Hole (optional)

Whenever the system firmware (EC) is upgraded or the system hangs, please 1) power off the notebook; 2) remove the AC power; 3) use a straightened paperclip and insert it to this hole for 10 secs; 4) connect the AC power; 5) power on the notebook. For models that do not support battery reset by Battery Reset Hole, please refer to Power Key in Top-open View to execute battery reset.

4. SSD Slot

This notebook is equipped with a SSD M.2 slot that supports the SSD device with PCIe interface. Contact the authorized dealer or service center for product service.

How to Use the Keyboard

This notebook provides a full functioned keyboard. To ensure that the keyboard will be functioning properly, it is a must to install the necessary applications before using the keyboard function keys.

Use the FN keys on the keyboard to activate the specific applications or tools. With the help of these keys, users will be able to work more efficiently.



Windows Key



You can find the Windows Logo key on the keyboard which is used to perform Windows-specific functions, such as opening the Start menu and launching the shortcut menu.

Enable Quick FN Launch Keys

- This notebook is equipped with a set of Quick FN Launch Keys. Each function key, located on F1 to F12, has a built-in function that is available to use with an easy single press.
- Users are allowed to enable or disable the Quick Fn Launch Keys by pressing FN and ESC keys.

 Read the FN Lock LED indicator, located on the ESC keycap, to learn the function status.
 LED on: Standard FN combination keys enabled.
 LED off: Quick FN Launch Keys enabled.

Use Quick FN Launch Keys

esc_•

fn

	 Speaker Settings F1: Mute the built-in speakers. F2: Decrease the built-in speaker's volume. F3: Increase the built-in speaker's volume.
ر ایک ۴4	Touchpad Press to enable or disable the touchpad function.
₩ _{F5}	 Microphone Off Press to enable or disable the microphone function. The Microphone LED indicator, located on the F5 keycap, glows when the microphone function is disabled.
Ø re	 Webcam Enable or disable the webcam function. Webcam LED indicator, located on the F6 keycap, glows when webcam function is activated; LED goes out when this function is turned off. Webcam is turned off under default settings.

(() ₁₇	 MSI Center Pro This notebook may be pre-installing with a versatile utility, MSI Center Pro, providing users an astonished and efficient solution in multitasking. Use this key to switch the User Scenario in MSI Center Pro.
F8	Keyboard Backlight LED Settings Press repeatedly to select a backlight LED level according to your preference.
☆~ _{FB} ☆ _{FID}	LCD SettingsF9: Decrease the LCD brightness.F10: Increase the LCD brightness.
	Switch Display Switch the display output mode between the LCD, external monitor and both.
(10) _{F12}	Screen Rotation Rotate the screen upside down for 180 degrees. Press again to rotate the screen back to its default position.

Screen Capture




Take a screen capture to the clipboard, and then it can be pasted into an editing program.

Snip and Sketch



Launch Snip & Sketch application.

Functions of FN Combination keys

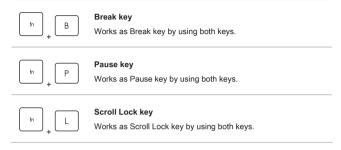

Use Multiple Monitors



- If users connect an additional monitor to the notebook, the system will automatically detect the external monitor connected. Users will be allowed to customize the display settings.
- · Connect the monitor to the notebook.
- Press and hold the Windows key, and then press [P] key to bring up [Project].
- Select how you want your display to project on the second screen from the selections of PC screen only, Duplicate, Extend, and Second screen only.

Application: True Color (optional)

This notebook may be pre-installed with the **True Color** application. With this application, users can select various color settings for the best viewing experience.

fn + Z	True Color Use both keys to launch the True Color application.
fn + A	True Color Selections Use both keys to change different view modes.

Specifications

The specifications listed here is reference only, and may vary and change without notice.

Visit MSI official website at www.msi.com, or contact the local retailers to learn about the details of the product you purchased.

Physical Characterist	ic
Dimension	299 (W) x 210.4 (D) x 16.9 (H) mm
Weight	1.0 kg
CPU	
Package	BGA
Mobile Processor	The latest Intel [®] Core [™] Processor Family
Memory	
Technology	LPDDR5
Memory	Dual channel memory on board
Maximum	Up to 32GB
Power	
PD Adapter (optional)	1 x 65W, 20V Input: 100-240V~, 50/60Hz Output: 20V, 3.25A
AC/DC Adapter (optional)	1 x 65W, 19V Input: 100-240V~, 50/60Hz Output: 19V, 3.42A
Battery	4-cell
RTC Battery	Yes

Introductions


Storage	
SSD	1 x M.2 2280 NVMe PCIe SSD slot
I/O Port	
USB	1 x USB 3.2 Gen 1 Power Share function is optionally supported
Thunderbolt™ 4	 2 x USB4 Type-C PCle, HDMI[™], DisplayPort connection may be optionally supported 8K display monitor output Up to 40Gbps transfer rate Supports maximum 5V/3A or 5V/1.5A portable charging power output when AC or DC power is connected. Power Delivery function may be optionally supported. Choose either way to use Power Delivery function to supply power for the notebook: (1) connect a 20V, 65~100W PD adapter with Type-C connector. (2) connect a power bank with 20V, 65~100W output power.
Audio	1 x Mic-in/ Headphone-out combo
Video	1 x HDMI™
Card Reader	1 x MicroSD
Communication Port	
Wireless LAN	Supported
Bluetooth	Supported
Display	
LCD Type	13.3" FHD+/ QHD+ LED panel
Video	
Graphics	The latest Intel [®] integrated graphics
Webcam	
Туре	Infrared camera
Resolution	FHD

Audio	
Internal Speakers	2 x stereo speakers
Security	
	TPM 2.0 is a hardware-based encryption device that collaborates with software measures to form a more advanced and secure data protection.
Trusted Platform Module (optional)	TPM functionalities can be de/activated in BIOS settings where appropriate.
	With professional versions of Windows, BitLocker is the default console available for TPM communications serving data encryption purposes.

How to Get Started


Begin to Use the Notebook (option 1)

For a new user of this notebook, we would like to suggest you follow the illustrations below to begin to use the notebook.

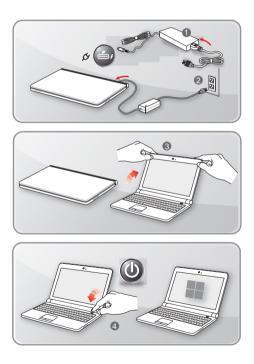

Begin to Use the Notebook (option 2)

For a new user of this notebook, we would like to suggest you follow the illustrations below to begin to use the notebook.

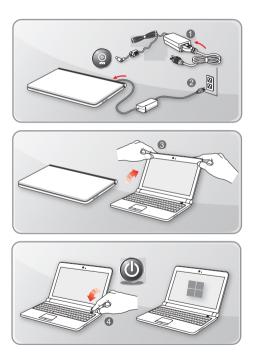

How to Use the Notebook Comfortably

If you are a beginner to the notebook, please read the following instructions to assure your own safety, and make yourself comfortable during the operations.

- Good illumination is essential in the work area.
- Choose a chair and desk with good ergonomics and adjust their heights according to your posture.
- Adjust the backrest to support your lower back comfortably when you are sitting upright.
- Place your feet flat on the floor with your knees bent to a 90 degrees.
- Adjust the angle/position of the LCD panel to have an optimal view.
- Stretch and relax your body regularly. Always take a break after working for a period of time.



How to Manage Power Supply

This section provides users basic safety precautions to take when using an AC/DC adapter and battery power properly.

AC/DC Adapter

Ensure that your notebook is connected to an AC power source via the AC adapter before turning it on for the first time. If the notebook automatically shuts down due to low battery power, it is likely to cause system failure. Below are some Dos and Don'ts of an AC/DC adapter.

- Dos
 - · Use the adapter that shipped with your notebook only.
 - · Always be aware of heat coming from the in use AC/DC adapter.
 - · Unplug the AC power cord before disassembly the notebook.
- Don'ts
 - · Cover an in-use adapter since it can generate heat.
 - Have the AC power cord plugged after powering off the system when the notebook is going to be left unused for a longer time.

Battery

When you get a new notebook or a new notebook battery, it is important to know how to charge and care for your battery in order to get the most out it for as long as you can.

Be aware of that the battery may not be replaced by users.

- Safety guidelines
 - This notebook is equipped with a non-removable battery, follow the local regulations while discarding the notebook.
 - Always keep the notebook and its battery away from excessive moisture and extreme temperatures.
 - Always unplug the AC power cord before installing any module to the notebook.

Battery type

- This notebook may be equipped with a high-capacity Li-ion or Li-polymer battery pack depending on the model you have.
- · The rechargeable battery pack is an internal power source of the notebook.

Battery charging behavior

To optimize battery life and avoid a sudden power loss, read the tips below:

- Suspend system operation if the system will be idle for a while or shorten the suspend timer's time period.
- · Turn off the system if you won't be using it for a period of time.
- · Disable unnecessary settings or remove idle peripherals.
- · Connect an AC/DC adapter to the system whenever possible.

How to charge the battery properly

Please pay attention to the following tips before recharging the battery:

- If a charged battery pack is not available, save your work and close all running programs and shut down the system.
- · Plug in an AC/DC adapter.
- You can use the system, suspend system operation or shut down and turn off the system without interrupting the charging process.
- The Li-ion or Li-polymer battery has no memory effect. It is unnecessary to discharge the battery before recharging. However, to optimize the life of battery, we suggest that consuming the battery power completely once a month is necessary.
- · The actual charging time will be determined by the applications in use.

How to Set Up a Power Plan in Windows OS


* For selected models with Windows 11 operating system installed.


A power plan is a collection of hardware and system settings that manages how your computer uses and conserves power. Power plans can save energy, maximize system performance, or balance energy conservation with performance. The default power plans — Balanced and Power saver — meet most people's needs. But you can modify settings for existing plans or create your own plan.

The figures shown here are for reference only, they may be varied depending on the different version of Windows operating system installed.

Choose or Customize a Power Plan

- 1. Go to [Start] and then move the mouse cursor to [Type here to search] field.
- 2. Keyin [control panel] and then select [Control Panel] to continue.
- Open up [All Control Panel Items] window. Select [Large icons] under [View by] drop-down menu.
- 4. Select [Power Options] to continue.
- Within [Power Options] window, the Power Plan of [Balanced] is selected as an example here. Click on the [Change plan settings] to bring out [Edit Plan Settings] to customize a power plan.
- 6. Change settings for the plan selected in [Edit Plan Settings].
- Click on [Change advanced power settings] to bring out [Power Options]. Make advanced changes here to the selected power plan to meet your needs.
- To restore the selected power plan back to its default settings, click on [Restore plan defaults].
- 9. Follow the on-screen instructions to finish the configurations.

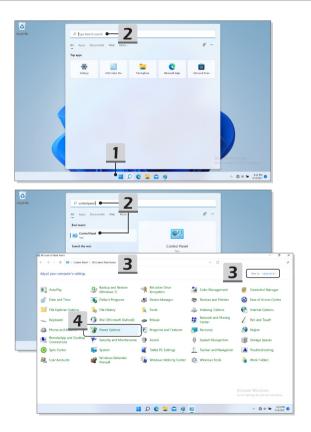


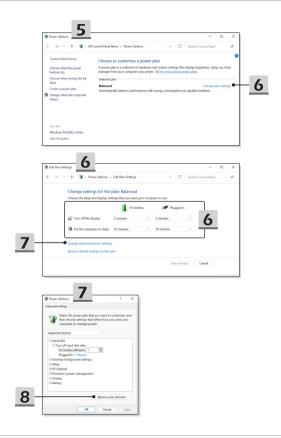

Create Your Own Power Plan

You are allowed to create your own Power Plan and customize it to meet personal requirements.

- 1. Click [Create a power plan] in [Power Options].
- Start with an existing plan and give the new power plan a name. Click [Next] to continue.
- Change the settings for the plan. Click [Create] to make the customized power plan taking effect.
- 4. Now you have a new power plan that is automatically set as active.

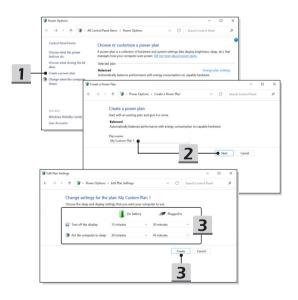

How to Set Up Windows Hello (optional)

Windows Hello is a more secure, personal way to get an instant access to your Windows operating system using fingerprint or facial recognition. The feature requires fingerprint reader or a infrared camera that supports it. Once you're set up, you'll be able to sign in with a quick swipe or glance.

Follow the instructions below to setup your Windows Hello Logins - Face, Fingerprint, and PIN.

The figures shown here are for reference only, they may be vary depending on the different version of Windows operating system installed.

Create an Account's Password

Before setting up Windows Hello, it is required to setup the account's password.

- 1. Go to [Start > Settings] and locate [Accounts].
- 2. In [Sign-in options], click [Password].
- 3. Under [Password], click [Add] to continue.
- Follow the on-screen instructions to create a new password for your account, and then click [Finish] to close.

E Ayata	Yeyne to same	
	ڻ جو ۾ 📕	Addinate Windows

						- 0 ×	
6 Settings Q 13F2 Local Account		Accounts				- 0 .	
Local Account	4						
Find a setting	ρ	A 13P2 Local A Admini	ccount		😽 Rewards	OneDrive • Sign in	
System		Admini	strator				
0 Bluetooth & devi	ion	a= Your info					
 Network & interr 	net	8 Your Info Accounts used by	email, celender, and contacts				
/ Personalization		Email & account	15 ernal, calendar, and contacts			>	
а Арря				2			
Accounts Time & language		Sign in options Windows Hello, s	ecuity lag, password, dynamic lock	- Z		>	
 Garring 		So Family & other	users				
X Accessibility		CD Device access, wi	ork or school users, klosk assigned access			,	
Privacy & securit	·	G Windows back	a contraction of the second	to fee			
Windows Update	e (- Settings						- o ×
	8 13P2 Local Acc		Accounts > Sign-	in options 2			
	Local Acc	n, ed	Ways to sign in	_			
	Find a setting	p	C Facial recognition (Window This option is convertly should	is Helic)			~
	System						
	0 Bluetooth & c	levices	Fingerprint recognition (W This option is currently unavail	indows Hello) lable			×
	 Network & in 		EIN (Windows Hello)				
	🖌 Personalizatio	n	This option is currently unavail	labire			
	Apps		Security key Sign in with a physical security	kay			
	Accounts Time & langu		n Personand	2		2	,
	Gaming	oge	Password Sign in with your account's pe	La based			^
	X Accessibility		Use a possword to sign in	to Windows, apps, and services		•	Add
	Privacy & sec	aity	Ficture password				
	Windows Upp	late	this option is currently unavail	lable			
<- Settings						- 0 X	
@ Home		Create a pass	word				note Windows
Find a setting				1	Related settings		do to 0.00 PM 0
Accounts		New password		-	Lock screen		47 W 3/14/2021
		Confirm password			Get help		
ðii Your isfo		Password hint			Give feedback		
🖂 Email & accounts							
Sign in options							
Access work or sch	loor						
a family & other use	in .						
C Sync your settings							
				Next Cancel			
	_	:A Dynamic lo	ck				
			u 🛯 🖬 😋 🖻	🖬 🐵 🔮 🥠	~ * 0 = -	1036 PM	

Setting up Windows Hello PIN

A Windows Hello PIN is a fast, secure way to sign in to your device, apps and services.

The figures shown here are for reference only, they may be varied from the actual ones.

- 1. Select [PIN (Windows Hello)], and then click [Set up] to continue.
- 2. Verify your account's password first
- 3. Set up your Windows Hello PIN. Click [OK] to close.

- Settings		- 0
A 13P2 Local Account	Accounts > Sign-in options	
Find a setting	Bacial recognition (Windows Helio) Sign is with your cames (incommended)	×
 System Blaetooth & devices 	Insperprint recognition (Windows Hello) Spr in with your Engrprint scenare Recommended	~
 Network & internet Personalization 	III PN (Windows Hele)	^
Apps	Use a PIN to sign in to Windows, apps, and services	Set up
Accounts	Related links	
 Time & language Garring 	Security key Sign in with a physical security key	~
Accessibility Privacy & security	Pennecod Sign is with your account's paramond	^
Windows Update	You're all set up	Change
	Superand to your freester photo to unlock your desice	Activate Windows Go to Settings to activate Windows.
	II D C I C 4 0	∧ ∰ do ₩ 655 PM

R 13P2 Local Account	Accounts > Sign-in options	
nd a setting P	Construction (Windows Helik) Sign in with your camera (Recommended)	
System Blaetooth & devices	Fingerprint recognition (Windows Helio) System Windows Security Windows Security	
Network & internet Personalization	First, verify your account password.	
Apps Accounts	Use A MSI(1992	Set up
Time & language Garring	OK Cancel	
Accessibility Privacy & security	Parameted Signilia with your recount's preserved	
Windows Update	You're all set up	Change
	Return password Swipe and top your fewerite photo to unlock your device	Activate Windows Go to Settings to activate Windows.

A 13P2 Local Account	Accounts > Sign-in options	
ind a setting ,C	Facial recognition (Windows Helio) Sign is with your carrier (Recommoded)	~
System Blaetooth & devices	Windows Security X Security Security X	*
Network & internet Personalization	A Windows Hello PIN is a fast, secure way to sign in to your device, apps, and services.	^
Арря	Use/ 🗒	Set up
Accounts Time & language	Related lini	
Garring Accessibility	Secular S	~
Privacy & security	Paren	^
Windows Update	You've all set up	Ohange
	Constraints and they your financial photo to unlock your device	Activate Windows Go to Settings to activate Windows.

Setting up Windows Hello Fingerprint

* For selected models only

Time to say goodbye to entering complex passwords and start using your fingerprint to unlock your device and verity your identity.

- 1. Select [Fingerprint Recognition (Windows Hello)], click [Set up] to open up the Windows Hello setup wizard, and then click [Get Started] to continue.
- 2. Verify your Windows Hello PIN.
- Place your preferred finger on the fingerprint sensor. You will be asked to swipe the same finger for a few times to setup Windows Hello.
- 4. Click [Add Another] if you want to repeat the process with another finger.

Local Account	Accounts > Sign-in options Ways to sign in	
d a setting P	C Facial receptition (Windows Helic) Sign in with your carries (Recommended)	~
System Blaetooth & devices	Fingeprint recognition (Mindows Helio) Signin mithy your fragments science (Becommended)	
Network & internet	Sign in with Windows, apps, and services	• Set up
Personalization Apps	FIN (Windows Hello) Sig-is with a PDI (Incommended)	~
Accounts Time & language	Security key Security key Security key	~
Garring Accessibility	P Personal Sign in with your account's personnel	~
Find a setting	Accounts > Sign-in options Were to vision Were to vision Were to Windows Hello	
Louideauer Fod averling System Solareant i devices Hestanck i kelement Arenent Sonent Sonent Sonent Conting	The set of	Strip
End koose Fod s setting System Bannoch & deriven Network & internet Pennonlasticn Accuret Tennonlasticn Accuret Time & language	C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C C	sro sro

(- Settings		- o ×
Q 1392	Accounts > Sign-in options	
K Loud Account	Windows Hillo extup	
Find a setting ,0	c Pack	
System	o spi	
Blaetooth & devices	8 fing	~
 Network & internet 	Window Security	Set up
/ Personalization	Sign Making sure it's you 2	Set up
🔳 Арря	# 592	~
Accounts	I forget my PIN	
3 Time & language	B Security Cancel	~
Garning	P Par	
X Accessibility	6° Sys	
Privacy C: Settings		- o ×
Winde A 1392 Includement	Accounts > Sign-in options	_
Cool Account	Windows Held setap Ways to sign (×
Find a setting	P U Rele	~ ·
System	500°	2
Blaetooth & devices	8 in	3
 Network & internet 	Sign (Rec)	Set up
/ Personalization		
🛋 Apps	PIN I Ser	~
S Accounts	Touch the fingerprint sensor	
3 Time & language	Sec) Repeatedly lift and rest your finger on the sensor until setup i complete.	• · · ·
 Garring 	P Per	~
X Accessibility		-
 Privacy & security Windows Update 	Cancel	· ·
(- Settings		- 0 ×
	A second s	
A 1392 Local Account	Accounts > Sign-in options	1 mb
Find a setting P	All set!	7.00 PM
- Ind a setting	Fick Use your fingerprint the next time you want to unlock your device.	~
System	S fing Add another finger	
Blaetooth & devices	≪ s ₁ .	
 Network & internet 	Sign	Set up
Personalization Acos		
Accounts	· Sgr.	
Accounts Time & language	B Secu	~
Garring		
X Accessibility	P Pass Syn	~
Privacy & security	B Pich Core	
Windows Update	Close	Ť
	Additional settings	
	For improved security, only allow Windows Helio sign-in for Microsoft accounts on this device	Activate Windows Go to Settings to activate Windows
	🔛 🔉 😨 💶 😰 🔍 🔛	∧ State ★ 205 PM ● 514/2021 ●


Setting up Windows Hello Face

* For selected models only

Your device just got more personal. Start using your face to unlock your device and verity your identity.


- Select [Facial Recognition (Windows Hello)], click [Set up] to open up the Windows Hello setup wizard, and then click [Get Started] to continue.
- 2. Verify your Windows Hello PIN.
- Position your face in the center of the frame that appears on screen. The camera will register your face.
- 4. Complete the setup. If you wore glasses while setting up face recognition, click [Improve recognition] to go through the setup again without them. This will help the system recognize you either way. Click [Remove] to cancel the facial login setup.

(- Settings	Accounts > Sign-in options	- o ×
A 13P2 Local Account	Ways to sign in	
Find a setting P	e facial recognition (Windows Hele) Sign in with your cames (Recommended)	
 System Blaetooth & devices 	Use your face to sign in to Windows, apps, and services	Set up
 Network & internet 	Fingerprint recognition (Windows Hello) Sign in with your improvid scenare (Recommended)	~
Personalization Apps	PIN (Mindows Mello) Sign in with a PM (Recommendad)	~
B The A Language Costing Costing T Accessibly Privacy & accessibly Privacy de accessibly B Michael & decade B Accessible B Accessible	and by religning the true about the second	* starting
	Get started Cancel	Activate Windows
	👳 🕸 🚘 🚍 🥥 🛛 🖴	∧ 🐯 di ₩ 200 PM ● 314/2001

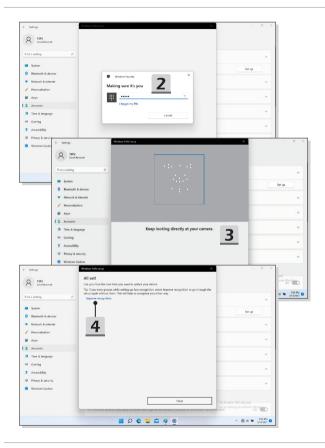

How to Use the Touchpad

The touchpad integrated in your notebook is a pointing device that is compatible with standard mouse, allowing you to control the notebook by pointing the location of the cursor on the screen.

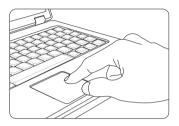

Configure the Touchpad

You can customize the pointing device to meet your personal needs. For example, if you are a left-handed user, you may want to swap the functions of the two buttons. In addition, you can change the size, shape, moving speed and other advanced features of the cursor on the screen.

To configure the touchpad, you can use the standard Microsoft or IBM PS/2 driver in your Windows operating system. The Mouse Properties in Control Panel allows you to change the configuration.

Position and Move

Place your finger on the touchpad (usually using the forefinger), and the rectangular pad will act as a miniature duplicate of your display. When you move your fingertip across the pad, the cursor on the screen will move simultaneously to the same direction. When your finger reaches the edge of the pad, lift your finger and place it on a proper location of the touchpad to continue the movement. Point and Click

When you have moved and placed the cursor over an icon, a menu item or a command that you want to execute, simply tap slightly on the touchpad or press the left button to select. This procedure, called as point and click is the basics of operating your notebook. Unlike the traditional pointing device such as the mouse, the whole touchpad can act as a left button, so that your each tap on the touchpad is equivalent to pressing the left button. Tapping twice more rapidly on the touchpad is to execute a double-click.

Drag and Drop

You can move files or objects in your notebook by using drag-and-drop. To do so, place the cursor on the desired item and slightly tap twice on the touchpad, and then keep your fingertip in contact with the touchpad on the second tap. Now, you can drag the selected item to the desired location by moving your finger on the touchpad, and then lift your finger from the touchpad to drop the item into place. Alternately, you can press and hold the left button when you select an item, and then move your finger to the desired location; finally, release the left button to finish the drag-anddrop operation.

About HDD and SSD

This notebook may be equipped with hard disk drive (HDD) or solid state drive (SSD) depending on the models users purchased.

The hard disk drive and solid state drive are the data storage devices used for storing and retrieving digital information. Most SSDs use NAND-based flash memory, and have higher data transfer rates, lower power consumption, and faster read/write speed than HDDs.

Do not attempt to remove or install the HDD and SSD when the notebook is powered on. Please consult an authorized retailer or service center for the replacement of the HDDs and SSDs.

About M.2 SSD Slot

The notebook may be equipped with M.2 SSD slots for M.2 SSD cards, which are compatible with SATA or PCIe interfaces, providing diverse features and usages to users. Consult an authorized retailer or service center for correct specifications and installations.

How to Connect the Internet in Windows OS

* For selected models with Windows 11 operating system installed.


The figures shown here are for reference only, they may be varied depending on the different version of Windows operating system installed.

Wireless LAN

Wireless LAN is a wireless broadband connection that allows you to connect to the Internet without using any cables. Follow the instructions as below to set up a Wireless LAN connection.

- 1. Open up [Settings], find and click [Network & internet].
- 2. Make sure [Airplane mode] is turn off.
- 3. Switch [ON] the Wi-Fi function if it is set to [Off].
- 4. Select [Wi-Fi] within the [Network & internet] selection menu.
- Select [Show available networks] to open up the network list. (The available networks shown here are for reference only, and the actual ones may vary on the situation.)
- Choose one Wireless LAN network from the network list to connect to the Internet. Click [Connect] to continue.
- A security key may be required for connecting the selected network. Then click [Next].

Settings		- 🗆 ×
R z Local Account	Network & internet	C
ind a setting P	You aren't connected to any networks	5 Troubleshoot
System		
Bluetooth & devices	Wi-Fi Connect, manage known networks, meterod network	on 💽 >
Network & internet		
Personalization	Ethernet Authentication, IP and DNS settings, metered network	>
Apps		
Accounts	VPN Add, correct, manage	>
Time & language	e.e. Mobile hotspot	
Gaming	0y0 Mobile hotspot Share your internet connection	off ()
Accessibility	atu Airolane mode	
Privacy & security	P Aiplane mode Stop all wireless communication	off •
Windows Update	Proxy Proxy server for Wi-Fi and Ethernet connections	,

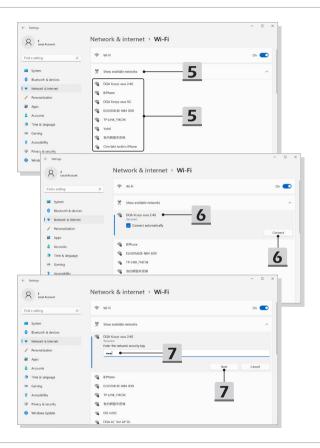



Wired LAN


Use cables to connect to the Internet. Before setting up the connection of Dynamic IP/ PPPoE or Broadband (PPPoE) or Static IP, contact your Internet Service Provider (ISP) or network administrator for assistance of setting up Internet connection.

- Dynamic IP/PPPoE Connection
 - 1. Open up [Settings], find and click [Network & internet].
 - 2. Select [Ethernet] within the [Network & internet] selection menu.
 - The [IP assignment] and [DNS server assignment] are automatically set as [Automatic (DHCP)].
- Static IP Connection
 - 4. Follow the previous steps 1 to 2 to continue.
 - 5. Click [Edit] of [IP assignment].
 - 6. Select [Manual].
 - Switch the [IPv4] or [IPv6] on. (Contact your Internet Service Provider or network administrator for assistance of the configurations.)
 - Fill the IP address, Subnet mask, Gateway, Preferred DNS, and Alternate DNS. Then click [Save].

← Settings		
A Local Account	Network & internet	
Find a setting D	Not connected You aren't connected to any networks	Troubleshoot
System		
0 Bluetooth & devices	Wi-Fi Connect, manage known networks, metwork	Cn 💽 >
Vetwork & internet		
/ Personalization	Activetication, IP and DND settings, metered setwork	>
Apps		
Accounts	VPN Add, connect, manage	>
Time & language		
Gaming	(N0) Mobile hotspot Share your internet connection	off 💽 >
X Accessibility	by Airplane mode	off
Privacy & security	Stop all wheless communication	
Windows Update	Prony Prony server for Wi-Fi and Ethemat connections	>

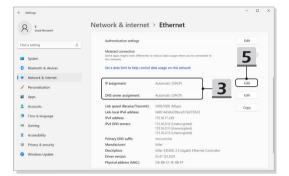

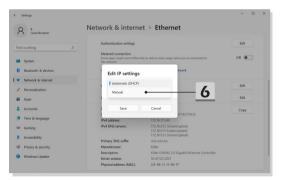

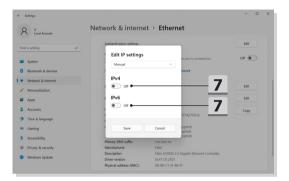

<- Settings R ² Local Account	Netw	Edit IP settings IP address	t	- 0 ×
Find a setting P		Subnet mask	en you're connected to	Edit
Bluetooth & devices Network & internet		Gateway	twork	
Personalization Apps		Preferred DNS	8	Edit
 Accounts Time & language 	1	Preferred DNS encryption Unencrypted only ~	157:8275%12	Сору
Gaming Accessibility Privacy & security		Alternate DNS	typted) ypted) typted)	
 Privacy & security Windows Update 	1	Alternate DNS encryption Unencrypted only ~	igsbit Ethernet Controller	
	Get F	Save Cancel		

- Broadband (PPPoE) Connection
 - 1. Open up [Settings], find and click [Network & internet].
 - 2. Select [Dial-up] within the [Network & internet] selection menu.
 - 3. Select [Set up a new connection].

← Settings		- 0 ×
R z Local Account	Network & internet	
Find a setting	P Ethernet O Properties @ Connected O Properties	Bata usage 2.58 G8, last 30 days →
 System Bluetooth & devices 		
Network & internet	Connect, manage known networks, metered network	On 💽 >
 Personalization Apps 	Astheritization, IP and DNS satings, meterod network	>
Accounts	VPN Add, connect, manage	>
 Time & language Gaming 	(vp) Mobile hotspot Share your internet convection	or
 Accessibility Privacy & security 	Arplane mode Step at violetes communication	of
 Windows Update 	Prory Prory server for WD-FI and Ethernet connections	>
Settings	P P Dial-up Set up a claimp internet connection	>
R Écst Annott Strets streting A Strets Betrotte M dorise Restards M dorise Annot Apps Annot Apps Annot Annot Annot Time & Broguege Annot Annot Annot Primer & Broguege Annot Primer & Broguege Annot Mark Stretcher Modern Lipster	Network & internet > Dial-up (reg a very constitute) Related settings Charge stager options Very table options Widens fremal If Cashing Cashing Cashing Cashing Cashing Cashing Cashing Cashing Cashing	

- Select [Connect to the Internet] under [Choose a connection option], and then click [Next].
- 5. Select [Set up a new connection anyway].
- 6. Click [Broadband (PPPoE)].
- 7. Fill User name, Password, and Connection name fields. Then click [Connect].

-	- ×	
1		
Choose a connection option		×
	← 🗣 Connect to the Internet	
Connect to the Internet Set up a broadband or dial-up connection to the Internet.		
	You are already conr	nected to the Internet
Set up a new network Set up a new router or access point.		
Manually connect to a wireless network Connect to a hidden network or create a new wireless profile.	1	🔮
Connect to a workplace Set up a dial-up or VPN connection to your workplace.		
	\rightarrow Browse th	he Internet now
Net		new connection anyway
Ne		
-	- ×	Cancel
 Connect to the Internet 		Cancel
How do you want to connect?		
		- • ×
Broadband (PPPoE)	← 🔩 Connect to the Internet	t
Connect using DSL or cable that requires a user name and password.	Type the informatio	n from your Internet service provider (ISP)
	User name:	[Name your ISP gave you]
6	Password:	[Password your ISP gave you]
		Show characters
		Remember this password
	Connection name:	Broadband Connection
Show connection options that this computer is not set up to use		
	Allow other people to use this connection	
	This office proper stress connection This option allows anyone with access to this computer to use this connection.	
Connect		Connect Cancel

How to Set Up Bluetooth Connection in Windows OS


* For selected models with Windows 11 operating system installed.


Bluetooth pairing is a process in which two Bluetooth devices communicate with each other through an established connection.

The figures shown here are for reference only, they may be vary depending on the different version of Windows operating system installed.

Activating Bluetooth Connection

- Checking the Bluetooth status Before setting up a Bluetooth connection, it is a must to make sure that Airplane mode is turned off.
 - 1. Open up [Settings], find and click [Bluetooth & devices].
 - 2. Switch [ON] the Bluebooth function if it is set to [Off].
- Pairing the Bluetooth devices
 - 3. Click [Add device].
 - 4. Select [Bluetooth].
 - 5. Choose and select a device to start pairing.
 - Give the passcode as instructed by the device waiting to be connected, and then click on [Connect] to continue and complete pairing.

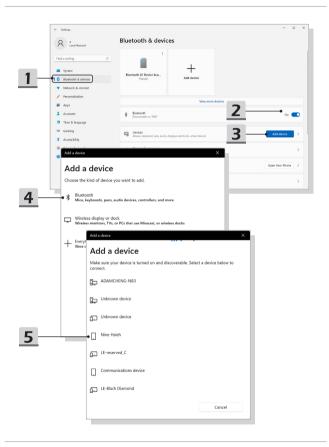


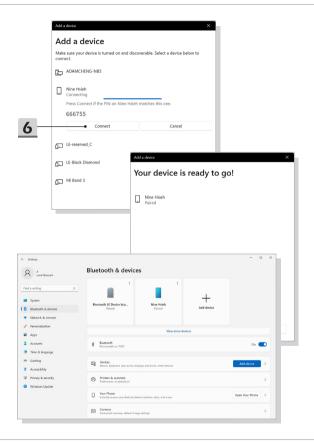

How to Connect External Devices

This notebook may be equipped with various connecting I/O (input/output) ports, such as USB, HDMI™, DisplayPort, and mini DisplayPort. Users will be able to connect diverse peripheral devices to the notebook.

To connect these devices, refer to the instruction manuals of each device first, and then connect the device to the notebook. This notebook is capable to auto detect the connected devices, and if there is no detection of the devices, please manually enable the devices by going to [Start Menu/ Windows System/ Control Panel/ Hardware and Sound/ Add a device] to add the new devices.

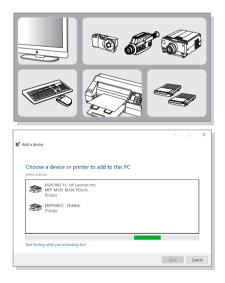

How to Use USB Power Share Function (optional)

This notebook may be optionally supported USB Power Share function via Type-A USB ports, providing portable charging power output for various USB devices, such as mobile phones and power banks, while the notebook is in hibernation and shutdown status.

It is always suggested to use the official authorized cable to perform this function.

- USB Power Share function will only be available in AC mode under default settings; therefore, it is a must to connect AC power to the notebook before using this function.
- Users are also allowed to enable using this function under AC or DC mode in BIOS settings; however, as AC/ DC mode is enabled, it may affect the battery life more or less.
- USB Power Share function supports selected models only, and the figures shown here are for reference only.



Video: How to Use RAID Function (optional)

* For selected models with Windows 11 operating system installed.

This notebook may support RAID function of different levels. RAID allows users to store data on multiple hard disk drives or solid state drives. Contact the local dealer for further and correct information and be noted that the supported RAID functions may vary depending on the models users purchased.


Watch the instruction video at: https://www.youtube.com/watch?v=TWqufSUYC-8



Video: How to Use F3 Recovery on MSI notebook preloaded system (optional)

* For selected models with Windows 11 operating system installed.

Watch the instruction video at: https://www.youtube.com/watch?v=caSZR08b2fc, to restore the operating system when it is needed.

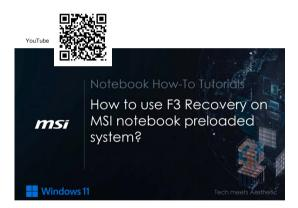

Video: How to Use Backup and System Restore with "MSI Center Pro" (optional)

* For selected models with Windows 11 operating system installed.

Watch the instruction video at: https://www.youtube.com/watch?v=C3M1Di0QF_k, to backup or restore the operating system when it is needed.







MSI.COM







SOCIAL MEDIA