



# Voyager 5200 Series Bluetooth headset User Guide

## **SUMMARY**

This guide provides the end-user with task-based user information for the featured product.

 
---

# Table of contents

<b>Headset overview</b>	<b>1</b>
<b>Charge case overview</b>	<b>2</b>
<b>Charge your headset</b>	<b>3</b>
Check headset battery status	4
Low battery warnings	5
Use charge case	5
<b>Fit</b>	<b>6</b>
Change eartip size	6
Switch ears	6
<b>Connect and pair</b>	<b>8</b>
Pair to mobile device	8
NFC pairing	8
<b>Basics</b>	<b>10</b>
Power on/off	10
Adjust the volume	10
Adjust headset microphone volume (softphone)	10
Make/Take/End Calls	10
Answer a call	10
End a call	10
Mute	11
Reject a call	11
Call back last call (smartphone)	11
Play or pause audio	11
Voice assistant (smartphone feature)	11
Use sensors	11
Reset sensors	12
Disable sensors	12
<b>Advanced features</b>	<b>13</b>
Adjust voice alert volume	13
Reconnect to wireless device	13
Caller Announcement (mobile phone only)	13
<b>Load software</b>	<b>14</b>
Update your Poly device	14
<b>Troubleshooting</b>	<b>15</b>

<b>What's in the box</b>	<b>17</b>	
Accessories	17	
<b>Safety warnings</b>	<b>19</b>	
Frequency and transmitter power		19
Safety Instructions	19	
<b>Support</b>	<b>21</b>	


# Headset overview

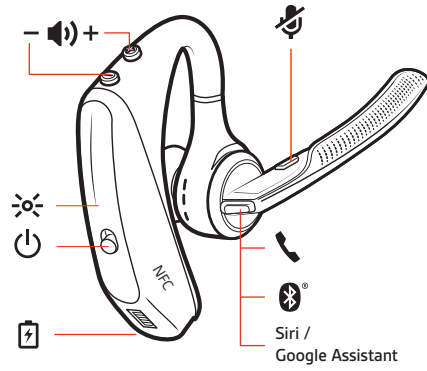



Icon	Headset control
	Volume
	Mute
	Call
	Bluetooth pairing
Siri, Google Assistant	Default voice assistant
NFC	Near Field Communication (Not offered on new product)
	Charge port
	Power
	Indicator light

 ---
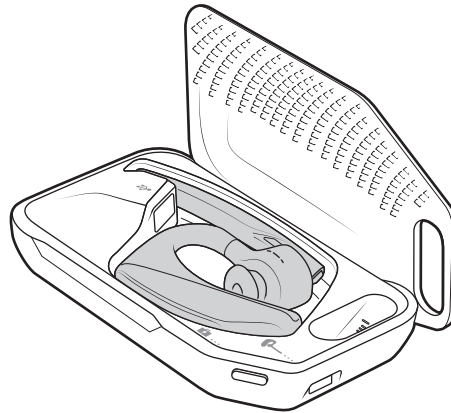
# Charge case overview




- 
-  **NOTE:** The charge case available as an accessory at [poly.com/accessories](https://poly.com/accessories).
  -  **IMPORTANT:** The charge case is placed in deep sleep mode after manufacturing to save power and protect the battery. To wake-up the charge case, plug it into a power source for a minimum of 1 minute. The LEDs flash when charging.
-

---


# Charge your headset

 
Your new headset has enough power to pair and make a few calls directly out of the box. It takes approximately 90 minutes to fully charge the headset; the indicator light turns off once charging is complete.

A micro USB cable is supplied to allow you to charge the headset with an AC wall charger (not included) or through a PC's USB port. The PC must be powered on to charge via USB 2.0 or higher.

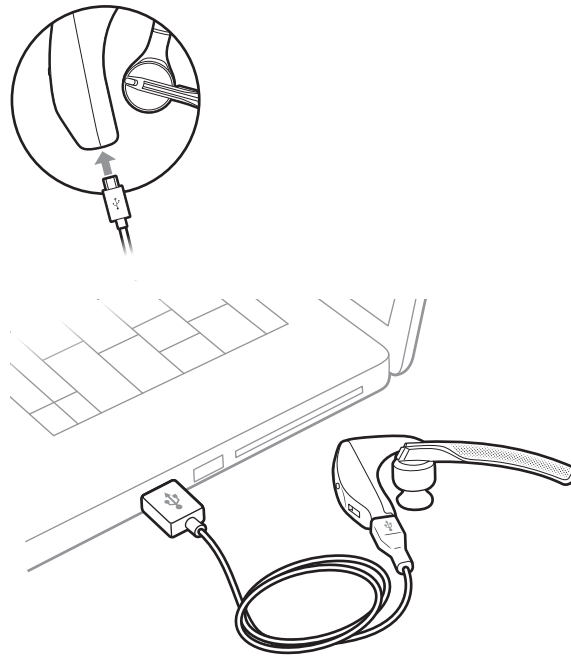

  Or you can use the accessory charge case. Press the charge case button to begin charging.

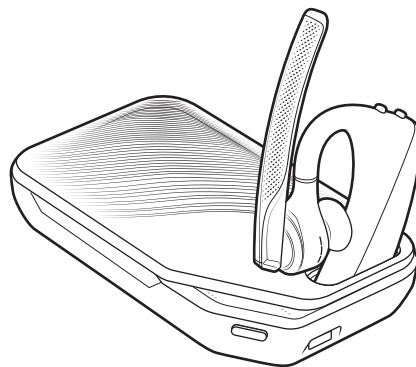

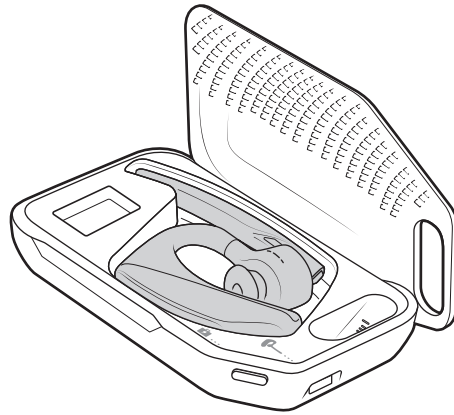

**NOTE:** Always charge at near room temperatures; never charge battery at temperatures below 0°C (32°F) or above 40°C(104°F).

## Check headset battery status

- Check your headset battery status by doing one of the following:
  - With your headset powered on and smart sensors active, put on your headset and listen to the voice alert.
  - View headset LEDs while charging.
  - Power on your headset and listen to the voice alert.
  - View status in Poly Lens App .

LED while charging	Headset battery status
Off	Charging complete
● ● ●	Battery high
● ●	Battery medium
●	Battery low
⚡	Battery critical



**TIP:** To reset the accuracy of the talk time alert, deplete the headset battery then charge fully.

## Low battery warnings

Battery Level	Voice Prompt
30 minutes of talk time remaining	"Battery Low" repeats every 15 minutes
10 minutes of talk time remaining	"Recharge Headset" every 5 minutes

## Use charge case

A fully charged case can recharge your headset fully two times for an additional 14 hours of headset talk time.

 


**NOTE:** The charge case available as an accessory at [poly.com/accessories](https://poly.com/accessories).



**IMPORTANT:** The charge case is placed in deep sleep mode after manufacturing to save power and protect the battery. To wake-up the charge case, plug it into a power source for a minimum of 1 minute. The LEDs flash when charging.

1. Place your headset inside the charge case or connect it to the charge port on the top of the case.
2. Press the case button to begin charging your headset.

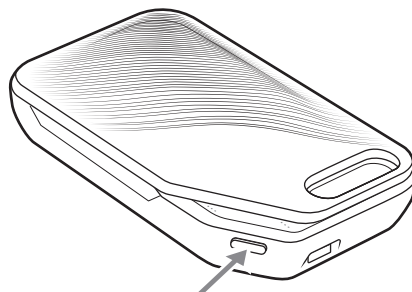

Charge case LEDs	Status
● ● ●	Fully charged
● ●	Charging
●	Battery depleted; Recharge case/headset



---


# Fit

 1. Slide headset over and behind your ear, then press gently toward your ear.



**NOTE:** Remove your eyeglasses before donning the headset for best fit.


2. Rotate microphone boom until it is pointed toward your mouth.
3. Mic boom moves up and down for a better fit.

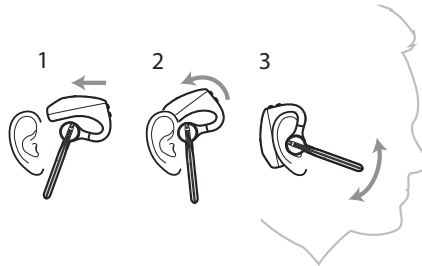


## Change eartip size

Change the eartip for a better fit.

 1. Push in eartip and rotate to the left to unlock it.

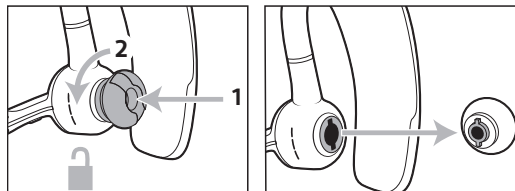


 2. Align new eartip into slot; push, rotate to the right and lock into place.

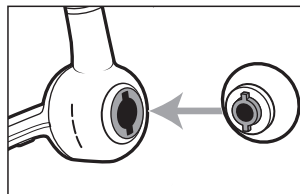

## Switch ears

 - To wear the headset on your other ear, rotate the boom upwards then twist it around so the eartip is on the other side before lowering the mic boom.

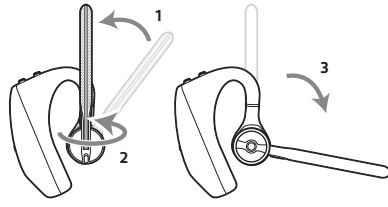

---

# Connect and pair

## Pair to mobile device

1. To put your headset in pair mode, press the Call button until you hear "pairing" and the headset LEDs flash **blue and red**.
2. Activate Bluetooth on your phone and set it to search for new devices.
  - *iPhone* **Settings > Bluetooth > On\***
  - *Android* **Settings > Bluetooth On > Scan for devices\***



**NOTE:** \*Menus may vary by device.

---

3. Select "**Poly V5200 Series.**"

Once successfully paired, you hear "pairing successful" and the headset LEDs stop flashing.



**NOTE:** Your headset can pair with up to 8 devices but only maintain 2 connections simultaneously; this includes the base.

---

## NFC pairing



 
**NOTE:** Not offered on new product.

---

NFC pairing is an option if you have no more than one other device already connected. NFC pairing will not work if there are two devices connected already.


1. On your mobile phone ensure NFC is enabled and your phone's display is unlocked. (Phones may vary and some phones may not have NFC support.)

2. With the headset powered on, lay the headset on the back of phone near the NFC tag on phone as shown until NFC pairing completes. If necessary, accept the connection.

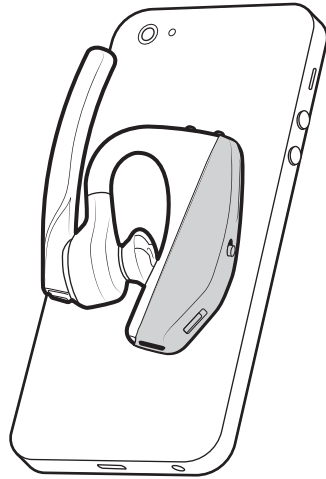


---


# Basics

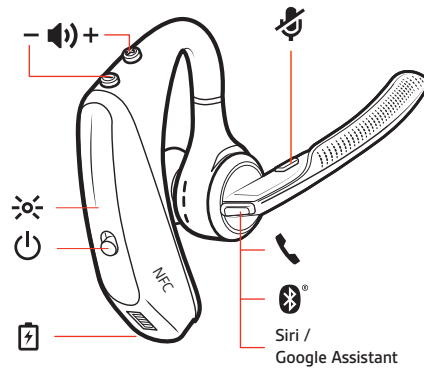 


## Power on/off

- To turn on the headset, slide the Power  button to reveal green.

## Adjust the volume

- Toggle the Volume  button up (+) or down (-) during a call or while streaming audio.


While not on a call or streaming audio you can toggle the Volume  button to adjust the volume level for Caller Announce and other voice prompts.

## Adjust headset microphone volume (softphone)

- Place a test softphone call and adjust softphone volume and PC sound volume accordingly.

## Make/Take/End Calls

### Answer a call

- Put the headset on to answer a call, or
- Say “answer” after call is announced, or
- Tap the Call  button.


### End a call

 
- Tap the Call  button.

## Mute

- During an active call, tap the Mute  button to mute or unmute your headset.

## Reject a call


- Press Call button  for 2 seconds until a tone is heard.

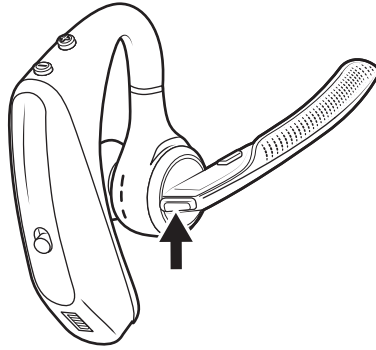

## Call back last call (smartphone)

- To dial your last number you dialed, double-tap the Call button.

## Play or pause audio

- Tap the Call  button to pause or resume streaming audio.



**NOTE:** Functionality varies by application. May not function with web-based apps.

## Voice assistant (smartphone feature)


- **Siri, Google Assistant, Cortana** Press and hold the Call button for 2 seconds to activate your phone's default voice assistant. Wait for the phone prompt to activate voice dialing, search, and other smartphone voice controls.

## Use sensors

Smart sensors respond when you put on or take off your headset. Customize in Poly Lens App . Below describes default settings.


With active sensors	putting on the headset will:	taking off the headset will:
Mobile/softphone call	answer the call	keep call in headset
Music/media	resume music/media (if playing previous to taking off)*	pause music/media (if playing)*

 
With active sensors	putting on the headset will:	taking off the headset will:
Lock headset	unlock the Call button	lock the Call button to avoid accidental calls

 **NOTE:** \*Functionality varies by application. May not function with web-based apps.


## Reset sensors

You may need to reset the sensors if they are not working as expected.

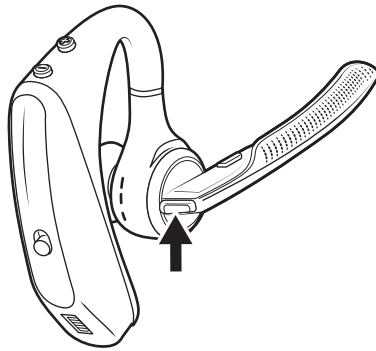

 - Wearing the headset, tap the Call  button to test sensors. A talk time voice alert means sensors are working. A tone or lack of voice prompts means sensors need to be reset.

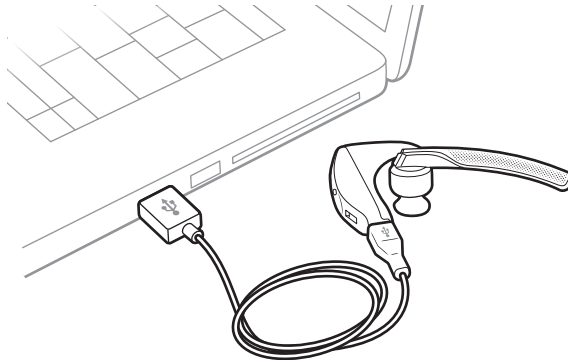

- To reset the sensors, power on the headset, connect the headset to a USB cable and plug the cable into your computer's USB port or an AC wall adapter (not included). Then place the headset on a flat, non-metallic surface for more than 10 seconds.



## Disable sensors

- You can disable your headset smart sensors in Poly Lens App or by using a button press while your headset is idle. Simultaneously press and hold the Call  and Mute  buttons for 5 seconds. You hear "smart sensors off."

---

# Advanced features

## Adjust voice alert volume

- Toggle the volume button when the headset is powered on and idle (not on a call or streaming music) to adjust the volume of the headset's voice alerts.

## Reconnect to wireless device

If your headset has become disconnected, reconnect to your Bluetooth device.

- Press the Call button once or manually connect through your device's Bluetooth device menu. You hear "phone connected."

## Caller Announcement (mobile phone only)

When wearing your headset, you will hear the name of a contact calling so you can decide whether to answer or ignore the call without having to check the phone screen.

An incoming caller name is announced:

- if your phone supports Phone Book Access Profile (PBAP)
- if you granted access to your contacts during pairing process (for many mobile phones, this is preset out-of-the box and may not be necessary)
- if the caller is stored in the phone's contacts list

An incoming caller name is not announced: if the caller is unknown, unlisted, blocked, or the language is not supported.



# Load software

Download Poly Lens App to get the most out of your device. Some softphones require the installation of Poly software to enable device call control(answer/end and mute) functionality.

- Download Poly Lens Desktop App at [poly.com/lens](https://poly.com/lens).
- Download Poly Lens Mobile App at [poly.com/lens](https://poly.com/lens), the App Store or Google Play.



	Poly Lens Mobile App	Poly Lens Desktop App
Configure call control for softphones	available for some softphones	√
Change headset language	√	√
Enable features	√	√
Battery meter	√	√
Update device firmware	√	√
Manage notifications and alerts	√	√
Schedule health and wellness reminders	√	√
View user guide	√	√
FindMyHeadset	√	

## Update your Poly device

Keep your firmware and software up-to-date to improve performance and add new features to your Poly device.

Update your device using Poly Lens App . Download at [poly.com/lens](https://poly.com/lens).

---

# Troubleshooting


Issue	Resolution
How do I pair my headset to a mobile device?	See <a href="#">Pair to mobile device on page 8</a> .
Why don't I have NFC pairing on my headset?	NFC pairing is not offered on headsets built after 2021.
My audio unexpectedly switches between my headset and mobile phone.	<ul style="list-style-type: none"><li>• If you do not wear glasses, reset your headset sensors. See <a href="#">Reset sensors on page 12</a>.</li><li>• If you wear glasses, try disabling the sensors. Your headset wearing sensors may not function correctly when wearing glasses with certain frame characteristics. See <a href="#">Disable sensors on page 12</a>.</li></ul>
My audio is crackling.	<ul style="list-style-type: none"><li>• Your headset may be too far away from your connected device and out of Bluetooth range. Move closer to your connected device.</li><li>• Bluetooth density issues: If you are in a location with many Bluetooth devices operating at the same time (such as on a train or in a gym), they may be interfering with your Bluetooth connection and causing instability. Try using your headset in a less crowded location to see if the issue persists.</li><li>• Ensure that your headset microphone is pointed toward the corner of your mouth. See <a href="#">Fit on page 6</a>.</li></ul>
<ul style="list-style-type: none"><li>• Callers can't hear me.</li><li>• I can't hear callers or music.</li></ul>	<ul style="list-style-type: none"><li>• Ensure headset is paired and connected to your phone. See <a href="#">Pair to mobile device on page 8</a>.</li><li>• On iOS, check your audio output on your smartphone to make sure that the audio is directed to the headset and not another audio output.</li><li>• Your headset sensor may not be detecting your ear shape correctly. Reposition headset on your ear.</li><li>• Disable your sensors as they may be incompatible with your specific ear shape or glasses frames. See <a href="#">Disable sensors on page 12</a>. You may need to reset your sensors. See <a href="#">Reset sensors on page 12</a>.</li><li>• Disable HD Voice (Wideband Audio) via Poly Lens App as this setting may be incompatible with your phone.</li></ul>

Issue	Resolution
My headset will not report 7 hours of talk time after it is fully charged.	<ul style="list-style-type: none"> <li>● Ensure headset is paired and connected to your phone. See <a href="#">Pair to mobile device on page 8</a>.</li> <li>● Disable HD Voice (Wideband Audio) which uses more power.</li> <li>● Completely discharge your headset's battery then give it a full charge.</li> <li>● Some phones have less efficient Bluetooth connections and thus will not allow for an optimal talk time of 7 hours. The talk time remaining estimate is partly calculated by your historical use so inconsistencies in an estimate may occur based on your particular use patterns.</li> </ul>
How do I lower the volume of voice prompts?	See <a href="#">Adjust voice alert volume on page 13</a> .
I want to customize my headset features.	Customize your device settings with Poly Lens App . Download: <a href="http://poly.com/lens">poly.com/lens</a>


---

# What's in the box

**Figure 10-1** Headset

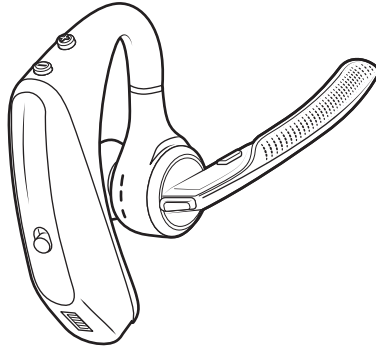 

**Figure 10-2** Micro USB cable

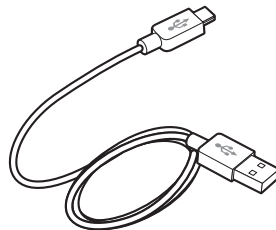 


**Figure 10-3** Eartips (S, M, L)




## Accessories

Sold separately at [poly.com/accessories](http://poly.com/accessories).


**Figure 10-4** Vehicle power charger

 


**Figure 10-5** Eartips with foam covers

 


**Figure 10-6** USB Bluetooth adapter

 

**Figure 10-7** Charge case

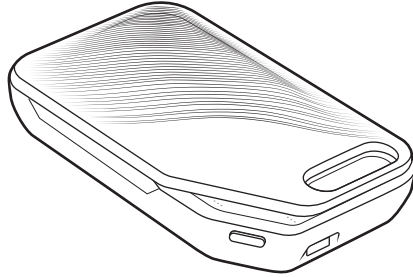 

**Figure 10-8** Wall charger

 

---

# Safety warnings

## Frequency and transmitter power

Bluetooth: operating between 2,402 and 2,480 MHz below 2.4mW average.

## Safety Instructions

To reduce the risk of fire, electric shock, injury to persons and damage to property, read all operating instructions and the following safety instructions before using your Poly product. Operating, storage and charging temperature is 10°C to 40°C (50°F to 104°F).

- Only use those Poly products and accessories designed for use with this product.
- If you experience a skin irritation after using this product, discontinue use and contact Poly.
- CHILDREN. Never allow children to play with the product-small parts may be a choking hazard.
- Do not disassemble the product as this may expose you to dangerous voltages or other risks. Incorrect reassembly can cause electric shock or fire when the product is subsequently used.
- Unplug, discontinue use and contact Poly if the product overheats or has a damaged outer casing, cord or plug.
- Exposure to high volume sound levels or excessive sound pressure may cause temporary or permanent damage to your hearing. Although there is no single volume setting that is appropriate for everyone, you should always use your headset/headphones with the volume set at moderate levels and avoid prolonged exposure to high volume sound levels. The louder the volume, the less time is required before your hearing could be affected. You may experience different sound levels when using your headset/headphones with different devices. The device you use and its settings affect the level of sound you hear. If you experience hearing discomfort, you should stop listening to the device through your headset/headphones and have your hearing checked by your doctor. To protect your hearing, some hearing experts suggest that you:
  1. Set the volume control in a low position before putting your headset/headphones on your ears and use as low a volume as possible.
  2. Avoid turning up the volume to block out noisy surroundings. Whenever possible, use your headset/headphones in a quiet environment with low background noise.
  3. Limit the amount of time you use headsets/headphones at high volume levels.
  4. Turn the volume down if the sound from the headset/headphones prevent you from hearing people speaking near you.

See [poly.com/healthandsafety](https://poly.com/healthandsafety) for more information on headsets/headphones and hearing.

- If you use your headset/headphones while driving, check local laws regarding use of a mobile phone and headset, and ensure your attention and focus remain on driving safely. Use of a headset/headphones that covers both ears will impair your ability to hear other sounds and in most regions is illegal to use while operating a motor vehicle or riding a bicycle and may be a serious hazard for you and others.
- If this product includes earbuds/eartips, install and use them in accordance with the instructions provided. Do not force earbuds/eartips down the ear canal. Consult a doctor if they become lodged in the ear canal.
- Plug the mains adapter or charger into a socket-outlet that is near to the equipment and will be easily accessible.

### **Battery Warnings for Wireless Products**

- If your product has an embedded, non-replaceable battery, do not attempt to open the product or remove the battery as this may cause injury and/or damage the product. If your product has a replaceable battery, use only the battery type supplied by Poly. Remove a spent battery promptly.
- Replace rechargeable batteries after three years or 300 charge cycles, whichever occurs first.
- Do not dispose of the product or battery in a fire or heat above 40°C (104°F).
- Do not expose the battery to extremely high temperatures. It may result in an explosion or the leakage of flammable liquid or gas.
- Do not open, deform or mutilate the battery. There may be corrosive materials which can cause damage to eyes or skin and may be toxic if swallowed.
- Never put batteries in mouth. If swallowed, contact a physician or poison control center.
- Swallowing may lead to burns, perforation of soft tissue, and death. Severe burns can occur within 2 hours of ingestion.
- Always store batteries where children cannot reach them.
- Do not allow any battery or its holder to contact metal objects such as keys or coins.
- RECYCLING: The product battery must be recycled or disposed of properly. Contact your local recycling center for battery removal and proper disposal.
- Use only the charger supplied by Poly to charge the product and follow the charging instructions provided. Alternatively, if your headset is designed to be charged with your cell phone charger, use only cell phone chargers approved and provided by your cell phone manufacturer. Do not use the charger for any other purpose. Ensure that the voltage rating corresponds to the power supply you intend to use.

---

# Support

## NEED MORE HELP?

[poly.com/support](https://poly.com/support)

### HP Inc.

1501 Page Mill Road

Palo Alto 94304

USA

### HP Deutschland GmbH

HP HQ-TRE

71025 Boeblingen

Germany

### HP Inc. UK Ltd.

Regulatory Enquiries

Earley West

300 Thames Valley Park Drive

Reading, RG6 1PT

United Kingdom

© 2024 Poly. Bluetooth is a registered trademark of Bluetooth SIG, Inc. All trademarks are the property of their respective owners.

Model ID: **CC5200**