
Panasonic®

Operating Instructions

AC Adaptor

Model No. AW-PS551P

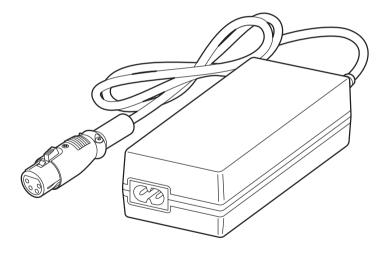


Before operating this product, please read the instructions carefully and save this manual for future use. Please carefully read the "Read this first!" (P.2 to 3) of this Manual before use.

FJ0416KT2044 -PS Printed in Japan



Read this first!

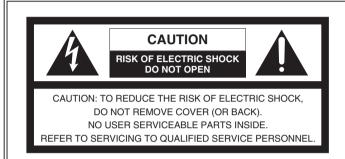



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (service) instructions in the literature accompanying the appliance.

WARNING:

- To reduce the risk of fire or electric shock, do not expose this equipment to rain or moisture.
- To reduce the risk of fire or electric shock, keep this equipment away from all liquids. Use and store only in locations which are not exposed to the risk of dripping or splashing liquids, and do not place any liquid containers on top of the equipment.

CAUTION:

To reduce the risk of fire or electric shock and annoying interference, use the recommended accessories only.

indicates safety information.

Read this first!

FCC NOTICE (USA)

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Warning:

To assure continued FCC emission limit compliance, the user must use only shielded interface cables when connecting to external units. Also, any unauthorized changes or modifications to this equipment could void the user's authority to operate it.

FCC CAUTION:

This equipment has been tested and found to comply with the limits for a class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.

Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

For U.S.A		
Warning:	CAN ICES-003(A)/NMB-003(A)	
Do not install this product near any object that burns easily.		
In case of using a halogen lamp, installation of it near such an		
object could cause a fire due to the heat generated by the lamp.		

indicates safety information.

Contents

Accessories	4
Overview	5
Precautions	
Parts and their functions	
Connections	

Troubleshooting	10
Appearance	11
Specifications	Back cover

Accessories

Power cable	1
-------------	---

DC cable with ø5.5 plug (approx. 3 meters [9.9 ft.]) [Model No. VEEB0115A] <UL Style 2464 2 x 18 AWG> ... 1 DC cable with ø6.5 plug (approx. 3 meters [9.9 ft.]) [Model No. VEEB0116A] <UL Style 2464 2 x 18 AWG> ... 1

Overview

This AC adaptor is designed to be used with convertible cameras and their peripherals, with multi-purpose cameras and their peripherals, and with live switchers.

How to identify the cables

• DC cable with ø5.5 plug <Background color : Blue / Font color : White>



• DC cable with ø6.5 plug <Background color : Yellow / Font color : Black>

For connection with the following devices. 下記製品との接続にご使用ください。 与以下装置连接时, 请使用这根电缆。	-Θ	
AW-E300/E300SP/E300A/E600/E800/E800A AW-E350/E650/E655/E750/E860 AW-EX500,AW-SW300/SW350,AK-HC1500	¢6.5	

Precautions

Be sure to confirm the polarity display of the apparatus to connect. Use the DC cable that meets the DC input polarity display of the apparatus to connect.

• This AC adaptor cannot be connected in series or in parallel.

• Handle the AC adaptor with care.

Dropping the AC adaptor or subjecting it to a strong shock can cause a failure or an accident.

- Operating temperature range 0°C (32°F) to 40°C (104°F) Avoid using it in a cold place below 0°C (32°F) or a hot place above 40°C (104°F) because low or high temperature will adversely affect the parts inside.
- Do not use the AC adaptor outdoors since doing so may cause trouble.

Maintenance

Pull out the power cable plug, and wipe the AC adaptor clean with a dry cloth.

If it is extremely dirty, dip a cloth into a diluted solution of kitchen detergent (neutral), squeeze it hard, and wipe the product surfaces carefully.

- Notes

- Do not use benzine, paint thinner, or other volatile liquids.
- When using a chemical duster, carefully read the caution notes on its use.
- When this unit is to be discarded at the end of its service life, please consult with your dealer.

Parts and their functions

Power connector

Connect the power cable supplied with the unit.

DC 12 V output connector [12V === OUT] (4-pin round connector)


Din No

Connect one end of the supplied DC cable to this connector and the other end to the DC 12 V input connector [DC 12 V IN] on the convertible camera and its peripherals, on the multipurpose camera and its peripherals or on the live switcher.

\sim	
	2

Signal hame
GND
NC
NC
DC 12 V

Cignal name

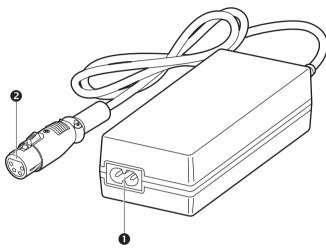


Connections


The DC cable with the 5.5 mm diameter plug [Model No. VEEB0115A] and the DC cable with the 6.5 mm diameter plug [Model No. VEEB0116A] have different "+" and "-" polarities, so check the markings on the product to which the cable is to be connected and on the cable itself.

- Switch off all the devices before making any connection.
- Connect the DC 12 V output connector of this adaptor to the DC 12 V input connector on the convertible camera with the supplied DC cable with ø6.5 plug.
- Please use the DC cable that fits the DC 12 V input connector of the equipment when connecting it with other equipment.

Connections

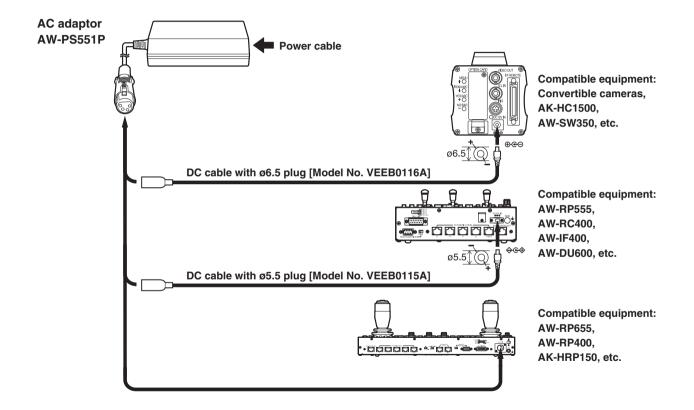

Connections

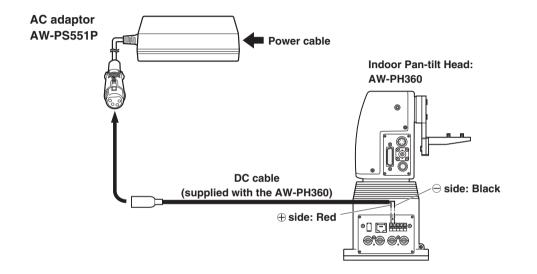


Depending on the time of manufacture, a DC cable may not have been supplied with the AW-PH360. For details, consult your dealer.

Troubleshooting

Symptom	Cause and remedial action
The DC 12 V voltage is not output properly.	If a unit whose output exceeds the rating has been connected or the connected unit is short-circuited, the DC 12 V voltage will not be output properly owing to the activation of the overcurrent protection circuit. Consult with your dealer.

Appearance

Unit : mm (inch)

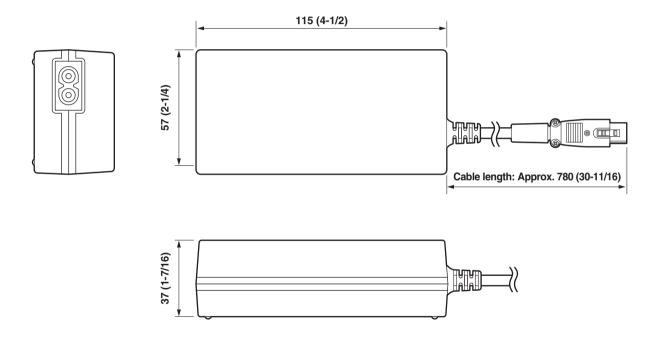

Specifications

Power source

100 V - 240 V AC (🔨), 50/60 Hz, 1.2 A

Power output

12 V DC (===), 3.0 A

indicates safety information.

	Mass and dimensions shown are approxi
Finish:	Black, molded resin
Mass:	Approx. 260 g (0.57 lb)
Dimensions (W x H x D):	57 mm \times 37 mm \times 115 mm (2-1/4 inches \times 1-7/16 inches \times 4-1/2 inches) [excluding protrusions]
Allowable humidity ranges:	20% to 90% (no condensation)
Operating temperature ranges:	0°C to 40°C (32°F to 104°F)

The provided power cable is for 125 V AC or less. Use it within AC 100 V to 120 V.

Mass and dimensions shown are approximate. Specifications are subject to change without notice.

Panasonic Entertainment & Communication Co., Ltd.

Web Site: https://pro-av.panasonic.net/en/

© Panasonic Entertainment & Communication Co., Ltd. 2016 - 2024