


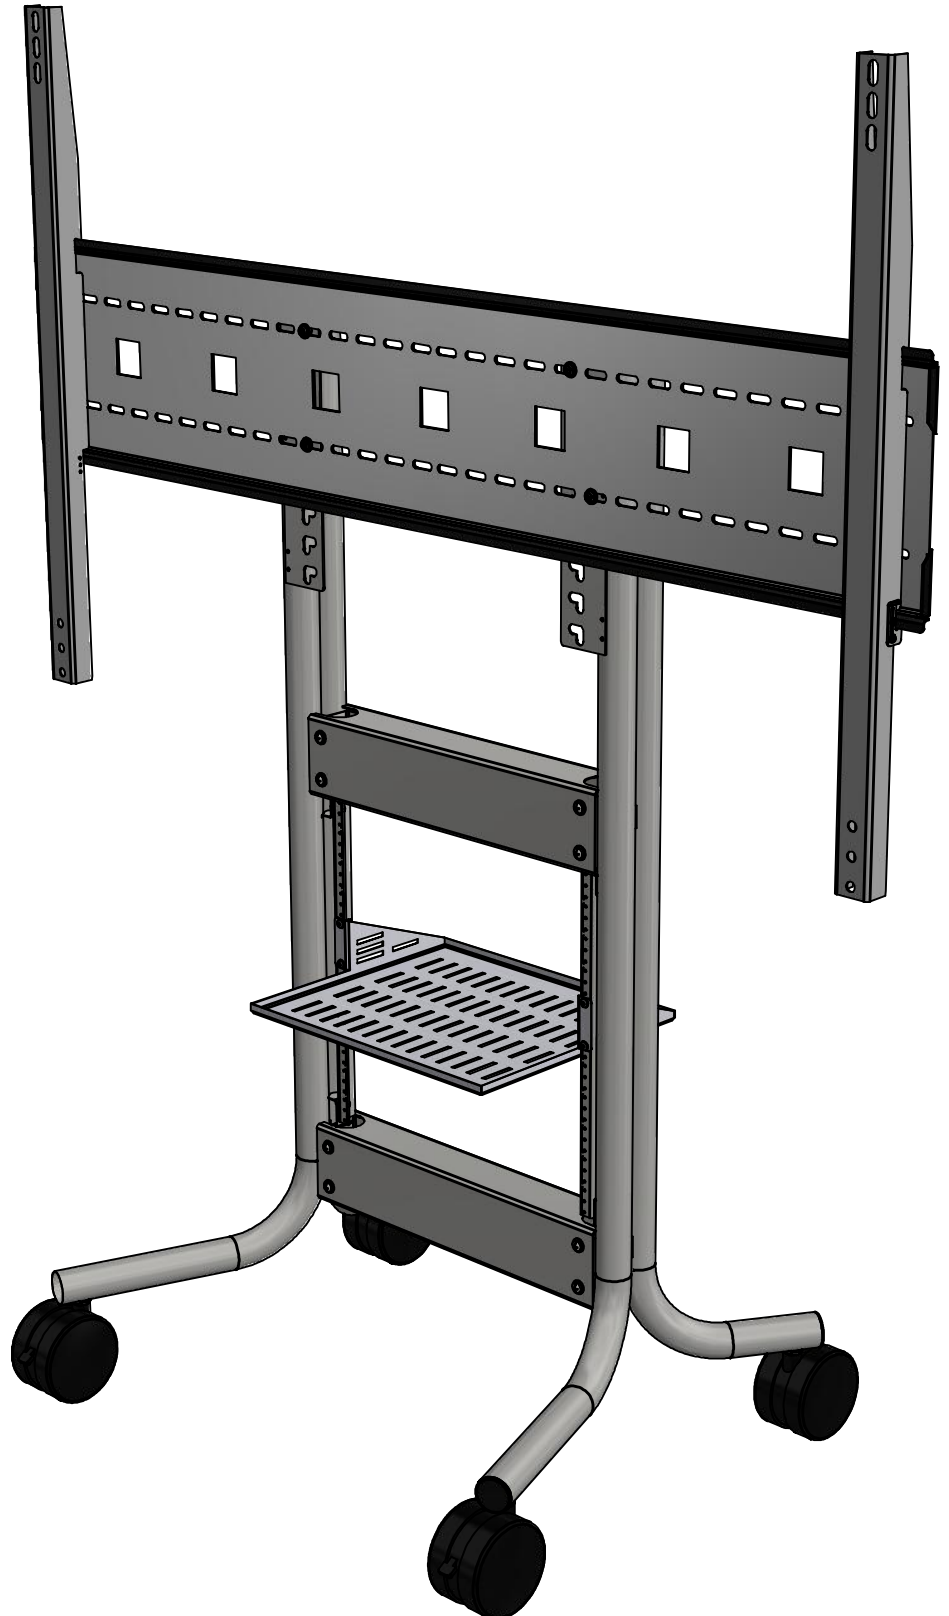

## EASY SETUP GUIDE


---

# RPS-500 - CSB55/70



# Items Included

A

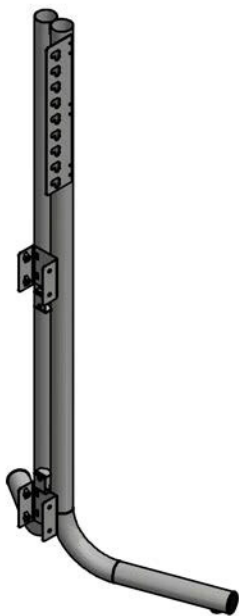

B




Union x 2

C



Screen mount x 1

D

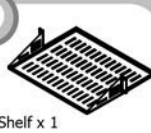

Shelf x 1

E



With break x 2  
Without break x 2

F



Philips Head Bolt  
5/16"x 1" or  
5/16"x 3/4"(x16)

G



5/16"  
ext 1"  
x 24

H



Philips Head Bolt  
5/16"x 1 1/4" (x4)

I



5/16" (x4)

J




Philips Head Bolt  
1/4"x 1/2" (x4)

K




Bolt 10-32 (x4)

L

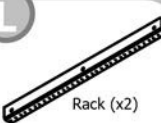


Rack (x2)

1

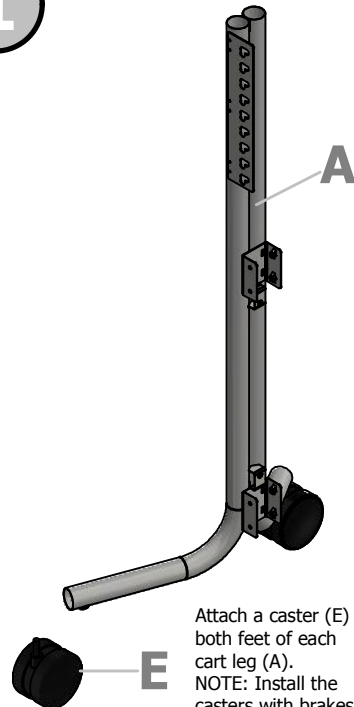

Attach a caster (E) to both feet of each cart leg (A).  
NOTE: Install the casters with brakes on the front.


2

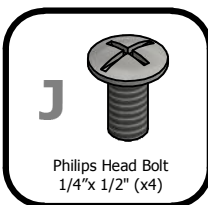


Philips Head Bolt  
1/4"x 1/2" (x4)



Attach Rack (L) to body (A).

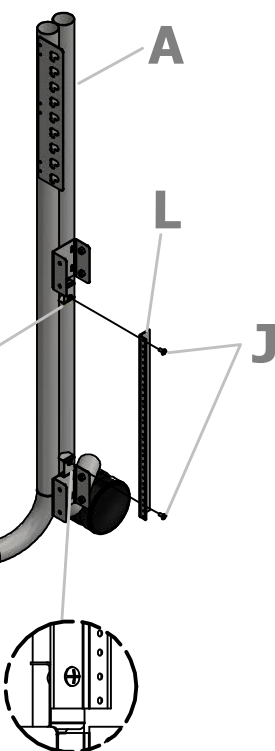


3

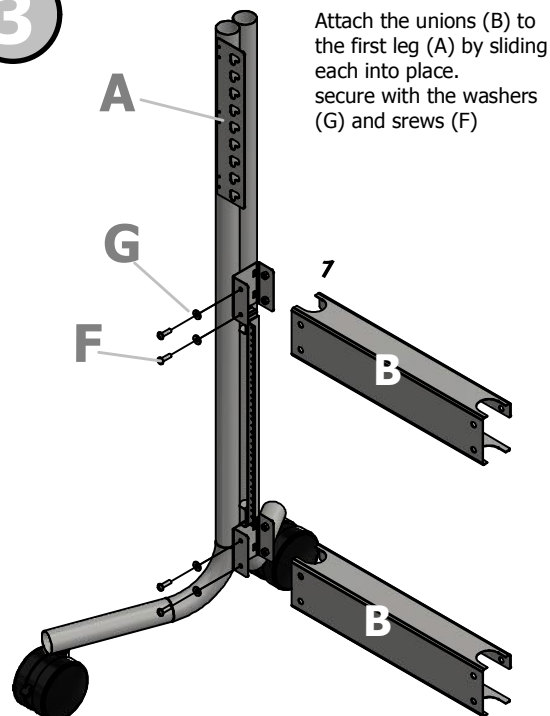


Attach the unions (B) to the first leg (A) by sliding each into place. secure with the washers (G) and screws (F)

4

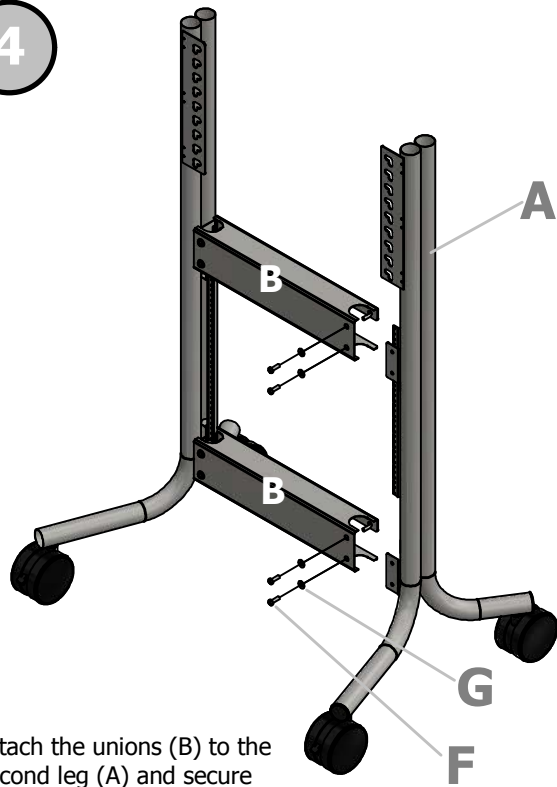


Attach the unions (B) to the second leg (A) and secure with the washers (G) and screws (F)

5

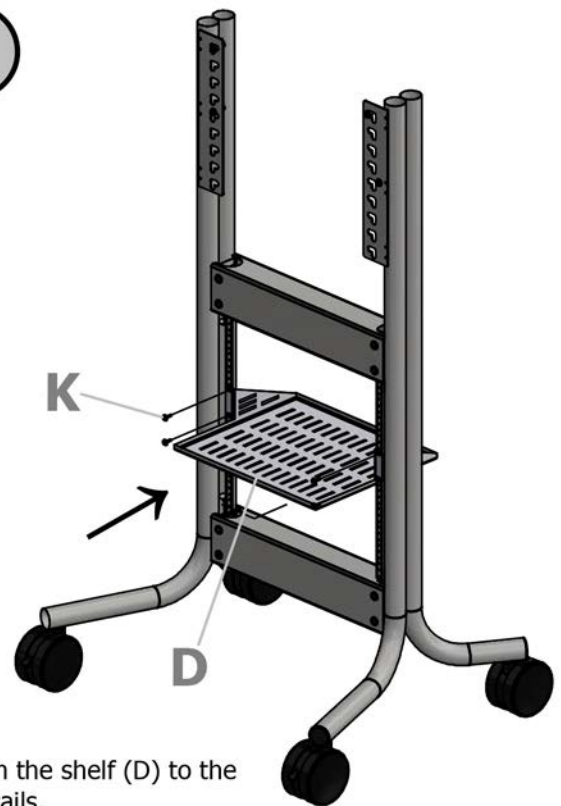

Attach the shelf (D) to the rack rails.

6

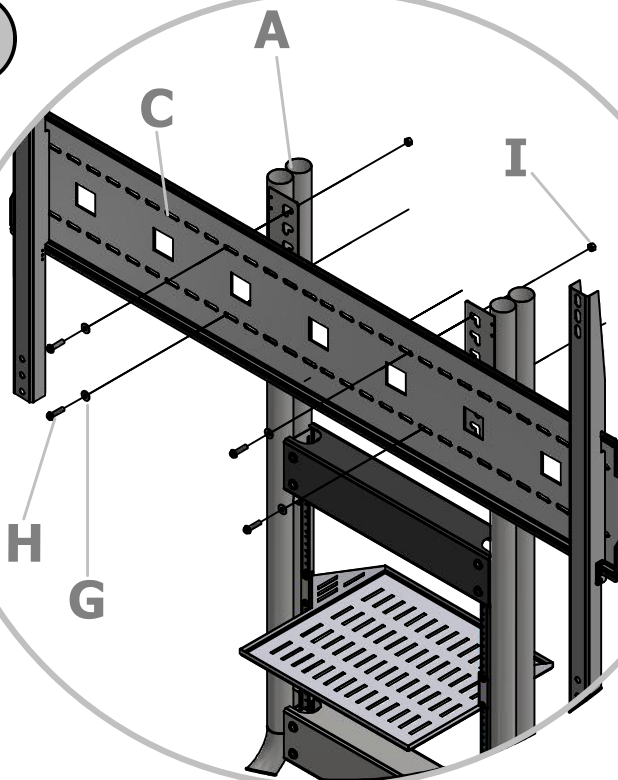

Install the display mount (C) To the cart legs (A) using the hardware indicated