



TT RGB Plus Software control interface


Please download TT RGB PLUS from Thermaltake's Official website.

<https://www.thermaltake.com/downloads>

OS compatibility: Windows 10, Windows 11

SWAFAN EX RGB PC Cooling Fan Software User Interface

CONNECT - CONTROLLER

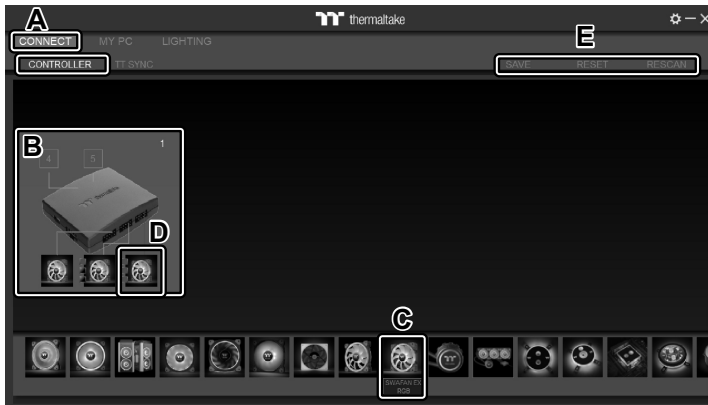

- After installation of TT RGB PLUS, you can find controllers on the "CONNECT" & "CONTROLLER" page.
- Click the controller port to make the "SWAFAN EX RGB" fan glow red lighting to pair.
- Drag and drop to pair the "SWAFAN EX RGB" fan with controller port.
- Select the number of SWAFAN EX RGB PC Cooling fans installed. (Default is 3 fans)
- SAVE: Save the controller pairing settings.
RESET: Reset the controller pairing.
RESCAN: Rescan the controllers.


MY PC - FAN SPEED



SWAFAN EX RGB PC Cooling Fan Speed Information and PWM Performance Settings.

- SWAFAN EX RGB real-time fan speed.
- Fan speed settings
 - PERFORMANCE: 0% → 100% (1500rpm)
 - SILENT: 0% (300~500rpm)
 - PWM: Set PWM silent (50%) to PWM performance (100%).
- NAME: Edit the case fan name.
- Controller – Port number.

LIGHTING

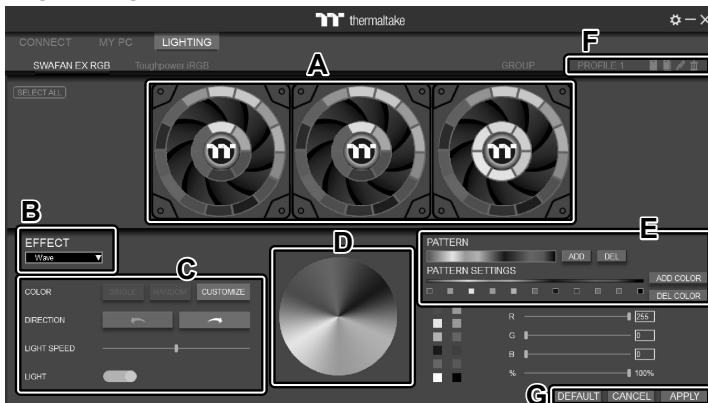

- Preview and edit the lighting effect.
 - Select 23 Lighting Effects.
 - Lighting effect settings.
 - Color palette: select lighting color
 - PATTERN: Set up the color pattern ring.
 - Profile Settings: New, Copy, Edit, Delete
 - DEFAULT: Reset the lighting effects.
- CANCEL: Deselect the LEDs for the preview screen.
APPLY: Execute and store lighting effects.



The software interface may vary with feature updates, please download the latest software version from www.thermaltake.com