




MSI

Gaming | Content Creation | Business & Productivity

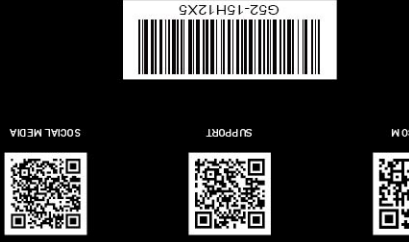

OX21H01-Z0D

Y53W Y5001


1256545

H0254

QUICK GUIDE

English

Product Overview (for reference only)

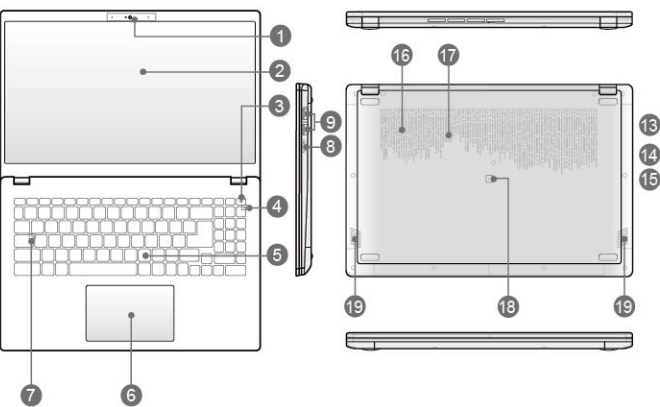

1.Webcam/ Webcam LED / Internal Microphone

2.Touch Screen Monitor (optional)

3.Power Key/ Power LED/ Battery Reset

4.Status LED

5.Keyboard

6.Touchpad

7.Status LED

8.Card Reader

9.USB 2.0 Port

10.Power Connector

11.USB 3.2 Gen 2 Port

12.Combo Audio Port

13.HDMI Connector

14.USB 3.2 Gen 2 Port (Type-C)

15.Status LED

16.Ventilator

17.Ventilator (optional)

18.Battery Reset Hole (optional)

19.Stereo Speakers

Battery Status :


Continuously blinking If the battery fails. If the problem persists, please contact your local authorized retailer or service center.

1 Num Lock

2 Caps Lock

Norsk

Getting Started (for reference only)

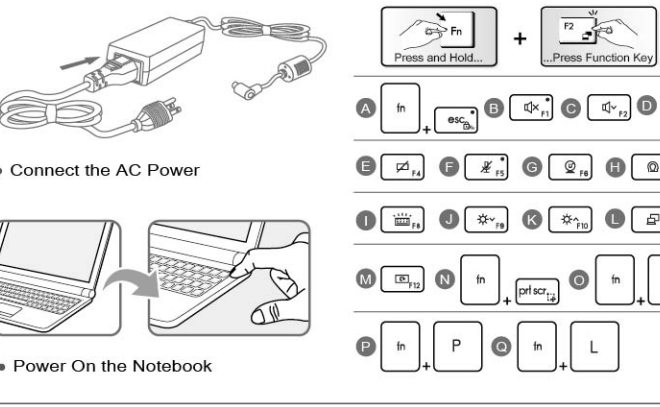

1.Webkamera/ webkamera-lampe/ Intern mikrofon

2.Touch Screen Monitor (valgfritt)

3.Av/på-tast/ Strøm-LED/ Tilbakestilling av batteri

4.Statuslampe

5.Tastatur

6.Styreplate

7.Statuslampe

8.Kortleser

9.USB 2.0 port

10.Strømkontakt

11.USB 3.2 Gen 2-port

12.Kombi-audio

13.HDMI kontakt

14.USB 3.2 Gen 2-port (type-C)

15.Statuslampe

16.Vifte

17.Vifte (valgfritt)

18.Batteristilbakestillingshull (valgfritt)

19.Stereohøytalere

• Connect the AC Power

• Power On the Notebook

I- Connect the AC Power

It is strongly recommended to connect the AC/DC adapter to the notebook and use the AC power while using this notebook for the first time since some models may require the AC/DC adapter to be connected in order to power on the notebook safely and properly.

1. Unpack the package to find the AC/DC adapter and power cord.

2. Attach the power cord to the connector of the AC/DC adapter.

3. Plug the DC end of the power cord to the notebook, and the male end of the power cord to the electrical outlet.

III- Function Keys

A. Enable or disable the default Quick Fn Launch Keys.

B. Mute the built-in speakers.

C. Decrease the built-in speaker's volume.

D. Increase the built-in speaker's volume.

E. Enable or disable the touchpad function.

F. Enable or disable the microphone function.

G. Enable or disable the Webcam function.

H. Use this key to switch the User Scenario in MSI Center Pro.

I. Select a keyboard backlight LED level.

J. Decrease the LCD brightness.

K. Increase the LCD brightness.

L. Switch the display output mode.

M. Rotate the screen upside down for 180 degrees.

N. Launch Snip & Sketch application.


O. Works as Break key by using both keys.

P. Works as Pause key by using both keys.

Q. Works as Scroll Lock key by using both keys.

Magyar

Termékkéteklítés

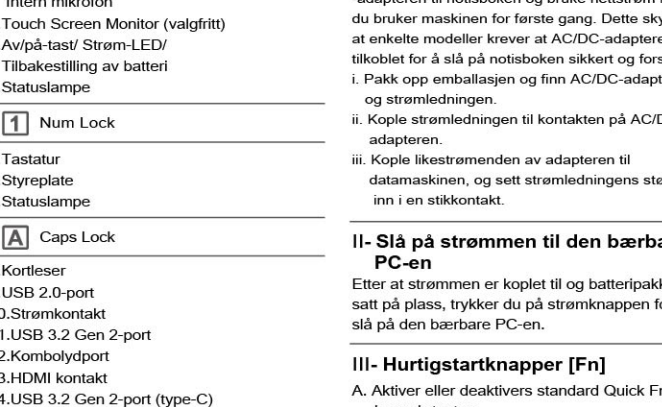

1.Webkamera/ webkamera LED/ Belsőjelző mikrofon

2. Touch Screen Monitor (opcionális)

3. Power gomb/ Bekapcsoló állapott LED/ Akkumulátor újratöltés

4. Állapotlejtő LED

5. Billentyűzet

6. Érintőpad

7. Állapotlejtő LED

8. Kártyaolvasó

9. USB 2.0 Port

10. Tápellátás/ tápszoftok csatlakozó

11. USB 3.2 Gen 2 Port

12. Kombinált audio port

13. HDMI csatlakozó

14.2. gen. USB 3.2 port (C-típus)

15. Állapotlejtő LED

16. Ventilátor

17. Ventilátor (opcionális)

18. Akkumulátor újratöltés nyílás (opcionális)

19. Stereó hangszórók

• Connexion de l'adaptateur secteur

• Mettre le notebook sous tension

I- Connexion de l'adaptateur secteur

Il est fortement recommandé de connecter l'adaptateur AC/DC à l'ordinateur portable et d'utiliser l'alimentation secteur lors de la première utilisation car certains modèles nécessitent que l'adaptateur AC/DC soit connecté à l'ordinateur portable pour être initialisé correctement et en toute sécurité.

1. Déballagez le carton pour trouver l'adaptateur AC/DC et le cordon d'alimentation.

2. Branchez le cordon d'alimentation entre le connecteur et l'adaptateur CA/CC.

3. Branchez l'extrémité CC de l'adaptateur sur l'ordinateur, et l'autre extrémité du cordon sur la prise électrique.

II- Mettre le notebook sous tension

Lorsque l'ordinateur est branché sur le secteur ou si la batterie est installée, appuyez sur le bouton d'alimentation pour allumer le notebook.

III- Tactches fonction

A. Activer ou désactiver les touches de raccourci "Fn".

B. Désactiver les haut-parleurs intégrés.

C. Permettre de diminuer le volume du haut-parleur intégré.

D. Permettre d'augmenter le volume du haut-parleur intégré.

E. Permettre d'activer ou de désactiver la fonction pavé tactile.

F. Activer ou désactiver la fonction du microphone.

G. Activer ou désactiver la fonction Webcam.

H. Utiliser cette touche pour activer le scénario utilisateur dans MSI Center Pro.

I. Sélectionner le style de rétroéclairage du clavier.

J. Permettre de diminuer la luminosité de l'écran LCD.

K. Permettre d'augmenter la luminosité de l'écran LCD.

L. Permettre de faire basculer le mode de sortie de l'affichage entre l'écran LCD, le moniteur externe ou les deux.

M. Faire pivoter l'écran à 180 degrés.

N. Lancer l'application Capture et croquis.


O. Fonctionne comme la touche Break en utilisant les deux touches.

P. Fonctionne comme la touche Pause en utilisant les deux touches.

Q. Fonctionne comme la touche Scroll Lock en utilisant les deux touches.

Latvian

Produktu pārskats

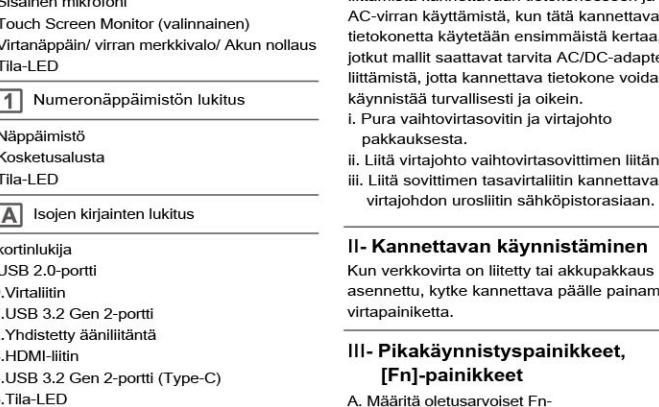

1.Webkamera/ Webkamera-LED/ Internais mikrofon

2.Touch Screen Monitor (valīmaizne)

3.Virtuālāpkn/ Virān mērkizāle/ Akum nollaus

4.LED status

5.Tastatūra

6.Skārienplakstīns

7.LED status

8.Kartītes lasītājs

9.USB 2.0 ports

10.Stāvās savienotājs

11.USB 3.2 Gen 2 ports

12.Kombinētais audio ports

13.HDMI savienotājs

14.USB 3.2 Gen 2 ports (C tips)

15.LED status

16.Ventilators

17.Ventilators (izvēlams)

18.Akkumulatora atslēdzatāšanas atvere (izvēlams)

19.Stereoskaņi

• Netzeil Anschließen

• Schalten Sie das Notebook

I- Netzeil Anschließen

Wir empfehlen Ihnen dringend, Ihr Notebook bei der Einrichtung und ersten Nutzung über das Netzeil mit Strom zu versorgen. Bei einigen Modellen kann die Stromversorgung über das Netzeil zwingend notwendig sein, um die Installation des Notebook ordnungsgemäß und sicher abzuschließen.

1. Packen Sie sämtliche Teile aus, legen Sie Netzeil und Netzkabel zur Seite.

2. Schließen Sie das Netzkabel an das Netzeil an.

3. Verbinden Sie den kleinen Stecker vom Netzeil mit dem Netzeilanschluss des Notebooks, stecken Sie den Stecker des Netzkabels in eine geeignete Steckdose.

II- Schalten Sie das Notebook

Wenn das Netzeil angeschlossen ist oder der Akku installiert ist, drücken Sie den An-/Aus-Schalter, um das Notebook einzuschalten.

III- Funktionstasten

A. Aktivieren oder deaktivieren die Standard-FN-Schaltflächen.

B. Stummhalten der eingebauten Lautsprecher.

C. Verringern der Lautstärke.

D. Erhöhen der Lautstärke.

E. Schalten das Touchpad ein oder aus.

F. Aktivieren oder deaktivieren die Mikrofonfunktion.

G. Schalten die Webcam-Funktion ein oder aus.

H. Mit dieser Taste können Sie das Benutzer-Szenario im MSI Center Pro wechseln.

I. Wählen Sie einen LED-Styl für die Hintergrundbeleuchtung der Tastatur.

J. Vermindert die LCD-Helligkeit.

K. Steigert die LCD-Helligkeit.

L. Schalten den Anzeigebildschirmmodus um.

M. Dreht den Bildschirm um 180 Grad auf den Kopf.

N. Durch Betätigung der Tasten starten Sie die Ausschneiden und skizzieren Anwendung.


O. Funktioniert wie die Unter-Taste, wenn Sie beide Tasten drücken.

P. Funktioniert wie die Pause-Taste, wenn Sie beide Tasten drücken.

Q. Funktioniert wie die Rollen-Taste, wenn Sie beide Tasten drücken.

Deutsch

Produktübersicht (dient nur als Referenz)

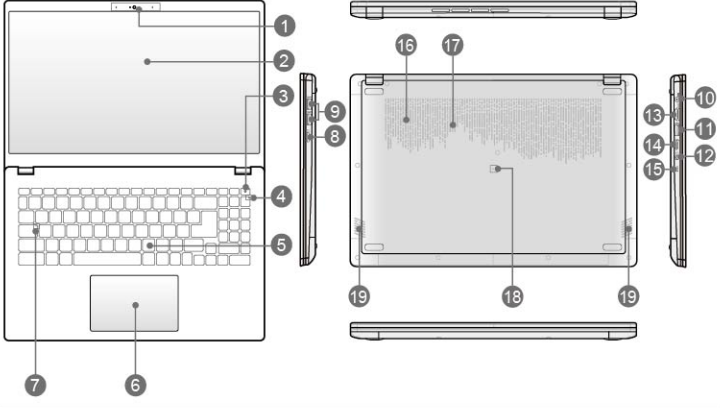

1.Webkamera/ Webkamera LED/ Interner Mikrofon

2.Touch Screen Monitor (optional)

3.Power Key/ Power LED/ Akku-Reset

4.Status-LED

5.Tastatur

6.Touchpad

7.Status-LED

8.Kartenleser

9.USB 2.0 Anschluss

10.Netzanschluss

11.USB 3.2 Gen 2-Port

12.Kombinierter Audioanschluss

13.HDMI-Buchse

14.USB 3.2 Gen 2 Anschluss (Typ C)

15.Status-LED

16.Lüfter

17.Lüfter (optional)

18.Akku-Resetöffnung (optional)

19.Stereo-Lautsprecher

Batteriestatus :


Leuchtet dauerhaft bei nahezu vollständigem Akku. Wenn der Fehler weiterhin besteht, wenden Sie sich an den autorisierten Fachhändler oder Kundendienstzentrum.

1 Num Lock

2 Caps Lock

English

Product Overview (for reference only)

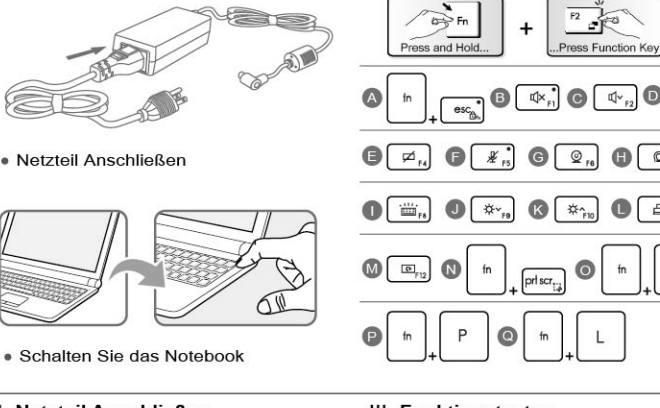

1.Webcam/ Webcam LED / Internal Microphone

2.Touch Screen Monitor (optional)

3.Power Key/ Power LED/ Battery Reset

4.Status LED

5.Keyboard

6.Touchpad

7.Status LED

8.Card Reader

9.USB 2.0 Port

10.Power Connector

11.USB 3.2 Gen 2 Port

12.Combo Audio Port

13.HDMI Connector

14.USB 3.2 Gen 2 Port (Type-C)

15.Status LED

16.Ventilator

17.Ventilator (optional)

18.Battery Reset Hole (optional)

19.Stereo Speakers

Battery Status :


Continuously blinking If the battery fails. If the problem persists, please contact your local authorized retailer or service center.

1 Num Lock

2 Caps Lock

English

Product Overview (for reference only)

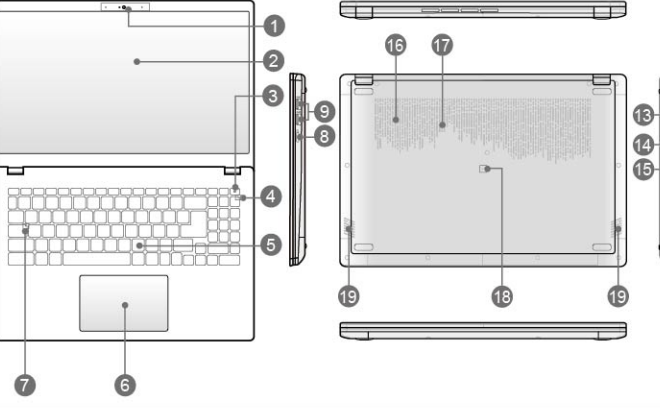

1.Webcam/ Webcam LED / Internal Microphone

2.Touch Screen Monitor (optional)

3.Power Key/ Power LED/ Battery Reset

4.Status LED

5.Keyboard

6.Touchpad

7.Status LED

8.Card Reader

9.USB 2.0 Port

10.Power Connector

11.USB 3.2 Gen 2 Port

12.Combo Audio Port

13.HDMI Connector

14.USB 3.2 Gen 2 Port (Type-C)

15.Status LED

16.Ventilator

17.Ventilator (optional)

18.Battery Reset Hole (optional)

19.Stereo Speakers

Battery Status :


Continuously blinking If the battery fails. If the problem persists, please contact your local authorized retailer or service center.

1 Num Lock

2 Caps Lock

English

Product Overview (for reference only)

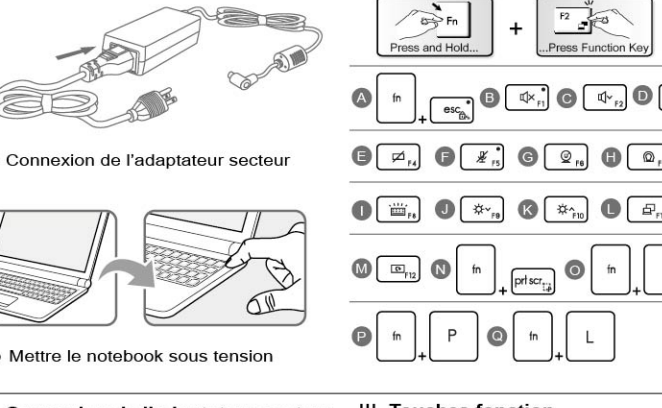

1.Webcam/ Webcam LED / Internal Microphone

2.Touch Screen Monitor (optional)

3.Power Key/ Power LED/ Battery Reset

4.Status LED

5.Keyboard

6.Touchpad

7.Status LED

8.Card Reader

9.USB 2.0 Port

10.Power Connector

11.USB 3.2 Gen 2 Port

12.Combo Audio Port

13.HDMI Connector

14.USB 3.2 Gen 2 Port (Type-C)

15.Status LED

16.Ventilator

17.Ventilator (optional)

18.Battery Reset Hole (optional)

19.Stereo Speakers

Battery Status :


Continuously blinking If the battery fails. If the problem persists, please contact your local authorized retailer or service center.

1 Num Lock

2 Caps Lock

English

Product Overview (for reference only)

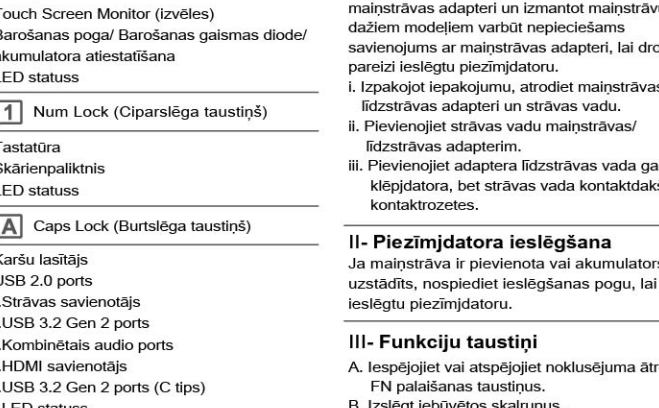

1.Webcam/ Webcam LED / Internal Microphone

2.Touch Screen Monitor (optional)

3.Power Key/ Power LED/ Battery Reset

4.Status LED

5.Keyboard

6.Touchpad

7.Status LED

8.Card Reader

9.USB 2.0 Port

10.Power Connector

11.USB 3.2 Gen 2 Port

12.Combo Audio Port

13.HDMI Connector

14.USB 3.2 Gen 2 Port (Type-C)

15.Status LED

16.Ventilator

17.Ventilator (optional)

18.Battery Reset Hole (optional)

19.Stereo Speakers

Battery Status :


Continuously blinking If the battery fails. If the problem persists, please contact your local authorized retailer or service center.

1 Num Lock

2 Caps Lock

English

Product Overview (for reference only)

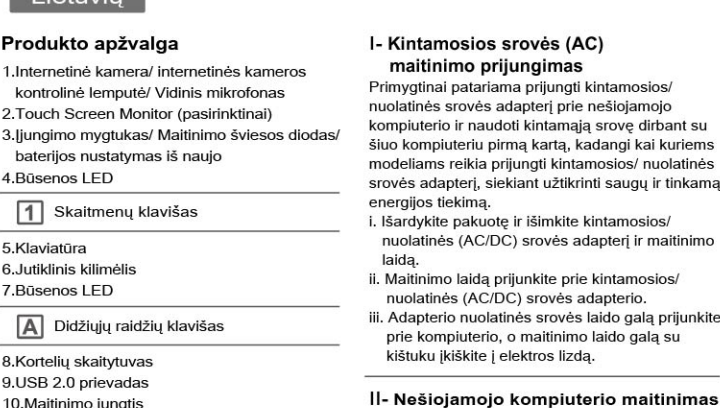

1.Webcam/ Webcam LED / Internal Microphone

2.Touch Screen Monitor (optional)

3.Power Key/ Power LED/ Battery Reset

4.Status LED

5.Keyboard

6.Touchpad

7.Status LED

8.Card Reader

9.USB 2.0 Port

10.Power Connector

11.USB 3.2 Gen 2 Port

12.Combo Audio Port

13.HDMI Connector

14.USB 3.2 Gen 2 Port (Type-C)

15.Status LED

16.Ventilator

17.Ventilator (optional)

18.Battery Reset Hole (optional)

19.Stereo Speakers

Battery Status :


Continuously blinking If the battery fails. If the problem persists, please contact your local authorized retailer or service center.

1 Num Lock

2 Caps Lock

English

Product Overview (for reference only)

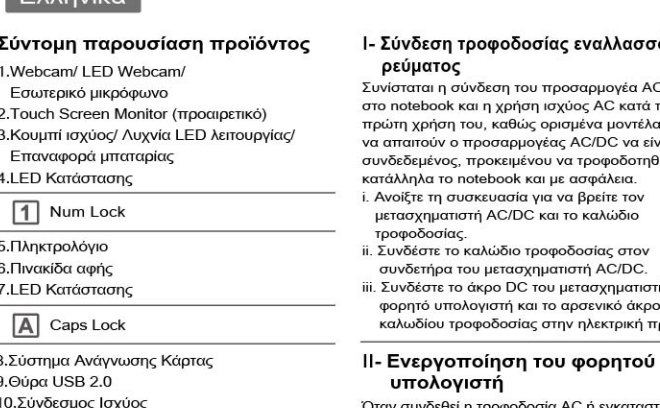

1.Webcam/ Webcam LED / Internal Microphone

2.Touch Screen Monitor (optional)

3.Power Key/ Power LED/ Battery Reset

4.Status LED

5.Keyboard

6.Touchpad

7.Status LED

8.Card Reader

9.USB 2.0 Port

10.Power Connector

11.USB 3.2 Gen 2 Port

12.Combo Audio Port

13.HDMI Connector

14.USB 3.2 Gen 2 Port (Type-C)

15.Status LED

16.Ventilator

17.Ventilator (optional)

18.Battery Reset Hole (optional)

19.Stereo Speakers

Battery Status :


Continuously blinking If the battery fails. If the problem persists, please contact your local authorized retailer or service center.

1 Num Lock

2 Caps Lock

English

Product Overview (for reference only)

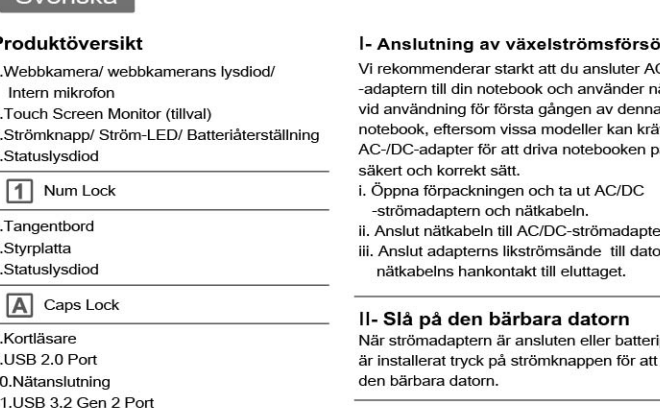

1.Webcam/ Webcam LED / Internal Microphone

2.Touch Screen Monitor (optional)

3.Power Key/ Power LED/ Battery Reset

4.Status LED

5.Keyboard

6.Touchpad

7.Status LED

8.Card Reader

9.USB 2.0 Port

10.Power Connector

11.USB 3.2 Gen 2 Port

12.Combo Audio Port

13.HDMI Connector

14.USB 3.2 Gen 2 Port (Type-C)

15.Status LED

16.Ventilator

17.Ventilator (optional)

18.Battery Reset Hole (optional)

19.Stereo Speakers

Battery Status :


Continuously blinking If the battery fails. If the problem persists, please contact your local authorized retailer or service center.

1 Num Lock

2 Caps Lock

English

Product Overview (for reference only)

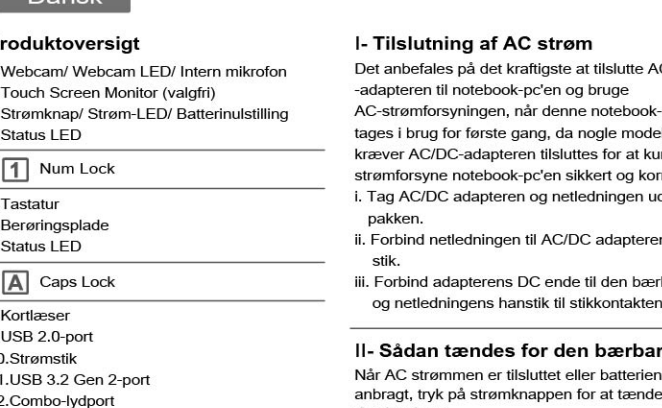

1.Webcam/ Webcam LED / Internal Microphone

2.Touch Screen Monitor (optional)

3.Power Key/ Power LED/ Battery Reset

4.Status LED

5.Keyboard

6.Touchpad

7.Status LED

8.Card Reader

9.USB 2.0 Port

10.Power Connector

11.USB 3.2 Gen 2 Port

12.Combo Audio Port

13.HDMI Connector

14.USB 3.2 Gen 2 Port (Type-C)

15.Status LED

16.Ventilator

17.Ventilator (optional)

18.Battery Reset Hole (optional)

19.Stereo Speakers

Battery Status :


Continuously blinking If the battery fails. If the problem persists, please contact your local authorized retailer or service center.

1 Num Lock

2 Caps Lock

English

Product Overview (for reference only)

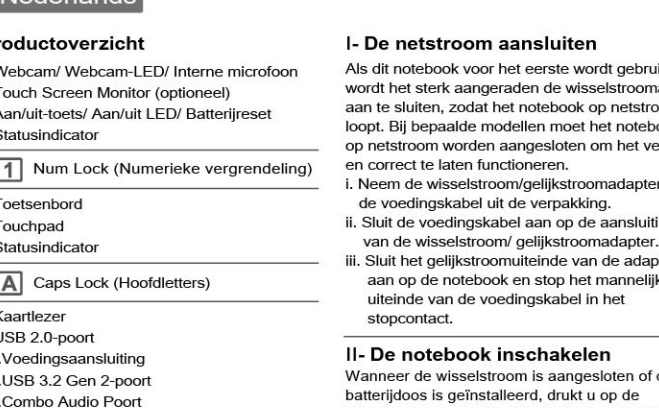

1.Webcam/ Webcam LED / Internal Microphone

2.Touch Screen Monitor (optional)

3.Power Key/ Power LED/ Battery Reset

4.Status LED

5.Keyboard

6.Touchpad

7.Status LED

8.Card Reader

9.USB 2.0 Port

10.Power Connector

11.USB 3.2 Gen 2 Port

12.Combo Audio Port

13.HDMI Connector

14.USB 3.2 Gen 2 Port (Type-C)

15.Status LED

16.Ventilator

17.Ventilator (optional)

18.Battery Reset Hole (optional)

19.Stereo Speakers

Battery Status :

Continuously blinking If the battery fails. If the problem persists, please contact your local authorized retailer or service center.

1 Num Lock

2 Caps Lock