 


# TRENDnet<sup>®</sup>

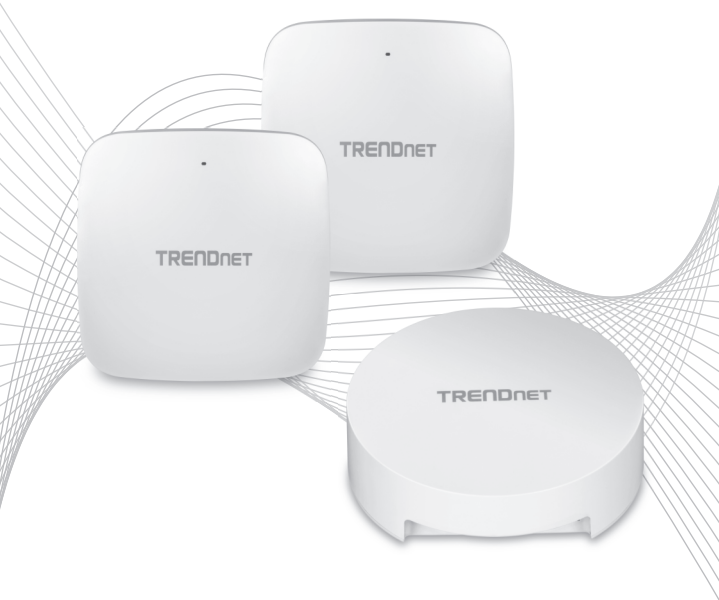

## Quick Installation Guide

TEW-823DAP / TEW-923DAP / TEW-925DAP

# Table of Contents

---

## 1 English

1. Before You Start
2. Quick Reference
3. Hardware Installation and Configuration

<https://www.trendnet.com/qig/1230>



# 1. Before You Start

---

## Package Contents

- TEW-823DAP / TEW-923DAP / TEW-925DAP
- Quick Installation Guide
- Network cable (0.5 m / 1.64 ft.)
- Mounting plates

## Minimum Requirements

- A computer with an available network LAN port and web browser
- A PoE or PoE+ (dependent on AP model) Network with an available network LAN port connected to an existing network

## Optional Equipment

- Power drill and Phillips bit or Phillips screwdriver for mounting

 
The table below displays the access point models and compatible PoE standard required for providing both power and data to the access point's PoE or PoE+ LAN port.

Access Point Model	PoE Standard
TEW-823DAP	802.3af PoE
TEW-923DAP, TEW-925DAP	802.3at PoE+

## 2. Quick Reference

**Note:** The access point image and model number shown in diagrams and examples may be different from your access point.


By default, the wireless network name/SSID and wireless encryption settings have been pre-configured for your convenience and can be located on the included preset wireless sticker or on the device label located on the back of the access point. By default, the access point web management configuration page can be accessed using the URL `http://<ap_model_number>` (ex: `http://tew-823dap`, `http://tew-923dap`, `http://tew-925dap`) or using the default LAN IP address `http://192.168.10.100`. At default settings and initial setup, if the access point is connected to a network with a DHCP server providing IP address settings automatically, the access point will obtain IP address settings from the network DHCP server and if no DHCP server is available, the access point will use the default IP address settings `192.168.10.100 / 255.255.255.0`. A network router is a typical DHCP server.

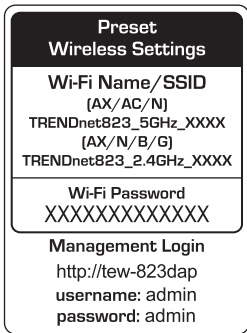


### 3. Hardware Installation and Configuration

**Note:** It is strongly recommended to configure the access point first before mounting.

 1. Connect a network cable from a PoE or PoE+ switch to your access point and to your computer.


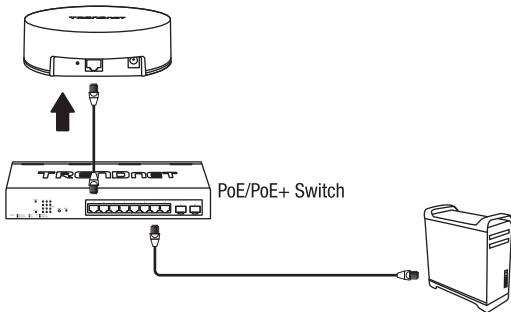


 2. The LED will turn on to indicate that the access point is ready.

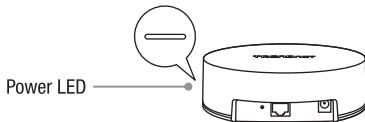


3. Assign a static IP address to your computer's network adapter in the subnet of **192.168.10.x** (e.g. 192.168.10.25) and subnet mask of **255.255.255.0**.

  
4. Open your web browser, type the default URL `http://<ap_model_number>` (ex: `http://tew-823dap`, `http://tew-923dap`, `http://tew-925dap`) or default IP address `http://192.168.10.100` of the wireless access point in the address bar, and then press **Enter**. The default IP address is **192.168.10.100**.



 5. Select your language from the Language drop-down list and enter the User name and Password, and then click **Login**. By default:
- User Name: **admin**
  - Password: **admin**

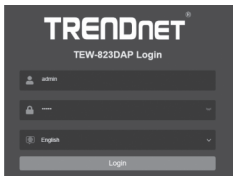

6. To change the administrator password used to access the wireless access point configuration page, click on **Management** and click on **Administration**. Under the Administration Table, at the right, click **Modify** for the admin user entry. Enter the new password in the **Password** and **Confirm Password** fields and click **Apply** to temporarily save the configuration changes.

**Important Note:** Configuration changes in the access point web management configuration page are not applied until you permanently **Save & Apply** the configuration settings by clicking the disk icon  at the top right or left navigation menu.

ID	User Name	Password	Action
1	admin	*****	<a href="#">Modify</a>

### Modify Administration

Modify Administration

Entry number:

User Name:

Password:

Confirm Password:

[Apply](#) [Cancel](#) [Back](#)

- To configure your wireless network name/SSID and wireless encryption settings, click the wireless band you would like to configure **Wireless 2.4GHz** or **Wireless 5GHz** and click on **Wireless Network**.
- In the Current Profiles, click **Edit** next to the enabled entry. You can enter a new **wireless network name/SSID**, select the **Security Mode**, and enter a new wireless encryption **Password** in the fields provided. Click **Apply** to temporarily save the configuration changes.

**Note:** The wireless network name/SSID is the name your WiFi clients will need to search and discover when connecting to your access point wireless network.

ID	Status	SSID	Security Mode	Password	Edit / Add
1	Enabled	TPRECHWIFI_2.4GHz_BASIC	WPA/WPA2-PSK/WPA3	*****	<a href="#">Edit</a>

[Apply](#) [Cancel](#)

- To configure your access point LAN IP address settings, click **System** and click **IP Settings**.

10. Under LAN Connection type, click the **Connection Type** drop-down list to select either **DHCP** (default setting) or **STATIC**. Selecting **DHCP** will set your access point to obtain IP address settings automatically from a DHCP server on your network and selecting **STATIC** will allow you to manually assign your access point IP address settings to meet the IP requirements of your network. Enter the new IP address settings in the **IP Address**, **Subnet Mask**, **Default Gateway**, and **Primary/Secondary DNS Server** fields. Click **Apply** to temporarily save the configuration changes.

The screenshot shows a configuration interface with three main sections: LAN Connection Type, LAN Interface Setting, and DNS Server Setting. The 'Connection Type' is set to 'STATIC'. The 'IP Address' is 192.168.10.100, 'Subnet Mask' is 255.255.255.0, and 'Default Gateway' is empty. The 'Primary DNS Server' and 'Secondary DNS Server' fields are also empty. At the bottom, there are 'Apply' and 'Cancel' buttons.

LAN Connection Type	
Connection Type	STATIC

LAN Interface Setting	
IP Address	192.168.10.100
Subnet Mask	255.255.255.0
Default Gateway	

 
DNS Server Setting	
Primary DNS Server	
Secondary DNS Server	

Apply Cancel

11. After you have completed access point configuration, reconfigure your computer's network adapter back to the original settings to obtain IP address settings automatically using DHCP, or enter the IP settings.
12. To ceiling mount the access point, first route the non-terminated network cable through the largest opening in the mounting plate and install the mounting plate to the desired ceiling using the included drywall anchors and screws. Install the mounting plate with the clip facing away from the ceiling. After the mounting plate is properly installed, connect the terminated network cable to the network PoE or PoE+ LAN port of the access point, align the access point mounting clips with the mounting plate clip and slide the access point to lock into place.



## Ceiling mounting

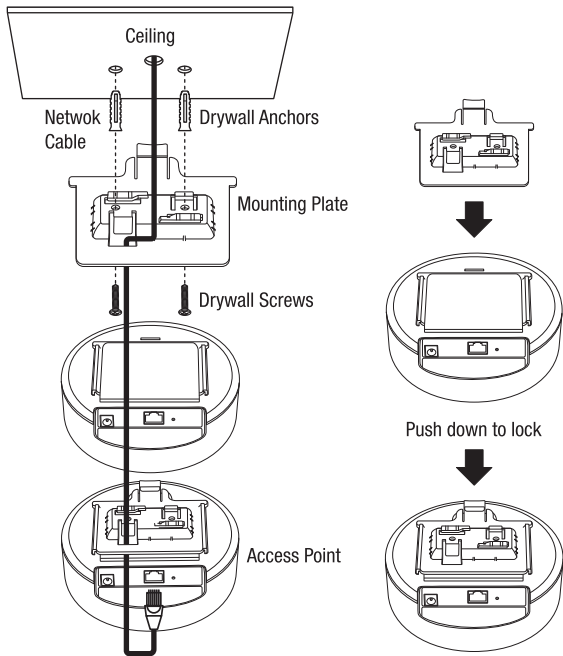

To download the latest version of the user's guide, please go to <https://www.trendnet.com/support> and select the access point model number and hardware version from the Product Download drop-down list.

# Declaration of Conformity

TRENDNET®

## Manufacturer's Name and Address

TRENDnet, Inc. Zwolsestraat 156 2587 WB  
20675 Manhattan Place The Hague The Netherlands  
Torrance, CA 90501 USA



## Product Information

**Model Number:** TEW-823DAP / TEW-923DAP / TEW-925DAP  
**Product Name:** AC1300 Dual Band PoE Indoor Wireless Access Point /  
AX3000 Dual Band WiFi 6 PoE+ Access Point /  
AX5400 Dual Band WiFi 6 PoE+ Access Point  
**Trade Name:** TRENDnet

TRENDnet hereby declare that the product is in compliance with the essential requirements and other relevant provisions under our sole responsibility.

**Safety** EN IEC 62368-1: 2020 + A11: 2020

<b>EMC</b>	EN 55032: 2015 / AC: 2016	<b>Radio</b>	EN 300 328 V2.2.2 (2019-07)
	EN 55035: 2017	<b>Spectrum</b>	EN 301 893 V2.1.1 (2017-05)
	EN 301 489-1 V2.2.1 (2017-03)	<b>&amp; Health</b>	EN IEC 62311: 2020
	EN 301 489-17 V3.2.0 (2017-03)		EN 50385: 2017 / EN 50665: 2017

**Energy Efficiency** Regulation (EC) No. 1275/2008, No. 801/2013

This product is herewith confirmed to comply with the Directives.

**Directives:** EMC Directive 2014/30/EU  
RoHS Directive 2011/65/EU  
WEEE Directive 2012/19/EU  
REACH Regulation (EC) No. 1907/2006  
Low Voltage Directive 2014/35/EU  
Radio Equipment Directive 2014/53/EU  
Ecodesign Directive 2009/125/EC

Person responsible for this declaration.

Place of Issue: Torrance, California, USA

Date: April 21, 2023

Name: Sonny Su

Title: Director of Technology

Signature: \_\_\_\_\_



# Declaration of Conformity

TRENDNET®

## Manufacturer's Name and Address

TRENDnet, Inc.  
20675 Manhattan Place  
Torrance, CA 90501 USA

Authorized Representative:  
Office: +44 (0) 1635 887 399  
Unit 4 Rivermead Business Park,  
Pipers Way, Thatcham, RG19 4EP England



## Product Information

**Model Number:** TEW-823DAP / TEW-923DAP / TEW-925DAP

**Product Name:** AC1300 Dual Band PoE Indoor Wireless Access Point /  
AX3000 Dual Band WiFi 6 PoE+ Access Point /  
AX5400 Dual Band WiFi 6 PoE+ Access Point

**Trade Name:** TRENDnet

TRENDnet hereby declare that the product is in compliance with the essential requirements and other relevant provisions under our sole responsibility.

**Safety** EN IEC 62368-1: 2020 + A11: 2020

<b>EMC</b>	BS EN 55032: 2015 / AC: 2016	<b>Radio</b>	EN 300 328 V2.2.2 (2019-07)
	BS EN 55035: 2017	<b>Spectrum</b>	EN 301 893 V2.1.1 (2017-05)
	EN 301 489-1 V2.2.1 (2017-03)	<b>&amp; Health</b>	BS EN IEC 62311: 2020
	EN 301 489-17 V3.2.0 (2017-03)		BS EN 50385: 2017 / BS EN 50665: 2017

**Energy Efficiency** Regulation (EC) No. 1275/2008, No. 801/2013

This product is herewith confirmed to comply with the Directives.

**Directives:** Electromagnetic Compatibility Regulations 2016  
The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012  
The Waste Electrical and Electronic Equipment Regulations 2013 (as amended)  
The REACH Enforcement Regulations 2008 (as amended)  
Electrical Equipment (Safety) Regulations 2016  
Radio Equipment Regulations 2017  
The Ecodesign for Energy-Related Products and Energy Information (Amendment) (EU Exit) Regulations 2019

Person responsible for this declaration.

Place of Issue: Torrance, California, USA

Date: April 21, 2023

Name: Sonny Su

Title: Director of Technology

Signature: \_\_\_\_\_

A handwritten signature in black ink, appearing to read 'Sonny Su', is written over a horizontal line.



## **Federal Communication Commission Interference Statement**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**FCC Caution:** Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### **IMPORTANT NOTE:**

#### **Radiation Exposure Statement:**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Country Code selection feature to be disabled for products marketed to the US/CANADA

Operation of this device is restricted to indoor use only

## Certifications

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received. Including interference that may cause undesired operation.



Waste electrical and electronic products must not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or Retailer for recycling advice.

## Technical Support

If you have any questions regarding the product installation, please contact our Technical Support. Toll free US/Canada: **1-855-373-4741**  
Regional phone numbers available at [www.trendnet.com/support](http://www.trendnet.com/support)

## Product Warranty Registration

Please take a moment to register your product online. Go to TRENDnet's website at:  
**[www.trendnet.com/register](http://www.trendnet.com/register)**

## TRENDnet

20675 Manhattan Place  
Torrance, CA 90501  
USA

**Applies to PoE Products Only:** This product is to be connected only to PoE networks without routing to the outside plant.

## Note

The Manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

## Advertencia

En todos nuestros equipos se mencionan claramente las características del adaptador de alimentación necesario para su funcionamiento. El uso de un adaptador distinto al mencionado puede producir daños físicos y/o daños al equipo conectado. El adaptador de alimentación debe operar con voltaje y frecuencia de la energía eléctrica domiciliar existente en el país o zona de instalación.

## Note

The equipment power supply cord shall be connected to a socket-outlet with earthing connection.

## Advertencia

Le cordon d'alimentation de l'appareil doit être raccordé à une prise de courant avec mise à la terre.