



T27i-30 TIO FLEX 27i T27H-30 T27P-30 Simplified service manual for dismantling

Model Name: Lenovo T27i-30 TIO FLEX 27i T27H-30 T27P-30

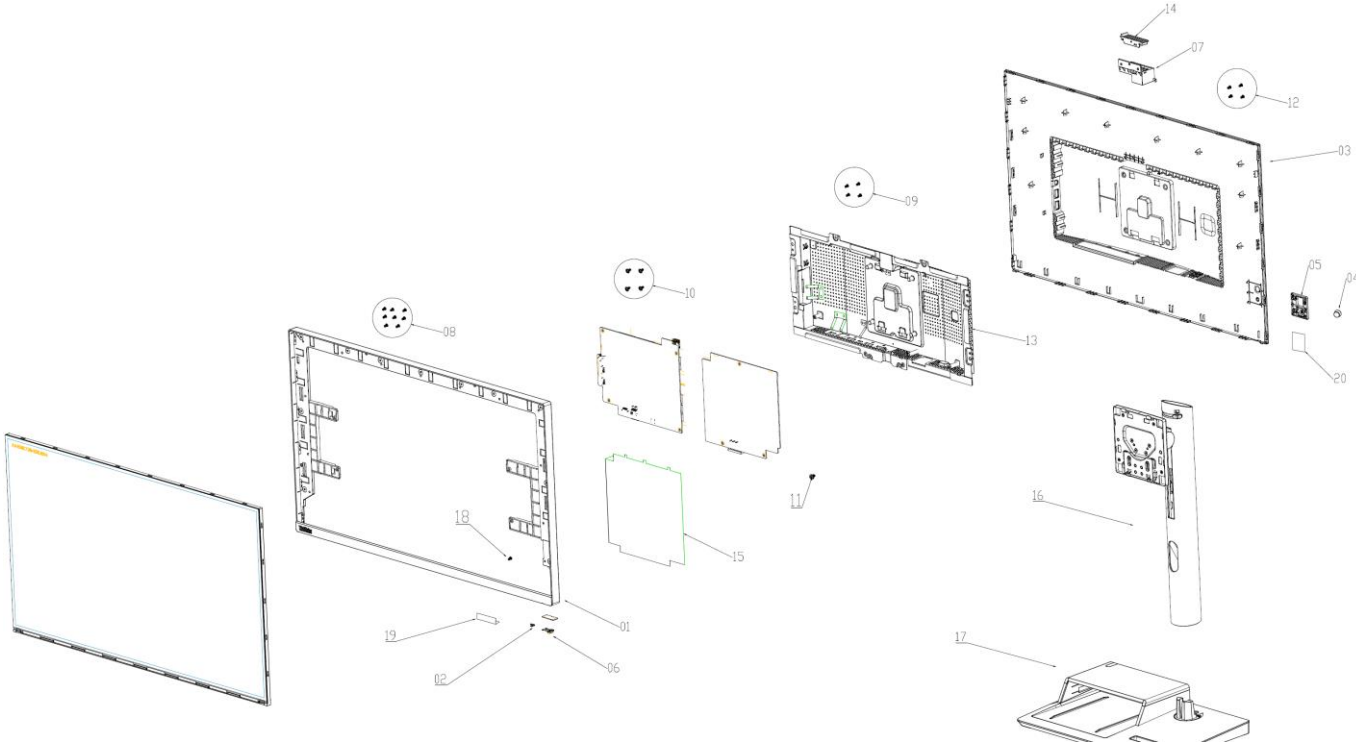

Exploded Diagram

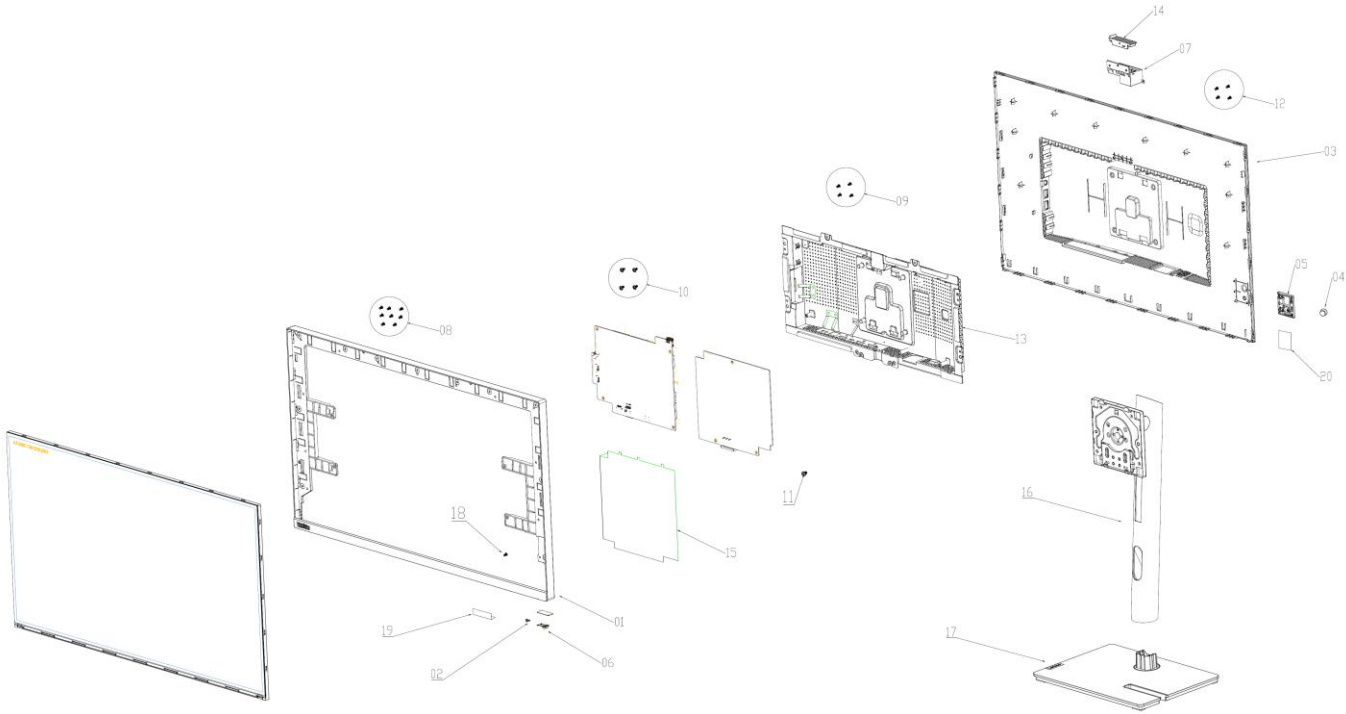

1. Precaution



Please read the precaution as follows to prevent any damages to the LCD Monitor.

Make sure all power connector is removed. Be sure that the LCD Monitor is in power off status.


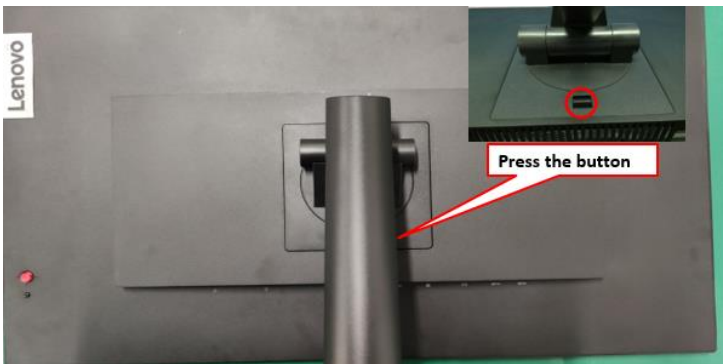
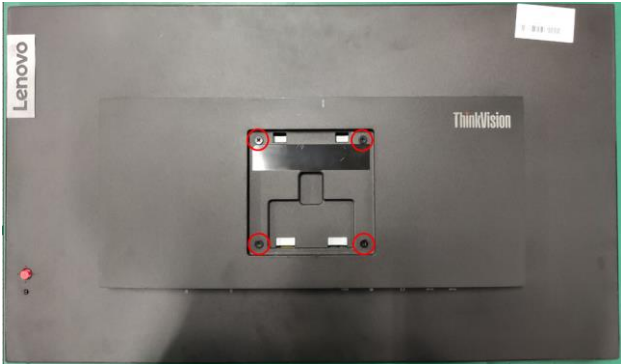

<p>Prepare soft cloth and sponge as working platform to place LCD monitor horizontally.</p>	
<p>Hold LCD by the side carefully and DON'T touch or press panel directly.</p>	

2. Appropriate tools

Select the Appropriate tools for disassembly and re-assembly.

Phillips screwdriver (#2)	
spacer screwdriver	
C/D disassembly tool	
Gloves or soft cloth	


3. Disassembly SOP

<p>Put the monitor on a flat surface (Put the EPE on under the monitor)</p>	
<p>pull out stand</p>	
<p>Remove the screw * 4pcs Tool : Screwdriver #2</p>	
<p>Use the C/D disassembly tool to release Rear cover hook from disassemble hole on bottom</p>	


Pull out the plug




Remove All tape and foil

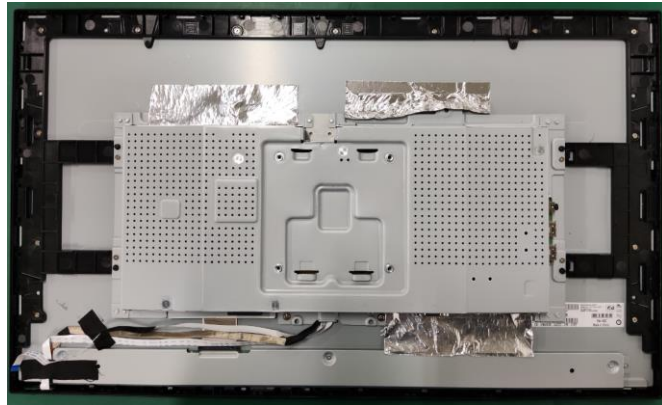

Remove All screw.
Tool : Screwdriver #2

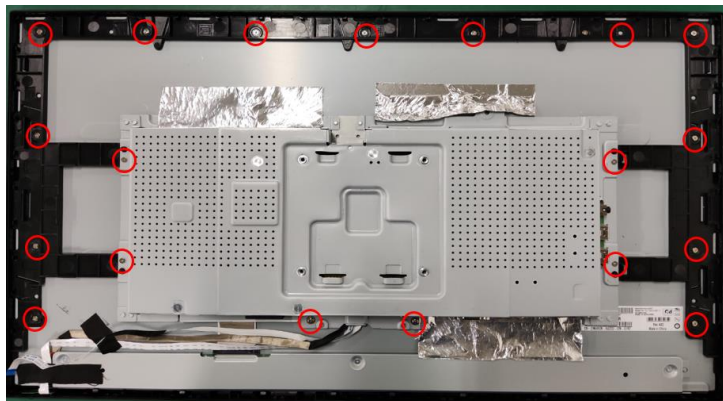


Release the middle frame from the Panel

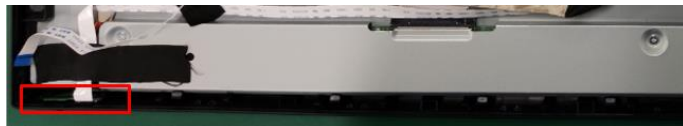


Release the keypad pcb from the middle frame




Unplug light bar line and LVDS line

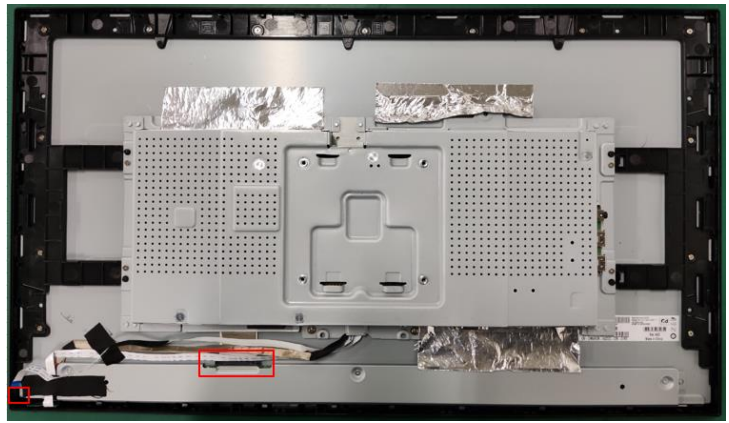


Take out the mylar sheet from Main chassis

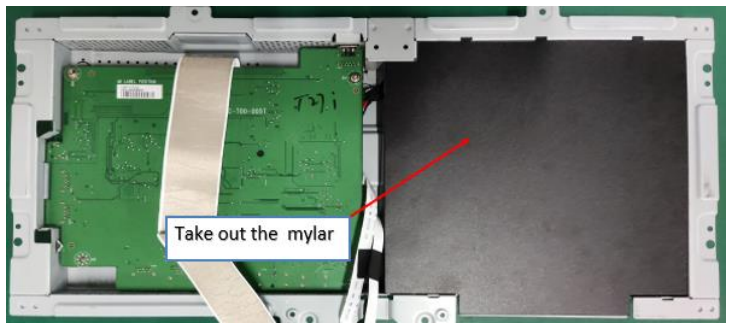

Remove All screw.
Tool : Screwdriver #2
Tool : spacer screwdriver

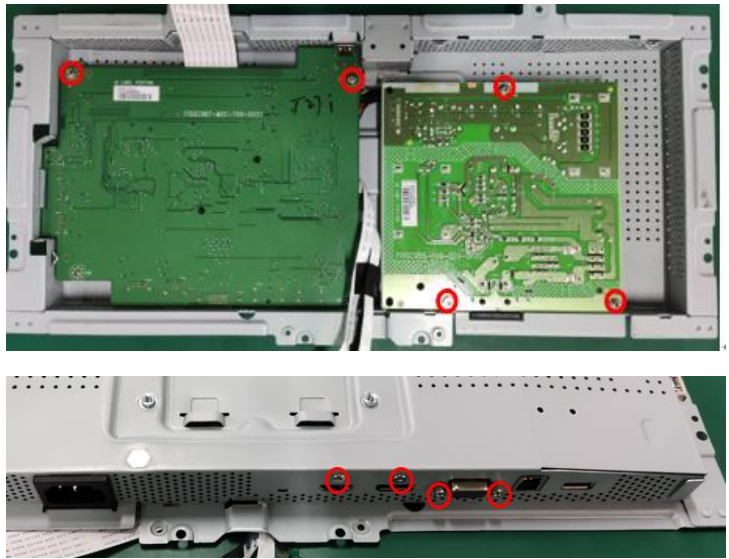

Take out PCB and Peel off all mylar.

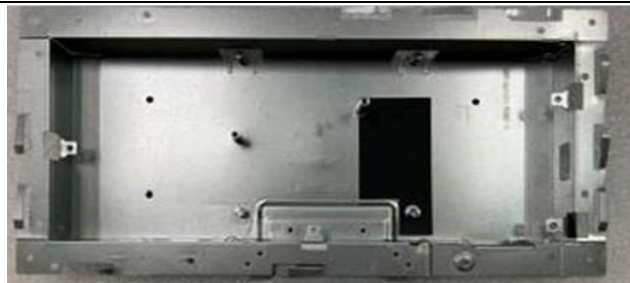

Take out the Thermal pads from
Power pcb

