


OptiCam® 2 Termination Tool

“Right the First Time” Termination

The NEW OptiCam 2 Termination Tool is designed to offer 100% “Right the First Time” termination of OptiCam connectors. The tool immediately calculates insertion loss value on completion of the camming process. The red and green light indicators provide additional visual confirmation of termination. By using the new OptiCam 2 tool, installer productivity increases and time spent on the job site is reduced. Project re-work time will be decreased; thereby helping contractors to improve overall profitability.

The NEW OptiCam 2 Termination Tool offers a step by step visual guidance and insertion loss calculation to ensure the field fiber and fiber stub are in proper alignment before camming. This allows even the less experienced technicians to terminate fiber with confidence. A simple, ergonomic and symmetrical design allows for left or right-handed termination in both handheld and benchtop orientations.

The NEW OptiCam 2 tool is the most technologically advanced, feature rich option for field terminated connectors in enterprise applications.

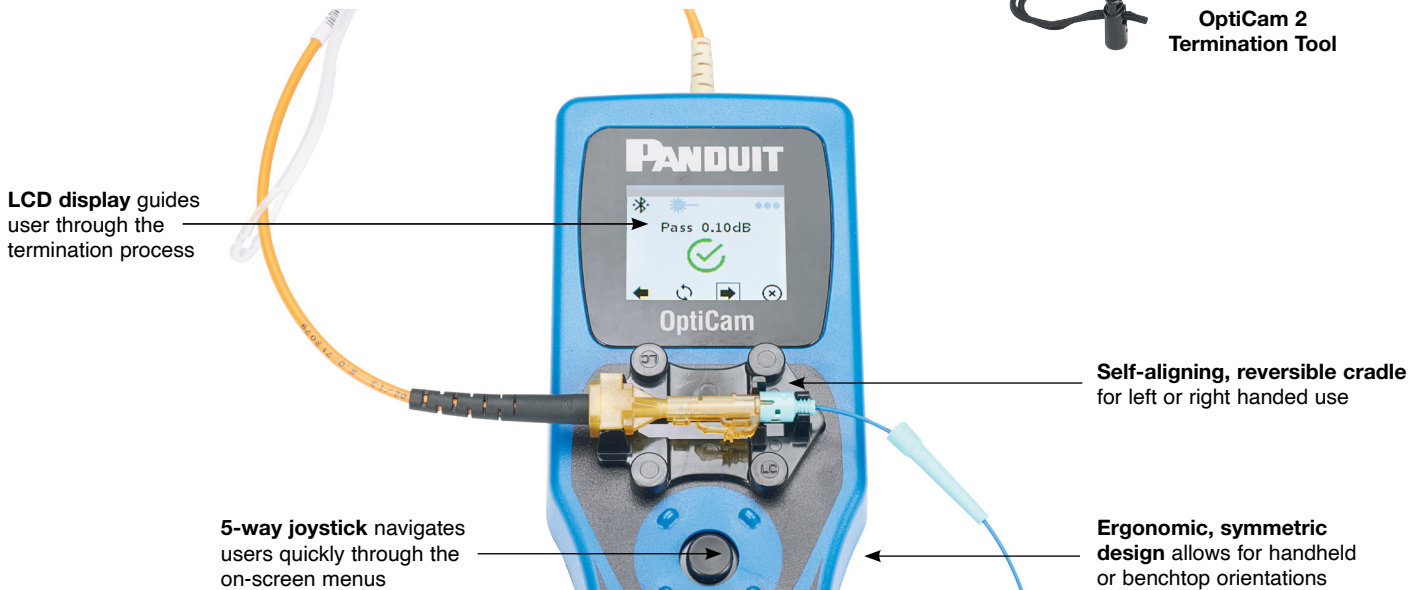

KEY FEATURES

LCD Display:

BENEFITS

Guides the user through the termination process with simple step-by-step prompts and on-screen visuals. Indicates the field fiber and fiber stub are in proper alignment before camming.

Calculated Insertion Loss:

The OptiCam 2 tool goes beyond pass/fail indicators to provide a calculated insertion loss, allowing installers to gain confidence in the effectiveness of each termination.

Ergonomic, Symmetric Design:

A clean, simple design that doesn't require users to remember which knob, button or lever to turn, press or squeeze next. A symmetrical design combined with a self-aligning, reversible connector cradle allows for left and right handed termination in both handheld and bench top orientations. Cradles and patch cords are color coordinated to facilitate setup. A pivoting arm simplifies connector loading and removal.

* All trademarks, service marks, trade names, product names, and logos appearing in this document are the property of their respective owners.

ORDERING INFORMATION

| Part Number | Description |
|--|---|
| OptiCam® 2 Termination Tool Kits | |
| FOCTT2-KIT3 | The FOCTT2-KIT includes: batteries, case, launch cords and one cradle for each OptiCam® LC, SC2 and ST2 connector |
| FOCTT2-PKIT3 | FOCTT2-PKIT includes: batteries, case, launch cords and one cradle for each OptiCam® LC, SC2 and ST2 connector, Precision Cleaver, installation tools, cleaning and consumables |
| LC Simplex Connectors | |
| FLCSMCXAQY | LC OM3/4 MM Simplex Connector |
| FLCSMC5BLY | LC OM2 MM Simplex Connector |
| FLCSMC6EIY | LC OM1 MM Simplex Connector |
| FLCSSCBUY | LC OS2 SM Simplex Connector |
| LC Duplex Connectors | |
| FLCDMCXAQY | LC OM3/4 MM Duplex Connector |
| FLCDMC5BLY | LC OM2 MM Duplex Connector |
| FLCDSCBUY | LC OS2 SM Duplex Connector |
| SC2 Simplex Connectors | |
| FSC2MCXAQ | SC2 OM3/4 MM Simplex Connector |
| FSC2MC5BL | SC2 OM2 MM Simplex Connector |
| FSC2MC6EI | SC2 OM1 MM Simplex Connector |
| FSC2SCBU | SC2 OS2 SM Simplex Connector |
| SC2 Duplex Connectors | |
| FSC2DMCXAQ | SC2 OM3/4 MM Duplex Connector |
| FSC2DMC5BL | SC2 OM2 MM Duplex Connector |
| FSC2DMC6EI | SC2 OM1 MM Duplex Connector |
| FSC2DSCBU | SC2 OS2 SM Duplex Connector |
| SC2 Simplex Connectors (100 Pack) | |
| FSC2MCXAQ-C | SC2 OM3/4 MM Simplex Connector (100 Pack) |
| FSC2MC5BL-C | SC2 OM2 MM Simplex Connector (100 Pack) |
| FSC2MC6EI-C | SC2 OM1 MM Simplex Connector (100 Pack) |
| FSC2SCBU-C | SC2 OS2 SM Simplex Connector (100 Pack) |
| ST2 Simplex Connectors | |
| FST2MCXAQ | ST2 OM3/4 MM Simplex Connector |
| FST2MC5BL | ST2 OM2 MM Simplex Connector |
| FST2MC6EI | ST2 OM1 MM Simplex Connector |
| FST2SCBU | ST2 OS2 SM Simplex Connector |
| LC Singlemode and Multimode Launch Cords | |
| FOLPC-1.25SM | LC SM Launch Cord |
| FOLPC-1.25MM | LC MM Launch Cord |
| SC2/ST2 Singlemode and Multimode Launch Cords | |
| FOLPC-2.5SM | SC2/ST2 SM Launch Cord |
| FOLPC-2.5MM | SC2/ST2 MM Launch Cord |
| LC, SC2 and ST2 Cradles | |
| FLCC2 | LC Cradle for OptiCam® 2 |
| FSCC2 | SC2 Cradle for OptiCam® 2 |
| FSTC2 | ST2 Cradle for OptiCam® 2 |
| Replacement Alignment Sleeves | |
| OCTTR1.25SS | Replacement 1.25mm split sleeves for OptiCam® Termination Tool (5 sleeves) |
| OCTTR2.5SS | Replacement 2.5mm split sleeves for OptiCam® Termination Tool (5 sleeves) |

WORLDWIDE SUBSIDIARIES AND SALES OFFICES

PANDUIT US/CANADA
Phone: 800.777.3300

PANDUIT EUROPE LTD.
London, UK
Phone: 44.20.8601.7200

PANDUIT SINGAPORE PTE. LTD.
Republic of Singapore
Phone: 65.6305.7575

PANDUIT JAPAN
Tokyo, Japan
Phone: 81.3.6863.6000

PANDUIT LATIN AMERICA
Guadalajara, Mexico
Phone: 52.33.3777.6000

PANDUIT AUSTRALIA PTY. LTD.
Victoria, Australia
Phone: 61.3.9794.9020

For a copy of Panduit product warranties, log on to www.panduit.com/warranty



For more information
Visit us at www.panduit.com
Contact Customer Service by email: cs@panduit.com
or by phone: 800.777.3300

© 2024 Panduit Corp.
ALL RIGHTS RESERVED.
FBCB41-SA-ENG
6/2024