


Vented 2-Post Shelf

Product ID

CABSHELFV2U-16-RACK

CABSHELFV2U-12-RACK

CABSHELFV1U-16-RACK

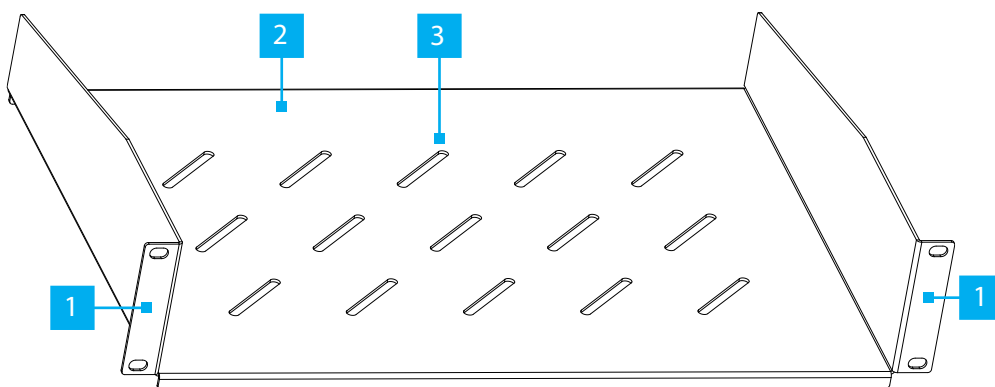

*Product may vary from image

	Feature	Function
1	Front Mounting Brackets	• Used to fasten the Shelf to the Mounting Posts of a Server Rack
2	Shelf Surface	• Place Server Rack Equipment
3	Ventilation Holes	• Promote airflow for the Server Rack Equipment

Package Contents

- 2-Post Vented Shelf x1
- M5 Cage Nuts x 4
- M5 Screws x 4
- Quick-Start Guide x 1

Requirements

For the latest manuals, product information, technical specifications, and declarations of conformance, please visit:

www.StarTech.com/CABSHELFV2U-16-RACK

www.StarTech.com/CABSHELFV2U-12-RACK

www.StarTech.com/CABSHELFV1U-16-RACK

- Refer to the manufacturer of the Server Rack to determine the mounting hole type and size
- Phillips head screwdriver
- Cage nut tool (Optional)

Warnings!

- Read the entire Quick-Start Guide and ensure the instructions are fully understood before using this product.
- Before adding equipment to this product, ensure this product has been properly mounted.
- Never operate this product if parts are missing or damaged.
- Ensure the weight of the equipment does not exceed the weight capacity of this product. If the weight capacity is exceeded, personal injury or damage to the equipment is possible.
- These product can support the following weight:
 - CABSHELFV2U-16-RACK: 44lb / 20kg
 - CABSHELFV2U-12-RACK: 25lb / 11.3 kg
 - CABSHELFV1U-16-RACK: 30lb / 14kg

Installation

1. Identify a suitable location on the **Server Rack** to mount the **Shelf**. The **Shelf** requires **2U** or **1U** of **Mounting Space** (depending on the model).

Note: The Server Rack should have enough Mounting Depth to accommodate the Shelf.

2. Install the **M5 Cage Nuts** (x 4) into the **Mounting Holes** (x 4) on the **Front Posts** of the **Server Rack**. If available, use a **Cage Nut Tool** or a preferred installation method to install the **Cage Nuts**.

Note: If the Server Rack has M5 threaded holes, skip this step. The M5 Screws can be installed without the M5 Cage Nuts.

Use the manufacturer-recommended Screws for the Server Rack if they differ from M5.

3. Position the **Shelf** onto the **Server Rack** at the chosen **U Height**, determined in

Step 1, with the **Front Mounting Brackets** facing forward. Ensure the **Holes** (x 4) on the **Front Mounting Brackets** are **Aligned** with the **Mounting Holes** on the **Front Posts** of the **Server Rack**.

4. Insert the **M5 Screws** (x 4) through the **Front Mounting Brackets** and into the **M5 Cage Nuts** (x 4). Tighten the **M5 Screws** (x 4) using a **Phillips Head Screwdriver**.

Note: *Ensure the Shelf is secure before placing Server Rack Equipment.*

Regulatory Compliance

Use of Trademarks, Registered Trademarks, and other Protected Names and Symbols

This manual may make reference to trademarks, registered trademarks, and other protected names and/or symbols of third-party companies not related in any way to StarTech.com. Where they occur these references are for illustrative purposes only and do not represent an endorsement of a product or service by StarTech.com, or an endorsement of the product(s) to which this manual applies by the third-party company in question. StarTech.com hereby acknowledges that all trademarks, registered trademarks, service marks, and other protected names and/or symbols contained in this manual and related documents are the property of their respective holders

Warranty Information

This product is backed by a lifetime warranty.

For further information on product warranty terms and conditions, please refer to www.startech.com/warranty.

Limitation of Liability

In no event shall the liability of StarTech.com Ltd. and StarTech.com USA LLP (or their officers, directors, employees or agents) for any damages (whether direct or indirect, special, punitive, incidental, consequential, or otherwise), loss of profits, loss of business, or any pecuniary loss, arising out of or related to the use of the product exceed the actual price paid for the product. Some states do not allow the exclusion or limitation of incidental or consequential damages. If such laws apply, the limitations or exclusions contained in this statement may not apply to you.



StarTech.com Ltd.
45 Artisans Crescent
London, Ontario
N5V 5E9
Canada

StarTech.com LLP
4490 South Hamilton
Road
Groveport, Ohio
43125
U.S.A.

StarTech.com Ltd.
Unit B, Pinnacle 15
Gowerton Road
Brackmills,
Northampton
NN4 7BW
United Kingdom

StarTech.com Ltd.
Siriusdreef 17-27
2132 WT Hoofddorp
The Netherlands

FR: startech.com/fr
DE: startech.com/de
ES: startech.com/es
NL: startech.com/nl
IT: startech.com/it
JP: startech.com/jp