

Rocstor DataSecure EX20 Portable Encrypted Drive

Welcome to the DataSecure Keypad Model, a hardware-encrypted, portable external storage device designed for OS-independent use. Featuring an integrated keypad for secure user authentication, it ensures reliable data protection. For enhanced security, we strongly recommend replacing the factory default PIN with a personalized user PIN.



NOTE: Start all procedures with the drive connected to a computer with the USB cable, and locked.

CAUTION: Risk of data loss. If you forget your User PIN and no Admin PIN exists, or if you forget both PINs, all data will be inaccessible and reformatting will be required.



NOTE: After starting a procedure, perform each step within 10 seconds. If you fail (LED blinks) then restart the procedure.

LED INTERPRETATIONS

LEDs on the DataSecure EX20 are represented below by colored icons.

	Red LED is solid	The drive is locked, or may indicate procedure failed
	Red LED is blinking	Locked, ready for input
	Green LED is solid	Drive is unlocked
	Green LED is blinking	Waiting for input
	Blue LED is blinking	Transferring data
	Key button	
	Press Key button twice rapidly	

UNLOCKING IN USER MODE

CAUTION: Possible loss of data, settings, and both PINs. After 10 consecutive failed attempts to unlock the drive, it will reset to a blank drive. Refer to *Brute Force Hacking* in the User Manual.

1. Press []
2. Enter PIN (new only: 11223344, otherwise obtain PIN from vendor) []
3. Press [].

CHANGING THE USER PIN

PIN REQUIREMENTS: 7-15 digits. Cannot all be the same number nor consecutive numbers. (4444)(1234)

1. Press [].
2. Enter existing PIN [] (factory default PIN is 11223344)
3. Press [momentarily]
4. Wait for green LED then press []
5. Enter the new User PIN []
6. Press []
7. Re-enter the new PIN []
8. Press [then]

VERIFYING WHICH PINS EXISTS

Verify if a User and/or Admin PIN has been created. Without inserting the drive, press . These LEDs display for 10 seconds:

- No PIN exists []
- Only User PIN exists []
- Only Admin PIN exists []
- Both PINs exist []

DISCONNECTING AND LOCKING

Unplug the USB cable — the drive locks automatically. Generally, ejecting the drive first is not necessary, but preferable. To lock the drive without unplugging, press and hold until the red LED lights.

