

Brewer Features

Strong Brew: Increases the strength and bold taste of your coffee's flavor. For bolder coffee, press the **STRONG** button and select your brew size.

Brew Over Ice: Do not use glass when brewing hot over ice. Brew a refreshing iced coffee in minutes. Brews hot coffee extra strong to make up for ice melting and beverage dilution.

Smart Start: Heats then brews in one simple process. No need to wait for the brewer to heat before selecting your brew size. Power on your brewer, place mug, insert a K-Cup® pod, and lower the handle. Then select your brew size and press the **BREW** button. The brewer will heat, then automatically begin brewing.

Auto Off: Automatically turns your brewer off 2 hours after the last brew for energy savings. To disable, power the brewer off while it is still plugged in. Press down on the **STRONG** and **10oz** buttons at the same time and hold for 3 seconds until the **AUTO OFF** indicator is turned off. Repeat the same steps to enable the feature.

Commercial Rating: Ensures that the K-1550™ brewer will stand up to the demands of your coffee station. Enjoy the convenience of a

modern touch-button interface, an industrial (96oz) water reservoir with easy-grip handle, and a drainable internal hot water tank.

High Altitude Brewing Instructions: **1.** Power the brewer off while it is plugged in. **2.** Press and hold the **STRONG** and **8oz** buttons for 3 seconds; both lights will blink 3 times to confirm that the High Altitude Brewing Mode has been enabled. **3.** While holding the brewer bail up, push down slowly on the K-Cup® pod in the pod holder until the bottom of the K-Cup® pod is punctured by the exit needle.

Disable High Altitude Brewing: **1.** Power the brewer off while it is plugged in. **2.** Press and hold the **STRONG** and **8oz** buttons until the lights are no longer illuminated.

Caring for Your Brewer

Regular cleaning keeps your brewer running smoothly. Always be sure to turn off and unplug your brewer before cleaning. For detailed brewer cleaning instructions and videos, visit commercial.keurig.com (or commercial.keurig.ca). Beyond these recommended cleaning instructions, this brewer is not user serviceable. For service, please refer to the Warranty section.

Water Reservoir


The water reservoir lid and water reservoir should be cleaned periodically with a damp, soapy, nonabrasive cloth. Rinse the reservoir thoroughly after cleaning. This will ensure that no cleaning solutions remain in the area, as they may contaminate the water supply. After rinsing, fill the reservoir with clean water and return it to the brewer. Do not dry the inside of the water reservoir with a cloth, as lint may remain.

Exit Needle

Remove the pod holder assembly and detach the funnel. Locate the exit needle on the inside bottom of the K-Cup® pod holder. Insert a straightened paper clip into the exit needle to loosen any coffee grounds.

Entrance Needle

Lift the brewer bail and locate the entrance needle on the underside of the brewer head. To clean both holes in the needle, hold the brewer handle in the upward position and

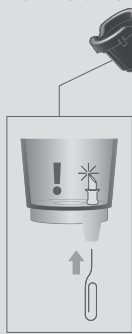

with your other hand, carefully insert a straightened paper clip into both holes. Gently move it around to loosen any coffee grounds. Lower the handle completely and run two water-only brew cycles. Do not insert a K-Cup® pod.

NOTE: After brewing, always remove the used K-Cup® pod from the pod holder. If the pod has cocoa or milk ingredients, conduct a rinse brew to avoid the possibility of needle clogging.

CAUTION: There are sharp needles that puncture the K-Cup® pod above the K-Cup® pod holder and in the bottom of the K-Cup® pod holder. To avoid risk of injury, do not put your fingers in the K-Cup® pod holder.

KEURIG
COMMERCIAL

Let's get
brewing.

K-1550™
SINGLE SERVE COFFEE MAKER

Quick Start Guide



WARRANTY

LIMITED ONE-YEAR WARRANTY

Keurig Green Mountain, Inc. warrants to the original purchaser that its brewer will be free of defects in materials or workmanship under normal use for one year from the date of purchase. Keurig, a Keurig Authorized Distributor, or Service Agent will, at their option, repair or replace a defective brewer or brewer parts under this warranty without charge upon receipt of proof of the date of purchase. If a replacement brewer is necessary to service this warranty, the replacement brewer may be new or reconditioned. If a replacement brewer or parts are sent, a new limited one-year warranty will be applied to the replacement brewer or parts. This warranty only applies to brewers operated in the United States and Canada. This warranty gives the original purchaser specific legal rights, and you may also have other rights that vary from state to state and, in the case of Canada, from province to province. If you obtained this brewer through sale or rental from a Keurig Authorized Distributor, you may also want to refer to your distributor's warranty policies. Only the use of Keurig® K-Cup® brand pods and accessories will guarantee the proper functioning and lifetime of your Keurig® K-Cup® brewer. Any damage to or malfunction of your brewer resulting from the use of non-Keurig® K-Cup® brand pods and accessories may not be covered by this warranty or may result in a service fee if the damage or malfunction is determined to be caused by such use.

WHAT IS NOT COVERED BY THE LIMITED WARRANTY?

THIS WARRANTY DOES NOT COVER CONSEQUENTIAL OR INCIDENTAL DAMAGES SUCH AS PROPERTY DAMAGE AND DOES NOT COVER INCIDENTAL COSTS AND EXPENSES RESULTING FROM ANY BREACH OF THIS WARRANTY, EVEN IF FORESEEABLE. Some states or provinces do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you depending on the state or province of purchase. Nor does this warranty cover damages caused by use of non-Keurig® K-Cup® brand pods or accessories, services performed by anyone other than Keurig or its authorized service providers, use of parts other than genuine Keurig® parts, or external causes such as abuse, misuse, inappropriate power supply, or acts of God.

OTHER LIMITATIONS

THIS WARRANTY IS EXCLUSIVE AND IS IN LIEU OF ANY OTHER EXPRESS WARRANTY, WHETHER WRITTEN OR ORAL. IN ADDITION, KEURIG HEREBY SPECIFICALLY DISCLAIMS ALL OTHER WARRANTIES WITH RESPECT TO YOUR K-1550™ BREWER, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE. Some states or provinces do not allow disclaimers of such implied warranties or limitations on how long an implied warranty lasts, so the above limitation may not apply to you depending on the state or the province of purchase.

HOW DO YOU OBTAIN WARRANTY SERVICE?

Keurig® brewers are high-quality appliances and, with proper care, are intended to provide years of satisfying performance. However, should the need arise for warranty servicing, simply call your Keurig Authorized Distributor (KAD) who originally sold you the brewer or your Service Provider (KASP) for full support. To be reconnected with your KAD or KASP, please call Keurig at 1-888-287-2739 ext. 5. If in Canada, please call: 1-800-361-5628. Keurig Green Mountain, Inc., 53 South Avenue, Burlington, MA 01803.

Authentic, full-flavored
coffeehouse taste.

One perfect cup at a time, anytime.

Have questions? We're here to help.
Visit commercial.keurig.com for troubleshooting videos, maintenance recommendations, and the full Use & Care Guide.

Still need help?
Give us a call at 1-866-669-8922.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. READ ALL INSTRUCTIONS.

2. For household and commercial use only.

3. Do not fill water reservoir above **MAX FILL** line or use distilled water.

4. Scalding may occur if the handle is opened during the brewing process.

5. Do not touch hot surfaces. Use handles or knobs.

6. To protect against fire, electric shock, and injury to persons, do not immerse appliance, cord, or plugs in water or other liquid.

7. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Close supervision is necessary when any appliance is used by or near children.

8. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts and before cleaning the appliance.

9. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Contact Keurig Customer Service or a Keurig Authorized Distributor to report any malfunction of or damage to the brewer.
10. The use of accessory attachments not authorized by the appliance manufacturer may result in fire, electric shock, or injury to persons.

11. Do not use outdoors.

12. Do not let cord hang over edge of table or counter or touch hot surfaces.

13. Do not place on or near a hot gas or electric burner or in a heated oven.

14. Always attach plug to appliance first (if not permanently attached), then plug cord into the wall outlet. To disconnect, turn any control to "off," then remove plug from wall outlet.

15. Do not use appliance for other than intended use.

16. Use brewer in upright position only. Allow brewer to cool (90 minutes) prior to turning it in any position other than upright.

17. Do not immerse brewer in water.

18. Always keep the water reservoir lid on the water reservoir unless you are filling it.

19. The appliance must be grounded using a properly grounded 3-hole outlet.

20. Only use K-Cup® pods intended for this appliance. If the pod does not fit, do not force it into the appliance.

21. Additional cleaning and care instructions can be found at commercial.keurig.com (or commercial.keurig.ca).

22. Avoid spilling any liquid substances on powered connectors.



1. **WARNING:** Keep all plastic bags away from children.

2. **WARNING:** To avoid the risk of injury, do not open the brew chamber during the brew process.

3. **CAUTION:** Keurig recommends using only Keurig® K-Cup® pods in this appliance. Non-Keurig® brand pods may cause brewer malfunction or injury.

4. **CAUTION:** There are two sharp needles that and the other in the bottom of the K-Cup® pod holder. To avoid risk of injury, be aware of the needle locations.

5. **CAUTION:** There is extremely hot water under pressure in the K-Cup® pod holder during the brew process. To avoid risk of injury, do not lift the handle or otherwise open the handle during the brew process.

6. **WARNING:** If this appliance has a polarized plug (one blade is wider than the other), it is intended to fit into a polarized outlet only one way to reduce the risk of electric shock. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
7. **POWER CORD INSTRUCTIONS:**

a. A short power-supply cord is provided to reduce risks resulting from becoming entangled in or tripping over a longer cord.

b. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.

c. If a long detachable power-supply cord or extension cord is used:

i. The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance.

ii. If the appliance is of the grounded type, the extension cord should be a grounding type 3-wire cord.

iii. The longer cord should be arranged so that it will not drape over the countertop or tabletop, where it can be pulled on by children or tripped over.

8. **CAUTION: HOT COCOA/OTHER NON-COFFEE PODS:** Immediately after using a hot cocoa/other pod, run a hot water brew cycle without a pod to avoid the possibility of clogging the exit needle. DO NOT assume the next user will do this.
- ## SAVE THESE INSTRUCTIONS
- WARNING**
RISK OF FIRE OR ELECTRIC SHOCK DO NOT OPEN

WARNING, TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK) NO USER SERVICEABLE PARTS INSIDE
- ## Button Overview
-
- ## Before You Brew
- 1 Plug & Power**
Remove packing tape from brewer and plug into a grounded outlet. Place a large mug (12oz minimum) on the drip tray plate.

2 Rinse & Fill
Remove the water reservoir lid, then lift the reservoir straight up to remove it. Rinse reservoir with fresh water and fill to the **MAX FILL** line. Replace water reservoir, making sure the lock tab engages with the brewer. Replace lid.
NOTE: Do not use distilled water.

3 Power On
The brewer will power on by lifting the handle. The brew sizes and **STRONG** button will illuminate. The brewer will automatically begin heating the water. This will take about 3 minutes. Once the heating sound stops, the brewer is ready.
- ## Brew Your First Cup
- 4 Cleansing Brew**
Do not insert a K-Cup® pod. Open and close the bail. The brew sizes and **STRONG** button will blink. Press the **8oz** button and then the **BREW** button to start a cleansing brew. Pour the hot water into the sink.
The one-time setup process is now complete and you are ready to brew!
NOTE: Between brew cycles, the brewer may take about a minute to reheat.

5 Place Mug & Insert
Place a mug on the drip tray plate. If using a travel mug, remove the drip tray and place the mug on the drip tray base. Lift the bail and place a K-Cup® pod in the K-Cup® pod holder. Lower the handle completely to close the lid.
Do not remove the foil lid on the K-Cup® pod.
High Altitude Brewing: When brewing in higher altitudes (5,000 feet), please enable the High Altitude Brewing Mode on your brewer and follow the High Altitude Brewing Instructions listed under the Brewer Features section.

6 Brew Hot Coffee
Select your brew size; for bolder coffee, press the **STRONG** button before your brew size. After selecting your brew size, the **BREW** button will flash. Press the **BREW** button to begin brewing your beverage. The selected brew size, **BREW** button, and **STRONG** button, if selected, will remain illuminated while brewing — about 1 minute. The brewer will be ready to brew another cup in about a minute.
CAUTION: While brewing, there is extremely hot water in the K-Cup® pod holder. To avoid injury, do not lift the handle during the brewing process.

7 Brew Iced Coffee
Select the blue **BREW OVER ICE** button for an iced coffee.
Do not use glass when brewing hot over ice. After selecting the **BREW OVER ICE** button, the **BREW** button will flash. Press the **BREW** button to begin brewing your beverage. Brews hot coffee extra strong to make up for ice melting and beverage dilution.