
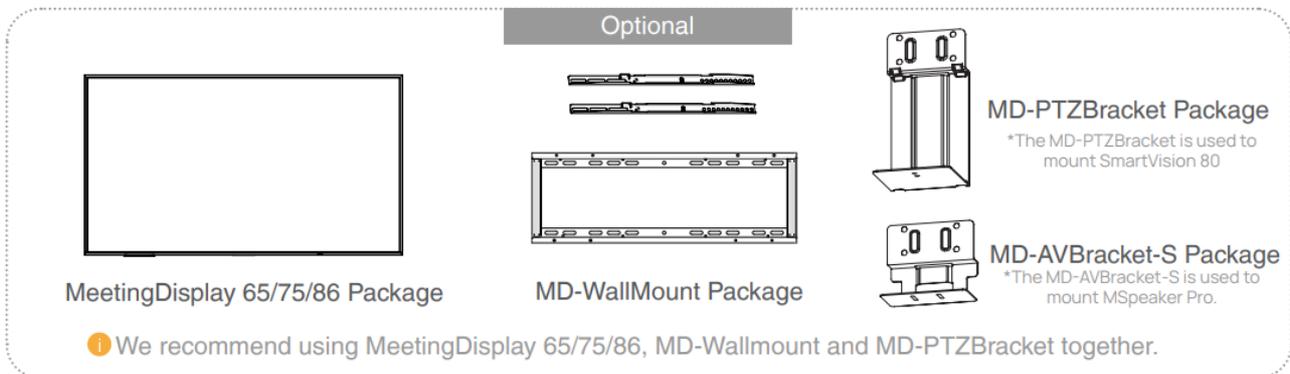


# MVC S80-C5U-000

## Minimum Requirements

- A display connected to MCore 4 (not included).
- A Microsoft Teams Rooms account (not included).
- Wired network environment (not included).


## Package Contents

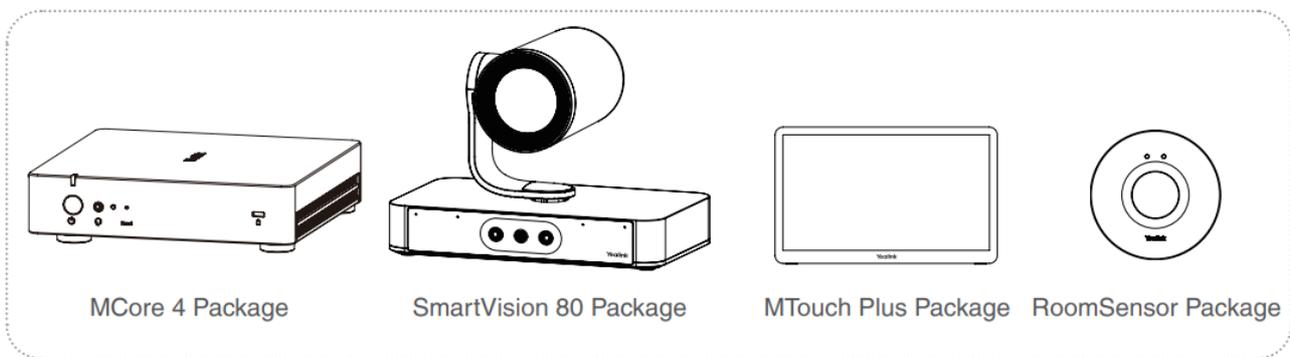


## Installation

- MCore 4 supports: mount on the wall, mount on the TV, put on a table, mount on the MeetingDisplay (optional) .
  - MTouch Plus supports: put on a table, paste on a table, fixed on a table, mount on the wall.
  - SmartVision 80 supports: put on a table, mount on top of the TV, mount onto the TV Mount, mount on the wall, mount on the MeetingDisplay (requires MD-PTZBracket, optional).
  - RoomSensor supports mount on the ceiling, mount on the wall.
  - MeetingDisplay supports: install on the MD-WallMount Bracket (optional), Install on the Electric Lift Stand MB-FS-Lift (optional).
- i** If the MSpeaker Pro is purchased, it can also be installed beneath the MeetingDisplay using the MD-AVBracket-S. Only one device—either the SmartVision or the MSpeaker Pro—can be mounted at the bottom of the MeetingDisplay.


**(Optional) Install the MCore 4 on the MeetingDisplay.**

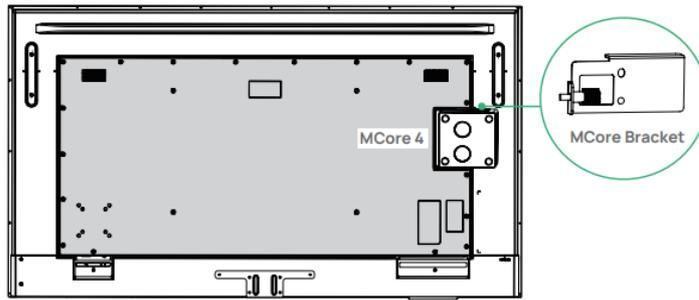


**(Optional) Install the SmartVision 80 on the MeetingDisplay.**

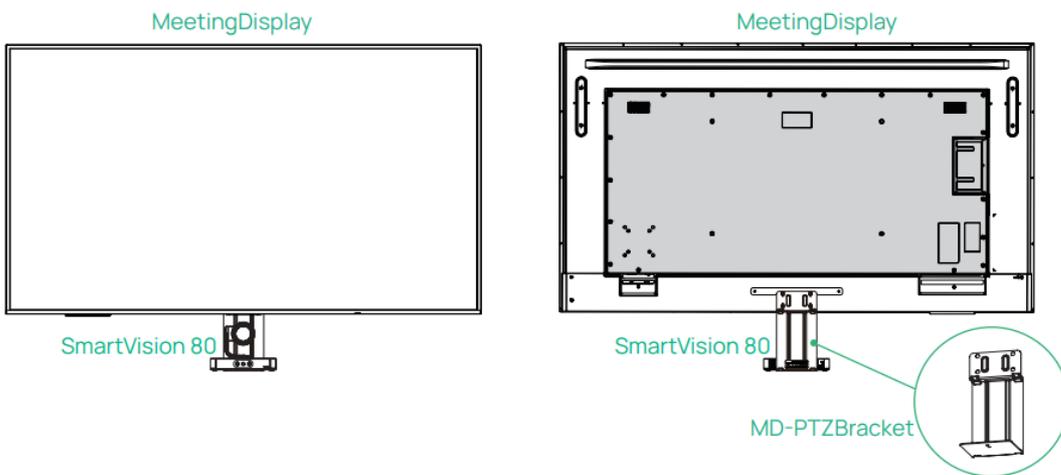


**1. Install the MD-PTZBracket**

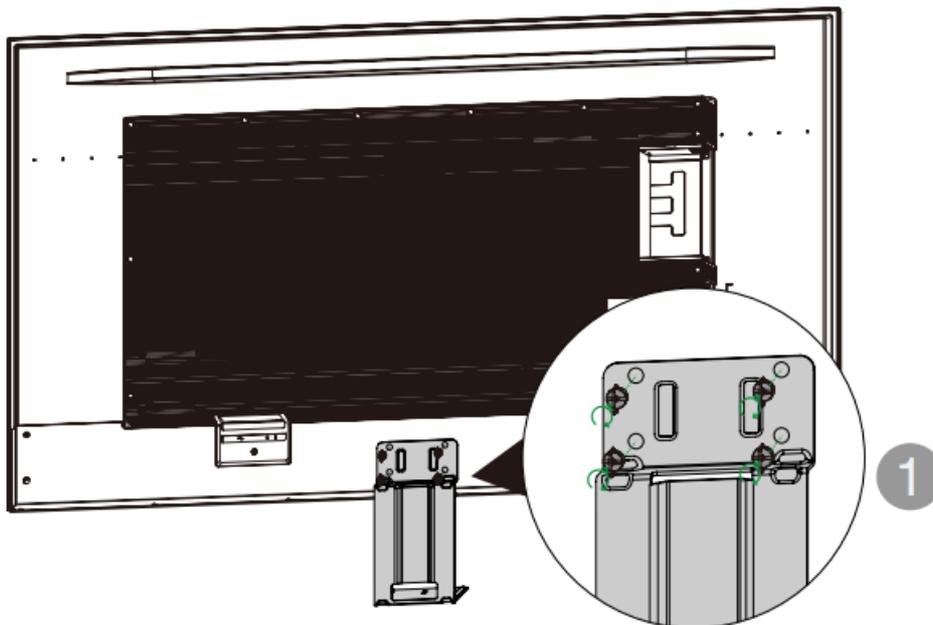

**2. Place the SmartVision 80**

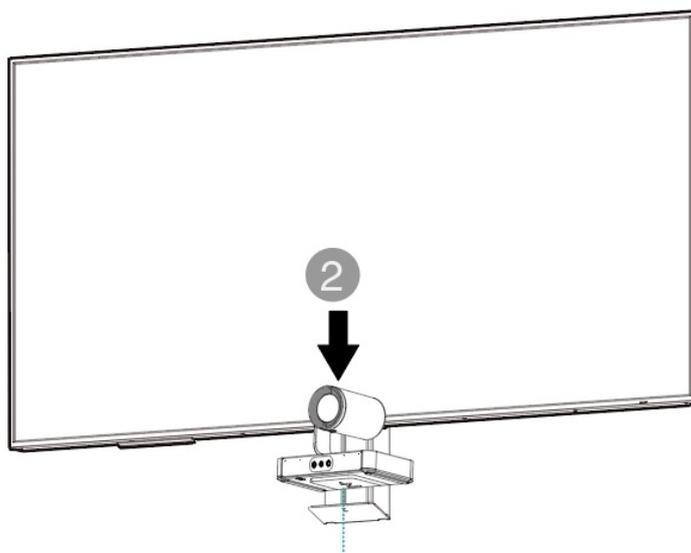


**3. Fix the SmartVision 80**

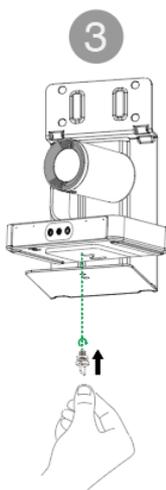

**Cable Connection**

- If not connected to the LAN port of MeetingDisplay, please connect to the external network port.

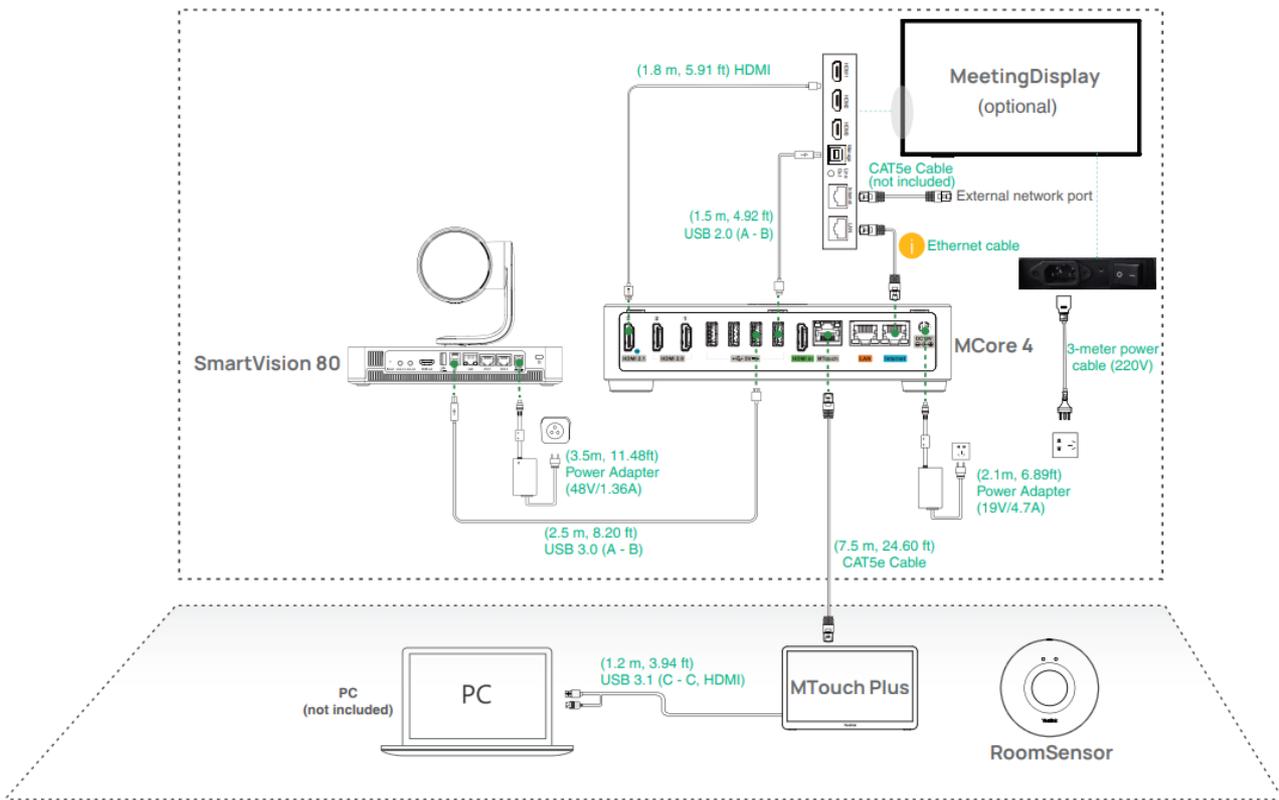

- When starting up the system for the first time, you need to connect a mouse to complete the initial configuration. We recommend using the wireless mouse and keyboard kit.
- Not included accessories requirements:
  - » PC: Equipped with HDMI or USB-C (support DP protocol) Port.
  - » PoE switch: If you use PoE to connect speakers or cameras, you need to use PoE+.
  - » Ethernet cable: CAT5e or higher ethernet cable.


## Initial Setup

1. Press the power button on the left of MCore 4, and the Microsoft Windows 11 IoT Enterprise Edition operating system will be automatically loaded after starting MCore 4. After the system is initialized, you can use MTouch Plus to complete the system login and settings, and the device will automatically start the Microsoft Teams conference system application and enter the setting page.
2. Select the check box on the **EULA** page, and then tap **Next**.
3. Enter the account, the password on the **Account** page, and then tap **Next**. Supports Microsoft Teams Rooms for Business accounts.
4. On the **Advanced** page, configure the domain and tap **Next**.
5. Tap **Finish** to complete the setup wizard.

## Features

## Wireless Sharing

1. Connect the WPP30 to the USB port of the MTouch Plus. When pairing, the LED indicator of WPP30 is orange. When the pairing is successful, the LED indicator turns green breathing light.
2. Connect the paired WPP30 to the USB-A/USB-C port on your PC.
3. On the WPP30, press the presentation button to share the full screen.

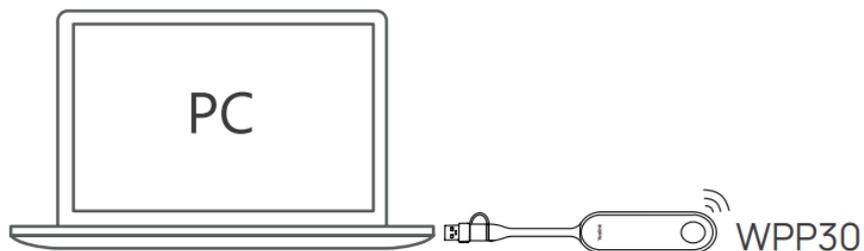

## Pair with a RoomSensor

1. Switch the account from Microsoft Teams to Admin.
2. Open Yealink RoomConnect Software.
3. Go to **MTouch Plus** > **Device Status** > **Sensor**.
4. Select **Add** and follow the on-screen instructions to pair.

- An MTouch Plus can be paired with only one RoomSensor.
- The distance between the MTouch Plus and RoomSensor must be within 20m.