

Contents:

- 1x PayPoint Plus for Android
- 1x Receipt paper roll
- 1x Power cord
- 2x Cash drawer keys
- 1x RJ45 to DB9 serial cable



www.elotouch.com

For software development kit please visit
www.elotouch.com

Quick Installation Guide

Elo PayPoint® Plus for Android

Elo Touch Solutions Technical Support

Online self-help:
<https://www.elotouch.com/support>

North America

800-ELO-TOUCH
Tel +1 408 597 8000
Fax +1 408 597 8050
EloSales.NA@elotouch.com

Asia-Pacific

Tel +86 (21) 3329 1385
Fax +86 (21) 3329 1400
EloAsia@elotouch.com

Europe

Tel +32 (0)16 70 45 00
Fax +32 (0)16 70 45 49
elosales@elotouch.com

Latin America

Tel 786-923-0251
Fax 305-931-0124
EloSales.LATAM@elotouch.com

Revision B
P/N E132130

The information in this document is subject to change without notice. Elo Touch Solutions, Inc. and its Affiliates (collectively "Elo") makes no representations or warranties with respect to the contents herein, and specifically disclaims any implied warranties of merchantability or fitness for a particular purpose. Elo reserves the right to revise this publication and to make changes from time to time in the content hereof without obligation of Elo to notify any person of such revisions or changes.

No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, including, but not limited to, electronic, magnetic, optical, chemical, manual, or otherwise without prior written permission of Elo Touch Solutions, Inc.

Elo (logo), Elo PayPoint and Elo Touch Solutions are trademarks of Elo and its Affiliates.




1




Connect power and ethernet cable. Connections are underneath the register near the back. Before plugging or unplugging the micro-HDMI cable, first unplug the power cable.

2

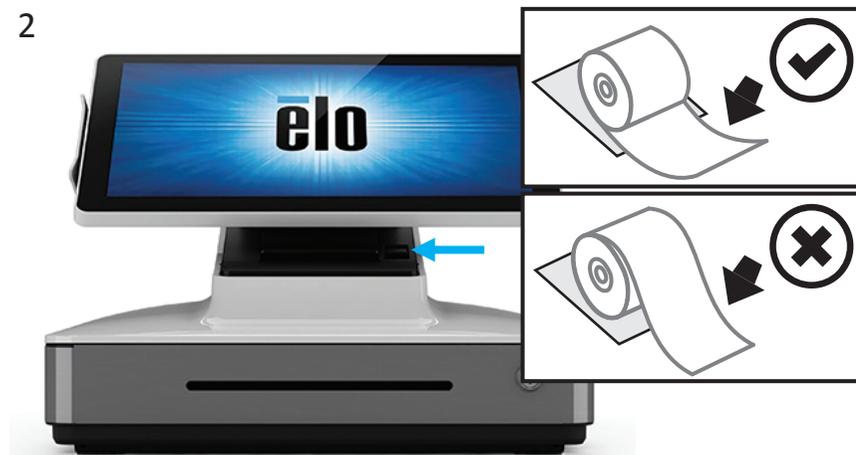


Install receipt paper: Install the paper by pressing the lid release button and lifting up the printer lid. Note the correct paper orientation from pictures above. **Do not use paper that exceeds 80 mm in width.**

3

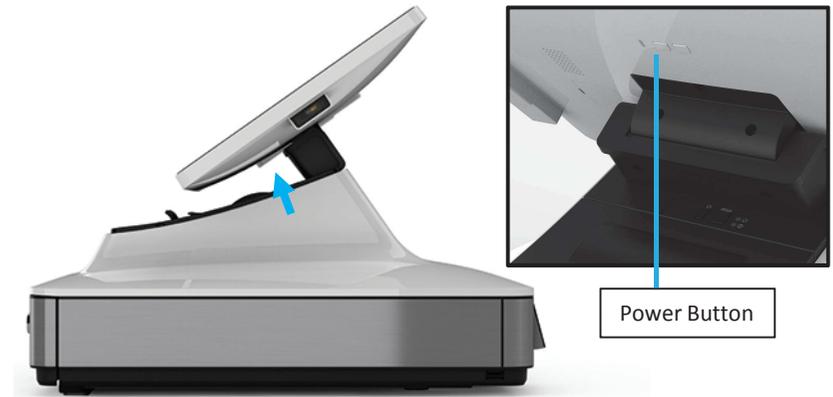

Power on the register: Press the power button (located on the back of the display head). If an Ethernet connection is available, registration will start automatically when the device powers on.

4

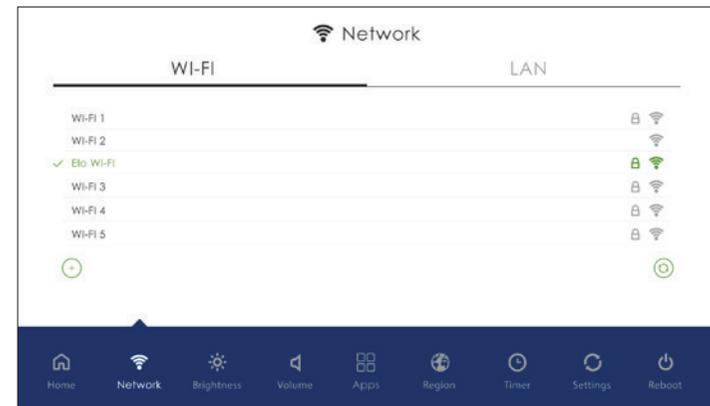

If an Internet connection is not found in Step 3, hold the power button for 3 seconds and release. This lets you enter the set-up page to find your Wi-Fi connection. Under the Network Tab, select the Wi-Fi network. Once connected, your device should start auto provisioning itself to your software provider. Once set up is complete, password **1elo** can be used to re-enter control panel if needed.