

# KRAMER



## Installation Instructions

MODELS:

### C-A35M/IRRW

### C-A35M/IRRN

External Remote IR Receiver



P/N: 2900-301205



Rev: 2



### SAFETY WARNING

Disconnect the unit from the power supply before opening and servicing

For the latest information on our products and a list of Kramer distributors, visit our Web site where updates to this user manual may be found.

We welcome your questions, comments, and feedback.

[www.kramerAV.com](http://www.kramerAV.com)  
[info@kramerel.com](mailto:info@kramerel.com)

## C-A35M/IRRW / C-A35M/IRRN External Remote IR Receiver


Congratulations on purchasing your Kramer External Remote IR Receiver used to remotely control a device. The **C-A35M/IRRW** / **C-A35M/IRRN** is a 3.5mm Male to IR Receiver Control Cable with the following features:

Name	Type	Cable & Connector Color	Sizes	Hz Range
C-A35M/IRRN	IR Receiver Type A	Black	3' (0.90m) and 50' (15.20m)	38kHz
C-A35M/IRRW	IR Receiver Type B	Gray	3' (0.90m)	20 to 60kHz

The cables are labeled with model name and type.

You can extend the distance between the remote controller and the device by using the optional Kramer stereo cables at

[www.kramerav.com/product/C-A35M/IRRW](http://www.kramerav.com/product/C-A35M/IRRW).

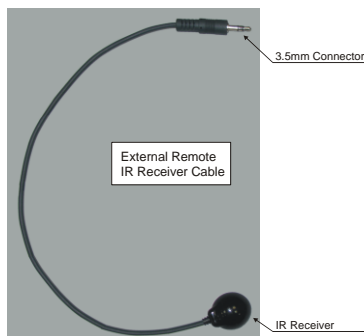

### Installing the External Remote IR Receiver

To connect the External Remote IR Receiver:

1. Disconnect the power to the device.
2. Connect the 3.5mm plug of the External Remote IR Receiver cable to the device IR input 3.5mm mini jack.
3. Connect the power to the device.

The device can be controlled from a distance.

### Specifications

General	
Operating Temperature:	0° to +50°C (32° to 122°F)
Storage Temperature:	-30° to +70°C (-22° to 158°F)
Operating Humidity:	5% to 85%, RHL non-condensing
Available lengths:	C-A35M/IRRW: 3' (0.90m) C-A35M/IRRN: 3' (0.90m) and 50' (15.20m)
Weight:	Weight changes per length