

GV-PCR1251 / 1352 Enrollment Reader

GV-PCR1251 / 1352 is a USB card reader, supporting 125 kHz / 13.56 MHz, designed to assist with GV-AS ID Card / Key Fob enrollment to GV-ASManager. It reads the identification number of a detected GV-AS ID Card / Key Fob and emulates typing of the ID number to GV-ASManager, or any other software desired. The user can conveniently establish user accounts on GV-ASManager by placing cards / key fobs of 125 kHz / 13.56 MHz onto the GV-PCR1251 / 1352 Enrollment Reader.

1. Packing List

- GV-PCR1251 / 1352 Enrollment Reader
- USB Connector
- Warranty Card

2. Panel Overview



3. Setting up GV-PCR1251 / 1352

Plug GV-PCR1251 / 1352 to the same PC as the GV-ASManager using the supplied USB connector. The power LED turns on. GV-PCR1251 / 1352 do not require drivers and emulates typing of the card ID numbers onto the software specified.



4. Adding Cards / Key Fobs Using GV-PCR1251 / 1352

17

. . .

2.

1. On the GV-ASManager's main window, select **Personnel** and select **Cards**. The Card List window appears.

a Card						
User:						
Card Number:	<u>-</u>			Card Code:	Wiegand26	
Card Status:	Active	•]	Card Type:	Normal	
Activation Date:	7/ 3/2017					
Deactivation Date:	7/ 3/2017					
Pin Code:	••••			Disable Lock Card / Disable APB / Allow Access during		
Privilege:	No Privilege	•]			
User Define 01:	I	-		User Define 04:		
User Define 02:		•		User Define 05:		
User Define 03:		•		User Define 06:		
Access Group:	Default	•				
ASController						
Door 1		24-hour restricted				
Door 2		24-hour restricted				

- 3. Select the **Card Code** that coincides with the card / key fob you want to enroll and click in the **Card Number** field.
- Place the card / key fob into close proximity, within 2 cm, of the GV-PCR1251 / 1352 Enrollment Reader. The ID number of the card / key fob is automatically typed into the Card Number field.

Note:

- 1. Make sure the frequency of the cards / key fobs you want to enroll match that of the enrollment reader.
- 2. If special characters / garbled texts are typed into the **Card Number** field, instead of the ID number, switch your input method to English and try again.
- 5. Configure additional information if necessary. For details, see *4.3.1 Adding a Single Card*, *GV-ASManager User's Manual* from our <u>website</u>.
- 6. Click **OK** to finish. The card / key fob is added to the GV-ASManager.

💼 Card List									
New	Batch New	Edit	Delete	Card Reader	r Import	Export Refres	sh		
Search by All				~		Auto	o Select 🛛 Filte	er View	
Card Number	Card Type	Card Bits	User	Card Status	Activation Date	Deactivation D	Privilege	Access Group	GV-AS200
1 230-36238	Normal	26		Active	7/16/2013		No Privil	Default	\bigcirc
									-
									-
<									>
(_		Total Cards	: 1	1 il	em(s) selected	



5. Specifications

		GV-PCR1251	GV-PCR1352			
System Requirements						
OS	32-bit	Windows 7 / 8 / 8.1 / 10				
	64-bit	Windows 7 / 8 / 8.1 / 10 / Server 2012 / 2012 R2 / 2016				
GV-AS Manager Version		All versions				
Operational						
Frequency		125 kHz	13.56 MHz			
Distance		2 cm				
Environmental						
Operating Temperature		0 ~ 50°C (32 ~ 122°F)				
Operating Humidity		0 ~ 90% RH (non-condensing)				
Mechanical						
LED Indicator		1 LED (dual-color; power, enrollment)				
Connector		USB				
Dimensions	mensions 110 x 80 x 26 mm (4.3 x 3.1 x 1.02")					
Cable Length		140 cm (55")				
Weight	160 g (0.35 lb)					
Others						
Certification		CE, FCC, RoHS				

All specifications are subject to change without notice.