

GV-PoE Switch

GV-APOE0410-E User's Manual





© 2023 GeoVision, Inc. All rights reserved.

Under the copyright laws, this manual may not be copied, in whole or in part, without the written consent of GeoVision.

Every effort has been made to ensure that the information in this manual is accurate. GeoVision, Inc. makes no expressed or implied warranty of any kind and assumes no responsibility for errors or omissions. No liability is assumed for incidental or consequential damages arising from the use of the information or products contained herein. Features and specifications are subject to change without notice.

GeoVision, Inc.
9F, No. 246, Sec. 1, Neihu Rd.,
Neihu District, Taipei, Taiwan
Tel: +886-2-8797-8377
Fax: +886-2-8797-8335
<http://www.geovision.com.tw>

Trademarks used in this manual: *GeoVision*, the *GeoVision* logo and *GV* series products are trademarks of GeoVision, Inc. *Windows* is the registered trademark of Microsoft Corporation.

March 2023

Scan the following QR codes for product warranty and technical support policy:



[Warranty]




[Technical Support Policy]

Contents

Safety Precautions	i
Chapter 1 Introduction to the User Guide	1
1.1 Use	1
1.2 User Manual Overview	1
Chapter 2 Product Introduction.....	2
2.1 Product Overview	2
2.2 Product Features	2
2.3 Product Advantage	2
Chapter 3 Product Appearance Description.....	4
3.1 Front Panel	4
3.2 Dip Switch Indicator Status Description	5
3.3 LED Indicator	6
3.4 Side Plate	6
Chapter 4 Installation Guide.....	8
4.1 Installation Precautions	8
4.2 Installation Environment	8
4.3 Installation	9

Safety Precautions

 **Note:** Precision devices are built in the device, please handle them carefully to avoid violent vibration, which may affect the performance of the device. If you find that the equipment is damaged or any parts are lost in the process of transportation, please inform us, we will give you a proper solution as soon as possible.

Statement

Product specifications and information mentioned in this manual are for reference only and are subject to change without prior notice. Unless otherwise agreed, this manual is for use only and does not constitute any form of warranty.

Convention

The product pictures in this document are for illustration only. The number and positions of ports depend on actual models. This document helps you correctly use the Switch. It describes the performance characteristics of the Switch and describes how to install the Switch. Read this manual carefully before operating the Switch.

Chapter 1 Introduction to the User Guide

Thank you for purchasing our 4-Port Gigabit+2G SFP industrial grade Unmanaged PoE Switch! The device adopts no fan, low power consumption design, has the advantages of easy to use, compact and beautiful, simple installation. The product is designed to meet Ethernet standards, with lightning protection, static protection mechanism, operating temperature range of -40°C to 75°C, stable performance, safety and reliability, can be widely used in intelligent transportation, telecommunications, security, financial securities, customs and other broadband data transmission fields.

1.1 Use

This document aims to familiarized users with and correctly use 4-Port Gigabit+2G SFP industrial Unmanaged PoE Switches.

1.2 User Manual Overview

Chapter 1: Introduction to the User Guide.

Chapter 2: Product Introduction.

Chapter 3: Product Appearance Description.

Chapter 4: Installation Guide.

Chapter 2 Product Introduction

2.1 Product Overview

GV-APOE0410-E is an industrial-grade, unmanaged PoE switch with 4 PoE+ 10/100/1000 BaseT(X) ports and 2 Gigabit SFP ports. The switch supports IEEE 802.3at Power over Ethernet standard with up to 30 W per port and a maximum power consumption of 125 W. It not only eliminates the need for power cables to connect your powered devices (PD), such as IP cameras, but it also allows power supply over cables up to 250 m (820 ft) in length, at 10 Mbps.

The switch is ideal for small or medium network environments to strengthen network connection and efficiency. It includes the smart PD Alive Check feature and the option to isolate each PoE port for a faster forwarding rate of time.

2.2 Product Features

- 4-port PoE+ 10/100/1000 BaseT(X), 2-port Gigabit SFP
- IEEE 802.3at Compliant (4 Ports at Full 30 W)
- Max. 125 W power consumption
- Extreme temperature tolerance (-40 °C ~ 75 °C / -40 °F ~ 167 °F)
- Auto-MDI/MDI-X
- DIN-Rail Installation
- Redundant DC power
- Support for VLAN mode for network partition and enhanced performance
- Support for PD Alive Check
- PoE connection for network cables up to 250 m (820 ft) at 10 Mbps transfer rate
- 4 kV surge protection
- Up to 4 GV-IP Camera support

2.3 Product Advantage

-40°C ~ 75 °C operating temperature design

-40°C ~ 75 °C operating temperature design, selected industrial components, the use of natural heat dissipation, to ensure that the Switch can achieve long-term stable operation within the temperature range, to meet all kinds of use environment.

High energy aluminum alloy roof heat conduction groove shell design

Body size 110*90*46 mm, compact and light, full aluminum alloy high energy roof heat conduction groove shell design, better heat dissipation effect.

DIN-Rail installation, simple and flexible

DIN-Rail installation design, easy and quick installation, so that users reduce unnecessary installation time, save time cost.

Select industrial grade components

Chemical nickel gold PCB board, with high corrosion resistance, oxidation resistance. Select high specification capacitor, greatly improve the service life of products.

Supports power supply priorities

The device supports port power supply priorities to ensure continuous power supply for key nodes on the network.

Supports relay alarm function

Support system startup abnormal and power alarm function, if the system startup or input power abnormal can be timely output alarm signal.

Supports PD-ALIVE function

PoE ports support automatic PD monitoring and port data detection. After the PoE port is powered on, the device starts to detect if the port is transmitting data. If the port is not transmitting data and lasts longer than a specific time, the PoE will automatically power down and then power up again.

Supports VLAN function

VLAN isolation mode divides ports 1~4 and ports 5/6 of the switch into a separate VLAN. Ports 1~4 can only communicate with 5/6. Ports 1~4 cannot communicate with each other to ensure the security of the network. In this mode, please connect port 5/6 to the central switching device.

Supports CCTV function

The transmission rate of the port in this mode is reduced to 10Mbps and the transmission distance is extended to 250m, which can solve the problem of long-distance transmission in network monitoring projects and can replace optical fibers and network extenders, solving the problem of difficult ultra-remote power extraction and reducing engineering wiring costs. To ensure the stability and distance of PoE power transmission, always use 8-core all-copper 0.5 or above national standard cables.

Chapter 3 Product Appearance Description

3.1 Front Panel

The front panel consists of 4*10/100/1000Mbps adaptive RJ45 ports, 2*1000Mbps SFP slots and related indicators, as shown in the following figure:

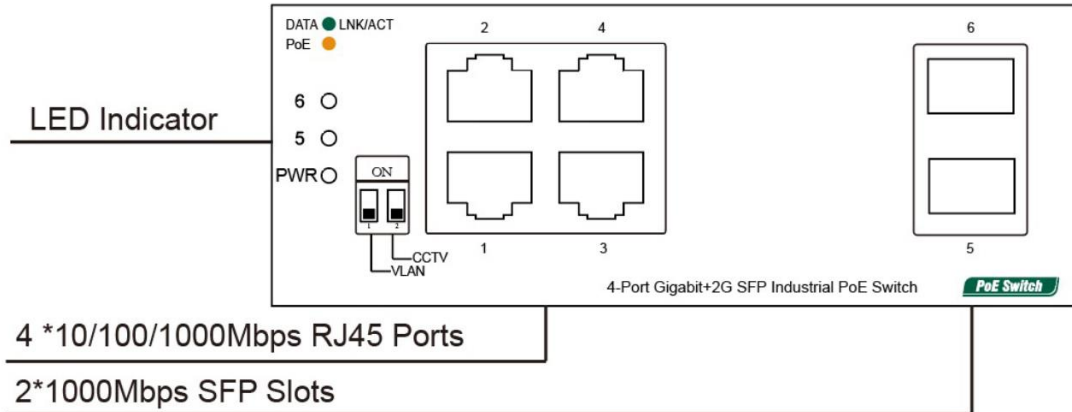 


Figure 3-1 Front panel of the 4-Port Gigabit+2G SFP Switch

4-Port Gigabit+2G SFP Port description:

10/100/1000Mbps RJ45 Ports

 
Supports 10Mbps, 100Mbps, or 1000Mbps rate adaptation, auto-MDI /MDIX, and each port has a corresponding indicator, that is, port indicators 1-4 as shown on the panel in the figure above.

1000Mbps SFP Slots


SFP slots are independent SFP slots on the right of the panel. Each port has a corresponding indicator, that is, the indicator 5-6 on the panel in the figure above.

Note: To smoothly remove the transceivers from the SFP ports, tilt the ends of the transceivers upward for port No.6 and downward for port No. 5.


3.2 Dip Switch Indicator Status Description

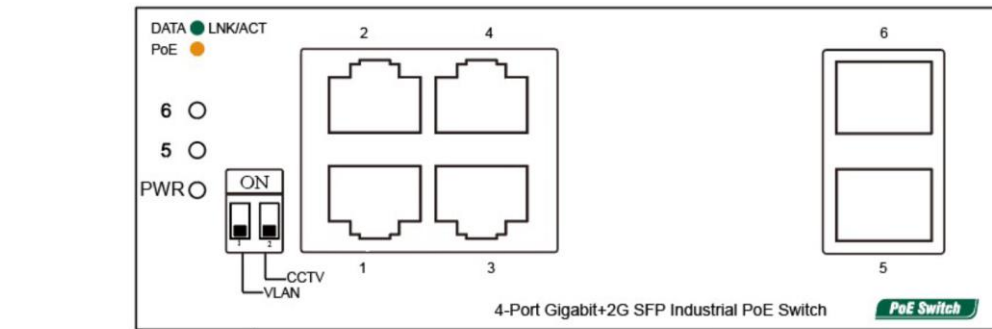


Normal OK

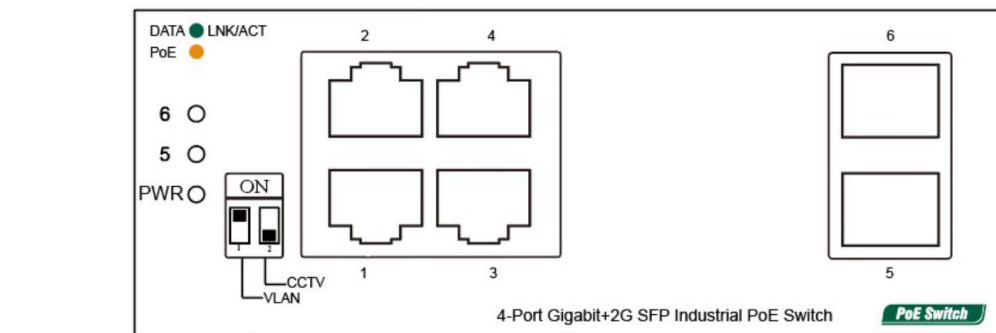 

VLAN OK

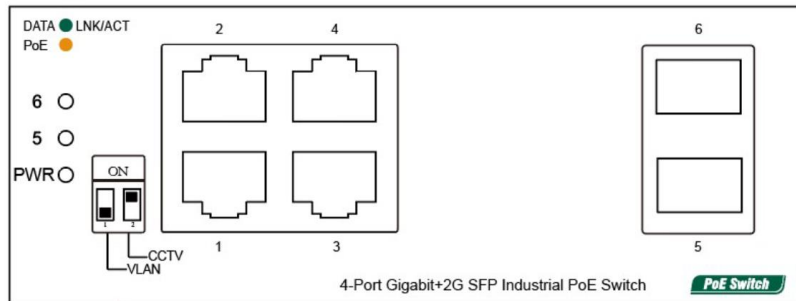 

CCTV OK 10Mbps Isolation

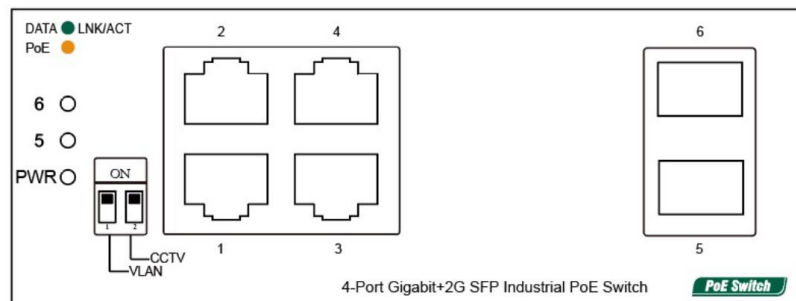 

Expand 10Mbps Don't isolate

3.3 LED Indicator

The LED indicators of the Switch are shown in the following table. Users can monitor the work and running status of the Switch conveniently and quickly through the following indicators:

LED	Color	Function
PWR	Green	Off: No Power supply. Light: Indicates the Switch has power.
DATA	Green	Off: No device is connected to the corresponding port. Light: Indicates the link through that port is successfully established at 10/100/1000Mbps. Blink: Indicates that the Switch is actively sending or receiving data over that port.
PoE	Orange	Off: No PoE powered device (PD) connected. Light: There is a PoE PD connected to be port, which supply power successfully. Blink: Indicates port abnormal PoE supply.

3.4 Side Plate

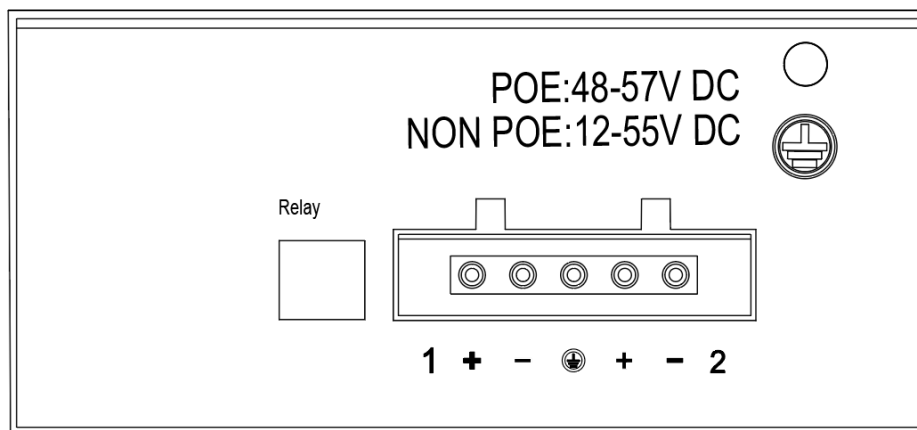 


Figure 3-2 4-Port Gigabit+2G SFP Switch side panel


The side panel of the Switch provides 5-position industrial wiring terminals and power input DC: The standard voltage ranges from 48V to 57V, and the input voltage of 2 PWR1 and PWR2 power supplies ranges from 48V to 57V. The DC power input of the Switch is redundant. The PWR1 and PWR2 power supplies can be used individually or connected to 2 independent DC power supply systems. When any power supply system fails, the device can run normally without interruption, which improves the reliability of network operation.

Relay port: Alarm port, support machine abnormal alarm function. This interface needs to be connected to an external alarm device. When the machine starts abnormally or when the power is on, the internal relay will close and output the alarm signal in time, which has the function of automatic alarm, safety protection and isolation conversion in the circuit.

Chapter 4 Installation Guide

This chapter helps users correctly install and safely use Switches.

4.1 Installation Precautions

 **Precautions:** To avoid equipment damage and personal injury, observe the following precautions:

- The Switch room should be dry and ventilated, free from corrosive gases and strong electromagnetic interference;
- The humidity of the switch room should be 5% to 95%. If possible, install corresponding facilities;
- The grounding of the Switch shall comply with the grounding requirements described in this manual, and shall be separately and well grounded;
- Keep a proper distance between the Switch and other devices. Do not stack other devices with the Switch.
- The connection cable between the Switch and the distribution frame should be standardized and reasonable, and the distribution frame (box) jumper wire should be concise and clear to prevent the phenomenon of parallel lines and wires;
- To reduce the risk of electric shock, do not open the shell of the Switch when it is working. Do not open the shell of the Switch even when it is not powered on.



Safety Tips:

- Ensure that the PGND cable of the power socket is properly grounded.
- Ensure sufficient space for heat dissipation and ventilation of the Switch. Do not place heavy objects on the Switch.

4.2 Installation Environment

Before installation, make sure that the proper working environment is available, including power requirements, adequate space, proximity to other equipment to be connected, and other equipment in place. Please confirm the following installation requirements:

- Ensure the stability of the workbench and good grounding;
- Check whether cables and connectors required for installation are in place (less than 100m).

- Power supply: 48V to 57V DC power supply;
- Environment: operating temperature: -40°C to 75 °C relative humidity: 5% to 95%.

4.3 Installation

DIN-Rail Installation

The 45mm standard DIN-Rail installation is very convenient for most industrial applications. The installation steps are as follows:

- Check whether the installation accessories of DIN-Rail guide tools are available (installation accessories are provided for this product);
- Check whether DIN-Rail is firmly fixed, whether there is a suitable place to install the product;
- Clamp the lower part of the DIN-Rail connecting seat of the product accessories into the DIN-Rail (lower part with spring support), and then clamp the upper part of the connecting seat into the DIN-Rail (lower part clamp a little, slightly force to keep the balance of the equipment stuck into the upper part).

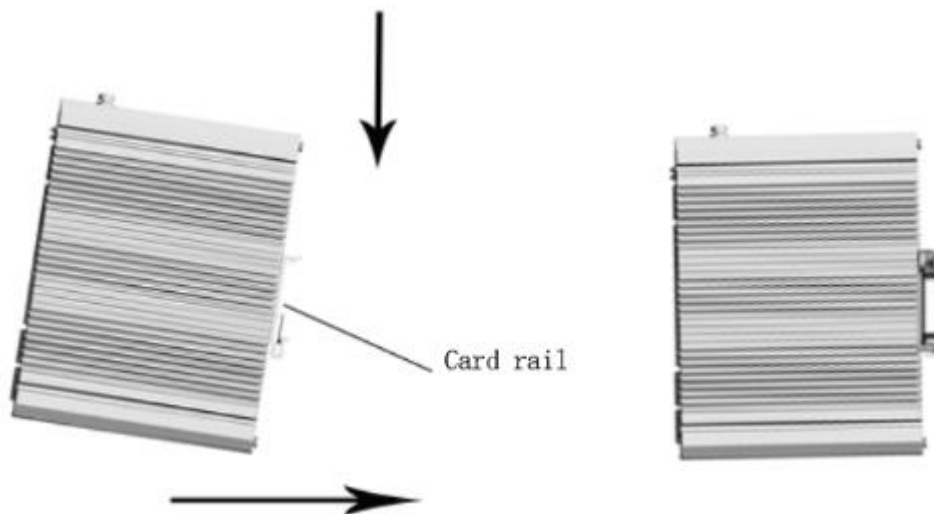 


Figure 4-1 Schematic diagram of industrial machine guide rail installation

⚠ Note: Aluminum alloy DIN-Rail hooks have been fixed to the rear panel of the Switch.

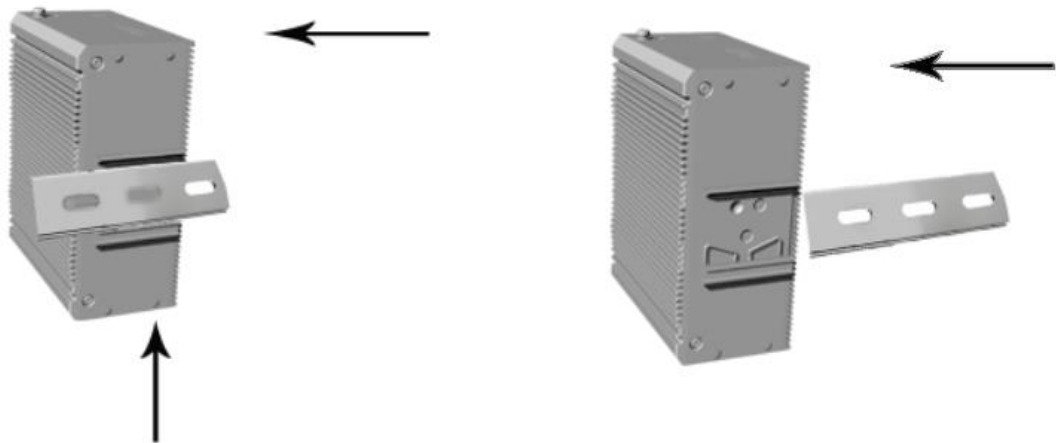 


Figure 4-2 Schematic diagram of industrial machine guide rail disassembly

 


 
Power on

- Power on: First insert the power terminal of the power cable into the power port of the device, then plug in the power plug and power on. After the Switch is started, the Switch automatically initializes. If all port indicators are on and then off, the system is successfully reset, and the power LED indicator is always on.
- Power off operation: Unplug the power plug first, and then remove the wiring part of the terminal. Please pay attention to the above operation sequence.

Wall mounted installation

The following describes how to install a Switch on the wall:

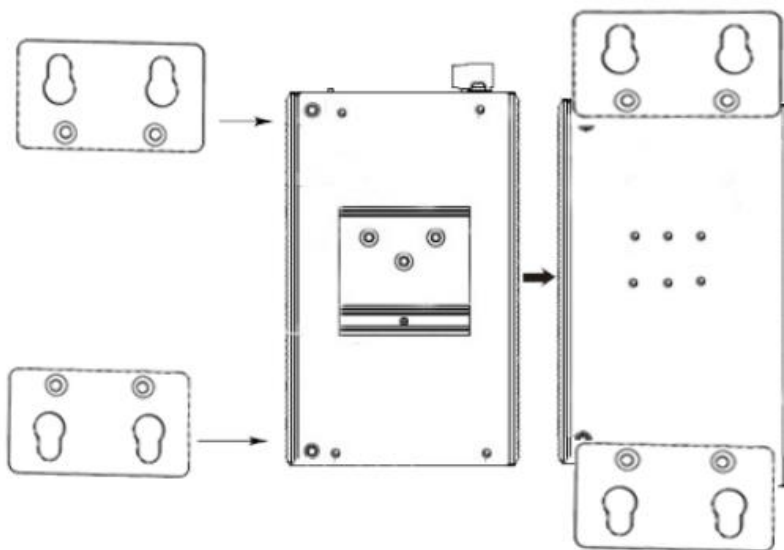

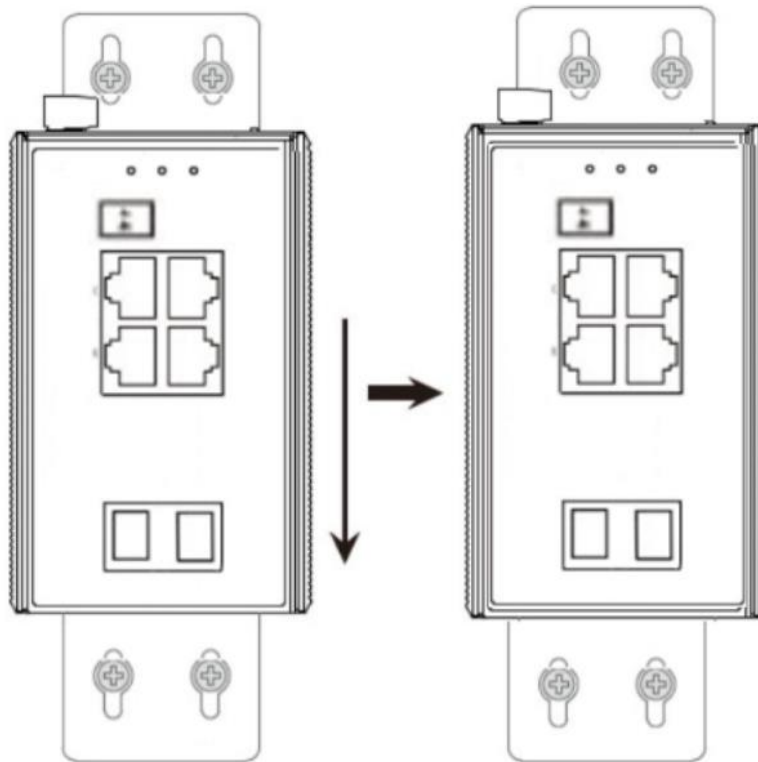

Schematic diagram of wall mounted installation of industrial machine

- Remove the DIN-Rail mounting plate on the rear board of the Switch;
- Install the wall mounting board on the Switch as shown below.
- Four wall screws are required to mount the Switch on the wall, as shown in the figure above.
- When fixing the screws to the wall, do not screw the screws into the wall completely. Leave a space of about 2 mm for sliding the wall panel between the wall and the screws.
- After securing the screws to the wall, place the 4 screw heads through most of the keyhole, then place the Switch vertically and tighten the screws to increase stability.