



Maintenance and Service Guide

SUMMARY

This guide provides maintenance information about such topics as spare parts, removal and replacement of parts, security, and backing up.

Legal information

© Copyright 2023 HP Development Company, L.P.

Bluetooth is a trademark owned by its proprietor and used by HP Inc. under license. The terms HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. Intel, Core, and Thunderbolt are trademarks of Intel Corporation or its subsidiaries in the U.S. and/or other countries. Microsoft and Windows are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries. NVIDIA and GeForce RTX are trademarks and/or registered trademarks of NVIDIA Corporation in the U.S. and other countries. NVMe is a registered trademark of NVM Express. PCIe is a US registered trademark and/or service mark of PCI-SIG. SDHC, SDXC, and microSD are trademarks or registered trademarks of SD-3C LLC. USB Type-C and USB-C are registered trademarks of USB Implementers Forum. DisplayPort™ and the DisplayPort™ logo are trademarks owned by the Video Electronics Standards Association (VESA®) in the United States and other countries. Miracast and Wi-Fi are registered trademarks of Wi-Fi Alliance.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

First Edition: March 2023

Document Part Number: N52494-001

Product notice

This guide describes features that are common to most models. Some features may not be available on your computer.

Not all features are available in all editions or versions of Windows. Systems may require upgraded and/or separately purchased hardware, drivers, software or BIOS update to take full advantage of Windows functionality. Windows is automatically updated, which is always enabled. High-speed internet and Microsoft account required. ISP fees may apply and additional requirements may apply over time for updates. See <http://www.windows.com>.

If your product ships with Windows in S

Mode: Windows in S Mode works exclusively with apps from the Microsoft Store within Windows. Certain default settings, features, and apps cannot be changed. Some accessories and apps that are compatible with Windows may not work (including some antivirus, PDF writers, driver utilities, and accessibility apps), and performance may vary, even if you switch out of S Mode. If you switch to Windows, you cannot switch back to S Mode. Learn more at Windows.com/SmodeFAQ.

To access the latest user guides, go to <http://www.hp.com/support>, and follow the instructions to find your product. Then select **Manuals**.

Software terms

By installing, copying, downloading, or otherwise using any software product preinstalled on this computer, you agree to be bound by the terms of the HP End User License Agreement (EULA). If you do not accept these license terms, your sole remedy is to return the entire unused product (hardware and software) within 14 days for a full refund subject to the refund policy of your seller.

For any further information or to request a full refund of the price of the computer, please contact your seller.

Safety warning notice

Reduce the possibility of heat-related injuries or of overheating the computer by following the practices described.

 **WARNING!** To reduce the possibility of heat-related injuries or of overheating the computer, do not place the computer directly on your lap or obstruct the computer air vents. Use the computer only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to come into contact with the skin or a soft surface, such as pillows or rugs or clothing, during operation. The computer and the AC adapter comply with the user-accessible surface temperature limits defined by applicable safety standards.

Important notice about Customer Self-Repair parts

Your computer includes Customer Self-Repair parts and parts that should be accessed by only an authorized service provider.



IMPORTANT: See "Removal and replacement procedures for Customer Self-Repair parts" for details.

Accessing parts described in "Removal and replacement procedures for authorized service provider parts" can damage the computer or void your warranty.

Table of contents

1 Product description.....	1
2 Getting to know your computer	5
Right side	5
Left side.....	5
Display	6
Low blue light mode (select products only).....	7
Wake-on-voice (select products only).....	7
Keyboard area	8
Touchpad settings and components	8
Touchpad settings	8
Adjusting touchpad settings.....	8
Turning on the touchpad	8
Touchpad components	9
Lights	9
Special keys	10
Rear	12
Bottom	13
Labels	14
3 Illustrated parts catalog	16
Computer major components.....	16
Display assembly subcomponents.....	19
Miscellaneous parts.....	20
4 Removal and replacement procedures preliminary requirements.....	23
Tools required	23
Service considerations.....	23
Plastic parts.....	23
Cables and connectors.....	23
Drive handling	23
Electrostatic discharge information.....	24
Generating static electricity.....	24
Preventing electrostatic damage to equipment.....	25
Personal grounding methods and equipment.....	25
Grounding the work area.....	26
Recommended materials and equipment.....	26
Cleaning your computer	27
Enabling HP Easy Clean (select products only)	27
Removing dirt and debris from your computer.....	27

Cleaning your computer with a disinfectant.....	28
Caring for wood veneer (select products only).....	29
Packaging and transporting guidelines.....	29
Accessing support information.....	30
5 Removal and replacement procedures for Customer Self-Repair parts	32
Component replacement procedures	32
Preparation for disassembly.....	32
Solid-state drive.....	32
Memory modules.....	34
6 Removal and replacement procedures for authorized service provider parts.....	37
Component replacement procedures	37
Preparation for disassembly.....	37
Bottom cover	37
Battery.....	39
WLAN module.....	40
Speakers.....	41
Per key lighting board.....	42
Touchpad.....	43
USB board.....	46
Heat sink assembly.....	47
System board with heat sink	48
RJ-45 door	51
Fans	52
IR board.....	53
Audio board.....	54
Display assembly.....	55
Top cover with keyboard	63
7 Using Setup Utility (BIOS)	65
Starting Setup Utility (BIOS).....	65
Updating Setup Utility (BIOS).....	65
Determining the BIOS version.....	65
Preparing for a BIOS update	66
Downloading a BIOS update	66
Installing a BIOS update	66
8 Using HP PC Hardware Diagnostics	68
Using HP PC Hardware Diagnostics Windows (select products only).....	68
Using an HP PC Hardware Diagnostics Windows hardware failure ID code.....	68
Accessing HP PC Hardware Diagnostics Windows.....	68
Accessing HP PC Hardware Diagnostics Windows from HP Support Assistant.....	68
Accessing HP PC Hardware Diagnostics Windows from the Start menu (select products only).....	69
Downloading HP PC Hardware Diagnostics Windows.....	69
Downloading the latest HP PC Hardware Diagnostics Windows version from HP	69
Downloading the HP PC Hardware Diagnostics Windows from the Microsoft Store	69
Downloading HP Hardware Diagnostics Windows by product name or number (select products only)	69

Installing HP PC Hardware Diagnostics Windows.....	70
Using HP PC Hardware Diagnostics UEFI	70
Using an HP PC Hardware Diagnostics UEFI hardware failure ID code.....	70
Starting HP PC Hardware Diagnostics UEFI	70
Starting HP PC Hardware Diagnostics UEFI through HP Hotkey Support software (select products only).....	71
Downloading HP PC Hardware Diagnostics UEFI to a USB flash drive	71
Downloading the latest HP PC Hardware Diagnostics UEFI version	71
Downloading HP PC Hardware Diagnostics UEFI by product name or number (select products only)	71
Using Remote HP PC Hardware Diagnostics UEFI settings (select products only).....	72
Downloading Remote HP PC Hardware Diagnostics UEFI	72
Downloading the latest Remote HP PC Hardware Diagnostics UEFI version	72
Downloading Remote HP PC Hardware Diagnostics UEFI by product name or number	72
Customizing Remote HP PC Hardware Diagnostics UEFI settings.....	72
9 Backing up, restoring, and recovering.....	74
Backing up information and creating recovery media.....	74
Using Windows tools for backing up.....	74
Using the HP Cloud Recovery Download Tool to create recovery media (select products only).....	74
Restoring and recovering your system.....	74
Creating a system restore	75
Restoring and recovery methods	75
Recovering using HP Recovery media	75
Changing the computer boot order	76
Using HP Sure Recover (select products only).....	76
10 Specifications.....	77
Computer specifications.....	77
Display specifications.....	77
Solid-state drive specifications	78
11 Power cord set requirements.....	80
Requirements for all countries	80
Requirements for specific countries and regions.....	80
12 Recycling.....	82
Index.....	83

1 Product description

This table provides detailed product information.

Table 1-1 Product components and their descriptions

Category	Description
Product Name	OMEN by HP Transcend 16 inch Gaming Laptop PC
	Model numbers: 16-u0000 - 16-u0999
	CTO model number: 16t-u000
Chipset	Intel® HM770
Processor	13th generation Intel processors
	Intel Core® i9-13900HX (2.20 GHz base frequency, 36 MB cache, 24 cores, 55 W)
	Intel Core i7-13700HX (2.10 GHz base frequency, 24 MB cache, 16 cores, 55 W)
Graphics controller	Internal graphics
	Intel UHD Graphics 770
	Discrete/hybrid graphics
	• NVIDIA® GeForce RTX® 4070
	• NVIDIA GeForce RTX 4060
	• NVIDIA GeForce RTX 4050
	Supports HD Decode, DX12, and HDMI
	Supports Advanced Optimus
	Supports G-Sync (internal and external)
	Supports MR compatible (60 Hz frame rate)
	Supports GPU Performance Scaling (GPS)
	Supports VR
Display	40.8 cm (16.0 in), white light-emitting diode (WLED), ultrawide viewing angle (UWVA), low blue light
	Wide Quad Extended Graphics Array (WQXGA) (2560 × 1600), 100% DCI-P3, HDR-1000, embedded DisplayPort (eDP) 1.4 + panel self-refresh (PSR), low blue light, 1180 nits, 240 Hz
	WQXGA, 100% sRGB, eDP 1.4 without PSR, 400 nits, 240 Hz
	Wide Ultra Extended Graphics Array (WUXGA) (1920 × 1200), 100% sRGB, eDP 1.4 without PSR, 400 nits, 165 Hz
Memory	Two SODIMM slots, customer accessible and upgradeable, supporting up to 32 GB of RAM
	DDR5-5600, DDR5-4800, 1.1 V, dual-channel support
	Supports the following configurations:
	• 32 GB (16 GB × 2)
	• 16 GB (8 GB × 2)

Table 1-1 Product components and their descriptions (continued)

Category	Description
Primary storage	M.2 solid-state drive (PCIe®-4 × 4, 2280, non-volatile memory express (NVMe®), three-layer cell (TLC)
	2 TB
	1 TB
	512 GB
Audio	Audio brand: BANG & OLUFSEN
	Dual speakers
	Supports Far Field Cortana
	Supports Alexa
	Supports XiaoWei
	Supports HP Audio Boost 2.0 with discrete amplifier
	Supports DTS X: Ultra
Video	HP True Vision FHD Camera - indicator LED, USB 2.0, HD BSI sensor, f2.0, 80° narrow field-of-view (NFOV)
	1080p by 30 frames per second (fps)
	Dual-array, digital microphone with appropriate software - beam forming, echo cancellation, noise suppression
Wireless	Wireless Local Area Network (WLAN) with dual antennas (M.2 module/PCIe)
	<ul style="list-style-type: none"> Intel AX211 Wi-Fi® 6E Bluetooth® 5.3 WLAN
	<ul style="list-style-type: none"> Realtek 8852CE Wi-Fi 6E Bluetooth 5.3 WLAN
	Support for Miracast®
	Support for Modern Standby (connected)
	Intel Bluetooth audio offload
	Wi-Fi BIOS SAR
	Dynamic antenna gain (select products only)
RJ-45 (network)	Integrated 10/100/1000 GbE LAN

Table 1-1 Product components and their descriptions (continued)

Category	Description
Ports	Hot plug/unplug and auto detect for correct output to wide-aspect vs standard aspect video
	Audio-out (headphone)/audio-in (microphone) combo jack
	RJ-45 (network) jack
	AC smart adapter plug
	HDMI 2.1 supporting up to 8 K @ 60 Hz
	(2) USB 3.2 Gen 1 Type-A port; supports HP Sleep & Charge
	(2) USB 4 Type-C® Gen4 Thunderbolt™ 4, supports:
	- Display Port 1.4 out up to 8 K @ 60 Hz and HDMI 2.1 out with adapter
	- Power delivery (100 W input [20 V @ 5A and 20 V @ 3.25A])
	- Data transfer
	- HDMI 2.1 output up to 8 K @ 60 Hz with HDCP 2.3 with adapter capable of HDMI 2.1
	- HP Sleep & Charge
Headset	HyperX Cloud II Wireless Core Gaming Headset
Sensors	Ambient light sensor
	IR thermal sensor
Keyboard/pointing devices	Keyboard
	Backlit, 4-zone RGB lighting
	Backlit, per key RGB lighting
	Clickpad with image sensor
	Supports Microsoft® precision gestures
	Supports modern trackpad gestures
	Multitouch gestures enabled
	Taps enabled as default
Power requirements	Battery
	6 cell, 97 Whr
	4 cell, 70 Whr
	Long life
	Fast charge
	Smart AC adapter
	280 W, 4.5 mm, standard, right angle, 3 pin
	230 W, 4.5 mm, power correction factor (PFC), slim, right angle
	200 W, 4.5 mm, PFC, slim, right angle, 3 pin
	Power cord
	C13, premium, 1.0 m (3.3 ft)

Table 1-1 Product components and their descriptions (continued)

Category	Description
Security	Trusted Platform Module (TPM) 2.0
	Camera privacy cover
Operating system	Windows® 11 Pro
	Windows 11 Pro Education
	Windows 11 Home - HP recommends Windows 11 Pro for Business
	Windows 11 Home Single Language - HP recommends Windows 11 Pro for Business
	Windows 11 Pro (Windows 11 Enterprise or Windows 10 Enterprise available with a Volume Licensing Agreement)
	Windows 11 Pro (preinstalled with Windows 10 Pro Downgrade)
	FreeDOS
Serviceability	AC adapter
	Solid-state drive
	Memory modules

2 Getting to know your computer

Your computer features top-rated components. This chapter provides details about your components, where they are located, and how they work.

Right side

Identify the components on the right side of the computer.

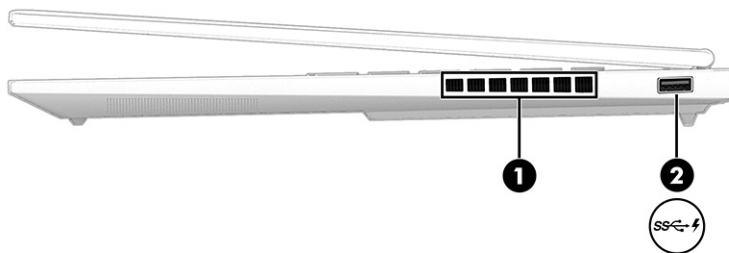



Table 2-1 Right-side components and their descriptions

Component		Description
(1)	Vent	Enables airflow to cool internal components. NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.
(2)	USB SuperSpeed port with HP Sleep and Charge 	Connects a USB device, provides high-speed data transfer, and charges small devices (such as a smartphone), even when the computer is off. NOTE: Use a standard USB Type-A charging cable or cable adapter (purchased separately) when charging a small external device.

Left side

Identify the components on the left side of the computer.

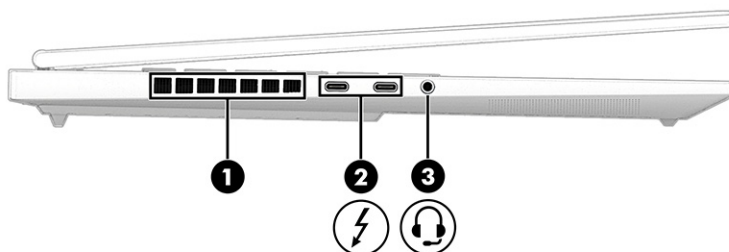




Table 2-2 Left-side components and their descriptions

Component		Description
(1)	Vent	<p>Enables airflow to cool internal components.</p> <p>NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.</p>
(2)	 <p>USB Type-C® power connector and Thunderbolt™ ports with HP Sleep and Charge and DisplayPort™ output (2)</p>	<p>Connect an AC adapter that has a USB Type-C connector, supplying power to the computer and, if needed, charging the computer battery.</p> <p>- and -</p> <p>Connect USB devices, provide high-speed data transfer, and charge small devices (such as a smartphone), even when the computer is off.</p> <p>NOTE: Use a standard USB Type-C charging cable or cable adapter (purchased separately) when charging a small external device.</p> <p>- and -</p> <p>Connect display devices that have a USB Type-C connector, providing DisplayPort output.</p> <p>NOTE: Your computer might also support a Thunderbolt docking station.</p> <p>NOTE: To ensure that your computer operates at full performance and can charge the battery when using resource-intensive applications, use the AC adapter that ships with your computer. You can use an optional 100 W, 20 V Type-C adapter or power bank when running light-load tasks. System-off charging is supported only when you use a 20 V Type-C adapter or power bank.</p>
(3)	 <p>Audio-out (headphone)/Audio-in (microphone) combo jack</p>	<p>Connects optional powered stereo speakers, headphones, earbuds, a headset, or a television audio cable. Also connects an optional headset microphone. This jack does not support optional standalone microphones.</p> <p>WARNING! To reduce the risk of personal injury, adjust the volume before putting on headphones, earbuds, or a headset. For additional safety information, see the <i>Regulatory, Safety, and Environmental Notices</i>.</p> <p>To access this guide:</p> <ul style="list-style-type: none"> ■ Select the Search icon in the taskbar, type HP Documentation in the search box, and then select HP Documentation. <p>NOTE: When a device is connected to the jack, the computer speakers are disabled.</p>

Display

The computer display can include essential components such as speakers, antennas, cameras, and microphones.

Low blue light mode (select products only)

Your computer display is shipped from the factory in low blue light mode for improved eye comfort and safety. Also, blue light mode automatically adjusts blue light emissions when you are using the computer at night or for reading.

⚠ WARNING! To reduce the risk of serious injury, read the *Safety & Comfort Guide*. It describes proper workstation setup and proper posture, health, and work habits for computer users. The *Safety & Comfort Guide* also provides important electrical and mechanical safety information. The *Safety & Comfort Guide* is available on the web at <http://www.hp.com/ergo>.

Wake-on-voice (select products only)

Use the wake-on-voice feature to bring the computer out of the Sleep state quickly.

To access the wake-on-voice settings, follow these steps:

1. Select the **Search** icon in the taskbar, type **XiaoWei** in the search box, and then select **XiaoWei**.
2. When the tool opens, scan the QR code with your mobile device, which takes you to the settings page, where you can select your wake-on-voice features.
3. Follow the on-screen instructions.

📝 NOTE: Allow the XiaoWei app to continue running on the computer.

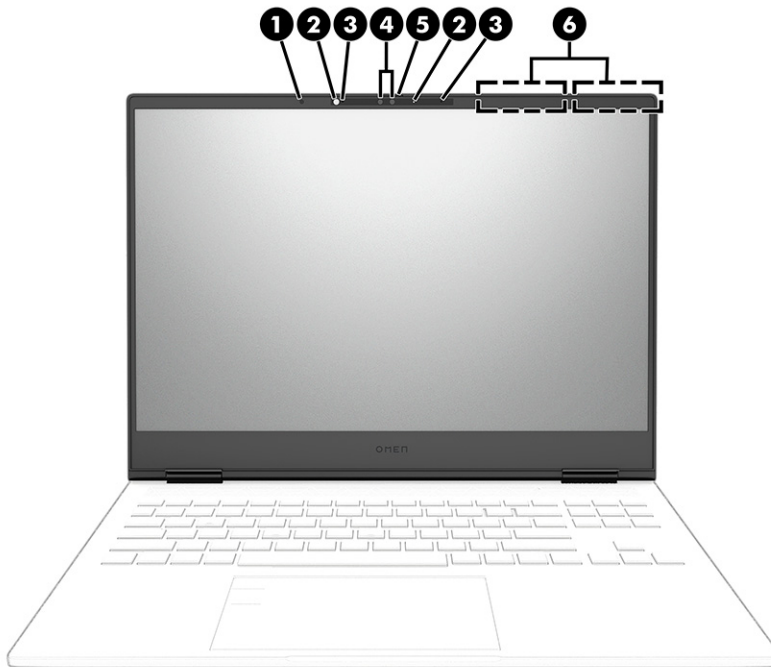


Table 2-3 Display components and their descriptions

Component	Description
(1) Ambient light sensor	Adjusts the brightness of the display, depending on the ambient light.
(2) Camera lights (2)	On: One or more cameras are in use.

Table 2-3 Display components and their descriptions (continued)

Component		Description
(3)	Internal microphones (2)	Record sound.
(4)	Cameras (2)	Allow you to video chat, record video, and record still images. Some cameras also allow a facial recognition logon to Windows®, instead of a password logon. NOTE: Camera functions vary depending on the camera hardware and software installed on your product.
(5)	Camera privacy cover	By default, the camera lens is uncovered, but you can slide the camera privacy cover to block the camera's view. To use the camera, slide the camera privacy cover in the opposite direction to reveal the lens.
(6)	WLAN antennas* (2)	Send and receive wireless signals to communicate with wireless local area networks (WLANs).

*The antennas are not visible from the outside of the computer. For optimal transmission, keep the areas immediately around the antennas free from obstructions.

For wireless regulatory notices, see the section of the *Regulatory, Safety, and Environmental Notices* that applies to your country or region.

To access this guide:

- Select the **Search** icon in the taskbar, type `HP Documentation` in the search box, and then select **HP Documentation**.

Keyboard area

Keyboards can vary by language.



NOTE: The keyboard area, including the function keys and (select products only) power key, is disabled in stand, tent, and tablet modes. To enable the keyboard, including the power key, change to the clamshell mode.

Touchpad settings and components

Learn the touchpad settings and components.

Touchpad settings

Learn how to adjust touchpad settings.

Adjusting touchpad settings

Use these steps to adjust touchpad settings and gestures.

1. Select the **Search** icon in the taskbar, type `touchpad settings` in the search box, and then press `enter`.
2. Choose a setting.

Turning on the touchpad

Follow these steps to turn on the touchpad.

1. Select the **Search** icon in the taskbar, type `touchpad settings` in the search box, and then press `enter`.
2. Using an external mouse, click the **touchpad** button.

If you are not using an external mouse, press the **Tab** key repeatedly until the pointer rests on the **touchpad** button. Then press the **spacebar** to select the button.

Touchpad components

Identify the touchpad components.

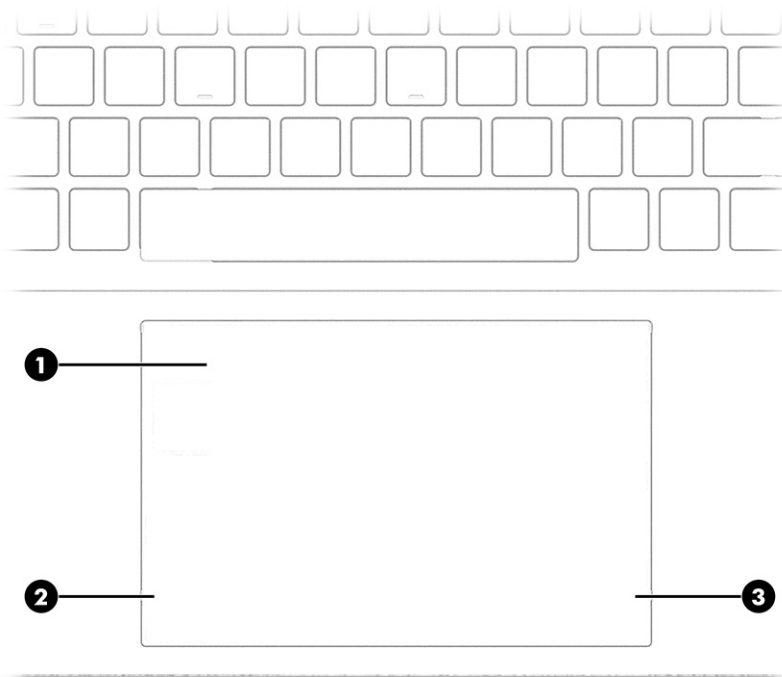


Table 2-4 Touchpad components and their descriptions

Component		Description
(1)	Touchpad zone	Reads your finger gestures to move the pointer or activate items on the screen.
(2)	Left touchpad button	Functions like the left button on an external mouse.
(3)	Right touchpad button	Functions like the right button on an external mouse.

Lights

Identify the lights on the computer.

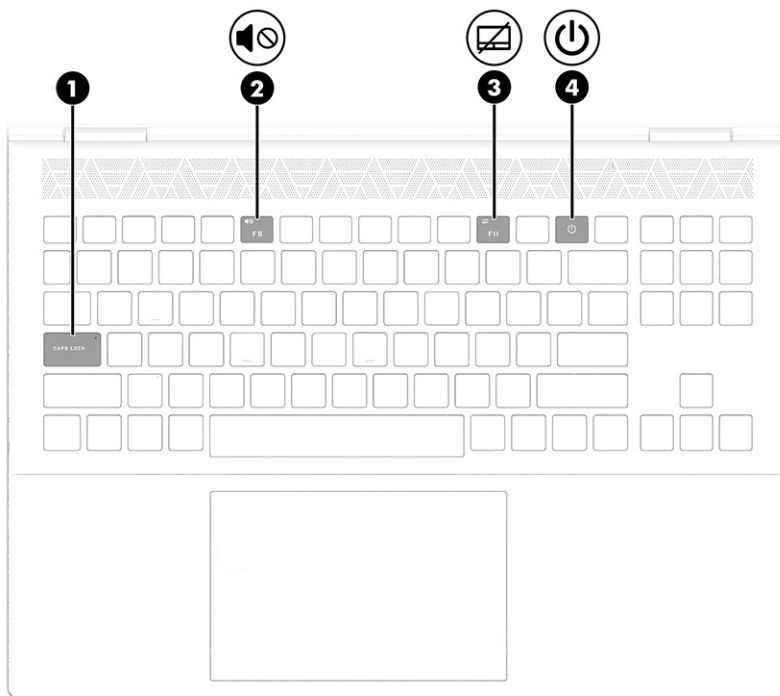




Table 2-5 Lights and their descriptions

Component		Description
(1)	Caps lock light	On: Caps lock is on, which switches the key input to all capital letters.
(2)	 Mute light	<ul style="list-style-type: none"> On: Computer sound is off. Off: Computer sound is on.
(3)	Touchpad light	<ul style="list-style-type: none"> On: The touchpad is off. Off: The touchpad is on.
(4)	 Power light	<ul style="list-style-type: none"> On: The computer is on. Blinking (select products only): The computer is in the Sleep state, a power-saving state. The computer shuts off power to the display and other unnecessary components. Off: Depending on your computer model, the computer is off, in Hibernation, or in Sleep. Hibernation is the power-saving state that uses the least amount of power.

Special keys

Identify the special keys.

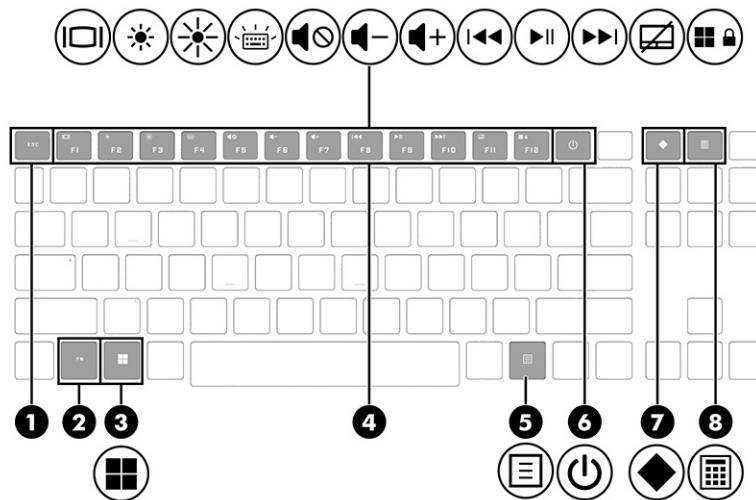


Table 2-6 Special keys and their descriptions







Component		Description
(1)	esc key	Displays system information when pressed in combination with the fn key.
(2)	fn key	Executes specific functions when pressed in combination with another key.
(3)	 Windows key	Opens the Start menu. NOTE: Pressing the Windows key again will close the Start menu.
(4)	Action keys	Execute frequently used system functions as defined by the icon symbols on f1 through f12 function keys.
(5)	 Windows application key	Displays options for a selected object.
(6)	 Power button	<ul style="list-style-type: none"> When the computer is off, press the button briefly to turn on the computer. When the computer is on, press the button briefly to initiate Sleep. When the computer is in the Sleep state, press the button briefly to exit Sleep (select products only). When the computer is in Hibernation, press the button briefly to exit Hibernation. <p>IMPORTANT: Pressing and holding down the power button results in the loss of unsaved information.</p> <p>If the computer has stopped responding and shutdown procedures are ineffective, press and hold the power button down for at least 10 seconds to turn off the computer.</p> <p>To learn more about your power and sleep settings:</p> <ul style="list-style-type: none"> Right-click the Power icon , and then select Power and sleep settings.

Table 2-6 Special keys and their descriptions (continued)

Component		Description
(7)	 OMEN key	Opens the OMEN Gaming Hub software.
(8)	 Calculator key	Opens the calculator.

Rear

Identify the rear components.

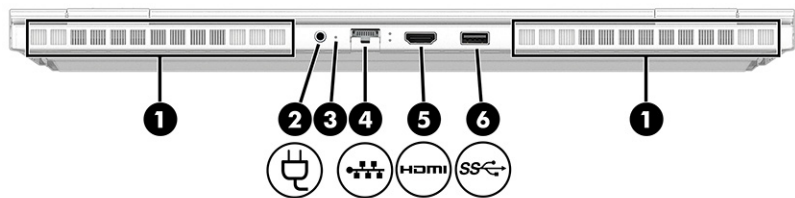


Table 2-7 Rear components and their descriptions





Component		Description
(1)	Vents (2)	Enable airflow to cool internal components. NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.
(2)	 Power connector	Connects an AC adapter. NOTE: To ensure that your computer operates at full performance and can charge the battery when using resource-intensive applications, use the AC adapter that ships with your computer. You can use an optional 100 W, 20 V Type-C adapter or power bank when running light-load tasks. System-off charging is supported only when you use a 20 V Type-C adapter or power bank.
(3)	AC adapter and battery light	<ul style="list-style-type: none">White: The AC adapter is connected and the battery is fully charged.Blinking amber: The AC adapter is disconnected and the battery has reached a low battery level.Amber: The AC adapter is connected and the battery is charging.Off: The battery is not charging.
(4)	 RJ-45 (network) jack/status lights	Connects a network cable. <ul style="list-style-type: none">White: The network is connected.Amber: Activity is occurring on the network.

Table 2-7 Rear components and their descriptions (continued)

Component			Description
(5)		HDMI® port	Connects an optional video or audio device, such as a high-definition television, any compatible digital or audio component, or a high-speed High-Definition Multimedia Interface® (HDMI) device.
(6)		USB SuperSpeed port	Connects a USB device, provides high-speed data transfer, and (for select products) charges small devices (such as a smartphone) when the computer is on or in Sleep mode. NOTE: Use a standard USB Type-A charging cable or cable adapter (purchased separately) when charging a small external device.

Bottom

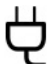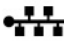Identify the bottom components.

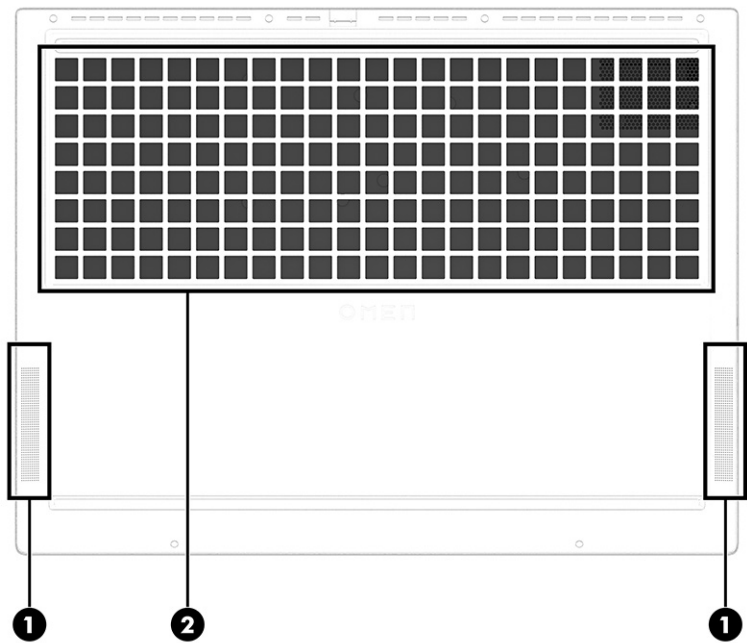



Table 2-8 Bottom components and their descriptions

Component			Description
(1)	Speakers (2)		Produce sound.
(2)	Vent		Enables airflow to cool internal components. NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.

Labels

The labels affixed to the computer provide information that you might need when you troubleshoot system problems or travel internationally with the computer. Labels can be in paper form or imprinted on the product.

 **IMPORTANT:** Check the following locations for the labels described in this section: the bottom of the computer, inside the battery bay, under the service door, on the back of the display, or on the bottom of a tablet kickstand.

- Service label—Provides important information to identify your computer. When contacting support, you might be asked for the serial number, the product number, or the model number. Locate this information before you contact support.

Your service label will resemble one of the following examples. Refer to the illustration that most closely matches the service label on your computer.



Table 2-9 Service label components

Component	
(1)	Serial number
(2)	Product ID
(3)	HP product name and model number

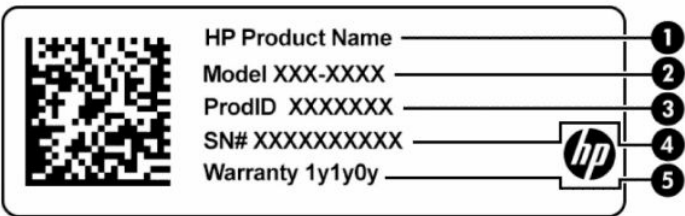


Table 2-10 Service label components

Component	
(1)	HP product name
(2)	Model number
(3)	Product ID
(4)	Serial number
(5)	Warranty period

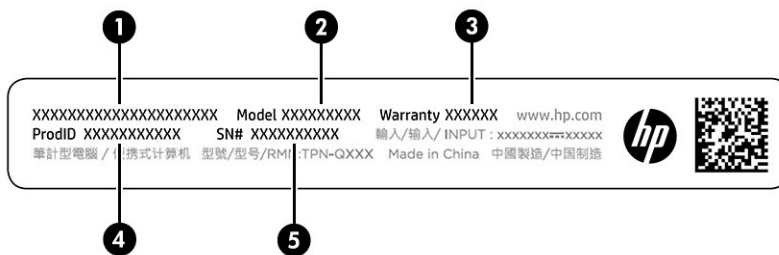


Table 2-11 Service label components

Component	
(1)	HP product name
(2)	Model number
(3)	Warranty period
(4)	Product ID
(5)	Serial number

- Regulatory labels—Provide regulatory information about the computer.
- Wireless certification labels—Provide information about optional wireless devices and the approval markings for the countries or regions where the devices have been approved for use.


3 Illustrated parts catalog

Use this chapter to determine the spare parts that are available for the computer.

Computer major components

To identify the computer major components, use this illustration and table.

 **NOTE:** HP continually improves and changes product parts. For complete and current information about supported parts for your computer, go to <http://partsurfer.hp.com>, select your country or region, and then follow the on-screen instructions.

 **NOTE:** Details about your computer, including model, serial number, product key, and length of warranty, are on the service tag at the bottom of your computer.

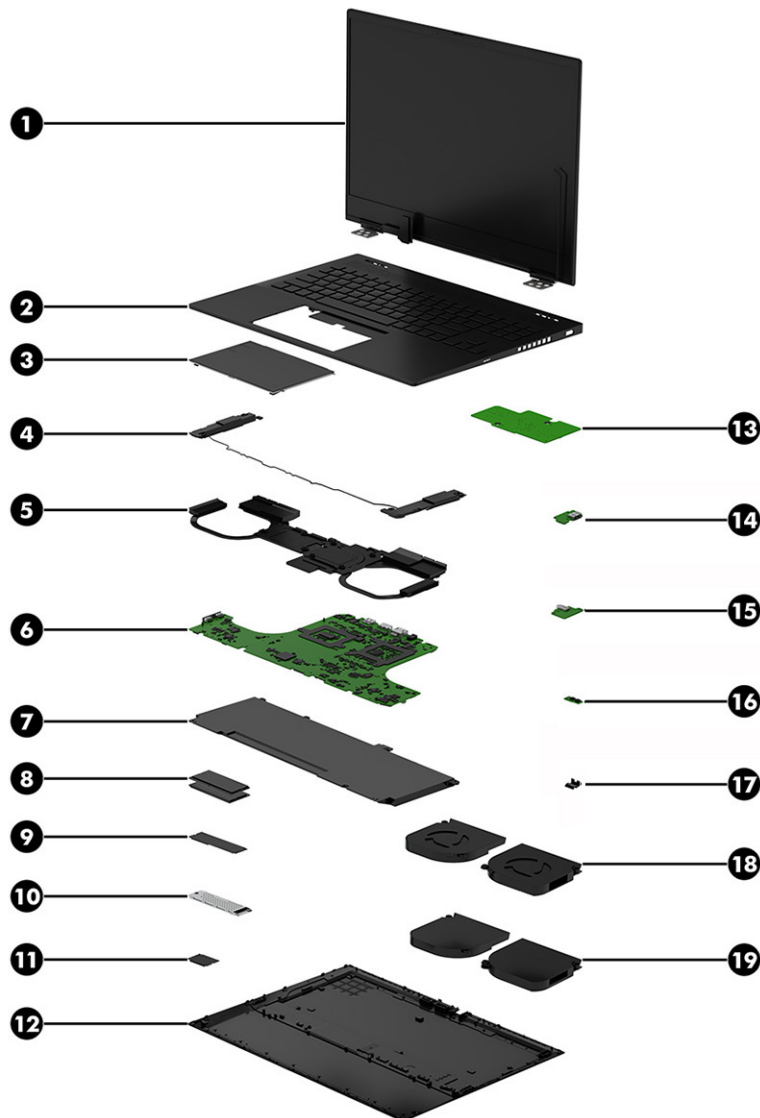


Table 3-1 Computer major component descriptions and part numbers

Item	Component	Spare part number
(1)	Display assembly NOTE: Display spare parts are available only as subcomponents. For spare part information, see Display assembly subcomponents on page 19 .	
(2)	Top cover with keyboard (backlit) NOTE: For a detailed list of country codes, see Top cover with keyboard on page 63 .	
	Shadow black, 4-zone lighting	N43755-xx1
	Shadow black, per key lighting	N43756-xx1
	Ceramic white, 4-zone lighting	N43757-xx1
(3)	Touchpad NOTE: The touchpad cable is available as spare part number N43719-001.	
	Ceramic white	N43744-001
	Shadow black	N43743-001
(4)	Speakers	N43742-001
(5)	Heat sink	
	80 W (RTX 4060/RTX 4070)	N43729-001
	60 W (RTX 4050)	N43730-001
(6)	System board NOTE: All system board spare part kits include replacement thermal material. All system boards use the following part numbers: xxxxxx-001: Non-Windows operating systems xxxxxx-601: Windows operating system	
	Intel Core i9-13900HX processor and RTX 4070 graphics	N43751-xx1
	Intel Core i9-13900HX processor and RTX 4070 graphics, G-Sync	N43750-xx1
	Intel Core i9-13900HX processor and RTX 4060 graphics, G-Sync	N43749-xx1
	Intel Core i7-13700HX processor and RTX 4070 graphics, G-Sync	N43748-xx1
	Intel Core i7-13700HX processor and RTX 4060 graphics, G-Sync	N43747-xx1
	Intel Core i7-13700HX processor and RTX 4050 graphics, G-Sync	N43746-xx1
(7)	Battery	
	6 cell, 97 Whr	N28832-005
	4 cell, 70 Whr	M39179-005
(8)	Memory module (DDR5-4800)	
	16 GB	M97596-001
	8 GB	M97595-001
	Memory module (DDR5-5600)	

Table 3-1 Computer major component descriptions and part numbers (continued)

Item	Component	Spare part number
	16 GB	N38627-001
	8 GB	N37792-001
(9)	Solid-state drive	
	NOTE: The solid-state drive thermal pad is available as spare part number N15681-001.	
	2 TB	M52027-001
	1 TB	M16560-001
	512 GB	M17436-001
(10)	Solid-state drive cover	not available as a spare part
(11)	WLAN module	
	NOTE: WLAN module protective tape is available as spare part number N10779-001.	
	Intel AX211 Wi-Fi 6e Bluetooth 5.3 WLAN	M53366-005
	Realtek 8852CE Wi-Fi 6E Bluetooth 5.3 WLAN	N19618-005
(12)	Bottom cover	
	Ceramic white, 60 W (models with RTX 4050 graphics)	N43715-001
	Shadow black, 60 W (models with RTX 4050 graphics)	N43714-001
	Ceramic white, 80 W (models with RTX 4060/4070 graphics)	N56043-001
	Shadow black, 80 W (models with RTX 4060/4070 graphics)	N56042-001
(13)	Lighting board, per key keyboard	N43741-001
	NOTE: The lighting board per key cable is available as spare part number N43720-001. The lighting board LED per key cable is available as spare part number N43721-001.	
(14)	USB board	N43736-001
	NOTE: The USB board cable is available as spare part number N43722-001.	
(15)	Audio board	N43738-001
	NOTE: The audio board cable is available as spare part number N43724-001.	
(16)	IR sensor board	N43739-001
	NOTE: The IR sensor board cable is available as spare part number N43718-001.	
(17)	RJ-45 (network) jack door	
	Shadow black	N43734-001
	Ceramic white	N43735-001
(18)	Fan kit, 80 W (models with RTX 4060/4070 graphics) (includes both processor and graphics fan)	N43727-001
(19)	Fan kit, 60 W (models with RTX 4050 graphics) (includes both processor and graphics fan)	N43728-001

Display assembly subcomponents

To identify the display assembly subcomponents, use this illustration and table.

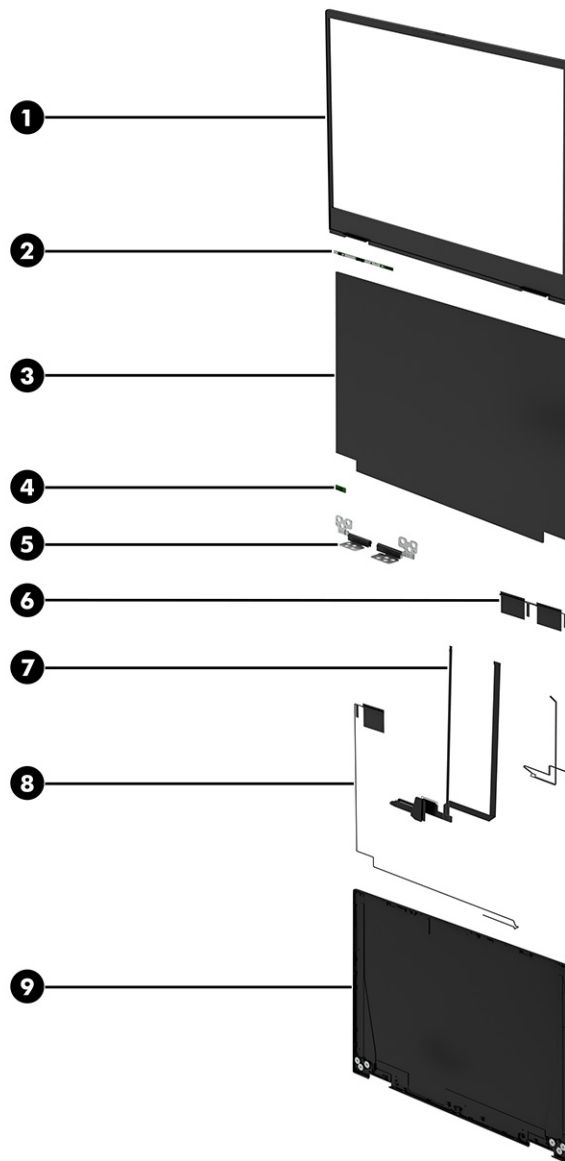


Table 3-2 Display component descriptions and part numbers

Item	Component	Spare part number
(1)	Bezel (includes display adhesive)	
	Shadow black	N43716-001
	Ceramic white	N43717-001
(2)	Camera module (includes display adhesive)	N43745-001
(3)	Display panel (includes display adhesive)	
	WOXGA, mini-LED, 1000 nits, 240 Hz	N43754-001

Table 3-2 Display component descriptions and part numbers (continued)

Item	Component	Spare part number
	WUXGA, 400 nits, 165 Hz	N43753-001
	WOXGA, 400 nits, 240 Hz	N43752-001
(4)	Ambient light sensor (includes display adhesive)	N43740-001
(5)	Display hinges (includes left and right hinges; includes display adhesive)	N43731-001
(6)	WLAN antenna kit (includes display adhesive)	N43708-001
(7)	Display cable (includes camera cable and ambient light sensor cable; includes display adhesive)	
	Mini-LED display	N43725-001
	Displays without mini-LED	N43726-001
(8)	ULL antenna (for use in models equipped with a HyperX headset)	N43709-001
(9)	Display back cover (includes antennas; includes display adhesive)	
	For use in shadow black models not equipped with a HyperX headset	N43710-001
	For use in ceramic white models not equipped with a HyperX headset	N43711-001
	For use in shadow black models equipped with a HyperX headset	N43712-001
	For use in ceramic white models equipped with a HyperX headset	N43713-001
*	Display hinge covers (left and right hinge covers and rubber inserts; includes display adhesive)	
	Ceramic white	N43733-001
	Shadow black	N43732-001
*	Display adhesive	N44979-001
*	ULL antenna protective tape	N56532-001
*not illustrated		

Miscellaneous parts

To identify the miscellaneous parts, use this table.

Table 3-3 Miscellaneous part descriptions and part numbers

Component	Spare part number
AC adapter (PFC)	
280 W	M95376-001
230 W	N22367-001
200 W	L00818-850
Cloud Stinger 2 headset wireless adapter	N21828-001
Cloud Stinger 2 headset kit	N21826-001
Cloud Stinger 2 earpad kit	M98752-001
Cloud II Core Gaming wireless adapter	N38855-001

Table 3-3 Miscellaneous part descriptions and part numbers (continued)

Component	Spare part number
Cloud II Core Gaming Headset	N38854-001
Cloud II Core earpad kit	N07244-001
Haste wireless headset, black	N01579-001
Haste wireless headset, white	N01580-001
Microphone, black	N07242-001
USB-A-to-USB-C charging cable, 0.5 m (1.6 ft)	N09129-001
USB External DVD+RW drive	747080-001
HDMI-to-VGA adapter	701943-001
USB-C-to-HDMI 2.0 adapter	935325-001
USB-C-to-USB-A hub	916838-001
HP Elite USB-C Multi Port Hub	L39572-001
USB-C-to-USB 3.0 adapter	814618-001
USB-C-to-VGA adapter	831751-001
Adhesive kit (includes display rear cover adhesive and bezel adhesive)	N44979-001
WLAN protective tape	N10779-001
ULL antenna Mylar	N56532-001
Screw Kit	N46519-001
Power cord (C13, 1.0 m (3.3 ft), premium, straight)	
For use in Australia	L22339-001
For use in Brazil	L57198-001
For use in Denmark	L22334-001
For use in Europe	L22333-001
For use in India	L22343-001
For use in Israel	L22335-001
For use in Italy and Chile	L22103-001
For use in Japan	L22344-001
For use in North America	L22331-001
For use in the People's Republic of China	L22341-001
For use in South Africa	L22337-001
For use in South Korea	L22340-001
For use in Switzerland	L22336-001
For use in Taiwan	L22342-001
For use in Thailand	L22338-001
For use in Thailand (bundle)	M85413-001

Table 3-3 Miscellaneous part descriptions and part numbers (continued)

Component	Spare part number
For use in the United Kingdom	L22332-001

4 Removal and replacement procedures preliminary requirements

Use this information to properly prepare to disassemble and reassemble the computer.

Tools required

You need the following tools to complete the removal and replacement procedures:

- Tweezers
- Nonconductive, nonmarking pry tool
- Magnetic Phillips P1 screwdriver

Service considerations

The following sections include some of the considerations that you must keep in mind during disassembly and assembly procedures.



NOTE: As you remove each subassembly from the computer, place the subassembly (and all accompanying screws) away from the work area to prevent damage.

Plastic parts

Using excessive force during disassembly and reassembly can damage plastic parts.

Cables and connectors

Handle cables with extreme care to avoid damage.



IMPORTANT: When servicing the computer, be sure that cables are placed in their proper locations during the reassembly process. Improper cable placement can damage the computer.

Apply only the tension required to unseat or seat the cables during removal and insertion. Handle cables by the connector whenever possible. In all cases, avoid bending, twisting, or tearing cables. Be sure that cables are routed so that they cannot be caught or snagged as you remove or replace parts. Handle flex cables with extreme care; these cables tear easily.

Drive handling

Note the following guidelines when handling drives.



IMPORTANT: Drives are fragile components. Handle them with care. To prevent damage to the computer, damage to a drive, or loss of information, observe these precautions:

- Before removing or inserting a hard drive, shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.

- Before handling a drive, be sure that you are discharged of static electricity. While handling a drive, avoid touching the connector.
 - Before removing an optical drive, be sure that a disc is not in the drive, and be sure that the optical drive tray is closed.
 - Handle drives on surfaces covered with at least 2.54 cm (1 inch) of shock-proof foam.
 - Avoid dropping drives from any height onto any surface.
 - After removing a hard drive or an optical drive, place it in a static-proof bag.
 - Avoid exposing an internal hard drive to products that have magnetic fields, such as monitors or speakers.
 - Avoid exposing a drive to temperature extremes or liquids.
 - If a drive must be mailed, place the drive in a bubble pack mailer or other suitable form of protective packaging, and label the package "FRAGILE."
-

Electrostatic discharge information

A sudden discharge of static electricity from your finger or other conductor can destroy static-sensitive devices or microcircuitry. Often the spark is neither felt nor heard, but damage occurs. An electronic device exposed to electrostatic discharge (ESD) might not appear to be affected at all and can work perfectly throughout a normal cycle. The device might function normally for a while, but it has been degraded in the internal layers, reducing its life expectancy.

Networks built into many integrated circuits provide some protection, but in many cases, the discharge contains enough power to alter device parameters or melt silicon junctions.



IMPORTANT: To prevent damage to the device when you remove or install internal components, observe these precautions:

- Keep components in their electrostatic-safe containers until you are ready to install them.
 - Before touching an electronic component, discharge static electricity by using the guidelines described in [Personal grounding methods and equipment on page 25](#).
 - Avoid touching pins, leads, and circuitry. Handle electronic components as little as possible.
 - If you remove a component, place it in an electrostatic-safe container.
-

Generating static electricity

Follow these static electricity guidelines:

- Different activities generate different amounts of static electricity.
- Static electricity increases as humidity decreases.

Table 4-1 Static electricity occurrence based on activity and humidity

Event	Relative humidity		
	55%	40%	10%
Walking across carpet	7,500 V	15,000 V	35,000 V
Walking across vinyl floor	3,000 V	5,000 V	12,000 V
Motions of bench worker	400 V	800 V	6,000 V
Removing dual in-line packages (DIPs) from plastic tube	400 V	700 V	2,000 V
Removing DIPs from vinyl tray	2,000 V	4,000 V	11,500 V
Removing DIPs from polystyrene foam	3,500 V	5,000 V	14,500 V
Removing bubble pack from PCB (printed circuit board)	7,000 V	20,000 V	26,500 V
Packing PCBs in foam-lined box	5,000 V	11,000 V	21,000 V
Multiple electric components can be packaged together in plastic tubes, trays, or polystyrene foam.			



NOTE: As little as 700 V of static electricity can degrade a product.

Preventing electrostatic damage to equipment

Many electronic components are sensitive to ESD. Circuitry design and structure determine the degree of sensitivity.

The following packaging and grounding precautions are necessary to prevent static electricity damage to electronic components:

- To avoid hand contact, transport products in static-safe containers such as tubes, bags, or boxes.
- Protect all electrostatic parts and assemblies with conductive or approved containers or packaging.
- Keep electrostatic-sensitive parts in their containers until they arrive at static-free stations.
- Place items on a grounded surface before removing them from their container.
- Always be properly grounded when touching a sensitive component or assembly.
- Avoid contact with pins, leads, or circuitry.
- Place reusable electrostatic-sensitive parts from assemblies in protective packaging or conductive foam.

Personal grounding methods and equipment

Using certain equipment can prevent static electricity damage to electronic components.

- **Wrist straps** are flexible straps with a maximum of $1\text{ M}\Omega \pm 10\%$ resistance in the ground cords. To provide proper ground, a strap must be worn snug against bare skin. The ground cord must be connected and fit snugly into the banana plug connector on the grounding mat or workstation.
- You can use **heel straps, toe straps, and boot straps** at standing workstations. These straps are compatible with most types of shoes or boots. On conductive floors or dissipative floor mats, use them on both feet with a maximum of $1\text{ M}\Omega \pm 10\%$ resistance between the operator and ground.

Table 4-2 Static shielding protection levels

Static shielding protection levels	
Method	Voltage
Antistatic plastic	1,500
Carbon-loaded plastic	7,500
Metallized laminate	15,000

Grounding the work area

To prevent static damage at the work area, follow these precautions:

- Cover the work surface with approved static-dissipative material.
- Use a wrist strap connected to a properly grounded work surface and use properly grounded tools and equipment.
- Use static-dissipative mats, foot straps, or air ionizers to give added protection.
- Handle electrostatic sensitive components, parts, and assemblies by the case or PCB laminate. Handle them only at static-free work areas.
- Turn off power and input signals before inserting and removing connectors or test equipment.
- Use fixtures made of static-safe materials when fixtures must directly contact dissipative surfaces.
- Keep the work area free of nonconductive materials, such as ordinary plastic assembly aids and polystyrene foam.
- Use conductive field service tools, such as cutters, screwdrivers, and vacuums.
- Avoid contact with pins, leads, or circuitry.

Recommended materials and equipment

HP recommends certain materials and equipment to prevent static electricity:

- Antistatic tape
- Antistatic smocks, aprons, or sleeve protectors
- Conductive bins and other assembly or soldering aids
- Conductive foam
- Conductive tabletop workstations with ground cord of $1\text{ M}\Omega \pm 10\%$ resistance
- Static-dissipative table or floor mats with hard tie to ground
- Field service kits
- Static awareness labels
- Wrist straps and footwear straps providing $1\text{ M}\Omega \pm 10\%$ resistance
- Material handling packages

- Conductive plastic bags
- Conductive plastic tubes
- Conductive tote boxes
- Opaque shielding bags
- Transparent metallized shielding bags
- Transparent shielding tubes

Cleaning your computer

Cleaning your computer regularly removes dirt and debris so that your device continues to operate at its best. Use the following information to safely clean the external surfaces of your computer.

Enabling HP Easy Clean (select products only)

HP Easy Clean helps you to avoid accidental input while you clean the computer surfaces. This software disables devices such as the keyboard, touch screen, and touchpad for a preset amount of time so that you can clean all computer surfaces.


1. Start HP Easy Clean in one of the following ways:
 - Select the **Start** menu, and then select **HP Easy Clean**.
 - or -
 - Select the **HP Easy Clean** icon in the taskbar.
 - or -
 - Select **Start**, and then select the **HP Easy Clean** tile.
2. Now that your device is disabled for a short period, see [Removing dirt and debris from your computer on page 27](#) for the recommended steps to clean the high-touch, external surfaces on your computer. After you remove the dirt and debris, you can also clean the surfaces with a disinfectant. See [Cleaning your computer with a disinfectant on page 28](#) for guidelines to help prevent the spread of harmful bacteria and viruses.

Removing dirt and debris from your computer

Here are the recommended steps to clean dirt and debris from your computer.

For computers with wood veneer, see [Caring for wood veneer \(select products only\) on page 29](#).

1. Wear disposable gloves made of latex (or nitrile gloves, if you are latex-sensitive) when cleaning the surfaces.
2. Turn off your device and unplug the power cord and other connected external devices. Remove any installed batteries from items such as wireless keyboards.

 **CAUTION:** To prevent electric shock or damage to components, never clean a product while it is turned on or plugged in.

3. Moisten a microfiber cloth with water. The cloth should be moist, but not dripping wet.



IMPORTANT: To avoid damaging the surface, avoid abrasive cloths, towels, and paper towels.

4. Wipe the exterior of the product gently with the moistened cloth.



IMPORTANT: Keep liquids away from the product. Avoid getting moisture in any openings. If liquid makes its way inside your HP product, it can cause damage to the product. Do not spray liquids directly on the product. Do not use aerosol sprays, solvents, abrasives, or cleaners containing hydrogen peroxide or bleach that might damage the finish.

5. Start with the display (if applicable). Wipe carefully in one direction, and move from the top of the display to the bottom. Finish with any flexible cables, like power cord, keyboard cable, and USB cables.
6. Be sure that surfaces have completely air-dried before turning the device on after cleaning.
7. Discard the gloves after each cleaning. Clean your hands immediately after you remove the gloves.

See [Cleaning your computer with a disinfectant on page 28](#) for recommended steps to clean the high-touch, external surfaces on your computer to help prevent the spread of harmful bacteria and viruses.

Cleaning your computer with a disinfectant

The World Health Organization (WHO) recommends cleaning surfaces, followed by disinfection, as a best practice for preventing the spread of viral respiratory illnesses and harmful bacteria.

After cleaning the external surfaces of your computer using the steps in [Removing dirt and debris from your computer on page 27](#), [Caring for wood veneer \(select products only\) on page 29](#), or both, you might also choose to clean the surfaces with a disinfectant. A disinfectant that is within HP's cleaning guidelines is an alcohol solution consisting of 70% isopropyl alcohol and 30% water. This solution is also known as rubbing alcohol and is sold in most stores.

Follow these steps when disinfecting high-touch, external surfaces on your computer:

1. Wear disposable gloves made of latex (or nitrile gloves, if you are latex-sensitive) when cleaning the surfaces.
2. Turn off your device and unplug the power cord and other connected external devices. Remove any installed batteries from items such as wireless keyboards.



CAUTION: To prevent electric shock or damage to components, never clean a product while it is turned on or plugged in.

3. Moisten a microfiber cloth with a mixture of 70% isopropyl alcohol and 30% water. The cloth should be moist, but not dripping wet.



CAUTION: Do not use any of the following chemicals or any solutions that contain them, including spray-based surface cleaners: bleach, peroxides (including hydrogen peroxide), acetone, ammonia, ethyl alcohol, methylene chloride, or any petroleum-based materials, such as gasoline, paint thinner, benzene, or toluene.



IMPORTANT: To avoid damaging the surface, avoid abrasive cloths, towels, and paper towels.

4. Wipe the exterior of the product gently with the moistened cloth.



IMPORTANT: Keep liquids away from the product. Avoid getting moisture in any openings. If liquid makes its way inside your HP product, it can cause damage to the product. Do not spray liquids directly on the product. Do not use aerosol sprays, solvents, abrasives, or cleaners containing hydrogen peroxide or bleach that might damage the finish.

5. Start with the display (if applicable). Wipe carefully in one direction, and move from the top of the display to the bottom. Finish with any flexible cables, like power cord, keyboard cable, and USB cables.
6. Be sure that surfaces have completely air-dried before turning the device on after cleaning.
7. Discard the gloves after each cleaning. Clean your hands immediately after you remove the gloves.

Caring for wood veneer (select products only)

Your product might feature high-quality wood veneer. As with all natural wood products, proper care is important for best results over the life of the product. Because of the nature of natural wood, you might see unique variations in the grain pattern or subtle variations in color, which are normal.

- Clean the wood with a dry, static-free microfiber cloth or chamois.
- Avoid cleaning products containing substances such as ammonia, methylene chloride, acetone, turpentine, or other petroleum-based solvents.
- Do not expose the wood to sun or moisture for long periods of time.
- If the wood becomes wet, dry it by dabbing with an absorbent, lint-free cloth.
- Avoid contact with any substance that might dye or discolor the wood.
- Avoid contact with sharp objects or rough surfaces that might scratch the wood.

See [Removing dirt and debris from your computer on page 27](#) for the recommended steps to clean the high-touch, external surfaces on your computer. After you remove the dirt and debris, you can also clean the surfaces with a disinfectant. See [Cleaning your computer with a disinfectant on page 28](#) for sanitizing guidelines to help prevent the spread of harmful bacteria and viruses.

Packaging and transporting guidelines

Follow these grounding guidelines when packaging and transporting equipment:

- To avoid hand contact, transport products in static-safe tubes, bags, or boxes.
- Protect ESD-sensitive parts and assemblies with conductive or approved containers or packaging.
- Keep ESD-sensitive parts in their containers until the parts arrive at static-free workstations.
- Place items on a grounded surface before removing items from their containers.
- Always be properly grounded when touching a component or assembly.
- Store reusable ESD-sensitive parts from assemblies in protective packaging or nonconductive foam.

- Use transporters and conveyors made of antistatic belts and roller bushings. Be sure that mechanized equipment used for moving materials is wired to ground and that proper materials are selected to avoid static charging. When grounding is not possible, use an ionizer to dissipate electric charges.

Accessing support information

To find the HP support that you need, use this information.

Table 4-3 Support information locations


Service consideration	Path to access information
Records of reported failure incidents stored on the computer	<p>Windows®:</p> <p>Preoperating system failures are logged in the BIOS Event Log. To view the BIOS Event Log:</p> <ol style="list-style-type: none"> 1. Press the power button. 2. Immediately and repeatedly press esc when the power button light turns white. <p>NOTE: If you do not press esc at the appropriate time, you must restart the computer and again repeatedly press esc when the power button light turns white to access the utility.</p> <ol style="list-style-type: none"> 3. Press f10 to enter the BIOS setup. 4. (On commercial products) Under the Main tab, select BIOS event log, and then select View BIOS Event Log. <p>- or -</p> <p>(On consumer products) Under the Main tab, select System Log.</p> <p>Post-operating system failures are logged in the Event Viewer.</p> <ol style="list-style-type: none"> 1. Turn on the computer and allow the operating system to open. 2. Select the search icon  in the taskbar. 3. Type <code>Event Viewer</code>, and then press enter. 4. Select the log from the left panel. Details display in the right panel. <p>Chrome™:</p> <ol style="list-style-type: none"> 1. Go to support.google.com/chrome. 2. Search <code>collect Chrome device logs</code>.
Technical bulletins	<p>To locate technical bulletins:</p> <ol style="list-style-type: none"> 1. Go to www.hp.com. 2. Place the cursor over Problem solving to display more options. 3. Select Support & Troubleshooting. 4. Type the serial number, product number, or product name to go to the product support page. 5. Select Advisories to view technical bulletins.

Table 4-3 Support information locations (continued)

Service consideration	Path to access information
Repair professionals	To locate repair professionals: <ol style="list-style-type: none">1. Go to www.hp.com.2. Place the cursor over Support resources to display more options.3. Select Authorized service providers.
Component and diagnosis information, failure detection, and required action	To locate diagnosis information and actions: <ol style="list-style-type: none">1. Go to http://www.hp.com/go/techcenter/pcdiags.2. Select Get Support.3. Near the bottom of the window, select Notebook PCs, and then select your location.

5 Removal and replacement procedures for Customer Self-Repair parts

This chapter provides removal and replacement procedures for Customer Self-Repair parts.



NOTE: The Customer Self-Repair program is not available in all locations. Installing a part that is not supported by the Customer Self-Repair program can void your warranty. Check your warranty to determine whether Customer Self-Repair is supported in your location.

Component replacement procedures

To remove and replace computer components, use these procedures.



NOTE: Details about your computer, including model, serial number, product key, and length of warranty, are on the service tag at the bottom of your computer.



NOTE: HP continually improves and changes product parts. For complete and current information about supported parts for your computer, go to <http://partsurfer.hp.com>, select your country or region, and then follow the on-screen instructions.

Make special note of each screw size and location during removal and replacement.

Preparation for disassembly

To prepare to disassemble the computer, use these steps.

See [Removal and replacement procedures preliminary requirements on page 23](#) for initial safety procedures.

1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.

Solid-state drive

To remove the solid-state drive, use this procedure and illustration.

Table 5-1 Solid-state drive descriptions and part numbers


Description	Spare part number
2 TB	M52027-001
1 TB	M16560-001
512 GB	M17436-001
Solid-state drive thermal pad	N15681-001

Before removing the solid-state drive, follow these steps:


1. Prepare the computer for disassembly (see [Preparation for disassembly on page 37](#)).
2. Remove the bottom cover (see [Bottom cover on page 37](#)).

Remove the solid-state drive:

1. Remove the two Phillips M2.0 × 2.5 screws (1), and then pull the drive assembly out of the slot (2).

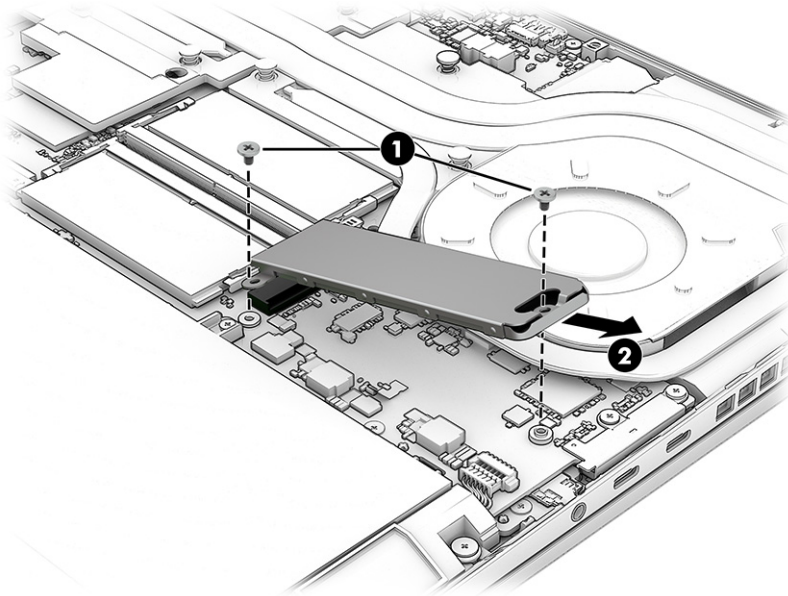


2. Pull the bracket off the top of the drive (1).
3. Lift the top of the drive up slightly, and then pull the drive out of the bottom bracket (2).

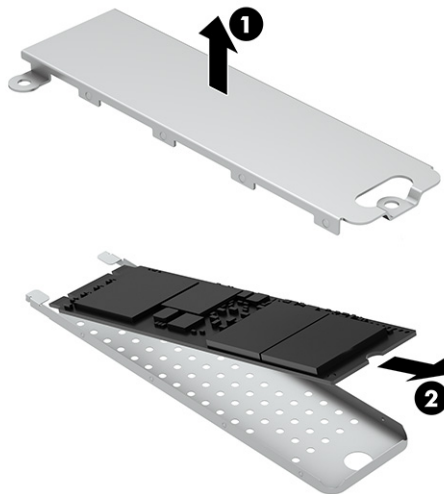



To install a solid-state drive:

1. When installing a drive, be sure a thermal pad is installed on the bottom side of the top bracket.

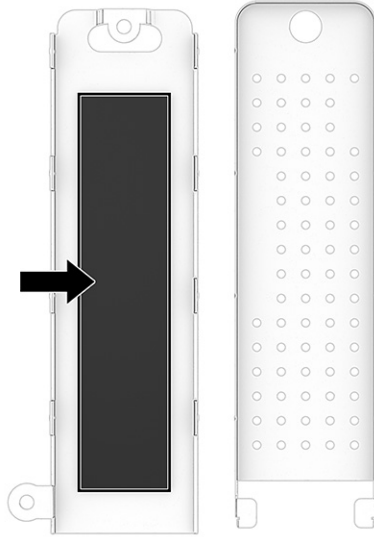

2. Place the bottom bracket onto the drive socket, and then insert the drive into the bracket (1).
3. Insert the drive into the socket (2).
4. Install the top bracket onto the bottom bracket (3), and then install the two screws (4).

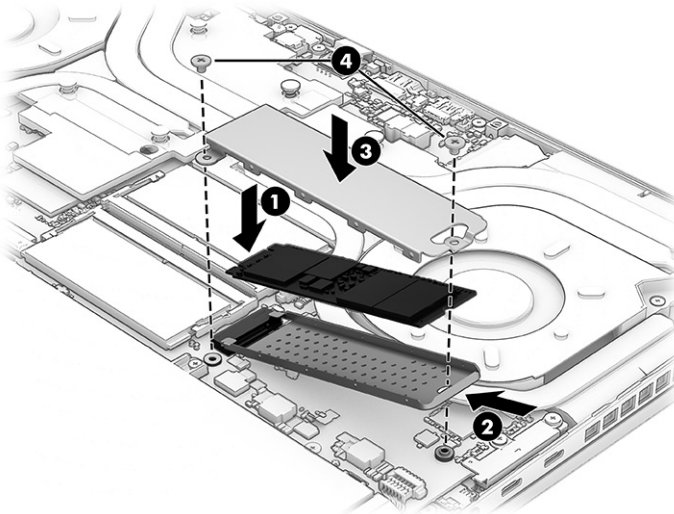

 **NOTE:** Solid-state drives are designed with a notch to prevent incorrect insertion.

Memory modules

To remove the memory modules, use this procedure and illustration.

Table 5-2 Memory module descriptions and part numbers

Description	Spare part number
Memory module (DDR5-4800)	
16 GB	M97596-001

Table 5-2 Memory module descriptions and part numbers (continued)


Description	Spare part number
8 GB	M97595-001
Memory module (DDR5-5600)	
16 GB	N38627-001
8 GB	N37792-001


Before removing the memory, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 37](#)).
2. Remove the bottom cover (see [Bottom cover on page 37](#)).

If you are replacing a memory module, remove the existing memory module:

1. Lift the protective Mylar that covers the memory modules.
2. Spread the two retention clips outward (1) until the memory module tilts up at a 45° angle, and then remove the module (2). Use the same procedure to remove all memory modules.

 **IMPORTANT:** To prevent damage to the memory module, hold the memory module by the edges only. Do not touch the components on the memory module.

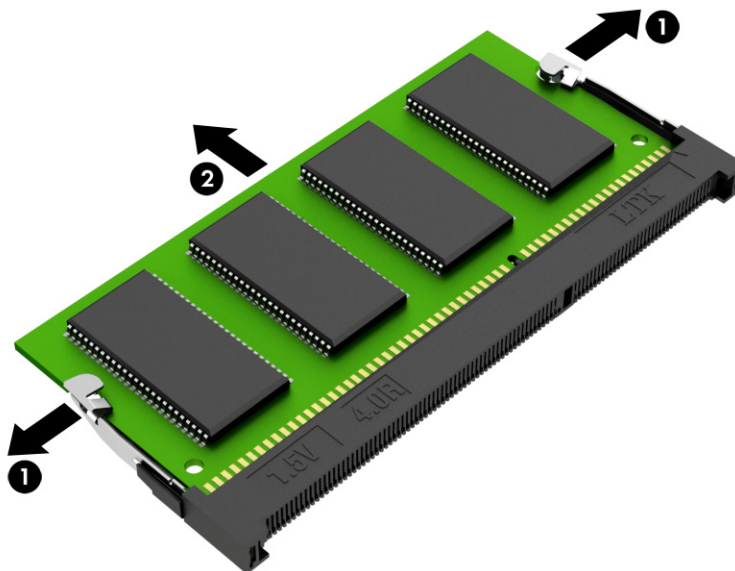


To protect a memory module after removal, place it in an electrostatic-safe container.

To install a memory module:


1. Align the notched edge of the module with the tab in the slot (1), and then press the module into the slot at an angle until it is seated (2).


2. Press down on the module until the side retention clips snap into place (3).

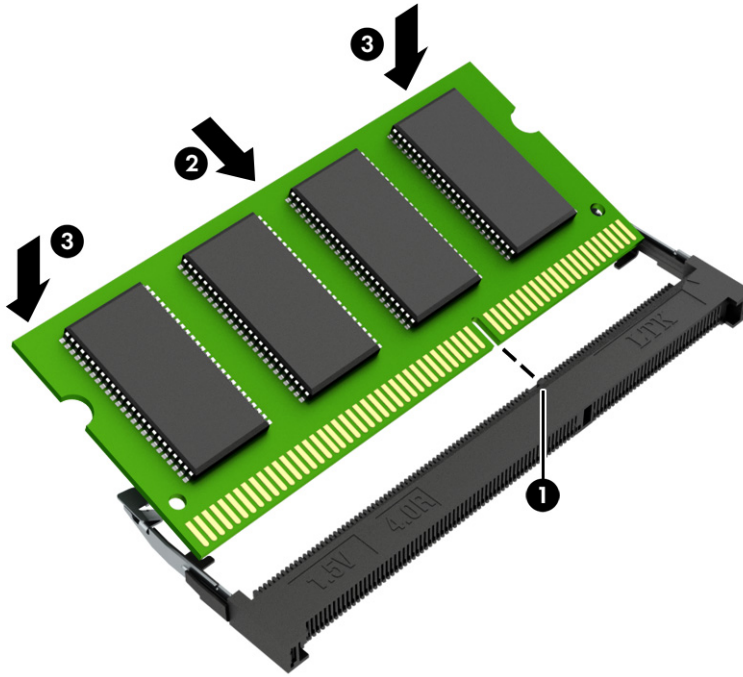

6 Removal and replacement procedures for authorized service provider parts


This chapter provides removal and replacement procedures for authorized service provider parts.

 **IMPORTANT:** Only an authorized service provider should access the components described in this chapter. Accessing these parts can damage the computer or void the warranty.

 **NOTE:** Details about your computer, including model, serial number, product key, and length of warranty, are on the service tag at the bottom of your computer.

Component replacement procedures

To remove and replace computer components, use the procedures described in this section.

 **NOTE:** HP continually improves and changes product parts. For complete and current information about supported parts for your computer, go to <http://partsurfer.hp.com>, select your country or region, and then follow the on-screen instructions.

Make special note of each screw size and location during removal and replacement.

Preparation for disassembly

To remove and replace computer components, use these procedures:

For initial safety procedures, see [Removal and replacement procedures preliminary requirements on page 23](#).

1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.

Bottom cover

To remove the bottom cover, use this procedure and illustration.


Table 6-1 Bottom cover description and part number

Description	Spare part number
Ceramic white, 60 W (models with RTX 4050 graphics)	N43715-001
Shadow black, 60 W (models with RTX 4050 graphics)	N43714-001
Ceramic white, 80 W (models with RTX 4060/4070 graphics)	N56043-001
Shadow black, 80 W (models with RTX 4060/4070 graphics)	N56042-001


Before removing the bottom cover, prepare the computer for disassembly (see [Preparation for disassembly on page 37](#)).

Remove the bottom cover:

1. Remove the six Phillips M2.0 × 4.0 screws that secure the bottom cover to the computer.

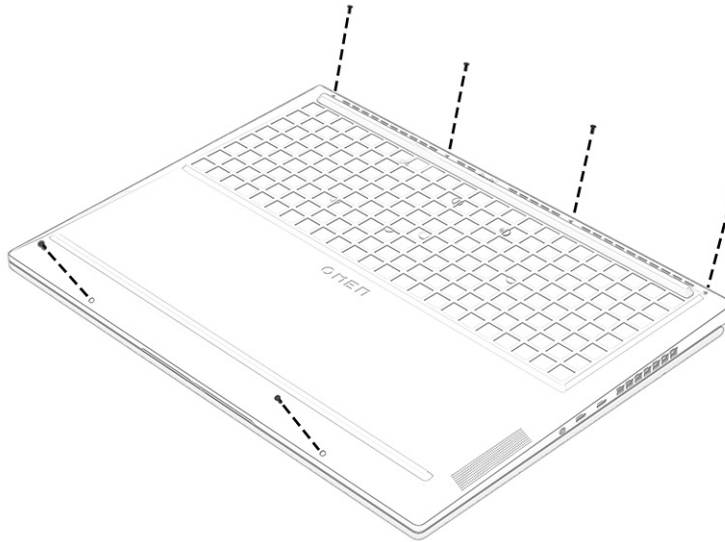

2. Insert a thin, plastic tool in the seam between the top edge of the bottom cover and computer to release the cover (1).
3. Remove the bottom cover (2).

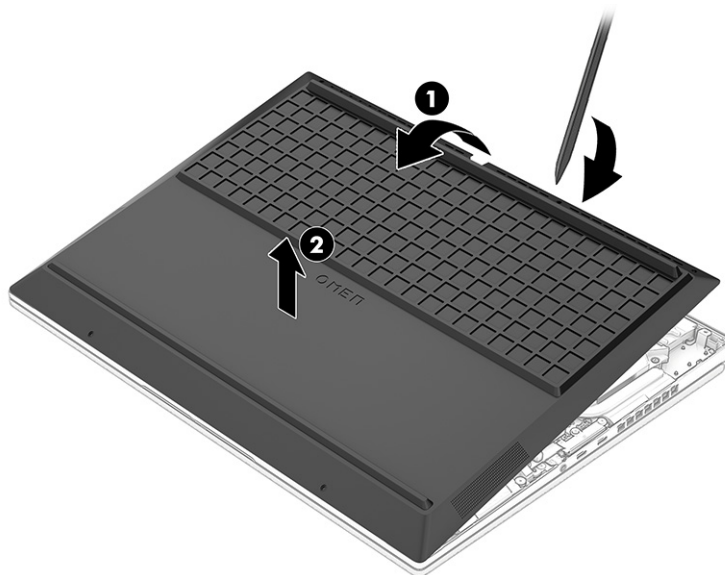


To replace the bottom cover, reverse the removal procedures.

Battery

To remove the battery, use this procedure and illustration.

Table 6-2 Battery description and part number


Description	Spare part number
6 cell, 97 Whr	N28832-005
4 cell, 70 Whr	M39179-005


 **WARNING!** To avoid personal injury and damage to the product:

- Do *not* puncture, twist, or crack the battery.
- Do *not* cause an external puncture or rupture to the battery. Punctures and ruptures can cause a short inside the battery, which can result in battery thermal runaway.
- Do *not* handle or touch the battery enclosure with sharp objects such as tweezers or pliers, which might puncture the battery.
- Do *not* compress or squeeze the battery case with tools or heavy objects stacked on top of the case. These actions can apply undue force on the battery.
- Do *not* touch the connectors with any metallic surface or object, such as metal tools, screws, or coins, which can cause shorting across the connectors.

Before removing the battery, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 37](#)).
2. Remove the bottom cover (see [Bottom cover on page 37](#)).


 **WARNING!** To reduce potential safety issues, use only the user-replaceable battery provided with the computer, a replacement battery provided by HP, or a compatible battery purchased from HP.

 **IMPORTANT:** Removing a battery that is the sole power source for the computer can cause loss of information. To prevent loss of information, save your work or shut down the computer through Windows before you remove the battery.

Remove the battery:

1. Disconnect the battery cable **(1)** from the system board.
2. Remove the six Phillips M2.0 × 4.0 screws **(2)** that secure the battery to the computer.
3. Remove the battery **(3)**.

 **NOTE:** Battery shape can vary.

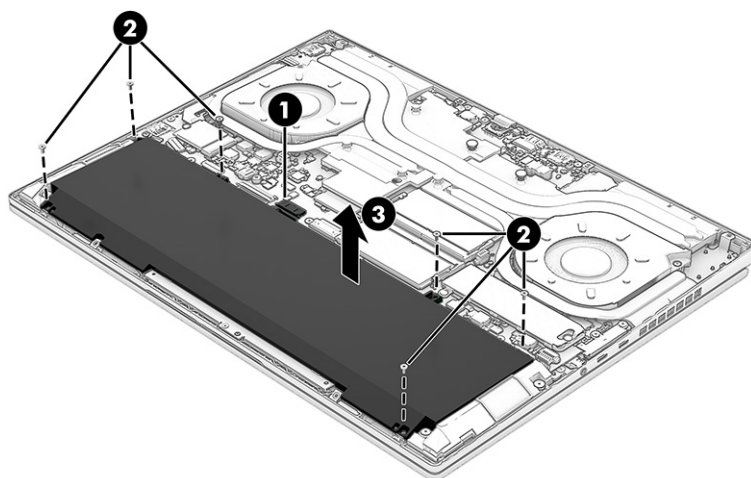

To install the battery, reverse the removal procedures.

WLAN module

To remove the WLAN module, use this procedure and illustration.

Table 6-3 WLAN module descriptions and part numbers

Description	Spare part number
Intel AX211 Wi-Fi 6e Bluetooth 5.2 WLAN	M53366-005
Realtek 8852CE Wi-Fi 6E Bluetooth 5.3 WLAN	N19618-005
WLAN module protective tape	N10779-001

IMPORTANT: To prevent an unresponsive system, replace the wireless module only with a wireless module authorized for use in the computer by the governmental agency that regulates wireless devices in your country or region. If you replace the module and then receive a warning message, remove the module to restore device functionality, and then contact technical support.


Before removing the WLAN module, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 37](#)).
2. Remove the bottom cover (see [Bottom cover on page 37](#)).


Remove the WLAN module:

1. Remove the Mylar protector that covers the antennas (1).
2. Remove the Phillips M2.0 × 2.5 screw (2).
3. Carefully disconnect the antenna cables from the module (3).

4. Pull the module out of the socket to remove it (4).

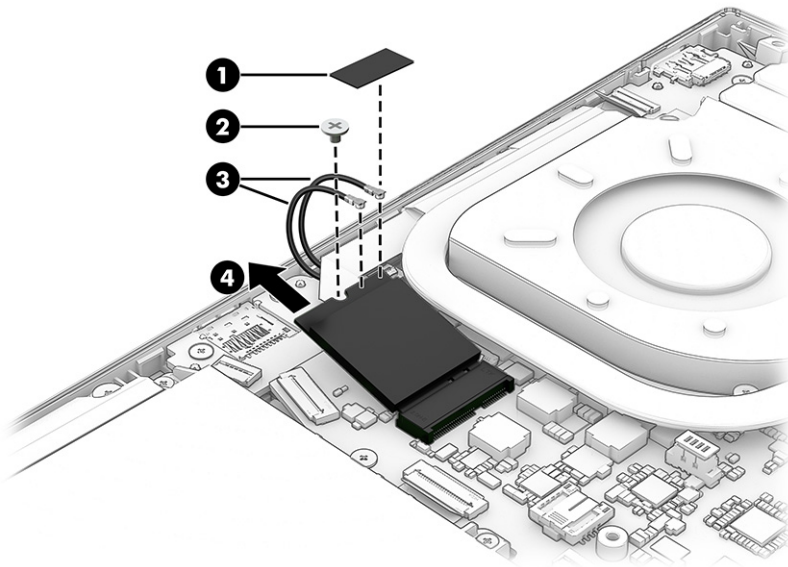

5. If the WLAN antenna is not connected to the terminal on the WLAN module, install a protective sleeve on the antenna connector, as shown in the following illustration.

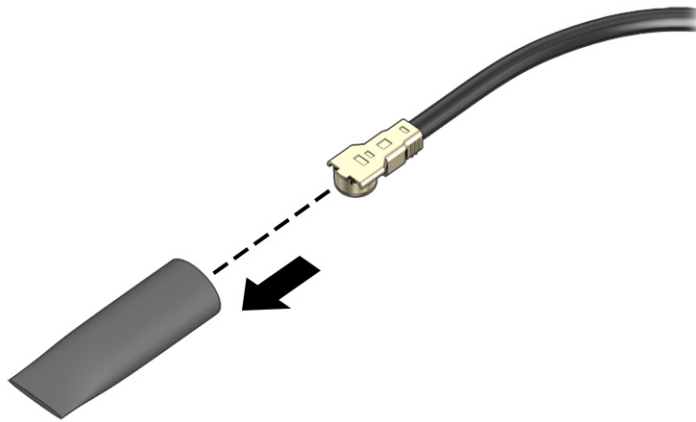

To install the WLAN module, reverse this procedure.

Speakers


To remove the speakers, use this procedure and illustration.

Table 6-4 Speaker description and part number

Description	Spare part number
Speaker Kit	N43742-001


Before removing the speakers, follow these steps:


1. Prepare the computer for disassembly (see [Preparation for disassembly on page 37](#)).
2. Remove the bottom cover (see [Bottom cover on page 37](#)).
3. Depending on model, either remove the battery or disconnect the battery cable from the system board (see [Battery on page 39](#)).

 **NOTE:** To remove the speakers from models with a 97 Whr battery, you have to remove the battery. On models with a 70 Whr battery, you only have to disconnect the battery to remove the speakers.

Remove the speakers:

1. Disconnect the speaker cables from the system board (1).
2. Remove the speaker cable from the clips along the bottom of the computer (2).
3. Remove the two broadhead Phillips M1.6 × 3.0 screws (3) that secure each speaker to the computer.
4. Remove the speakers from the computer (4).

 **NOTE:** When removing the speakers, make note of the location of the rubber isolators (5). The absence of or damage to these isolators can result in degraded speaker performance.

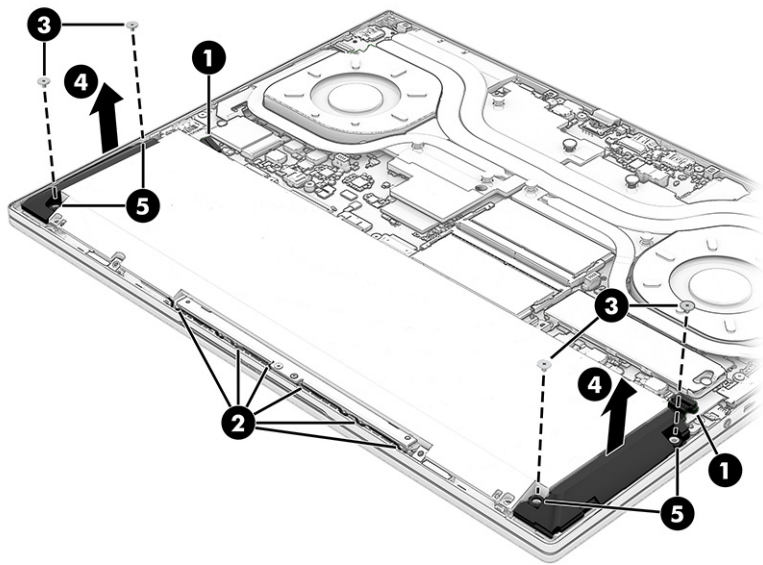

To install the speakers, reverse this procedure.

Per key lighting board

To remove the lighting board, use this procedure and illustration.

Table 6-5 Lighting board description and part number

Description	Spare part number
Lighting board	N43741-001


Table 6-5 Lighting board description and part number (continued)

Description	Spare part number
Lighting board LED per key cable	N43721-001
Lighting board keyboard cable	N43720-001


Before removing the lighting board, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 37](#)).
2. Remove the bottom cover (see [Bottom cover on page 37](#)).
3. Remove the battery (see [Battery on page 39](#)).

Remove the lighting board:

 **NOTE:** All flat cable connectors are covered with a piece of Mylar to prevent accidental disconnection. Be sure to replace this Mylar during reassembly.

1. Disconnect the four cables from the ZIF connectors on the board (1).
2. Remove the two broad head Phillips M2.0 × 2.0 screws (2) that secure the board to the computer.
3. Remove the board (3).

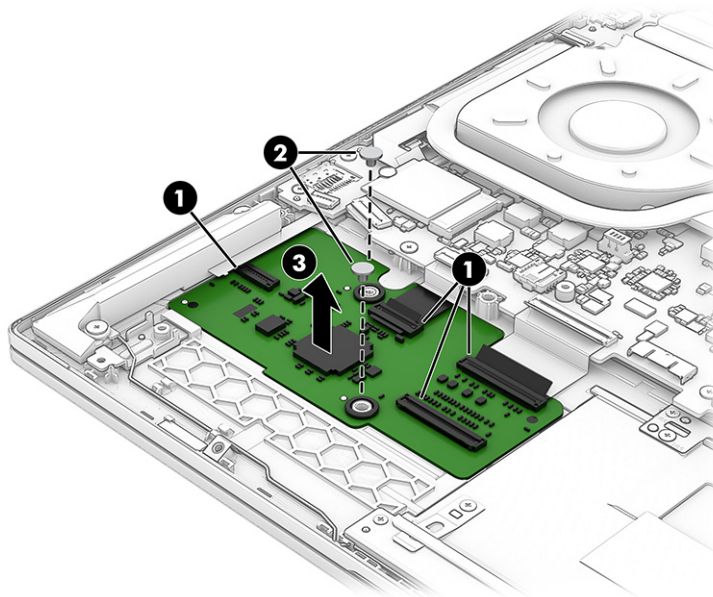

To install the per key lighting board, reverse this procedure.

Touchpad

To remove the touchpad, use this procedure and illustration.

Table 6-6 Touchpad description and part number

Description	Spare part number
Touchpad for use in ceramic white models	N43744-001
Touchpad for use in shadow black models	N43743-001
Touchpad cable	N43719-001

Before removing the touchpad, follow these steps:


1. Prepare the computer for disassembly (see [Preparation for disassembly on page 37](#)).
2. Remove the bottom cover (see [Bottom cover on page 37](#)).
3. Remove the battery (see [Battery on page 39](#)).

Remove the touchpad:




NOTE: All flat cable connectors are covered with a piece of Mylar to prevent accidental disconnection. Be sure to replace this Mylar during reassembly.


1. The bottom of the system board covers the top of the touchpad. You can lift the bottom of the system board up enough to access the touchpad screws without completely removing the system board:
 - a. Remove seven Phillips M2.0 × 3.5 screws **(1)** from the system board.
 - b. Remove the four Phillips M2.0 × 5.0 screws **(2)** from the brackets on the system board.
 - c. Disconnect the five cables **(3)** from along the bottom of the system board.
 - d. Lift the bottom of the system board up enough to access the touchpad screws **(4)**.

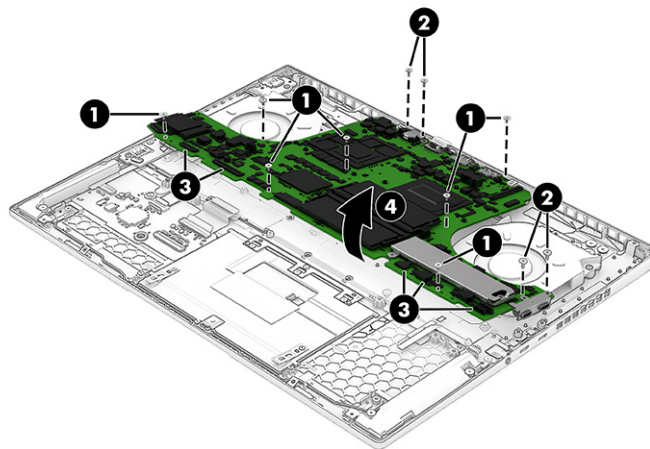

2. Remove the four Phillips M1.6 × 2.0 screws (1) that secure the touchpad bracket to the computer, and then remove the bracket (2).

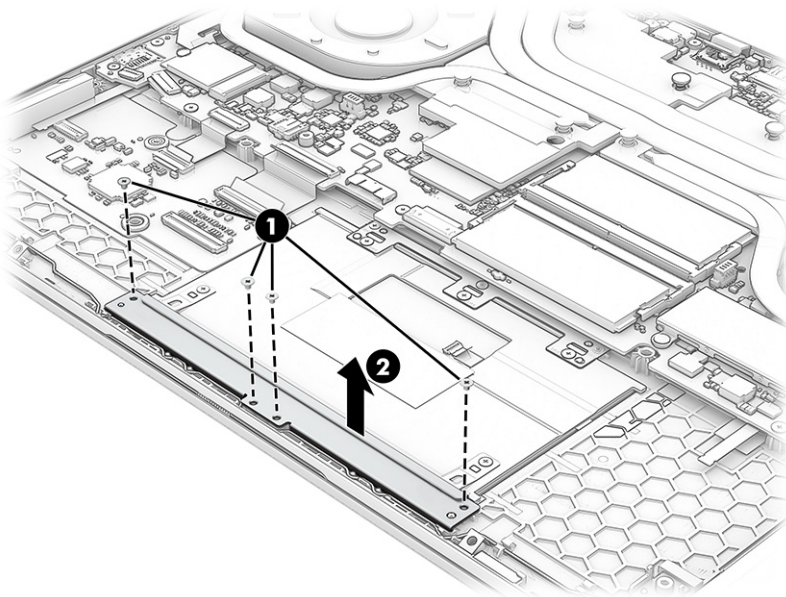

3. Peel the large Mylar protector off the top of the touchpad (1).
4. Lift the cover off the top of the touchpad to allow access to the screws (2).
5. Disconnect the touchpad cable (3) from the touchpad ZIF connector. The cable is secured with double-sided tape.
6. Remove the three Phillips M1.6 × 2.0 screws (4) that secure the touchpad to the computer.
7. Remove the touchpad from the computer (5).

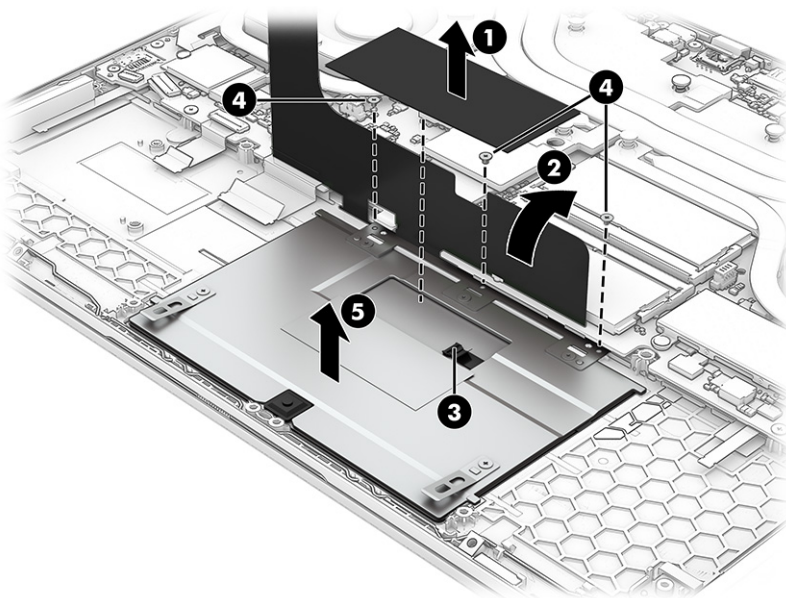

To install the touchpad, reverse this procedure.

USB board

To remove the USB board, use this procedure and illustration.

Table 6-7 USB board description and part number


Description	Spare part number
USB board	N43736-001
USB board cable	N43722-001

Before removing the USB board, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 37](#)).
2. Remove the bottom cover (see [Bottom cover on page 37](#)).


Remove the USB board:

1. Disconnect the cable from the ZIF connector on the USB board (1).
2. Remove the Phillips M2.0 × 3.5 screw (2) that secures the board to the computer.
3. Remove the tape from the right side of the board (3).
4. Remove the board (4).

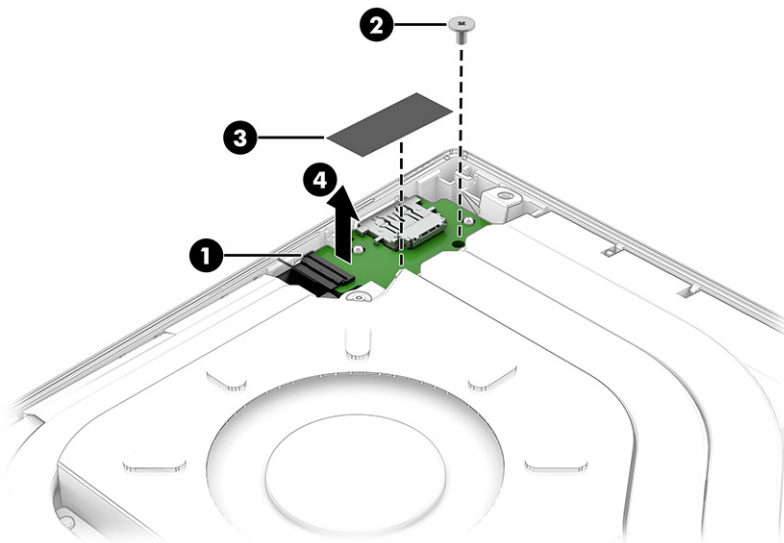

To install the USB board, reverse this procedure.

When installing a USB board, insert it at an angle and so that the end of the board is under the hook that holds it in place, and then press the board down into place.

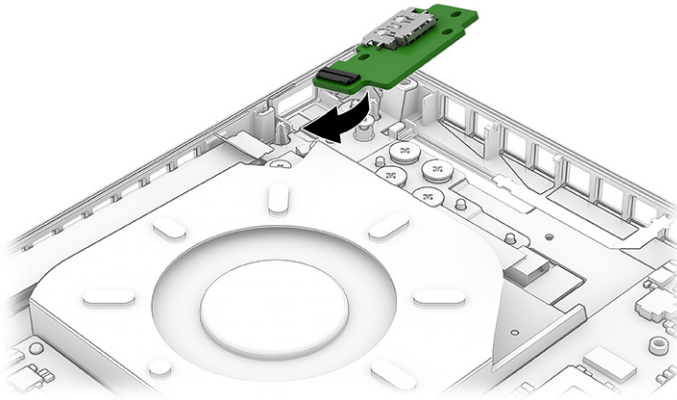

Heat sink assembly

To remove the heat sink assembly, use this procedure and illustration.

Table 6-8 Heat sink description and part number

Description	Spare part number
Heat sink, 80 W (RTX 4060/RTX 4070)	N43729-001
Heat sink, 60 W (RTX 4050)	N43730-001



NOTE: When removing the system board, you can leave the heat sink installed.


Before removing the heat sink assembly, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 37](#)).
2. Remove the bottom cover (see [Bottom cover on page 37](#)).
3. Disconnect the battery cable from the system board (see [Battery on page 39](#)).

Remove the heat sink assembly:


1. In the order indicated on the heat sink, remove the seven Phillips screws (1).

2. Remove the heat sink (2).

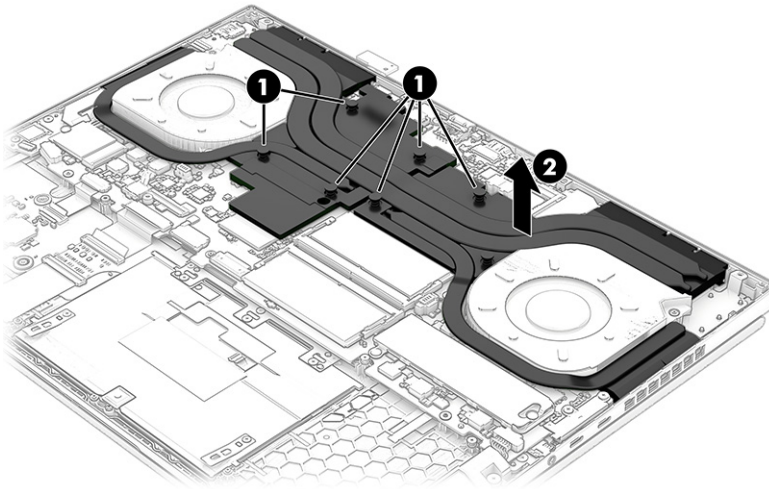

3. Thoroughly clean the thermal paste from the surfaces of the heat sink and the system board components each time the heat sink is removed. Replacement thermal material is included with the heat sink and system board spare part kits. The following illustration shows the replacement thermal material locations.

Be sure that gray thermal paste (1), white thermal paste (2), and thermal pads (3) and (4) (select products only) are installed on the heat sink on shown in the following illustration.

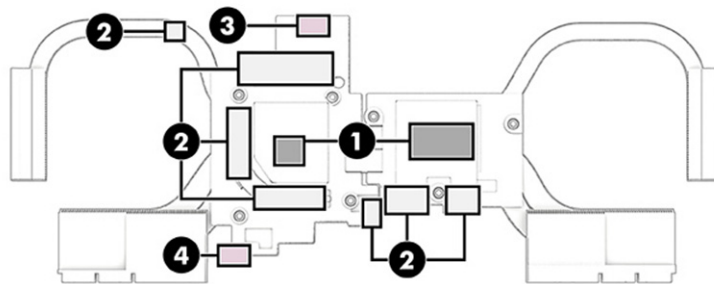

To install the heat sink, reverse this procedure.

System board with heat sink

To remove the system board with heat sink, use these procedures and illustrations.

Table 6-9 System board descriptions and part numbers

Description	Spare part number
<p>NOTE: All system board spare part kits include replacement thermal material.</p> <p>All system boards use the following part numbers:</p> <p>xxxxxx-001: Non-Windows operating systems</p> <p>xxxxxx-601: Windows operating system</p>	
Intel Core i9-13900HX processor and RTX 4070 graphics	N43751-xx1
Intel Core i9-13900HX processor and RTX 4070 graphics, G-Sync	N43750-xx1
Intel Core i9-13900HX processor and RTX 4060 graphics, G-Sync	N43749-xx1
Intel Core i7-13700HX processor and RTX 4070 graphics, G-Sync	N43748-xx1
Intel Core i7-13700HX processor and RTX 4060 graphics, G-Sync	N43747-xx1
Intel Core i7-13700HX processor and RTX 4050 graphics, G-Sync	N43746-xx1
RJ-45 (network) jack door, shadow black	N43734-001
RJ-45 (network) jack door, ceramic white	N43735-001

Before removing the system board, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 37](#)).
2. Remove the bottom cover (see [Bottom cover on page 37](#)).
3. Remove the battery (see [Battery on page 39](#)).

When you replace the system board, be sure to remove the following components (as applicable) from the defective system board and install them on the replacement system board:

- Solid-state drive (see [Solid-state drive on page 32](#)).
- Memory modules (see [Memory modules on page 34](#)).
- WLAN module (see [WLAN module on page 40](#)).


Remove the system board:




NOTE: All flat cable connectors are covered with a piece of Mylar to prevent accidental disconnection. Be sure to replace this Mylar during reassembly.

1. Disconnect the following cables from the system board:
 - Mylar and antenna cable from the soldered headset module **(1)**
 - Display cable **(2)** (ZIF)
 - Left fan cable **(3)**
 - Speaker cable **(4)**
 - Audio board cable (ZIF) **(5)**


- Touchpad cable (ZIF) **(6)**
- Keyboard cable (ZIF) **(7)**
- Per-key lighting keyboard cable (ZIF) **(8)** (select products only)
- Four-zone lighting keyboard cable (ZIF) **(9)** (select products only)
- Wireless antenna cables from the WLAN module **(10)**
- USB board cable (ZIF) **(11)**
- Right fan cable **(12)**
- IR sensor board cable **(13)** (ZIF)

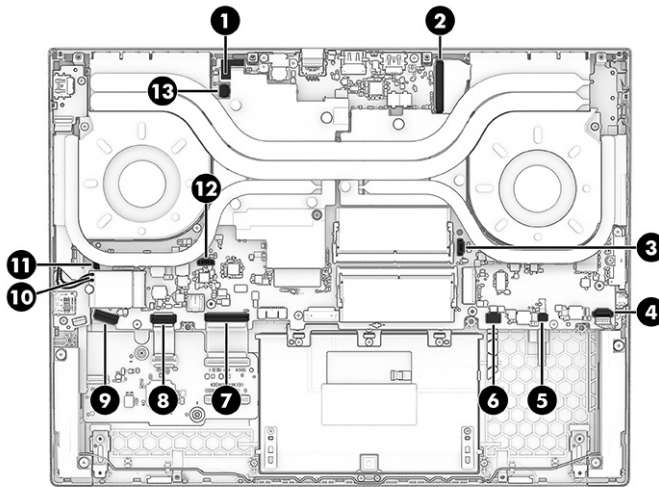


2. Remove seven Phillips M2.0 × 3.5 screws **(1)** from the system board.
3. Remove the four Phillips M2.0 × 5.0 screws **(2)** from the brackets on the system board.
4. Lift the left edge of the system board, and then pull the board up and to the left to remove it from the computer **(3)**. Note that the brackets might separate from the system board.

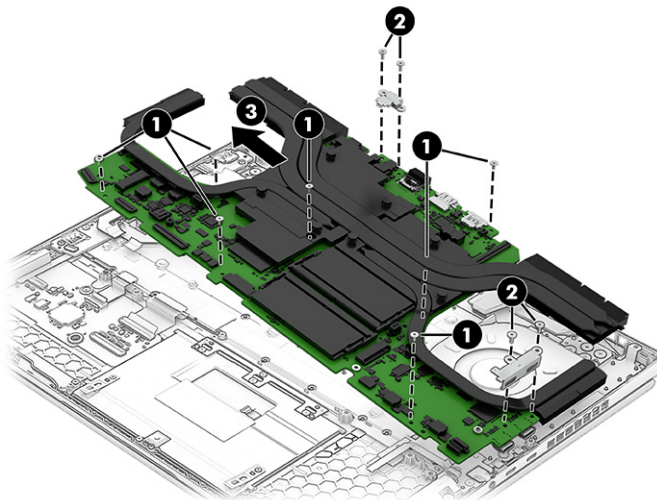

5. To remove the RJ-45 door from the removed system board, use a tool to release and remove the door.

 **NOTE:** When replacing the RJ-45 door, be sure to match its color with the color of the top cover with keyboard.

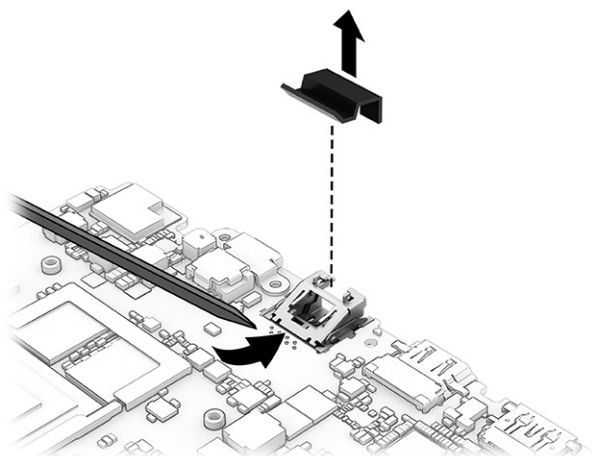

To install the system board, reverse this procedure.

RJ-45 door

To remove the RJ-45 door, use this procedure and illustration.

Table 6-10 RJ-45 door description and part number


Description	Spare part number
RJ-45 (network) jack door, shadow black	N43734-001
RJ-45 (network) jack door, ceramic white	N43735-001


Before removing the RJ-45 door, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 37](#)).
2. Remove the bottom cover (see [Bottom cover on page 37](#)).
3. Remove the battery (see [Battery on page 39](#)).
4. Remove the heat sink (see [Heat sink assembly on page 47](#)).
5. Remove the system board (see [System board with heat sink on page 48](#)).

Remove the RJ-45 door:

- Use a tool to release and remove the door.

 **NOTE:** When replacing the RJ-45 door, be sure to match its color with the color of the top cover with keyboard.

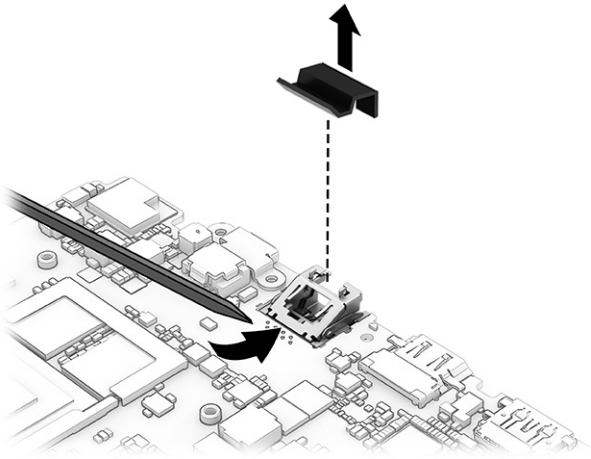

To install the RJ-45 door, reverse this procedure.

Fans

To remove the fans, use this procedure and illustration.

Table 6-11 Fan descriptions and part numbers

Description	Spare part number
Fan kit, 80 W (models with RTX 4060/4070 graphics) (includes both fans)	N43727-001
Fan kit, 60 W (models with RTX 4050 graphics) (includes both fans)	N43728-001


Before removing the fans, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 37](#)).
2. Remove the bottom cover (see [Bottom cover on page 37](#)).
3. Remove the battery (see [Battery on page 39](#)).
4. Remove the system board with heat sink (see [System board with heat sink on page 48](#)).

Remove the fans:

1. Remove the two Phillips M2.0 × 3.5 screws **(1)** that secure each fan to the computer.

2. Remove the fans (2).

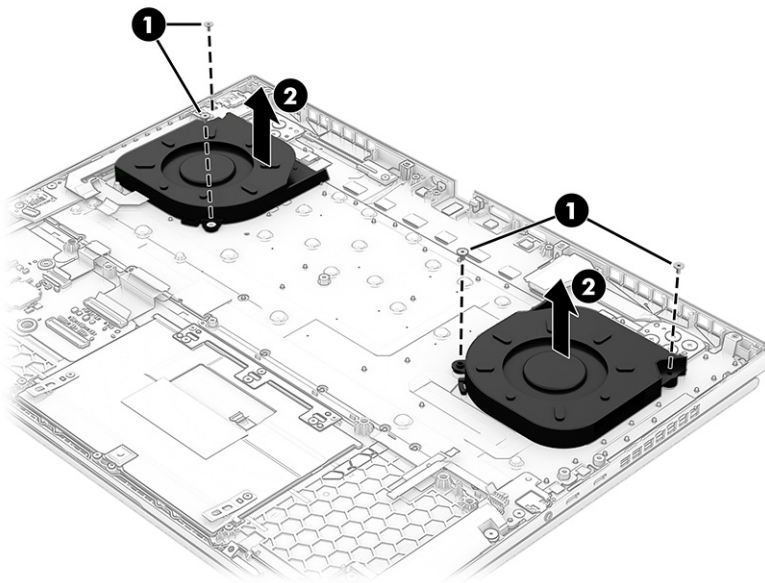

To install the fans, reverse this procedure.

IR board

To remove the IR board, use this procedure and illustration.

Table 6-12 IR board description and part number

Description	Spare part number
IR board	N43739-001
IR board cable	N43718-001

Before removing the IR board, follow these steps:




NOTE: All flat cable connectors are covered with a piece of Mylar to prevent accidental disconnection. Be sure to replace this Mylar during reassembly.

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 37](#)).
2. Remove the bottom cover (see [Bottom cover on page 37](#)).
3. Remove the battery (see [Battery on page 39](#)).
4. Remove the system board (see [System board with heat sink on page 48](#)).

Remove the IR board:

- Use a tool to release the board from the bottom of the system board. The board is secured with adhesive.

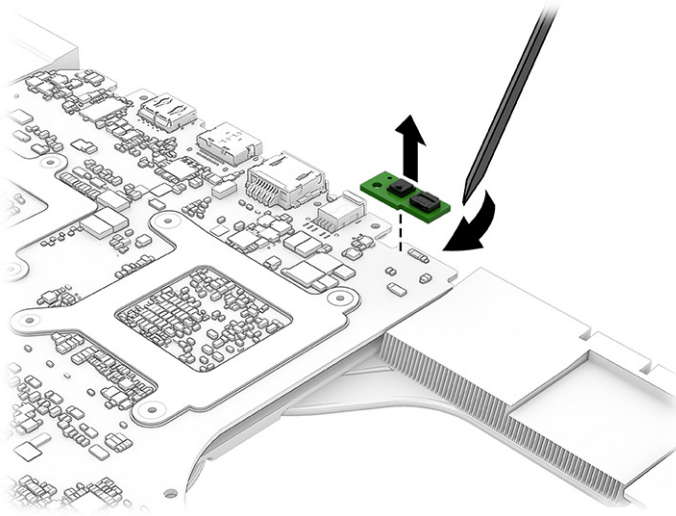

To install the IR board, reverse this procedure.


Audio board

To remove the audio board, use this procedure and illustration.

Table 6-13 Audio board description and part number

Description	Spare part number
Audio board	N43738-001
Audio board cable	N43724-001

Before removing the audio board, follow these steps:


 **NOTE:** All flat cable connectors are covered with a piece of Mylar to prevent accidental disconnection. Be sure to replace this Mylar during reassembly.

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 37](#)).
2. Remove the bottom cover (see [Bottom cover on page 37](#)).
3. Remove the battery (see [Battery on page 39](#)).
4. Remove the system board (see [System board with heat sink on page 48](#)).

Remove the audio board:

1. Disconnect the cable from the ZIF connector **(1)** on the audio board.
2. Remove the Phillips M2.0 × 3.5 screw **(2)** that secures the board to the computer.

3. Lift back of board up, and then pull board into the computer to remove it (3).

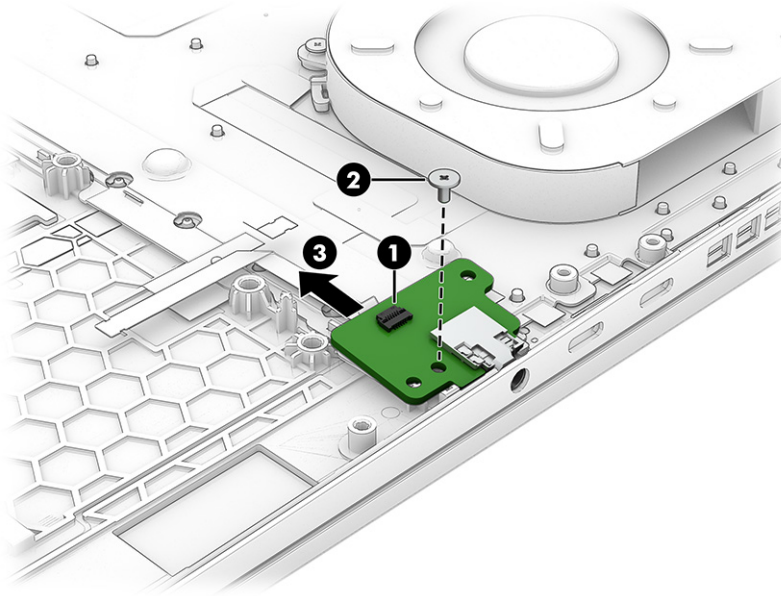

To install the audio board, reverse this procedure.

Display assembly


To remove and disassemble the display assembly, use these procedures and illustrations.


Full hinge-up displays are not available as spare parts. Spare parts for displays are available only at the subcomponent level.

Before removing the display panel, follow these steps:


1. Prepare the computer for disassembly (see [Preparation for disassembly on page 37](#)).
2. Remove the bottom cover (see [Bottom cover on page 37](#)).
3. Disconnect the battery cable from the system board (see [Battery on page 39](#)).

Remove the display assembly:


 **NOTE:** All flat cable connectors are covered with a piece of Mylar to prevent accidental disconnection. Be sure to replace this Mylar during reassembly.

 **NOTE:** You can remove the bezel, display panel, camera module, and ambient light sensor without removing the entire display assembly from the computer.

1. You can remove the bezel with the display assembly connected to the computer. To remove the bezel:
 - a. Use your finger to release the bottom edge of the bezel (1) from the display assembly.
 - b. **From the outside of the bezel**, release the top, left, and right edges of the bezel (2) from the display assembly.
 - c. Remove the display bezel (3) from the display assembly.


 **IMPORTANT:** To avoid damaging the panel, **do not use a tool** to release the inside of the bezel. You can use a tool only when you insert it from the outside of the top, left, and right sides of the bezel. Use your fingers to lift up on the bezel. Avoid pressing down on the panel during removal.


The bezel is available as spare part number N43716-001 in shadow black and N43717 in ceramic white.

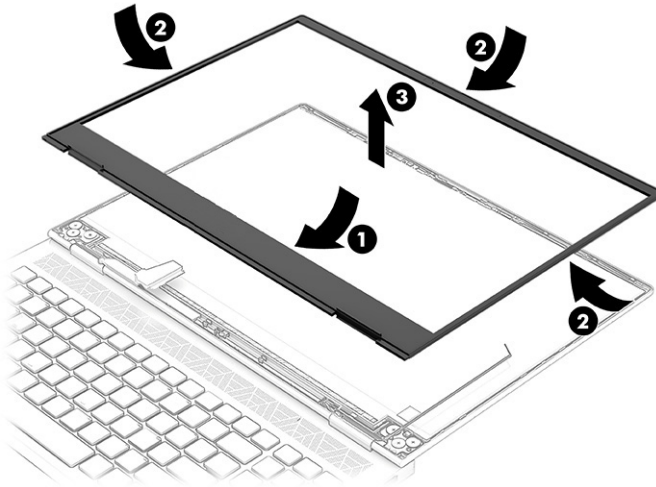


2. To remove the display panel:


- a. At the top left and right corners of the display panel, insert tweezers into the hole at the end of the stretchable tape (1) that is installed under the left and right sides of the display panel.
- b. While turning the tweezers (2), wrap the tape around the tweezers as you continue to pull the tape (3) out from behind the display panel.
- c. Lift the panel off the display enclosure (4).

 **NOTE:** In this procedure, the display assembly will not be connected to the computer.

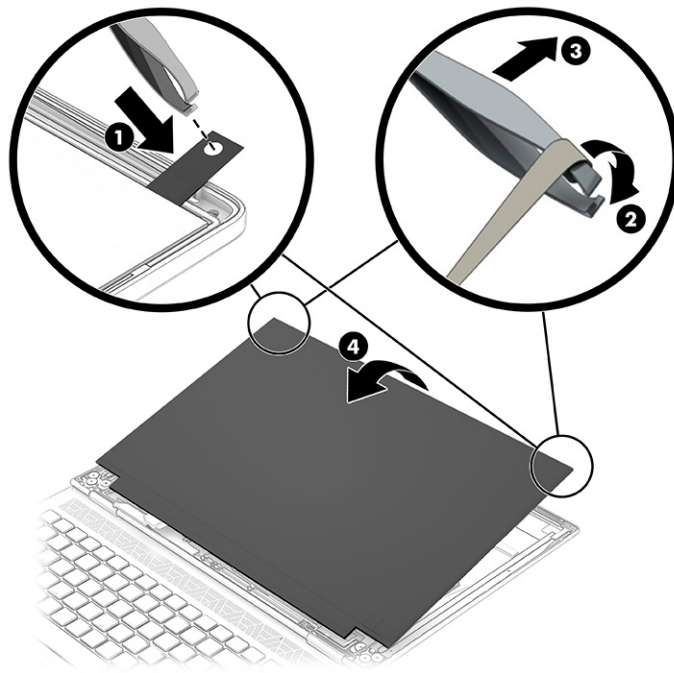


 **IMPORTANT:** To avoid damaging the panel, place a piece of foam or similar material between the panel and the top cover with keyboard.

- d. Remove the conductive tape (1) and the clear tape (2) from the connector on the back of the display panel.
- e. Lift the retention lever off the connector (3).
- f. Disconnect the cable from the panel (4).
- g. Release the conductive tape from the panel (5).

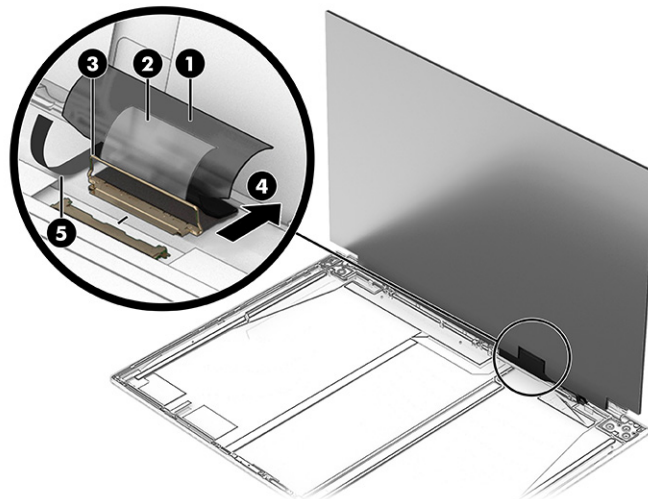

- h. When installing a display panel, be sure to install the tape on the left and right sides of the display back cover as shown in the following illustration. Display panel tape is available as spare part number N44979-001.

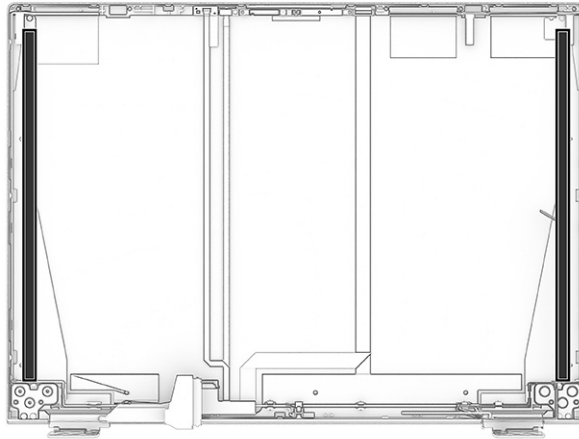

Display panels are available as the following spare part numbers:


- N43754-001–WQXGA, mini-LED, 1000 nits, 240 Hz
- N43753-001–WUXGA, 400 nits, 165 Hz
- N43752-001–WQXGA, 400 nits, 240 Hz

Display panel adhesive is available as spare part number N44979-001.

3. To replace the camera module:


- a. Use to tool to detach the module **(1)** from the display back cover. The module is attached with double-sided adhesive.
- b. Disconnect the cable from the reverse ZIF connector on the camera module **(2)**, and then remove the module.

The camera module is available as spare part number N43745-001.

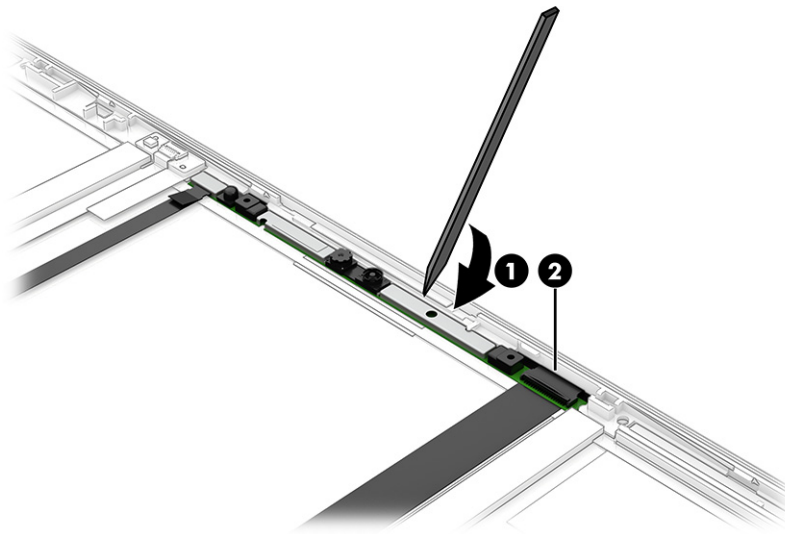


4. To replace the ambient light sensor (ALS) module:
 - a. Use the tool to detach the module (1) from the display back cover. The module is attached with double-sided adhesive.
 - b. Disconnect the cable from the reverse ZIF connector on the module (2), and then remove the module.

The ALS module is available as spare part number N43740-001.

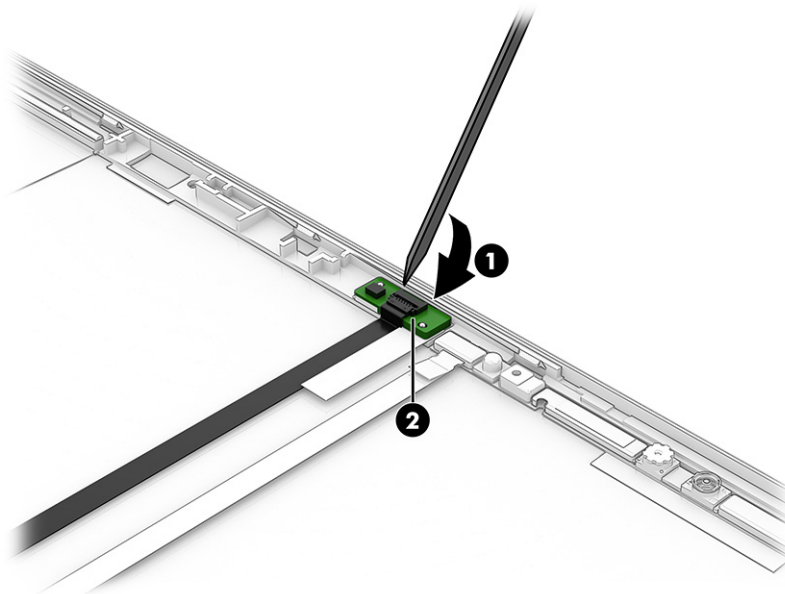


5. You must remove the display assembly from the computer to remove the remaining components. Disconnect the antenna cable from the soldered wireless headset module at the top of the system board (1) (select products only).
6. Disconnect the display cable from the system board ZIF connector (2).


7. Disconnect the antenna cables from the WLAN module (3), and then remove the antenna cable from the metal routing clips at the top of the computer (4).

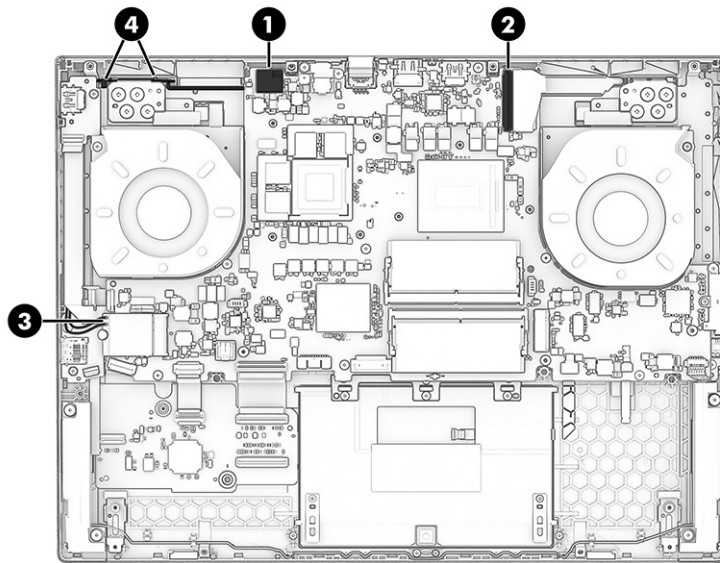


8. Open the display (1) to open the hinges.
9. Remove the four Phillips M2.5 × 2.5 screws (2) from each hinge that secure the display assembly to the computer.
10. Separate the display from the computer (3).

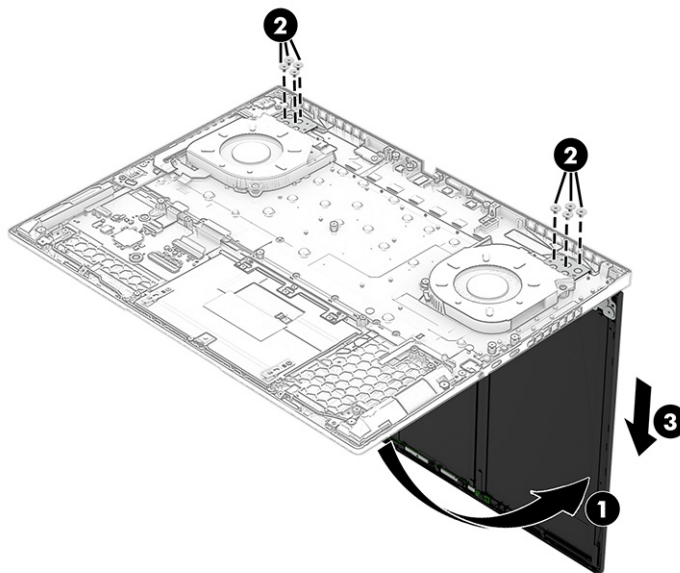

Note that the hinges need to be folded at an angle to remove the display from the computer, as shown in the following illustration.

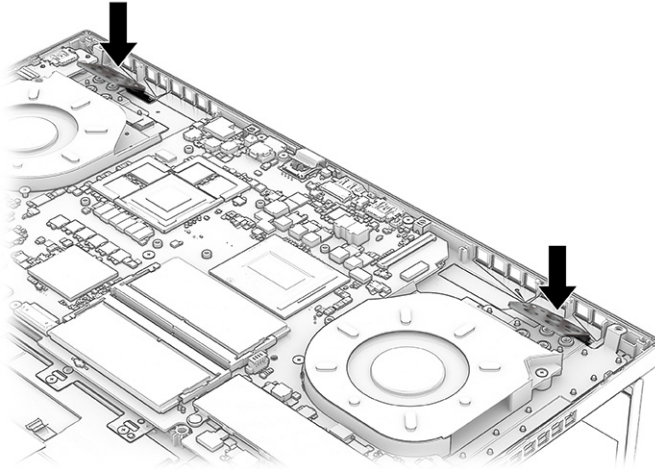


11. To remove the wireless antennas:

 **NOTE:** The antenna on the left side of the display is available on select products only.

You do not need to remove the hinges to remove the antennas. You do need to close the hinges to remove the antennas.

- a. Peel the wireless antennas off the display rear cover **(1)**. The antennas are attached with double-sided adhesive.
- b. Release the wireless antenna cables from the retention clips **(2)** along the sides and bottom of the display back cover. The wireless antennas are available using spare part number N43708-001. The ULL wireless antenna (for use in models with a HyperX headset) is available as spare part number N43709-001.

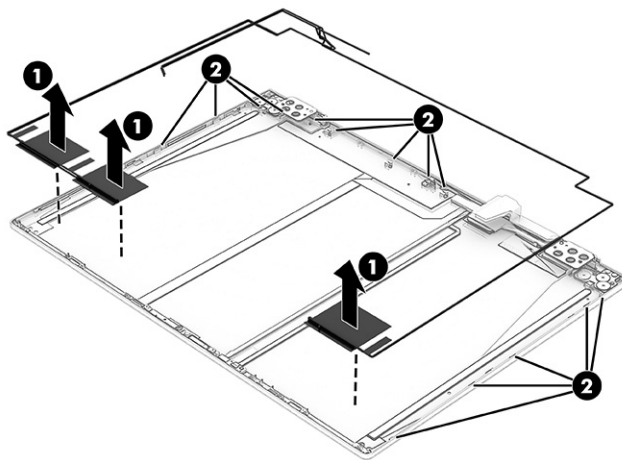


12. To remove the hinges from the display back cover:

- a. Remove the three broadhead Phillips M2.0 × 3.0 screws **(1)** that secure each hinge to the display back cover.
- b. Rotate the hinges to the closed position **(2)** to allow removal of the cables.


- c. Pull the cables toward each other to remove them from each hinge (3).
- d. Remove the hinges (4).

The display hinges are available using spare part number N43731-001.

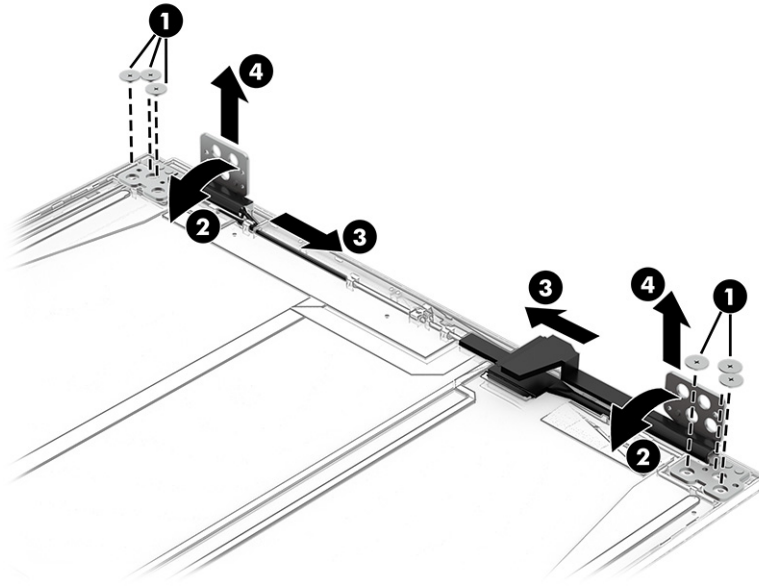

13. To remove the hinge covers from the hinges, remove the Phillips M1.6 × 1.6 screw (1) from each cover, and then slide the covers off the hinges (2). Note that a rubber insert is inside the left hinge cover.

The display hinge covers are available as spare part number N43733-001 for ceramic white models and N43732-001 for shadow black models.

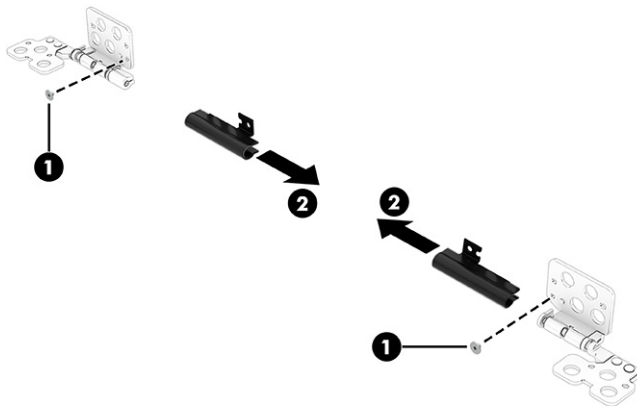


14. To remove the display cable:

- Peel the cable off the inside of the display rear cover.

The display cable is available as the following spare part numbers:

N43725-001: Mini-LED display

N43726-001: Displays without mini-LED

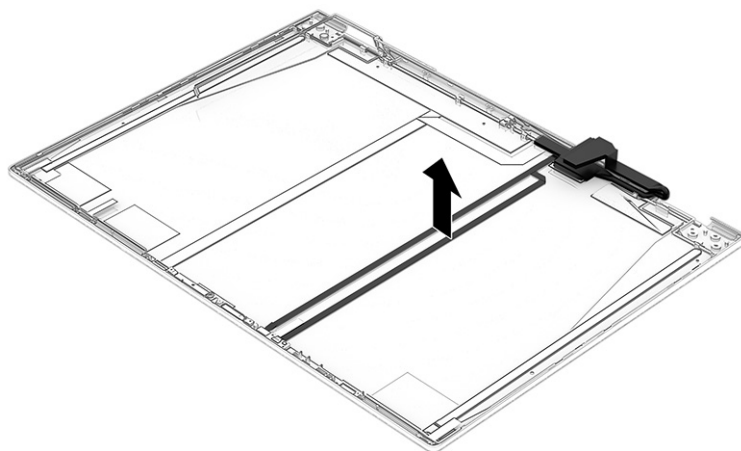

To reassemble and replace the display assembly, reverse this procedure.

Top cover with keyboard

The top cover with keyboard remains after removing all other spare parts from the computer. In this section, the first table provides the main spare part number for the top covers with keyboards. The second table provides the country codes.

Table 6-14 Top cover with keyboard descriptions and part numbers

Description	Spare part number
Shadow black, 4-zone lighting	N43755-xx1
Shadow black, per key lighting	N43756-xx1
Ceramic white, 4-zone lighting	N43757-xx1

Table 6-15 Spare part country codes

For use in country or region	Spare part number	For use in country or region	Spare part number	For use in country or region	Spare part number
Belgium	-A41	Hungary	-211	Saudi Arabia	-171
Brazil	-201	Iceland	-DD1	Slovenia	-BA1
Bulgaria	-261	India	-D61	South Korea	-AD1
Chile	-161	Israel	-BB1	Spain	-071
Czech Republic/Slovakia	-FL1	Italy	-061	Switzerland	-BG1
Denmark	-081	Japan	-291	Taiwan	-AB1
Denmark, Finland, and Norway	-DH1	The Netherlands	-B31	Thailand	-281
French Canada	-DB1	Northern Africa	-FP1	Turkey	-141
Finland/Sweden	-B71	Norway	-091	Turkey-F	-541
France	-051	Portugal	-131	Ukraine	-BD1
Germany	-041	Romania	-271	United Kingdom	-031

Table 6-15 Spare part country codes (continued)

For use in country or region	Spare part number	For use in country or region	Spare part number	For use in country or region	Spare part number
Greece	-151	Russia	-251	United States	-001

7 Using Setup Utility (BIOS)

Setup Utility, or Basic Input/Output System (BIOS), controls communication between all the input and output devices on the system (such as disk drives, display, keyboard, mouse, and printer). Setup Utility (BIOS) includes settings for the types of devices installed, the startup sequence of the computer, and the amount of system and extended memory.



NOTE: To start Setup Utility on convertible computers, your computer must be in notebook mode and you must use the keyboard attached to your notebook.

Starting Setup Utility (BIOS)

You have several ways to access the Setup Utility (BIOS).



IMPORTANT: Use extreme care when making changes in Setup Utility (BIOS). Errors can prevent the computer from operating properly.

- Turn on or restart the computer and quickly press **f10**.

– or –

Turn on or restart the computer, quickly press **esc**, and then press **f10** when the Start menu is displayed.

Updating Setup Utility (BIOS)

Updated versions of Setup Utility (BIOS) might be available on the HP website. Most BIOS updates on the HP website are packaged in compressed files called *SoftPaqs*. Some download packages contain a file named *Readme.txt*, which contains information regarding installing and troubleshooting the file.

Determining the BIOS version

To decide whether you need to update Setup Utility (BIOS), first determine the BIOS version on your computer.

To reveal the BIOS version information (also known as *ROM date* and *System BIOS*), use one of these options.

- HP Support Assistant
 1. Select the **Search** icon in the taskbar, type `support` in the search box, and then select the **HP Support Assistant** app.

– or –

Select the question mark icon in the taskbar.

 2. Under **My notebook**, select **Specifications**.
- Setup Utility (BIOS)
 1. Start Setup Utility (BIOS) (see [Starting Setup Utility \(BIOS\) on page 65](#)).

2. Select **Main**, and then make note of the BIOS version.
 3. Select **Exit**, select one of the options, and then follow the on-screen instructions.
- In Windows, press **ctrl+alt+s**.

To check for later BIOS versions, see [Preparing for a BIOS update on page 66](#).

Preparing for a BIOS update

Be sure to follow all prerequisites before downloading and installing a BIOS update.



IMPORTANT: To reduce the risk of damage to the computer or an unsuccessful installation, download and install a BIOS update only when the computer is connected to reliable external power using the AC adapter. Do not download or install a BIOS update while the computer is running on battery power, docked in an optional docking device, or connected to an optional power source. During the download and installation, follow these instructions:

- Do not disconnect power from the computer by unplugging the power cord from the AC outlet.
- Do not shut down the computer or initiate Sleep.
- Do not insert, remove, connect, or disconnect any device, cable, or cord.



NOTE: If your computer is connected to a network, consult the network administrator before installing any software updates, especially system BIOS updates.

Downloading a BIOS update

After you review the prerequisites, you can check for and download BIOS updates.

1. Select the **Search** icon in the taskbar, type `support` in the search box, and then select the **HP Support Assistant** app.

– or –
Select the question mark icon in the taskbar.
2. Select **Updates**. The **Checking for Updates** window opens, and Windows checks for updates.
3. Follow the on-screen instructions.
4. At the download area, follow these steps:
 - a. Identify the most recent BIOS update and compare it to the BIOS version currently installed on your computer. If the update is more recent than your BIOS version, make a note of the date, name, or other identifier. You might need this information to locate the update later, after it has been downloaded to your hard drive.
 - b. Follow the on-screen instructions to download your selection to the hard drive.

Make a note of the path to the location on your hard drive where the BIOS update is downloaded. You will need to access this path when you are ready to install the update.

Installing a BIOS update

BIOS installation procedures vary. Follow any instructions that appear on the screen after the download is complete. If no instructions appear, follow these steps.

1. Select the **Search** icon in the taskbar, type `file` in the search box, and then select **File Explorer**.

2. Select your hard drive designation. The hard drive designation is typically Local Disk (C:).
3. Using the hard drive path you recorded earlier, open the folder that contains the update.
4. Double-click the file that has an .exe extension (for example, *filename.exe*).

The BIOS installation begins.

5. Complete the installation by following the on-screen instructions.



NOTE: After a message on the screen reports a successful installation, you can delete the downloaded file from your hard drive.

8 Using HP PC Hardware Diagnostics

You can use the HP PC Hardware Diagnostics utility to determine whether your computer hardware is running properly. The three versions are HP PC Hardware Diagnostics Windows, HP PC Hardware Diagnostics UEFI (Unified Extensible Firmware Interface), and (for select products only) Remote HP PC Hardware Diagnostics UEFI, a firmware feature.

Using HP PC Hardware Diagnostics Windows (select products only)

HP PC Hardware Diagnostics Windows is a Windows-based utility that allows you to run diagnostic tests to determine whether the computer hardware is functioning properly. The tool runs within the Windows operating system to diagnose hardware failures.

If HP PC Hardware Diagnostics Windows is not installed on your computer, you must download and install it. To download HP PC Hardware Diagnostics Windows, see [Downloading HP PC Hardware Diagnostics Windows on page 69](#).

Using an HP PC Hardware Diagnostics Windows hardware failure ID code

When HP PC Hardware Diagnostics Windows detects a failure that requires hardware replacement, a 24-digit failure ID code is generated for select component tests. For interactive tests, such as keyboard, mouse, or audio and video palette, you must perform troubleshooting steps before you can receive a failure ID.

- You have several options after you receive a failure ID:
 - Select **Next** to open the Event Automation Service (EAS) page, where you can log the case.
 - Scan the QR code with your mobile device, which takes you to the EAS page, where you can log the case.
 - Select the box next to the 24-digit failure ID to copy your failure code and send it to support.

Accessing HP PC Hardware Diagnostics Windows

After HP PC Hardware Diagnostics Windows is installed, you can access it from HP Support Assistant or the Start menu.

Accessing HP PC Hardware Diagnostics Windows from HP Support Assistant

After HP PC Hardware Diagnostics Windows is installed, follow these steps to access it from HP Support Assistant:

1. Complete one of the following tasks:
 - Select the **Search** icon in the taskbar, type `support` in the search box, and then select the **HP Support Assistant** app.
 - Select the question mark icon in the taskbar.
2. Select **Fixes & Diagnostics**.

3. Select **Run hardware diagnostics**, and then select **Launch**.
4. When the tool opens, select the type of diagnostic test that you want to run, and then follow the on-screen instructions.



NOTE: To stop a diagnostic test, select **Cancel**.

Accessing HP PC Hardware Diagnostics Windows from the Start menu (select products only)

After HP PC Hardware Diagnostics Windows is installed, follow these steps to access it from the Start menu:

1. Select the **Start** button, and then select **All apps**.
2. Select **HP PC Hardware Diagnostics Windows**.
3. When the tool opens, select the type of diagnostic test that you want to run, and then follow the on-screen instructions.



NOTE: To stop a diagnostic test, select **Cancel**.

Downloading HP PC Hardware Diagnostics Windows

The HP PC Hardware Diagnostics Windows downloading instructions are provided in English only. You must use a Windows computer to download this tool because only .exe files are provided.

Downloading the latest HP PC Hardware Diagnostics Windows version from HP

To download HP PC Hardware Diagnostics Windows from HP, follow these steps:

1. Go to <http://www.hp.com/go/techcenter/pcdiags>. The HP PC Diagnostics home page is displayed.
2. Select **Download HP Diagnostics Windows**, and then select the specific Windows diagnostics version to download to your computer or a USB flash drive.

The tool downloads to the selected location.

Downloading the HP PC Hardware Diagnostics Windows from the Microsoft Store

You can download the HP PC Hardware Diagnostics Windows from the Microsoft Store:

1. Select the Microsoft Store app on your desktop or select the **Search** icon in the taskbar, and then type `Microsoft Store` in the search box.
2. Type `HP PC Hardware Diagnostics Windows` in the **Microsoft Store** search box.
3. Follow the on-screen directions.

The tool downloads to the selected location.

Downloading HP Hardware Diagnostics Windows by product name or number (select products only)

You can download HP PC Hardware Diagnostics Windows by product name or number.



NOTE: For some products, you might have to download the software to a USB flash drive by using the product name or number.

1. Go to <http://www.hp.com/support>.
2. Select **Software and Drivers**, select your type of product, and then enter the product name or number in the search box that is displayed.
3. In the **Diagnostics** section, select **Download**, and then follow the on-screen instructions to select the specific Windows diagnostics version to be downloaded to your computer or USB flash drive.

The tool downloads to the selected location.

Installing HP PC Hardware Diagnostics Windows

To install HP PC Hardware Diagnostics Windows, navigate to the folder on your computer or the USB flash drive where the .exe file downloaded, double-click the .exe file, and then follow the on-screen instructions.

Using HP PC Hardware Diagnostics UEFI

HP PC Hardware Diagnostics Unified Extensible Firmware Interface (UEFI) allows you to run diagnostic tests to determine whether the computer hardware is functioning properly. The tool runs outside the operating system so that it can isolate hardware failures from issues that are caused by the operating system or other software components.



NOTE: For some products, you must use a Windows computer and a USB flash drive to download and create the HP UEFI support environment because only .exe files are provided. For more information, see [Downloading HP PC Hardware Diagnostics UEFI to a USB flash drive on page 71](#).

If your PC does not start in Windows, you can use HP PC Hardware Diagnostics UEFI to diagnose hardware issues.

Using an HP PC Hardware Diagnostics UEFI hardware failure ID code

When HP PC Hardware Diagnostics UEFI detects a failure that requires hardware replacement, a 24-digit failure ID code is generated.

For assistance in solving the problem, complete one of these tasks:

- Select **Contact HP**, accept the HP privacy disclaimer, and then use a mobile device to scan the failure ID code that appears on the next screen. The HP Customer Support - Service Center page appears with your failure ID and product number automatically filled in. Follow the on-screen instructions.
- Contact support, and provide the failure ID code.

Starting HP PC Hardware Diagnostics UEFI

To start HP PC Hardware Diagnostics UEFI, follow this procedure.

1. Turn on or restart the computer, and quickly press **esc**.
2. Press **f2**.

The BIOS searches three places for the diagnostic tools, in the following order:

- a. Connected USB flash drive



NOTE: To download the HP PC Hardware Diagnostics UEFI tool to a USB flash drive, see [Downloading the latest HP PC Hardware Diagnostics UEFI version on page 71](#).

- b. Hard drive
 - c. BIOS
3. When the diagnostic tool opens, select the type of diagnostic test that you want to run, and then follow the on-screen instructions.

Starting HP PC Hardware Diagnostics UEFI through HP Hotkey Support software (select products only)

To start HP PC Hardware Diagnostics UEFI through HP Hotkey Support software, follow this procedure.

1. From the **Start** menu, open the HP System Information Application or enter Fn+Esc.
2. In HP System Information screen, select **Run System Diagnostics**, select **Yes** to run the application, and then select **Restart**.



IMPORTANT: To prevent loss of data, save your work in all open apps before restarting your computer.



NOTE: When the restart is complete, the computer will boot to HP PC Hardware Diagnostics UEFI Application. Proceed with the troubleshooting tests.

Downloading HP PC Hardware Diagnostics UEFI to a USB flash drive

Downloading HP PC Hardware Diagnostics UEFI to a USB flash drive can be useful in some situations.

- HP PC Hardware Diagnostics UEFI is not included in the preinstallation image.
- HP PC Hardware Diagnostics UEFI is not included in the HP Tool partition.
- The hard drive is damaged.



NOTE: The HP PC Hardware Diagnostics UEFI downloading instructions are provided in English only, and you must use a Windows computer to download and create the HP UEFI support environment because only .exe files are provided.

Downloading the latest HP PC Hardware Diagnostics UEFI version

To download the latest HP PC Hardware Diagnostics UEFI version to a USB flash drive, follow this procedure:

1. Go to <http://www.hp.com/go/techcenter/pcdiags>. The HP PC Diagnostics home page is displayed.
2. Select **Download HP Diagnostics UEFI**, and then select **Run**.

Downloading HP PC Hardware Diagnostics UEFI by product name or number (select products only)

You can download HP PC Hardware Diagnostics UEFI by product name or number (select products only) to a USB flash drive.



NOTE: For some products, you might have to download the software to a USB flash drive by using the product name or number.

1. Go to <http://www.hp.com/support>.
2. Enter the product name or number, select your computer, and then select your operating system.
3. In the **Diagnostics** section, follow the on-screen instructions to select and download the specific UEFI Diagnostics version for your computer.

Using Remote HP PC Hardware Diagnostics UEFI settings (select products only)

Remote HP PC Hardware Diagnostics UEFI is a firmware (BIOS) feature that downloads HP PC Hardware Diagnostics UEFI to your computer. It can then run the diagnostics on your computer, and it might upload results to a preconfigured server.

For more information about Remote HP PC Hardware Diagnostics UEFI, go to <http://www.hp.com/go/techcenter/pcdiags>, and then select **Find out more**.

Downloading Remote HP PC Hardware Diagnostics UEFI

HP Remote PC Hardware Diagnostics UEFI is also available as a SoftPaq that you can download to a server.

Downloading the latest Remote HP PC Hardware Diagnostics UEFI version

You can download the latest HP PC Hardware Diagnostics UEFI version to a USB flash drive.

1. Go to <http://www.hp.com/go/techcenter/pcdiags>. The HP PC Diagnostics home page is displayed.
2. Select **Download Remote Diagnostics**, and then select **Run**.

Downloading Remote HP PC Hardware Diagnostics UEFI by product name or number

You can download HP Remote PC Hardware Diagnostics UEFI by product name or number.



NOTE: For some products, you might have to download the software by using the product name or number.

1. Go to <http://www.hp.com/support>.
2. Select **Software and Drivers**, select your type of product, enter the product name or number in the search box that is displayed, select your computer, and then select your operating system.
3. In the **Diagnostics** section, follow the on-screen instructions to select and download the **Remote UEFI** version for the product.

Customizing Remote HP PC Hardware Diagnostics UEFI settings

Using the Remote HP PC Hardware Diagnostics setting in Computer Setup (BIOS), you can perform several customizations.

- Set a schedule for running diagnostics unattended. You can also start diagnostics immediately in interactive mode by selecting **Execute Remote HP PC Hardware Diagnostics**.

- Set the location for downloading the diagnostic tools. This feature provides access to the tools from the HP website or from a server that has been preconfigured for use. Your computer does not require the traditional local storage (such as a hard drive or USB flash drive) to run remote diagnostics.
- Set a location for storing the test results. You can also set the user name and password that you use for uploads.
- Display status information about the diagnostics run previously.


To customize Remote HP PC Hardware Diagnostics UEFI settings, follow these steps:


1. Turn on or restart the computer, and when the HP logo appears, press **f10** to enter Computer Setup.
2. Select **Advanced**, and then select **Settings**.
3. Make your customization selections.
4. Select **Exit**, then select **Save Changes and Exit** to save your settings.

Your changes take effect when the computer restarts.

9 Backing up, restoring, and recovering

You can use Windows tools or HP software to back up your information, create a restore point, reset your computer, create recovery media, or restore your computer to its factory state. Performing these standard procedures can return your computer to a working state faster.

 **IMPORTANT:** If you are performing recovery procedures on a tablet, the tablet battery must be at least 70% charged before you start the recovery process.


 **IMPORTANT:** For a tablet with a detachable keyboard, connect the tablet to the keyboard base before beginning any recovery process.

Backing up information and creating recovery media

These methods of creating recovery media and backups are available on select products only.

Using Windows tools for backing up

HP recommends that you back up your information immediately after initial setup. You can do this task either using Windows Backup locally with an external USB flash drive or using online tools.


 **NOTE:** If computer storage is 32 GB or less, Microsoft® System Restore is disabled by default.


Using the HP Cloud Recovery Download Tool to create recovery media (select products only)

You can use the HP Cloud Recovery Download Tool to create HP Recovery media on a bootable USB flash drive.

For details:

- Go to <http://www.hp.com>, search for HP Cloud Recovery, and then select the result that matches the type of computer that you have.

 **NOTE:** If you cannot create recovery media yourself, contact support to obtain recovery discs. Go to <http://www.hp.com/support>, select your country or region, and then follow the on-screen instructions.

 **IMPORTANT:** HP recommends that you follow the [Restoring and recovery methods on page 75](#) to restore your computer before you obtain and use the HP recovery discs. Using a recent backup can return your machine to a working state sooner than using the HP recovery discs. After the system is restored, reinstalling all the operating system software released since your initial purchase can be a lengthy process.

Restoring and recovering your system

You have several tools available to recover your system both within and outside of Windows if the desktop cannot load.

HP recommends that you attempt to restore your system using the [Restoring and recovery methods on page 75](#).

Creating a system restore

System Restore is available in Windows. The System Restore software can automatically or manually create restore points, or snapshots, of the system files and settings on the computer at a particular point.

When you use System Restore, it returns your computer to its state at the time you made the restore point. Your personal files and documents should not be affected.

Restoring and recovery methods

After you run the first method, test to see whether the issue still exists before you proceed to the next method, which might now be unnecessary.

1. Run a Microsoft System Restore.
2. Run Reset this PC.



NOTE: The options **Remove everything** and then **Fully clean the drive** can take several hours to complete and leave no information on your computer. It is the safest way to reset your computer before you recycle it.

3. Recover using HP Recovery media. For more information, see [Recovering using HP Recovery media on page 75](#).

For more information about the first two methods, see the Get Help app:

- Select the **Start** button, select **All apps**, select the **Get Help** app, and then enter the task you want to perform.



NOTE: You must be connected to the internet to access the Get Help app.

Recovering using HP Recovery media

You can use HP Recovery media to recover the operating system and drivers that were installed at the factory. On select products, you can create recovery media on a bootable USB flash drive using the HP Cloud Recovery Download Tool.

For details, see [Using the HP Cloud Recovery Download Tool to create recovery media \(select products only\) on page 74](#).



NOTE: If you cannot create recovery media yourself, contact support to obtain recovery discs. Go to <http://www.hp.com/support>, select your country or region, and then follow the on-screen instructions.

To recover your system:

- Insert the HP Recovery media, and then restart the computer.



NOTE: HP recommends that you follow the [Restoring and recovery methods on page 75](#) to restore your computer before you obtain and use the HP recovery discs. Using a recent backup can return your machine to a working state sooner than using the HP recovery discs. After the system is restored, reinstalling all the operating system software released since your initial purchase can be a lengthy process.

Changing the computer boot order

If your computer does not restart using the HP Recovery media, you can change the computer boot order, which is the order of devices listed in BIOS for startup information. You can select an optical drive or a USB flash drive, depending on the location of your HP Recovery media.



IMPORTANT: For a tablet with a detachable keyboard, connect the tablet to the keyboard base before beginning these steps.

To change the boot order:

1. Insert the HP Recovery media.
2. Access the system **Startup** menu.
 - For computers or tablets with keyboards attached, turn on or restart the computer or tablet, quickly press **esc**, and then press **f9** for boot options.
 - For tablets without keyboards, turn on or restart the tablet, quickly press and hold the volume up button, and then select **f9**.

– or –

Turn on or restart the tablet, quickly press and hold the volume down button, and then select **f9**.
3. Select the optical drive or USB flash drive from which you want to boot, and then follow the on-screen instructions.

Using HP Sure Recover (select products only)

Select computer models are configured with HP Sure Recover, a PC operating system (OS) recovery solution built into the hardware and software. HP Sure Recover can fully restore the HP OS image without installed recovery software.

Using HP Sure Recover, an administrator or user can restore the system and install:

- Latest version of the operating system
- Platform-specific device drivers
- Software applications, in the case of a custom image

To access the latest documentation for HP Sure Recover, go to <http://www.hp.com/support>. Follow the on-screen instructions to find your product and locate your documentation.

10 Specifications

This chapter provides specifications for your computer system.

Computer specifications

This section provides specifications for your computer. When you travel with your computer, the computer dimensions and weights, input power ratings, and operating specifications provide helpful information.

Table 10-1 Computer specifications

	Metric	U.S.
Dimensions		
Width	356.5 mm	14.0 in
Depth	269.0 mm	10.6 in
Height	19.9 mm	0.78 in
Weight (70 Whr battery)	2174.0 g	4.79 lb
Weight (97 Whr battery)	2290.7 g	5.05 lb
Input power		
Operating voltage and current	19.5 V DC @ 10.3 A - 200 W	
	19.5 V DC @ 11.8 A - 230 W	
	20 V DC @ 14 A - 280 W	
Temperature		
Operating	5°C to 35°C	41°F to 95°F
Nonoperating	-20°C to 60°C	-4°F to 140°F
Relative humidity (noncondensing)		
Operating	10% to 90%	
Nonoperating	5% to 95%	
Maximum altitude (unpressurized)		
Operating	-15 m to 3,048 m	-50 ft to 10,000 ft
Nonoperating	-15 m to 12,192 m	-50 ft to 40,000 ft
NOTE: Applicable product safety standards specify thermal limits for plastic surfaces. The device operates well within this range of temperatures.		

Display specifications

This section provides specifications for your display.

Table 10-2 Display specifications

	Metric	U.S.
Active diagonal size	40.8 cm	16.0 in
Resolution	1920 × 1200 (WUXGA)	
	2560 × 1600 (WQXGA)	
Surface treatment	Antiglare	
Brightness	1180 nits (DCI-P3)	
	400 nits (100% sRGB)	
Refresh rate	240 Hz (WQXGA)	
	165 Hz (WUXGA)	
Viewing angle	UWVA	
Backlight	WLED	
Display panel interface	eDP	

Solid-state drive specifications

This section provides specifications for your solid-state drives.

Table 10-3 Solid-state drive specifications

	256 GB*	512 GB*	1 TB*
Dimensions			
Height	1.0 mm	1.0 mm	1.0 mm
Length	50.8 mm	50.8 mm	50.8 mm
Width	28.9 mm	28.9 mm	28.9 mm
Weight	< 10 g	< 10 g	< 10 g
Interface type			
Ready time, maximum (to not busy)	1.0 ms	< 1.0 ms	1.0 ms
Access times, logical	0.1 ms	0.1 ms	0.1 ms
Transfer rate			
Sequential read	up to 2150 MBps	up to 2150 MBps	up to 2150 MBps
Random read	Up to 300,000 IOPs	Up to 300,000 IOPs	Up to 300,000 IOPs
Sequential write	up to 1550 MBps	up to 1550 MBps	up to 1550 MBps
Random write	Up to 100,000 IOPs	Up to 100,000 IOPs	Up to 100,000 IOPs
Total logical sectors	468,883,296	1,000,215,216	1,500,336,388
Operating temperature	0°C to 70°C (32°F to 158°F)		
*1 GB = 1 billion bytes when referring to hard drive storage capacity. Actual accessible capacity is less. Actual drive specifications might differ slightly.			

Table 10-3 Solid-state drive specifications (continued)

	256 GB*	512 GB*	1 TB*
NOTE: Certain restrictions and exclusions apply. Contact support for details.			

11 Power cord set requirements

This chapter provides power cord requirements for countries and regions.

The wide-range input feature of the computer permits it to operate from any line voltage from 100 V AC to 120 V AC, or from 220 V AC to 240 V AC.

The three-conductor power cord set included with the computer meets the requirements for use in the country or region where the equipment is purchased.

Power cord sets for use in other countries or regions must meet the requirements of the country and region where the computer is used.

Requirements for all countries

These power cord requirements are applicable to all countries and regions.

- The length of the power cord set must be at least **1.0 m** (3.3 ft) and no more than **2.0 m** (6.5 ft).
- All power cord sets must be approved by an acceptable accredited agency responsible for evaluation in the country or region where the power cord set will be used.
- The power cord sets must have a minimum current capacity of 10 A and a nominal voltage rating of 125 V AC or 250 V AC, as required by the power system of each country or region.
- The appliance coupler must meet the mechanical configuration of an EN 60 320/IEC 320 Standard Sheet C13 connector for mating with the appliance inlet on the back of the computer.

Requirements for specific countries and regions

To determine power cord requirements for specific countries and regions, use this table.

Table 11-1 Power cord requirements for specific countries and regions

Country/region	Accredited agency	Applicable note number
Argentina	IRAM	1
Australia	SAA	1
Austria	OVE	1
Belgium	CEBEC	1
Brazil	ABNT	1
Canada	CSA	2
Chile	IMQ	1
Denmark	DEMKO	1
Finland	FIMKO	1
France	UTE	1

Table 11-1 Power cord requirements for specific countries and regions (continued)

Country/region	Accredited agency	Applicable note number
Germany	VDE	1
India	BIS	1
Israel	SII	1
Italy	IMQ	1
Japan	JIS	3
Netherlands	KEMA	1
New Zealand	SANZ	1
Norway	NEMKO	1
People's Republic of China	CCC	4
Saudi Arabia	SASO	7
Singapore	PSB	1
South Africa	SABS	1
South Korea	KTL	5
Sweden	SEMKO	1
Switzerland	SEV	1
Taiwan	BSMI	6
Thailand	TISI	1
United Kingdom	ASTA	1
United States	UL	2

1. The flexible cord must be Type H05VV-F, three-conductor, 0.75 mm² conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the certification mark of the agency responsible for evaluation in the country or region where it will be used.
2. The flexible cord must be Type SVT/SJT or equivalent, No. 18 AWG, three-conductor. The wall plug must be a two-pole grounding type with a NEMA 5-15P (15 A, 125 V AC) or NEMA 6-15P (15 A, 250 V AC) configuration. CSA or C-UL mark. UL file number must be on each element.
3. The appliance coupler, flexible cord, and wall plug must bear a T mark and registration number in accordance with the Japanese Dentori Law. The flexible cord must be Type VCTF, three-conductor, 0.75 mm² or 1.25 mm² conductor size. The wall plug must be a two-pole grounding type with a Japanese Industrial Standard C8303 (7 A, 125 V AC) configuration.
4. The flexible cord must be Type RVV, three-conductor, 0.75 mm² conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the CCC certification mark.
5. The flexible cord must be Type H05VV-F three-conductor, 0.75 mm² conductor size. KTL logo and individual approval number must be on each element. Approval number and logo must be printed on a flag label.
6. The flexible cord must be Type HVCTF three-conductor, 1.25 mm² conductor size. Power cord set fittings (appliance coupler, cable, and wall plug) must bear the BSMI certification mark.
7. For 127 V AC, the flexible cord must be Type SVT or SJT 3-conductor, 18 AWG, with plug NEMA 5-15P (15 A, 125 V AC), with UL and CSA or C-UL marks. For 240 V AC, the flexible cord must be Type H05VV-F three-conductor, 0.75 mm² or 1.00 mm² conductor size, with plug BS 1363/A with BSI or ASTA marks.

12 Recycling

When a nonrechargeable or rechargeable battery has reached the end of its useful life, do not dispose of the battery in general household waste. Follow the local laws and regulations in your area for battery disposal.

HP encourages customers to recycle used electronic hardware, HP original print cartridges, and rechargeable batteries. For more information about recycling programs, see the HP website at <http://www.hp.com/recycle>.

Index

A

- AC adapter and battery light, identifying 12
- AC adapter, spare part number 20
- action key, identifying 11
- ambient light sensor, identifying 7
- antenna
 - illustrated 20
 - spare part number 20
- audio board
 - removal 54
 - spare part number 54
- audio-out (headphone)/audio-in (microphone) combo jack, identifying 6
- audio, product description 2

B

- backup, creating 74
- backups 74
- battery
 - illustrated 17
 - spare part number 17
- bezel
 - illustrated 19
 - spare part numbers 19
- BIOS
 - determining version 65
 - downloading an update 66
 - starting the Setup Utility 65
 - updating 65
- Bluetooth label 14
- boot order, changing 76
- bottom components 13
- bottom cover
 - illustrated 18
 - removal 37
 - spare part number 37
 - spare part numbers 18
- buttons
 - left touchpad 8, 9
 - power 11
 - right touchpad 8, 9

C

- calculator key, identifying 12
- camera
 - identifying 8
- camera light, identifying 7
- camera module
 - illustrated 19
 - spare part number 19
- camera privacy cover, identifying 8
- caps lock light 10
- caring for your computer 27
- cautions
 - electrostatic discharge 23, 24
- chipset
 - chipset, product description 1
 - product description 1
- cleaning your computer 27
 - caring for wood veneer 29
 - disinfecting 28
 - HP Easy Clean 27
 - removing dirt and debris 27
- components
 - bottom 13
 - display 6, 7
 - keyboard area 8
 - left side 5
 - lights 9
 - rear 12
 - right side 5
 - touchpad 8, 9
- computer major components 16
- computer specifications 77
- connectors
 - power 12
- control zone 8

D

- display
 - specifications 77
- display assembly
 - subcomponents 19
- display back cover
 - illustrated 20
 - spare part numbers 20
- display components 6, 7

- display panel
 - illustrated 19
 - product description 1
 - spare part numbers 19
- display panel cable
 - illustrated 20
 - spare part number 20

E

- electrostatic discharge (ESD) 23, 24
 - preventing damage 23-25
- esc key, identifying 11

F

- fan kit
 - illustrated 18, 52
 - removal 52
 - spare part number 52
 - spare part numbers 18, 52
- fn key, identifying 11

G

- graphics controller, product description 1
- grounding methods 23-25
- guidelines
 - packaging 23, 29
 - transporting 23, 29
 - workstation 23

H

- hard drive
 - product description 2
 - specifications 77
- HDMI port
 - identifying 13
- headset
 - product description 3
- heat sink
 - illustrated 17
 - spare part numbers 17
- heat sink assembly
 - removal 47
 - spare part number 47
- hinge
 - illustrated 20

- spare part numbers 20
- hinge cover
 - illustrated 20
 - spare part number 20
- HP PC Hardware Diagnostics UEFI
 - downloading 71
 - failure ID code 70
 - HP Hotkey Support software 71
 - starting 70, 71
 - using 70
- HP PC Hardware Diagnostics Windows
 - accessing 68, 69
 - downloading 69
 - failure ID code 68
 - installing 70
 - using 68
- HP Recovery media recovery 75
- HP Sure Recover 76

I

- illustrated parts catalog 16
- internal microphones, identifying 8
- IR board
 - removal 53
 - spare part numbers 53
- IR sensor board
 - illustrated 18
 - spare part number 18

J

- jacks
 - audio-out (headphone)/audio-in (microphone) 6
 - network 12
 - RJ-45 (network) 12

K

- keyboard
 - product description 3
- keys
 - action 11
 - calculator 12
 - esc 11
 - fn 11
 - OMEN 12
 - Windows 11
 - Windows application 11

L

- labels
 - Bluetooth 14
 - regulatory 14
 - serial number 14
 - service 14
 - wireless certification 14
 - WLAN 14
- left control zone, identifying 8
- left side components 5
- lighting board
 - illustrated 18
 - removal 42
 - spare part number 18, 42
- lights
 - AC adapter and battery 12
 - camera 7
 - caps lock 10
 - mute 10
 - power 10
 - RJ-45 (network) status 12
 - touchpad 8, 10
- low blue light mode 7

M

- memory module
 - product description 1
- memory modules
 - removal 34
 - spare part numbers 34
- microphone
 - product description 2
- model name 1
- mute light, identifying 10

N

- network jack, identifying 12

O

- OMEN key, identifying 12
- operating system, product description 4

P

- packaging guidelines 23, 29
- pointing device, product description 3
- ports
 - HDMI 13
 - product description 3
 - USB SuperSpeed 13

- USB SuperSpeed port with HP Sleep and Charge 5
- USB Type-C Thunderbolt port with HP Sleep and Charge and DisplayPort output 6
- power button, identifying 11
- power connector
 - identifying 12
- power cord
 - requirements for all countries 80
 - requirements for specific countries and regions 80
 - set requirements 80
- power light, identifying 10
- power requirements, product description 3
- primary storage
 - product description 2
- processor
 - product description 1
- processor, product description 1
- product description
 - audio 2
 - display panel 1
 - graphics controller 1
 - hard drive 2
 - headset 3
 - keyboard 3
 - memory module 1
 - microphone 2
 - operating system 4
 - pointing device 3
 - ports 3
 - power requirements 3
 - primary storage 2
 - product name 1
 - RJ-45 (network) 2
 - security 4
 - sensors 3
 - serviceability 4
 - solid-state drive 2
 - video 2
 - wireless 2
- product name 1
- product name and number, computer 14

R

- rear components 12
- recovery 74
 - discs 75
 - media 75
 - USB flash drive 75

- recovery media 74
 - creating using HP Cloud Recovery Download Tool 74
 - creating using Windows tools 74
- regulatory information
 - regulatory label 14
 - wireless certification labels 14
- Remote HP PC Hardware Diagnostics UEFI settings
 - customizing 72
 - using 72
- removal and replacement
 - procedures 32, 37
 - solid-state drive 32
- restoring 74
- restoring and recovery
 - methods 75
- right control zone, identifying 8
- right side components 5
- RJ-45 (network)
 - product description 2
- RJ-45 (network) jack door
 - illustrated 18
 - removal 48
 - spare part number 18
 - spare part numbers 48
- RJ-45 (network) jack, identifying 12
- RJ-45 (network) status lights, identifying 12
- RJ-45 door
 - removal 51
 - spare part numbers 51

S

- security, product description 4
- sensors
 - product description 3
- serial number, computer 14
- service labels, locating 14
- serviceability, product description 4
- solid-state drive
 - illustrated 18
 - product description 2
 - removal and replacement 32
 - spare part numbers 18
 - specifications 78
- spare part country codes 63
- speaker
 - illustrated 17
 - removal 41
 - spare part number 17, 41

- speakers 13
- special keys
 - identifying 10
 - using 10
- specifications
 - computer 77
 - display 77
 - hard drive 77
 - solid-state drive 78
- static electricity 23, 24
- support information 30
- system board
 - illustrated 17
 - removal 48
 - spare part numbers 17, 48
- system restore 75
- system restore point, creating 74

T

- Thunderbolt port with HP Sleep and Charge and DisplayPort output, identifying USB Type-C 6
- top cover with keyboard
 - spare part numbers 63
- touchpad
 - illustrated 17
 - removal 43
 - settings 8
 - spare part numbers 17, 43
- touchpad buttons
 - identifying 8, 9
- touchpad components 8
- touchpad light, identifying 8, 10
- touchpad settings, adjusting 8
- touchpad zone, identifying 8, 9
- transporting guidelines 23, 29
- traveling with the computer 14

U

- USB board
 - illustrated 18
 - removal 46
 - spare part number 18
 - spare part numbers 46
- USB SuperSpeed port with HP Sleep and Charge, identifying 5
- USB SuperSpeed port, identifying 13
- USB Type-C Thunderbolt port with HP Sleep and Charge and DisplayPort output, identifying 6

V

- vents, identifying 5, 6, 12, 13
- video, product description 2

W

- wake-on-voice 7
- Windows
 - backup 74
 - recovery media 74
 - system restore point 74
- Windows application key, identifying 11
- Windows key, identifying 11
- Windows tools, using 74
- wireless antennas, identifying 8
- wireless certification label 14
- wireless, product description 2
- WLAN antenna kit
 - illustrated 20
 - spare part number 20
- WLAN antennas, identifying 8
- WLAN device 14
- WLAN label 14
- WLAN module
 - removal 40
 - spare part numbers 40
- workstation guidelines 23