


MVC S50-C5U


Requirements

- A display connected to MCore 4 (not included).
- A Microsoft Teams Rooms account (not included).
- Wired network environment (not included).

Package Contents

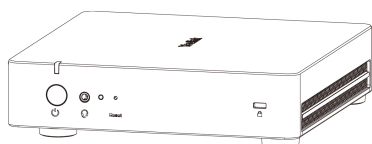


MCore 4 Package

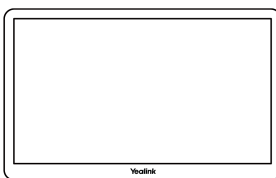

MTouch Plus Package




 RoomSensor Package




MeetingBar A50 Package

 
Optional



MeetingDisplay 65/75/86 Package

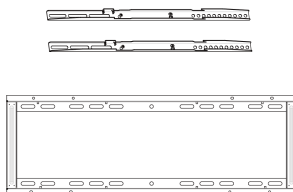

MD-WallMount Package

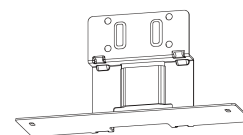

MD-AVBracket-L Package

*The MD-AVBracket-L is compatible only with the Yealink MeetingDisplay 75/86.

 We recommend using MeetingDisplay 65/75/86, MD-Wallmount and MD-AVBracket-L together.

- MCore 4 package details see [MCore 4 Installation](#).
- MTouch Plus package details see [MTouch Plus Installation](#).
- RoomSensor package details see [RoomSensor Installation](#).
- MeetingBar A50 package details see [MeetingBar A50 Installation](#).


Install MVC S50-C5U

- **MCore 4** supports: mount on the wall, mount on the TV, put on a table, mount on the MeetingDisplay (optional)

- **MTouch Plus** supports: put on a table, paste on a table, fixed on a table, mount on the wall.
- **RoomSensor** supports: mount on the ceiling, mount on the wall.
- **MeetingBar A50** supports: mount on a wall, mount on the table-top stand, embed in the wall, mount on the MeetingDisplay (requires MD-AVBracket-L, optional) , mount on the VB-TVMount-01 (optional).
- **MeetingDisplay** supports: install on the MD-WallMount Bracket (optional), Install on the Electric Lift Stand MB-FS-Lift (optional).

Connect MVC S50-C5U

Optional 1: Basic Connection

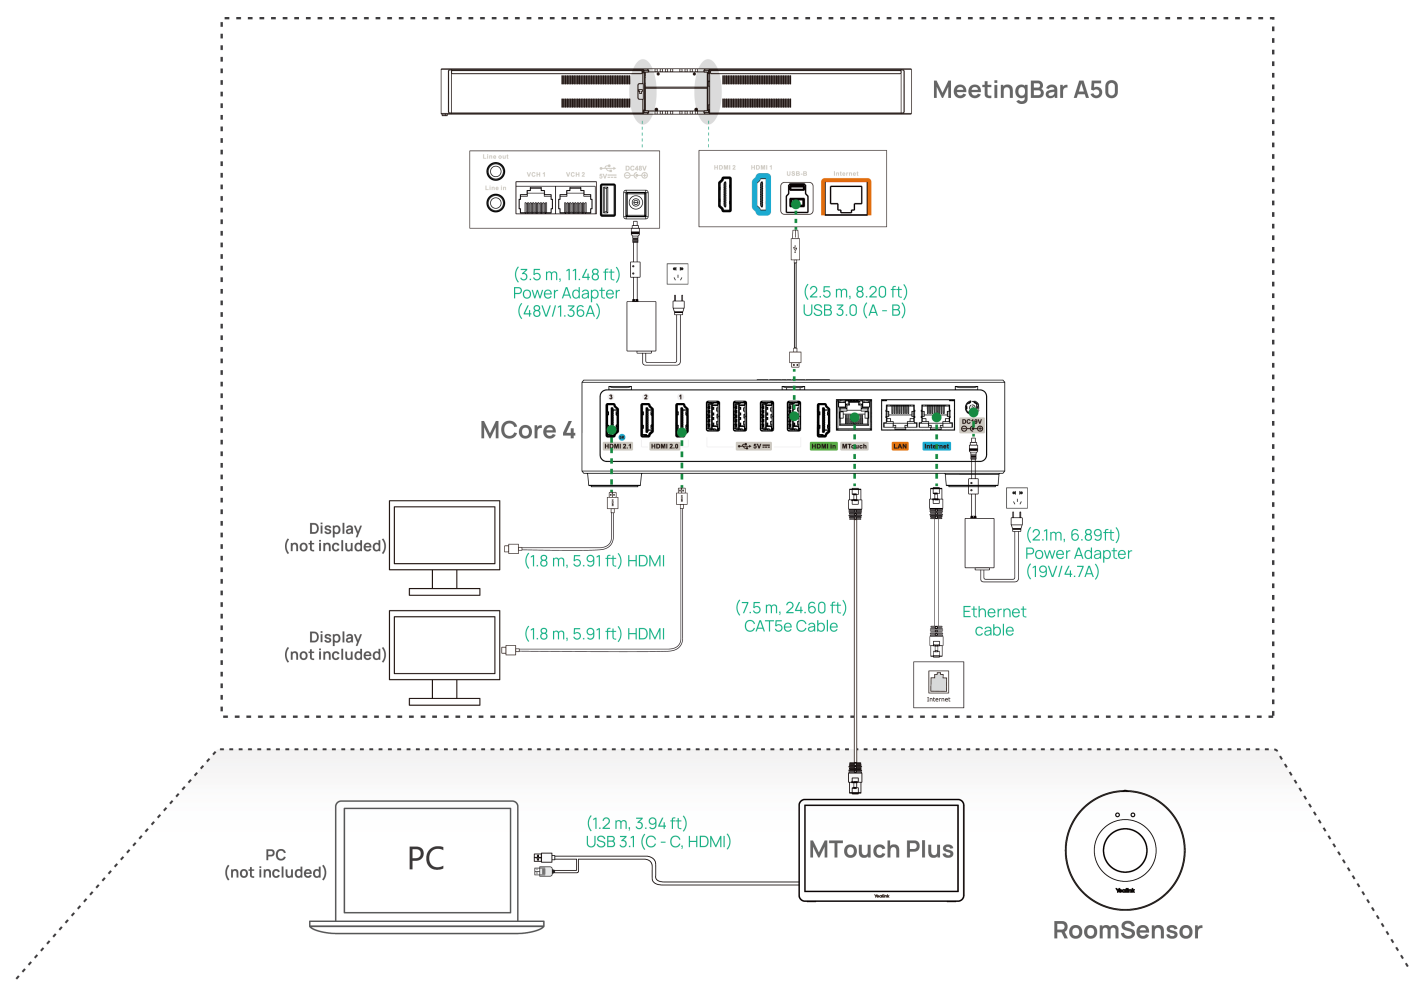


NOTE

- When starting up the system for the first time, you need to connect a mouse to complete the initial configuration. We recommend using the wireless mouse and keyboard kit.
- Not included accessories requirements:
 - **Display**: Resolution of 1080p or higher and with an HDMI port.
 - **PC**: Equipped with HDMI or USB-C (support DP protocol) Port.
 - **PoE switch**: If you use PoE to connect speakers or cameras, you need to use PoE+.
 - **Ethernet cable**: CAT5e or higher ethernet cable.

Optional 2: Connect with MeetingDisplay

If not connected to the LAN port of MeetingDisplay, please connect to the external network port.

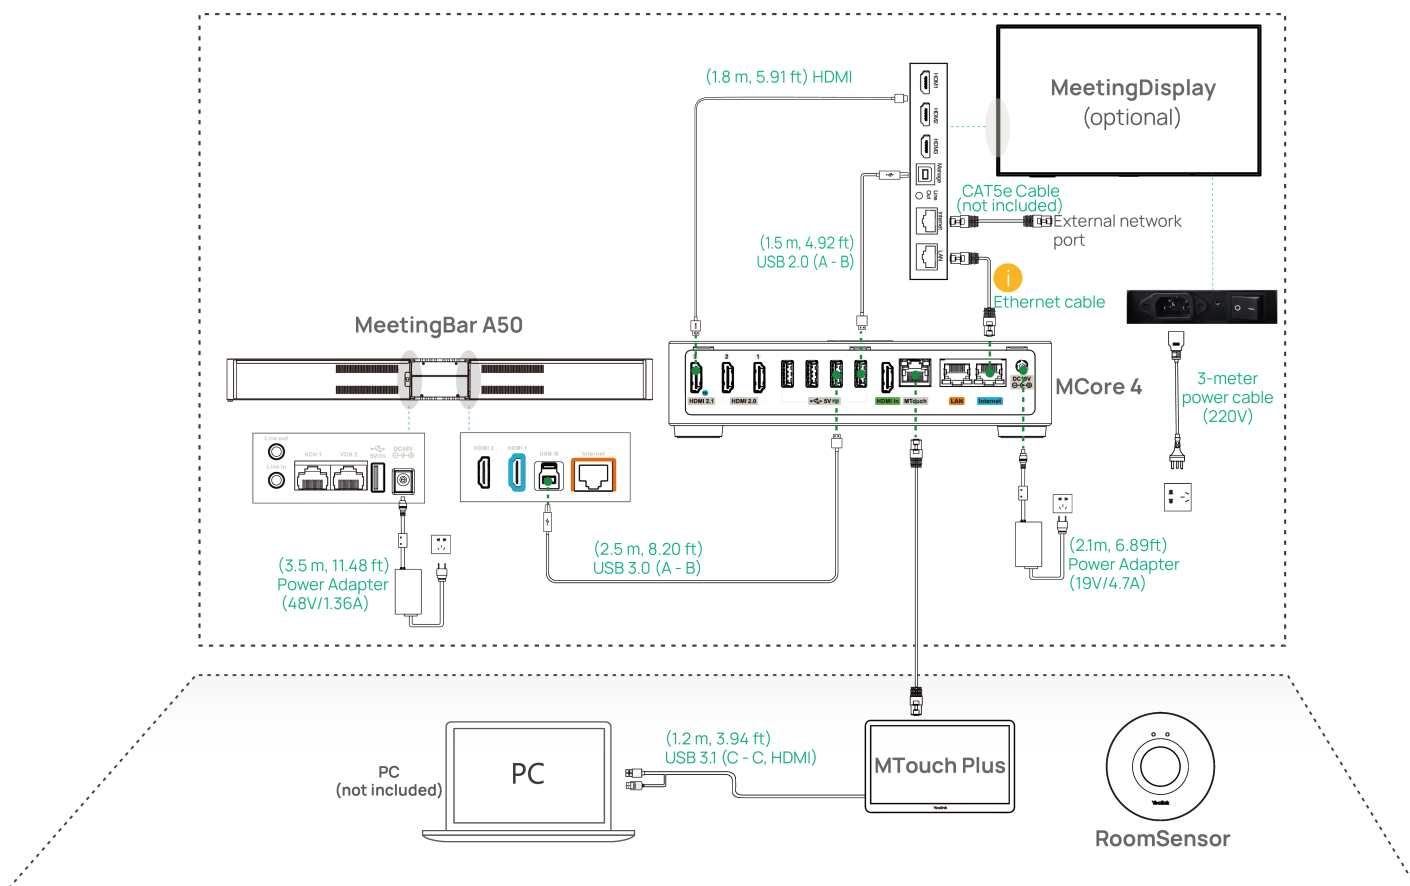

NOTE

- When starting up the system for the first time, you need to connect a mouse to complete the initial configuration. We recommend using the wireless mouse and keyboard kit.
- Not included accessories requirements:
 - PC: Equipped with HDMI or USB-C (support DP protocol) Port.
 - PoE switch: If you use PoE to connect speakers or cameras, you need to use PoE+.
 - Ethernet cable: CAT5e or higher ethernet cable.

Supported Accessories

For the compatible devices and the maximum number of compatible devices, please refer to [Teams Room Accessories Compatibility Lists](#).

Initial Setup

When the hardware deployment and connections are completed, you need to set up your Microsoft Teams Room System (MVC) system. Please refer to [Quick Setup](#) for more details.

Features

Wireless Sharing

1. Connect the Wireless Presentation Pod to the USB port of the MTouch Plus. When pairing, the LED indicator of Wireless Presentation Pod is orange. When the pairing is successful, the LED indicator turns green breathing light.
2. Connect the paired Wireless Presentation Pod to the USB-A/USB-C port on your PC.
3. On the Wireless Presentation Pod, press the presentation button to share the full screen.

Pair with a RoomSensor

1. Switch the account from Microsoft Teams to Admin.
2. Open Yealink RoomConnect Software.
3. Go to MTouch Plus > Device Status > Sensor.
4. Select Add and follow the on-screen instructions to pair.

NOTE

- An MTouch Plus can be paired with only one RoomSensor.
- The distance between the MTouch Plus and RoomSensor must be within 20m.